


Club Car

®

**2003
ILLUSTRATED
PARTS LIST**

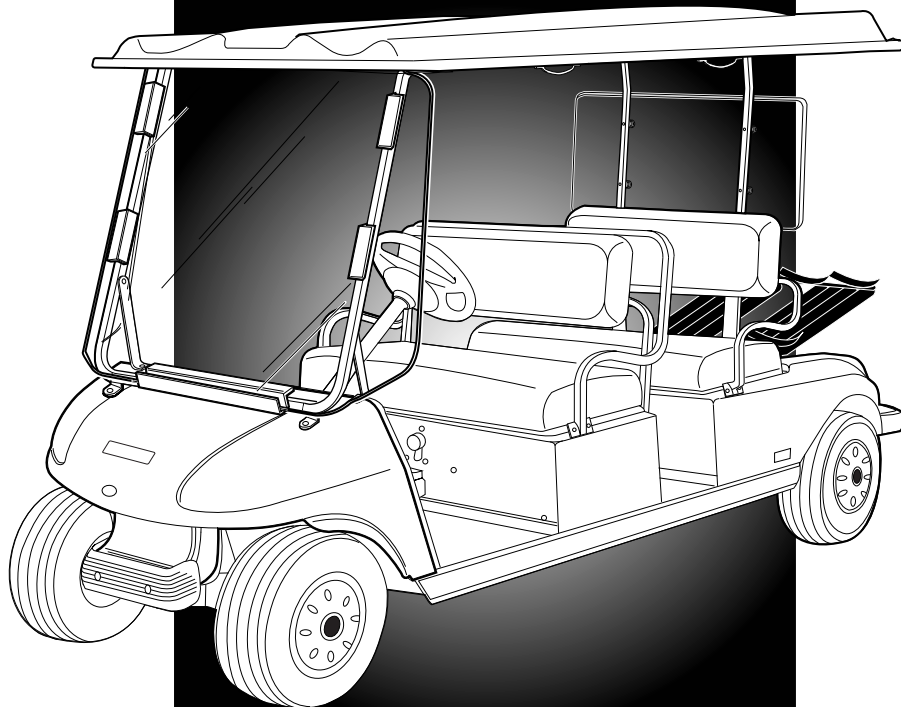

**LIMO GOLF CARS
GASOLINE/ELECTRIC**

MANUAL NUMBER 102318702
EDITION CODE 1003A00000

USING THE ILLUSTRATED PARTS LIST

WARNING

- **This manual is to be used only for identification and ordering of service parts. Be sure to read and use the maintenance and service manual before attempting any vehicle repairs.**

This manual covers the 2003 Club Car Limo Golf Cars.

The manual is divided into 16 sections. Sections 1 through 5 pertain to both gasoline and electric vehicles, sections 6 through 11 pertain to gasoline vehicles only, sections 12 through 15 pertain to electric vehicles only, and section 16 pertains to tools that are used on all Club Car products. Note that there are two or three flags on the outside edge of each page. The first flag contains the section number of which that page is a part. The other flag (or flags) contains either the letter G or E, signifying that the page pertains to either the gasoline or electric vehicle only, or to both the gasoline and electric vehicles.

Use the Table of Contents to find the sections and pages that contain the parts and assemblies you seek. The Table of Contents lists section numbers, and under them, the individual page titles and numbers to be found in that section. The index can be used to find specific parts and assemblies. The index is divided into numerical and alphabetical listings with the page numbers in italic text.

There is a two-page spread for each individual page title in the Table of Contents. On the left-hand page is an illustration showing the parts in their relative positions; the parts are each tagged with an item number in a balloon. The right-hand page is the parts list page, and gives the page title at the top, then the item numbers (corresponding to the numbers on the illustration), part descriptions, and quantity of parts used. Some item numbers have more than one part number because several configurations of a component are represented together on one spread.

Note that a part description may be indented. This indentation corresponds to a parts assembly level indicated by the numbers 1, 2, 3, and 4 at the top left corner of the parts description area of the parts list page. A part that is indented to *level 2* is a component of the *level 1* part (assembly) that it is listed under. A *level 3* part is a component of the *level 2* part that it is listed under, and a *level 4* part is a component of the *level 3* part preceding it. In each case, the part quantity given for a level 2, 3, or 4 part *is the quantity used per next higher level assembly of which it is a component*. A part that is not indented is a *level 1* part. This means that the quantity given is the quantity used per the portion of the vehicle illustrated on that particular spread.

HOW TO ORDER PARTS

Replacement parts and accessories can be obtained from our network of authorized dealers and distributors. You can obtain the name and phone number of your closest Club Car contact by visiting our web site at www.clubcar.com and clicking on the "*Distributor Search*" link or by calling our toll-free Service Parts and Technical Assistance hotline at (800) 872-2246 or (706) 863-3000, extension 3281 or 3854.



P. O. Box 204658
Augusta, Georgia 30917-4658 USA
Telephone 706-863-3000
Service Parts Fax 706-855-7413
www.clubcar.com

NOTE: *This illustrated parts list represents the most current information at the time of publication. Club Car, Inc. is continually working to further improve its vehicles and other products. These improvements may affect the parts used to service the vehicle. Any modification and/or significant change in specifications will be forwarded to all Club Car and Carryall distributors/dealers and will, when applicable, appear in future editions of this illustrated parts list.*

Club Car, Inc. reserves the right to change specifications and designs at any time without notice and without the obligation of making changes to units previously sold.

VEHICLE CLARIFICATION

All early 2003 Limo golf cars maintained the same configuration of the 2002 models. The early style Limos use the serial number prefix of LB for electric Limo or LG for Gasoline Limo. Vehicles produced later in 2003 were configured differently. The later style Limos use the serial number prefix of LE for electric Limo or LH for Gasoline Limo. The serial number decal is mounted on the frame directly above the accelerator pedal (**Figure 1**). The two styles can also be identified by the front body shape (**Figures 2 and 3**).

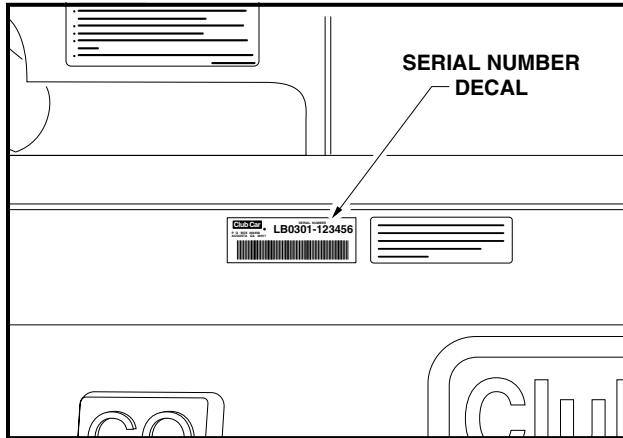


Figure 1 Serial Number Decal

Use the illustrations provided to determine which style of Limo golf car is in need of parts before ordering. Vehicle configuration differs significantly, so it is important to make sure that the vehicle is correctly identified.

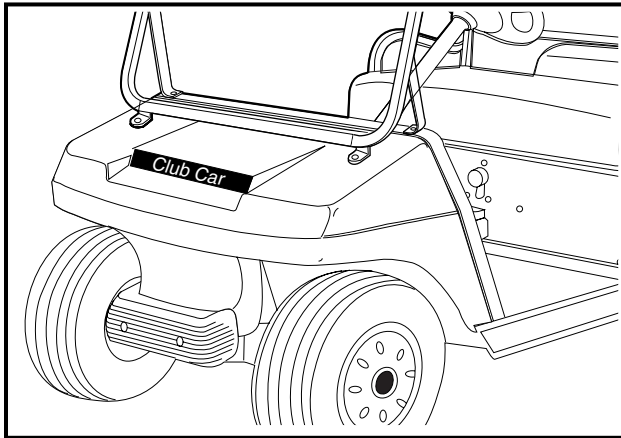


Figure 2 Early Style Limo

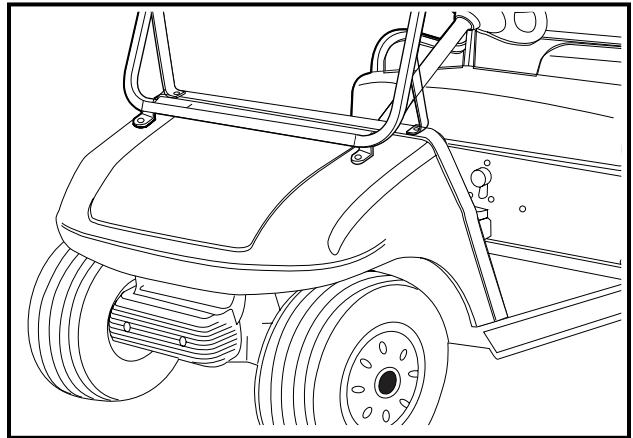


Figure 3 Later Style Limo

CONTENTS

SECTION 1 – BODY AND TRIM

Front Body and Trim – Early Style	1-3
Front Body and Trim – Later Style	1-5
Center Body and Trim	1-7
Rear Body and Fender	1-9
Seat Support Structures	1-11
Rear Bumper	1-13
Bag Rack Assembly – Early Style	1-15
Bag Rack Assembly – Later Style	1-17
Canopy Hardware Kit	1-19
Canopy Kit	1-21
Windshield	1-23

SECTION 2 – WHEELS AND TIRES

Wheels and Tires	2-3
------------------------	-----

SECTION 3 – DECALS

Decals	3-3
Decals, Continued	3-5

SECTION 4 – BRAKES, PEDAL, AND CABLE ASSEMBLIES

Rear Brake Assembly, Manually Adjusted	4-3
Brake Pedal and Cable Assembly	4-5
Front Brake Assembly, Manually Adjusted	4-7
Accelerator Pedal Assembly	4-9

SECTION 5 – STEERING, FRONT AND REAR SUSPENSION

Steering Column	5-3
Steering Gear Assembly	5-5
Front Suspension, Upper – Early Style	5-7
Front Suspension, Lower – Early Style	5-9
Front Suspension, Upper – Later Style	5-11
Front Suspension, Lower – Later Style	5-13
Rear Suspension	5-15

SECTION 6 – ELECTRICAL SYSTEM – GASOLINE VEHICLE

Wiring – Gasoline Vehicle	6-3
---------------------------------	-----

CONTENTS

Forward/Reverse Shifter Assembly – Gasoline Vehicle	6-5
Electrical Component Box – Gasoline Vehicle	6-7
Electrical Components, Front Body – Gasoline Vehicle	6-9
Electrical Components, Rear Body – Gasoline Vehicle	6-11
Starter/Generator Assembly	6-13
Starter/Generator Mounting	6-15
Battery – Gasoline Vehicle	6-17

SECTION 7 – ENGINE

FE350 Engine – Shrouds and Brackets	7-3
FE350 Engine – Ignition Components and Flywheel	7-5
FE350 Engine – Oil Circulation	7-7
FE350 Engine – Cylinder Head	7-9
FE350 Engine – Crankcase, Camshaft, and Oil Sensor	7-11
FE350 Engine – Crankcase and Crankshaft	7-13
Engine Mounting	7-15

SECTION 8 – FUEL, INTAKE, AND GOVERNOR SYSTEMS

Fuel System with Electric Fuel Pump	8-3
Carburetor Assembly	8-5
Carburetor Installation	8-7
Governor and Accelerator Cables	8-9
Intake Duct, Choke, and Air Box Assembly	8-11

SECTION 9 – EXHAUST SYSTEM

Exhaust System	9-3
----------------------	-----

SECTION 10 – TORQUE CONVERTER

Drive Clutch	10-3
Driven Clutch	10-5

SECTION 11 – UNITIZED TRANSAXLE

Unitized Transaxle – Gear Cases and Brackets	11-3
Unitized Transaxle – F&R Transmission and Gear Reduction	11-5
Unitized Transaxle – Differential and Axles	11-7

CONTENTS

SECTION 12 – ELECTRICAL SYSTEM – ELECTRIC VEHICLE

Forward/Reverse Switch, Tow/Run Switch – Electric Vehicle	12-3
Electrical Components, Front Body – Electric Vehicle	12-5
Hour Meter and Charger Receptacle – Electric Vehicle	12-7
Motor Controller Output Regulator (MCOR) – Electric Vehicle	12-9
Wiring – Early style vehicles	12-11
Wiring – Later style vehicles	12-13
Controller, Onboard Computer, and Solenoid – Electric Vehicle	12-15
Energy Displacement Module – Early Style Vehicle	12-17
Electrical Components, Rear Body – Electric Vehicle	12-19

SECTION 13 – ELECTRIC MOTOR

Motor – Electric Vehicle	13-3
--------------------------------	------

SECTION 14 – TRANSAXLE

Transaxle, Type G – Electric Vehicle	14-3
--	------

SECTION 15 – BATTERY CHARGER

PowerDrive Charger, Domestic	15-3
PowerDrive Charger, Export	15-5
PowerDrive Charger, European	15-7

SECTION 16 – MAINTENANCE AND SERVICE TOOLS

Maintenance and Service Tools	16-3
Maintenance and Service Tools, Continued	16-5
Maintenance and Service Tools, Continued	16-7


SECTION i – INDEX

BODY AND TRIM

1


G

E

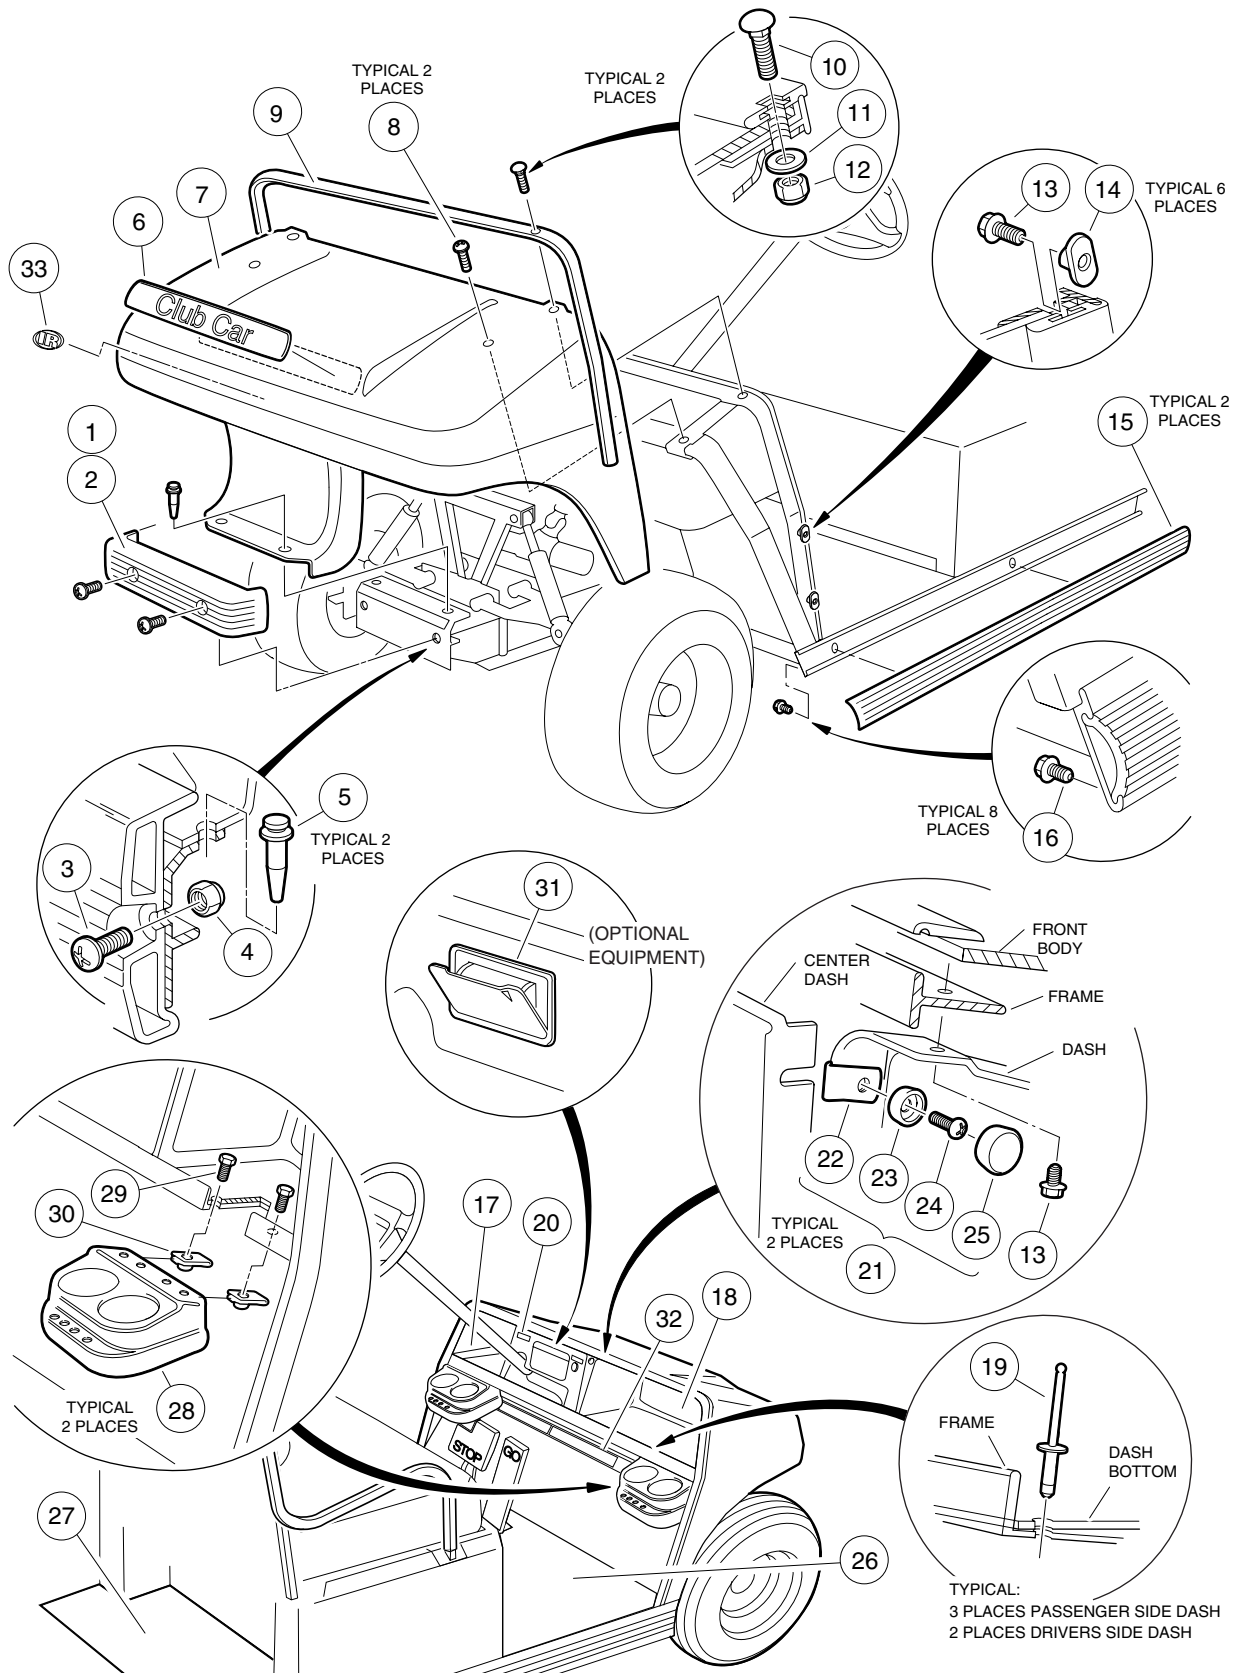


FRONT BODY AND TRIM – EARLY STYLE

ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC	1 G E
		1 2 3 4			
1	<u>1017080</u>	Kit, Front Bumper (includes items 2 - 5)	1	1	
2	<u>1016868</u>	Bumper, Front	1	1	
3	<u>7251</u>	Screw, Phillips Truss-Head, 5/16-18 x 1	2	2	
4	<u>7473</u>	Nut, Nylon Lock, 5/16-18	2	2	
5	<u>1016967</u>	Rivet, Blind Push Type	2	2	
6	<u>1014198</u>	Nameplate – Gold	1	1	
7	<u>101692502</u>	Body, Front – White	1	1	
8	<u>7251</u>	Screw, Phillips Truss-Head, 5/16-18 x 1	2	2	
9	<u>1011014</u>	Trim, Front Body	1	1	
10	<u>1010435</u>	Bolt, Carriage, 5/16-18 x 1	2	2	
11	<u>1241</u>	Washer, Flat, 5/16	2	2	
12	<u>7473</u>	Nut, Nylon Lock, 5/16-18	2	2	
13	<u>1011017</u>	Screw, Flange Lock, #8-32 x 3/8	6	6	
14	<u>1011394</u>	Nut, Slab Base "T" (package of 4 pieces)	1	1	
15	<u>101347503</u>	Trim, Side Bumper Guard	2	2	
16	<u>102310701</u>	Screw, Hex Washer-Head, #8-18 x 3/8	8	8	
17	<u>1013344</u>	Component, Dash, Driver Side (black)	1	1	
18	<u>1013343</u>	Component, Dash, Passenger Side (black)	1	1	
19	<u>7973</u>	Rivet, Aluminum Pop, 3/16	5	5	
20	<u>101660404</u>	Panel, Center Dash	1	1	
21	<u>1014645</u>	Kit, Snap Washer (black) (includes items 22 - 25)	2	2	
22	<u>1011019</u>	Nut, Speed, #10-32	1	1	
23	<u>1011382</u>	Washer, Cup, #10	1	1	
24	<u>1620</u>	Screw, Sheet Metal, #10 x 3/4	1	1	
25	<u>1013494</u>	Cover, Screw Head	1	1	
26	<u>1015032</u>	Mat, Floor, Front	1	1	
27	<u>1017289</u>	Mat, Floor, Rear	1	1	
28	<u>101708301</u>	Kit, Drink Holder (includes items 29 and 30)	2	2	
29	<u>7847</u>	Screw, Hex-Head Cap, 1/4-20 x 3/4	2	2	
30	<u>1016952</u>	U-Nut, 1/4-20	2	2	
31	<u>1011230</u>	Kit, Ashtray (optional equipment) (includes item 32)	1	1	
32	<u>101965001</u>	Decal, Operator Warning Ashtray (optional equipment)	1	1	
33	<u>102259001</u>	Emblem, IR Golf Car	1	1	

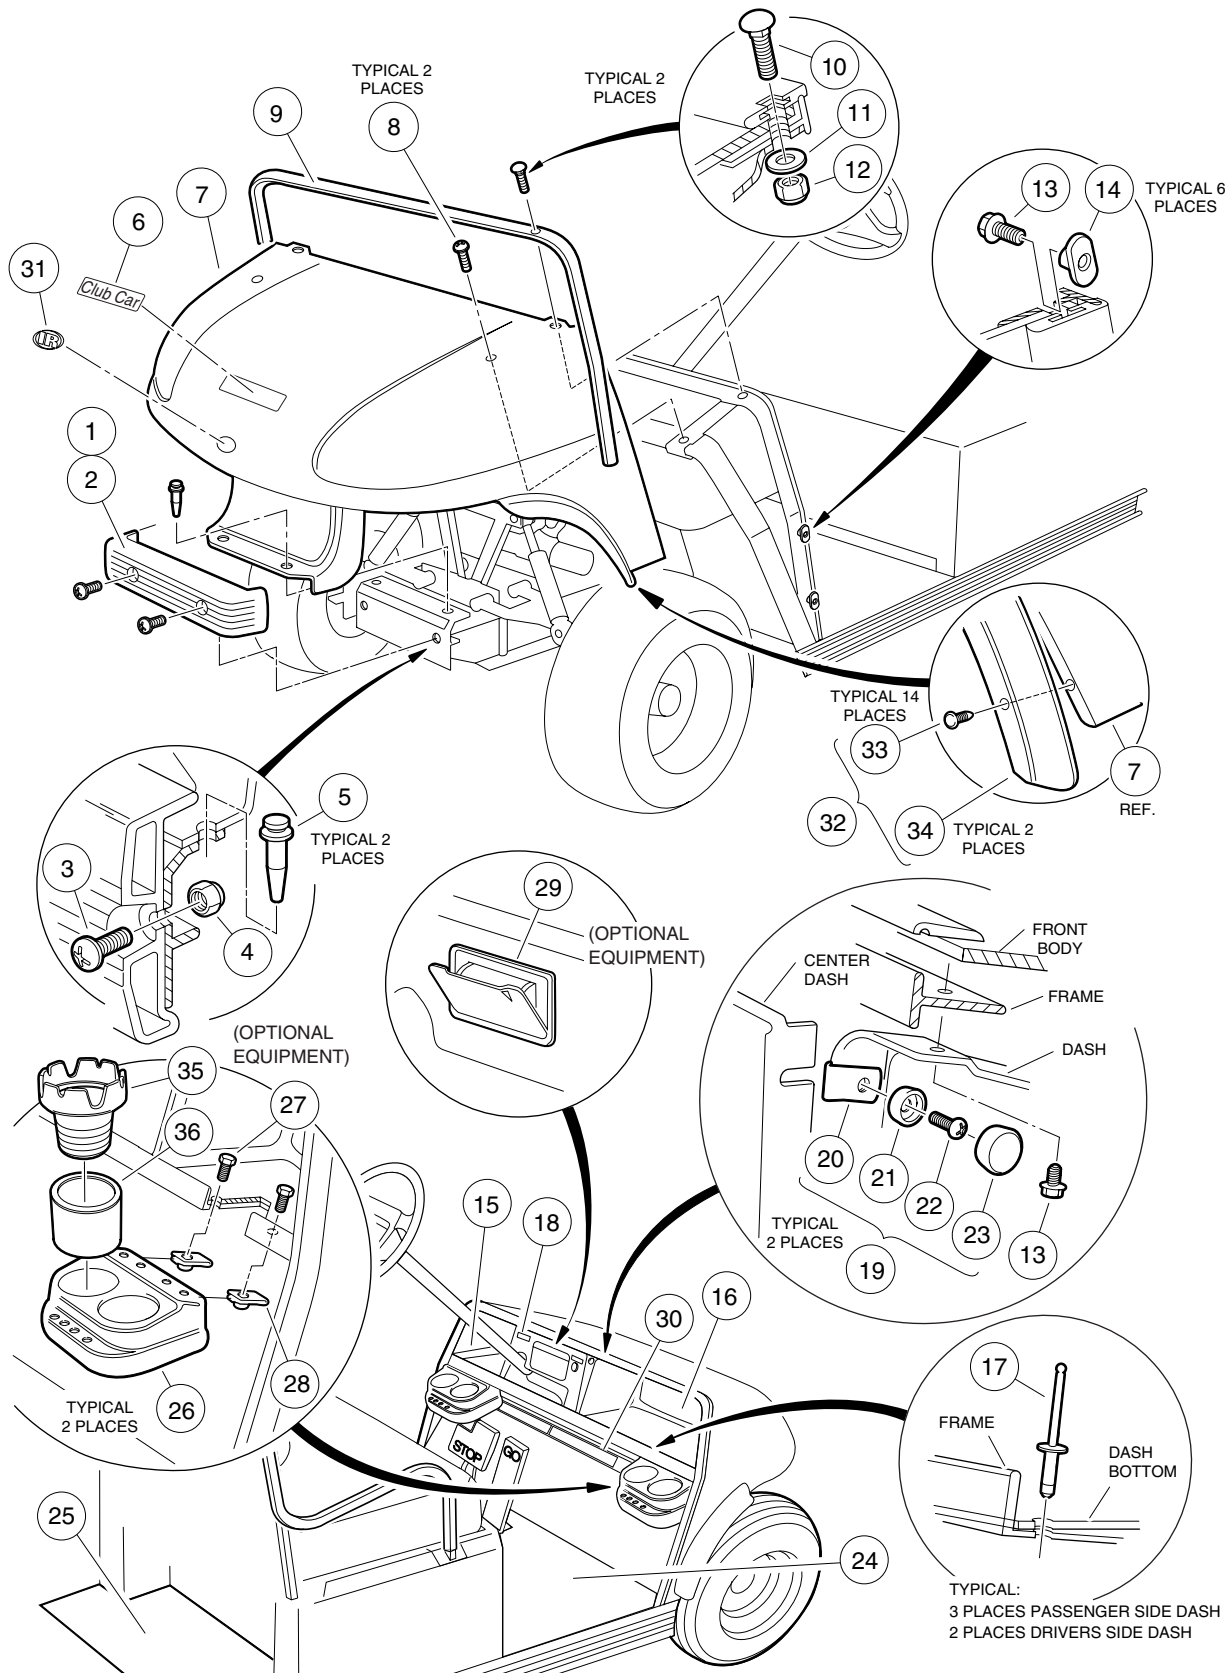


FRONT BODY AND TRIM – LATER STYLE

ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC	1 G E
		1 2 3 4			
1	<u>1017080</u>	Kit, Front Bumper (includes items 2 - 5)	1	1	
2	<u>1016868</u>	Bumper, Front	1	1	
3	<u>7251</u>	Screw, Phillips Truss-Head, 5/16-18 x 1	2	2	
4	<u>7473</u>	Nut, Nylon Lock, 5/16-18	2	2	
5	<u>1016967</u>	Rivet, Blind Push Type	2	2	
6	<u>102278801</u>	Decal, Club Car	1	1	
7	<u>102363901</u>	Body, Front – Beige	1	1	
7	<u>102363902</u>	Body, Front – White	1	1	
7	<u>102363903</u>	Body, Front – Gray	1	1	
7	<u>102363906</u>	Body, Front – Burgundy	1	1	
7	<u>102363904</u>	Body, Front – Pacific Blue	1	1	
7	<u>102363905</u>	Body, Front – Dark Green	1	1	
8	<u>7251</u>	Screw, Phillips Truss-Head, 5/16-18 x 1	2	2	
9	<u>1011014</u>	Trim, Front Body	1	1	
10	<u>1010435</u>	Bolt, Carriage, 5/16-18 x 1	2	2	
11	<u>1241</u>	Washer, Flat, 5/16	2	2	
12	<u>7473</u>	Nut, Nylon Lock, 5/16-18	2	2	
13	<u>1011017</u>	Screw, Flange Lock, #8-32 x 3/8	6	6	
14	<u>1011394</u>	Nut, Slab Base "T" (package of 4 pieces)	1	1	
15	<u>1013344</u>	Component, Dash, Driver Side (black)	1	1	
16	<u>1013343</u>	Component, Dash, Passenger Side (black)	1	1	
17	<u>7973</u>	Rivet, Aluminum Pop, 3/16	5	5	
18	<u>101660404</u>	Panel, Center Dash	1	1	
19	<u>1014645</u>	Kit, Snap Washer (black) (includes items 20 - 23)	2	2	
20	<u>1011019</u>	Nut, Speed, #10-32	1	1	
21	<u>1011382</u>	Washer, Cup, #10	1	1	
22	<u>1620</u>	Screw, Sheet Metal, #10 x 3/4	1	1	
23	<u>1013494</u>	Cover, Screw Head	1	1	
24	<u>1015032</u>	Mat, Floor, Front	1	1	
25	<u>1017289</u>	Mat, Floor, Rear	1	1	
26	<u>101708301</u>	Kit, Drink Holder (includes items 27 and 28)	2	2	
27	<u>7847</u>	Screw, Hex-Head Cap, 1/4-20 x 3/4	2	2	
28	<u>1016952</u>	U-Nut, 1/4-20	2	2	
29	<u>1011230</u>	Kit, Ashtray (optional equipment) (includes item 30)	1	1	
30	<u>101965001</u>	Decal, Operator Warning Ashtray (optional equipment)	1	1	
31	<u>102259001</u>	Emblem, IR Golf Car – Amber	1	1	
32	<u>102363301</u>	Kit, Fender Extrusion (includes items 33 and 34)	1	1	
33	<u>1010434</u>	Fastener, Plastic Barrel	14	14	
34	<u>102360001</u>	Fender Extrusion	2	2	
35	<u>102361401</u>	Ashtray (optional equipment)	1	1	
36	<u>102365401</u>	Insert, Cupholder (optional equipment)	1	1	

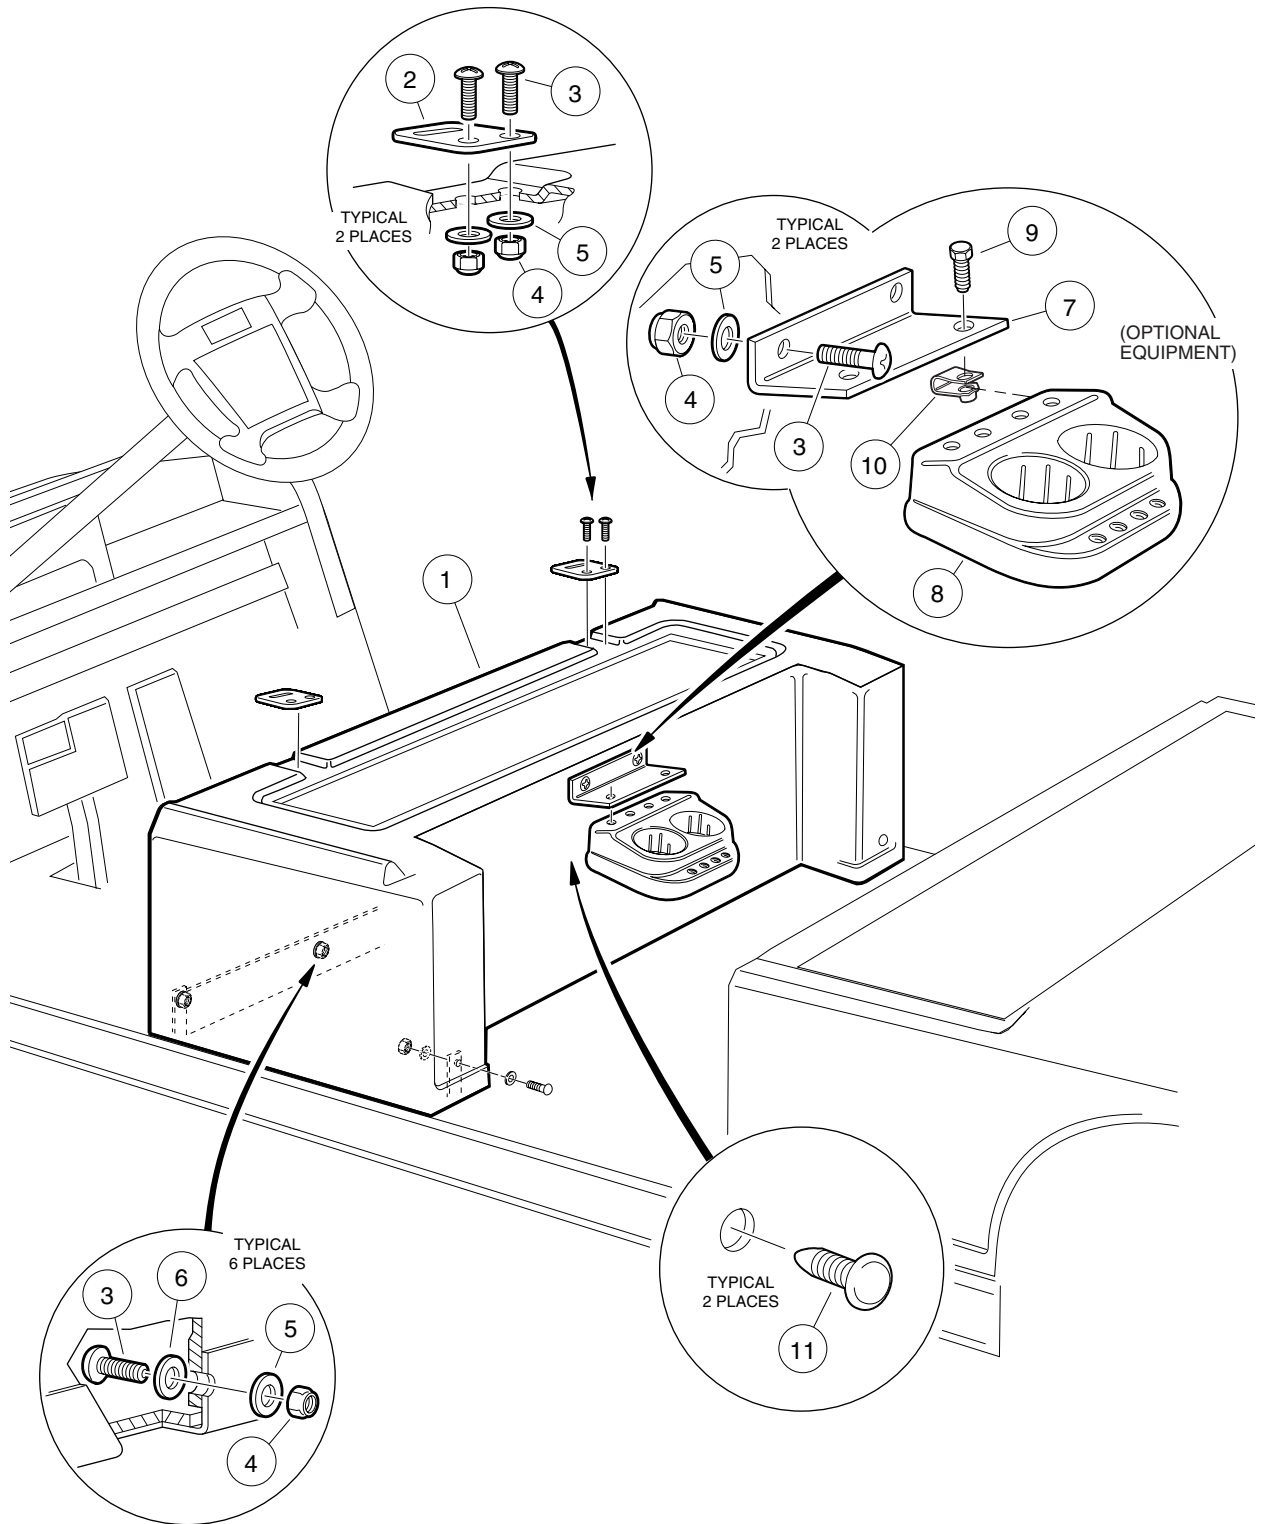


CENTER BODY AND TRIM

ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC	1 G E
		1 2 3 4			
1	<u>101731601</u>	Body, Center – Beige	1	1	
1	<u>101731602</u>	Body, Center – White	1	1	
1	<u>101731604</u>	Body, Center – Gray	1	1	
1	<u>101731608</u>	Body, Center – Pacific Blue	1	1	
1	<u>101731609</u>	Body, Center – Dark Green	1	1	
1	<u>101731612</u>	Body, Center – Burgundy	1	1	
2	<u>1012412</u>	Plate, Seat Hinge	2	2	
3	<u>8251</u>	Screw, Phillips Truss-Head, 1/4-20 x 1	12	12	
4	<u>8233</u>	Nut, Nylon Lock, 1/4 20	12	12	
5	<u>332</u>	Washer, Flat, 1/4	12	12	
6	<u>1012581</u>	Washer, Nylon Cup, 1/4	6	6	
7	<u>1017832</u>	Plate, Drink Holder Mounting (optional equipment)	1	1	
8	<u>101708301</u>	Kit, Drink Holder (includes items 9 and 10) (optional equipment)	1	1	
9	<u>7847</u>	Screw, Hex-Head Cap, 1/4-20 x 3/4	2	2	
10	<u>1016952</u>	U-Nut	2	2	
11	<u>1017234</u>	Fastener, Plastic Barrel	2	2	

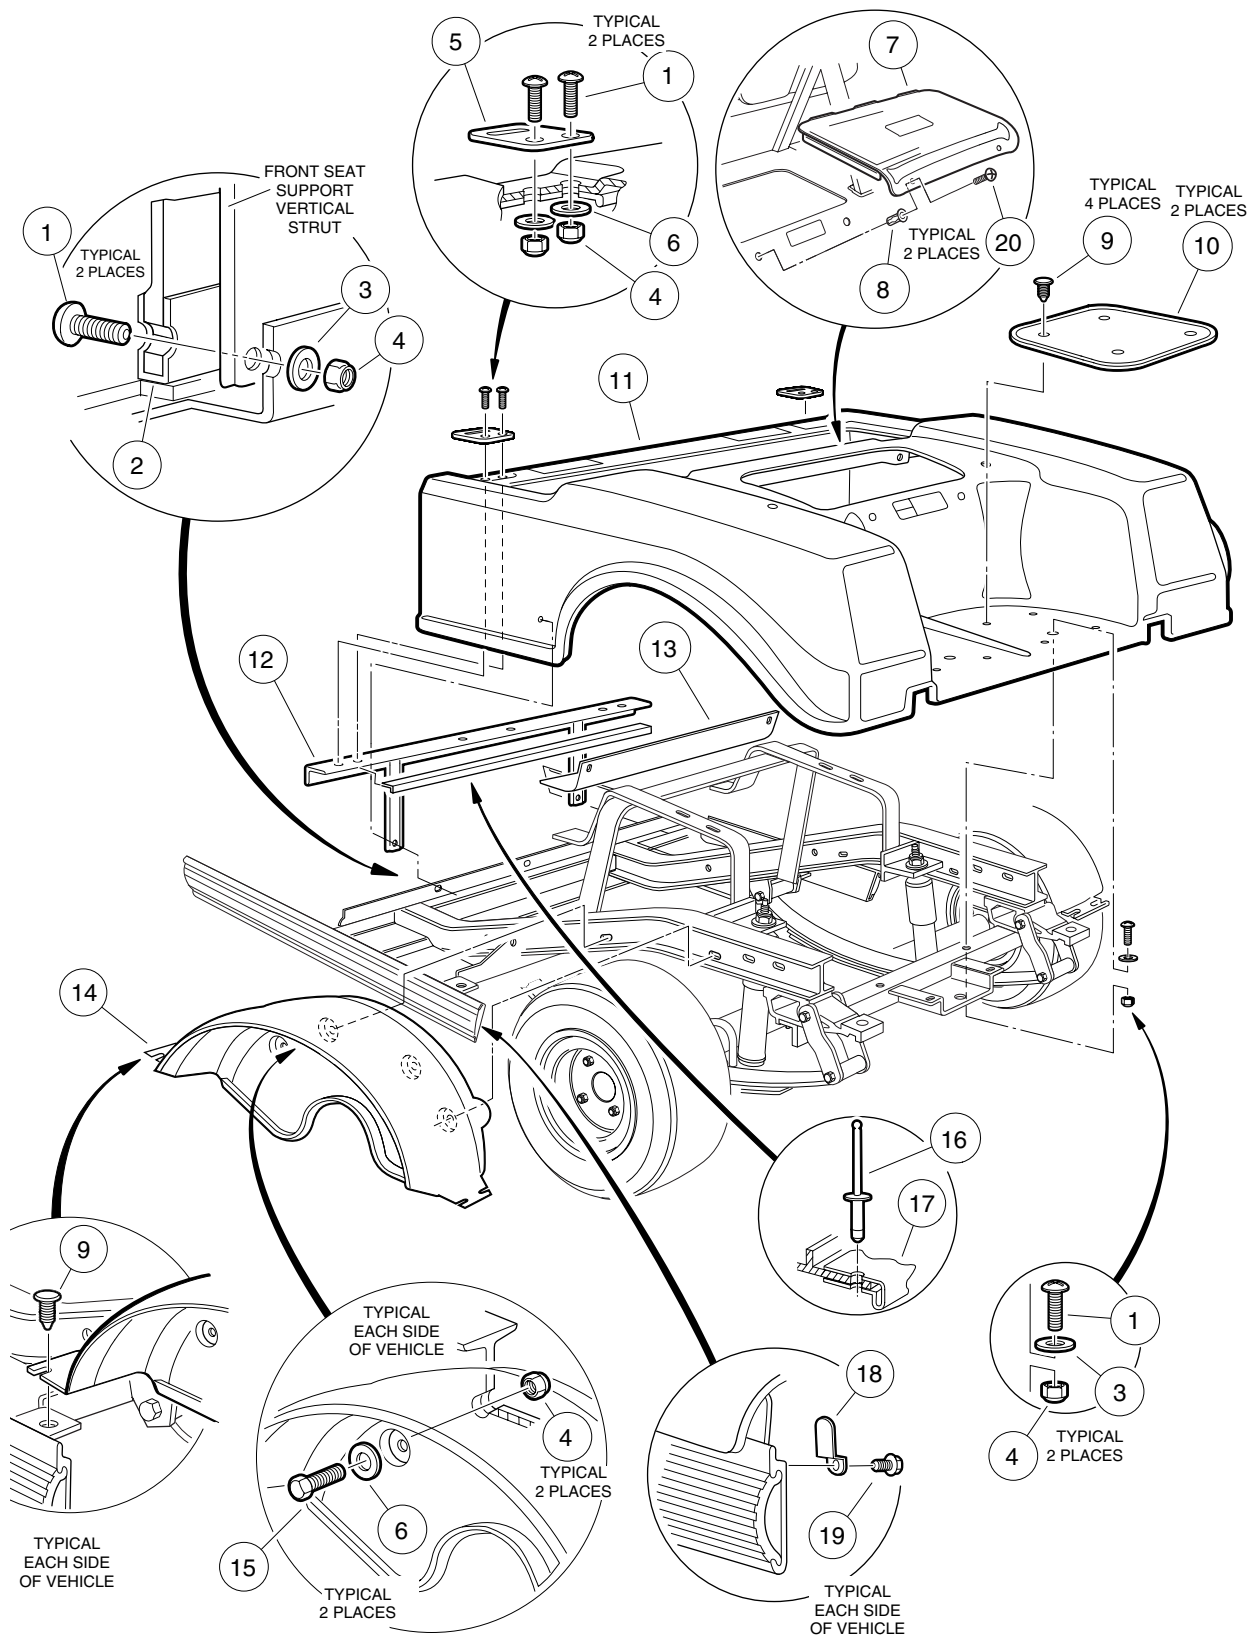

REAR BODY AND FENDER


ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC	1 G E
		1 2 3 4			
1	<u>8251</u>	Screw, Phillips Truss-Head, 1/4-20 x 1	8	8	
2	<u>101904101</u>	Plate, Body Kick	1	1	
3	<u>1014306</u>	Washer, Flat, Type B, 1/4	4	4	
4	<u>8233</u>	Nut, Nylon Lock, 1/4-20	12	12	
5	<u>1012412</u>	Plate, Body Hinge	2	2	
6	<u>332</u>	Washer, Flat, 1/4	8	8	
7	<u>1013032</u>	Door, Access – Black	1	1	
8	<u>1015525</u>	Nut, Blind, 1/4-20	2	2	
9	<u>1010434</u>	Barrel, Plastic	8	8	
10	<u>1014392</u>	Mat, Bag Rest	2	2	
11	<u>101728701</u>	Body – Beige	1	1	
11	<u>101728702</u>	Body – White	1	1	
11	<u>101728704</u>	Body – Gray	1	1	
11	<u>101728708</u>	Body – Pacific Blue	1	1	
11	<u>101728709</u>	Body – Dark Green	1	1	
11	<u>101728712</u>	Body – Burgundy	1	1	
12	<u>1017141</u>	Support, Front Body	1	1	
13	<u>101806901</u>	Shield, Heat (gasoline vehicle only)	1		
14	<u>1017936</u>	Fender, Inner	2	2	
15	<u>7847</u>	Screw, Hex-Head Cap, 1/4-20 x 3/4	4	4	
16	<u>1013357</u>	Rivet, Pop (electric vehicle only)		2	
17	<u>101837001</u>	Insulator, Battery (electric vehicle only)		1	
18	<u>1017748</u>	Clip, Body Keeper	2	2	
19	<u>1012047</u>	Screw, Self-Tapping, #8-32 x 3/8	2	2	
20	<u>8248</u>	Screw, Phillips Truss-Head, 1/4-20 x 3/4	2	2	

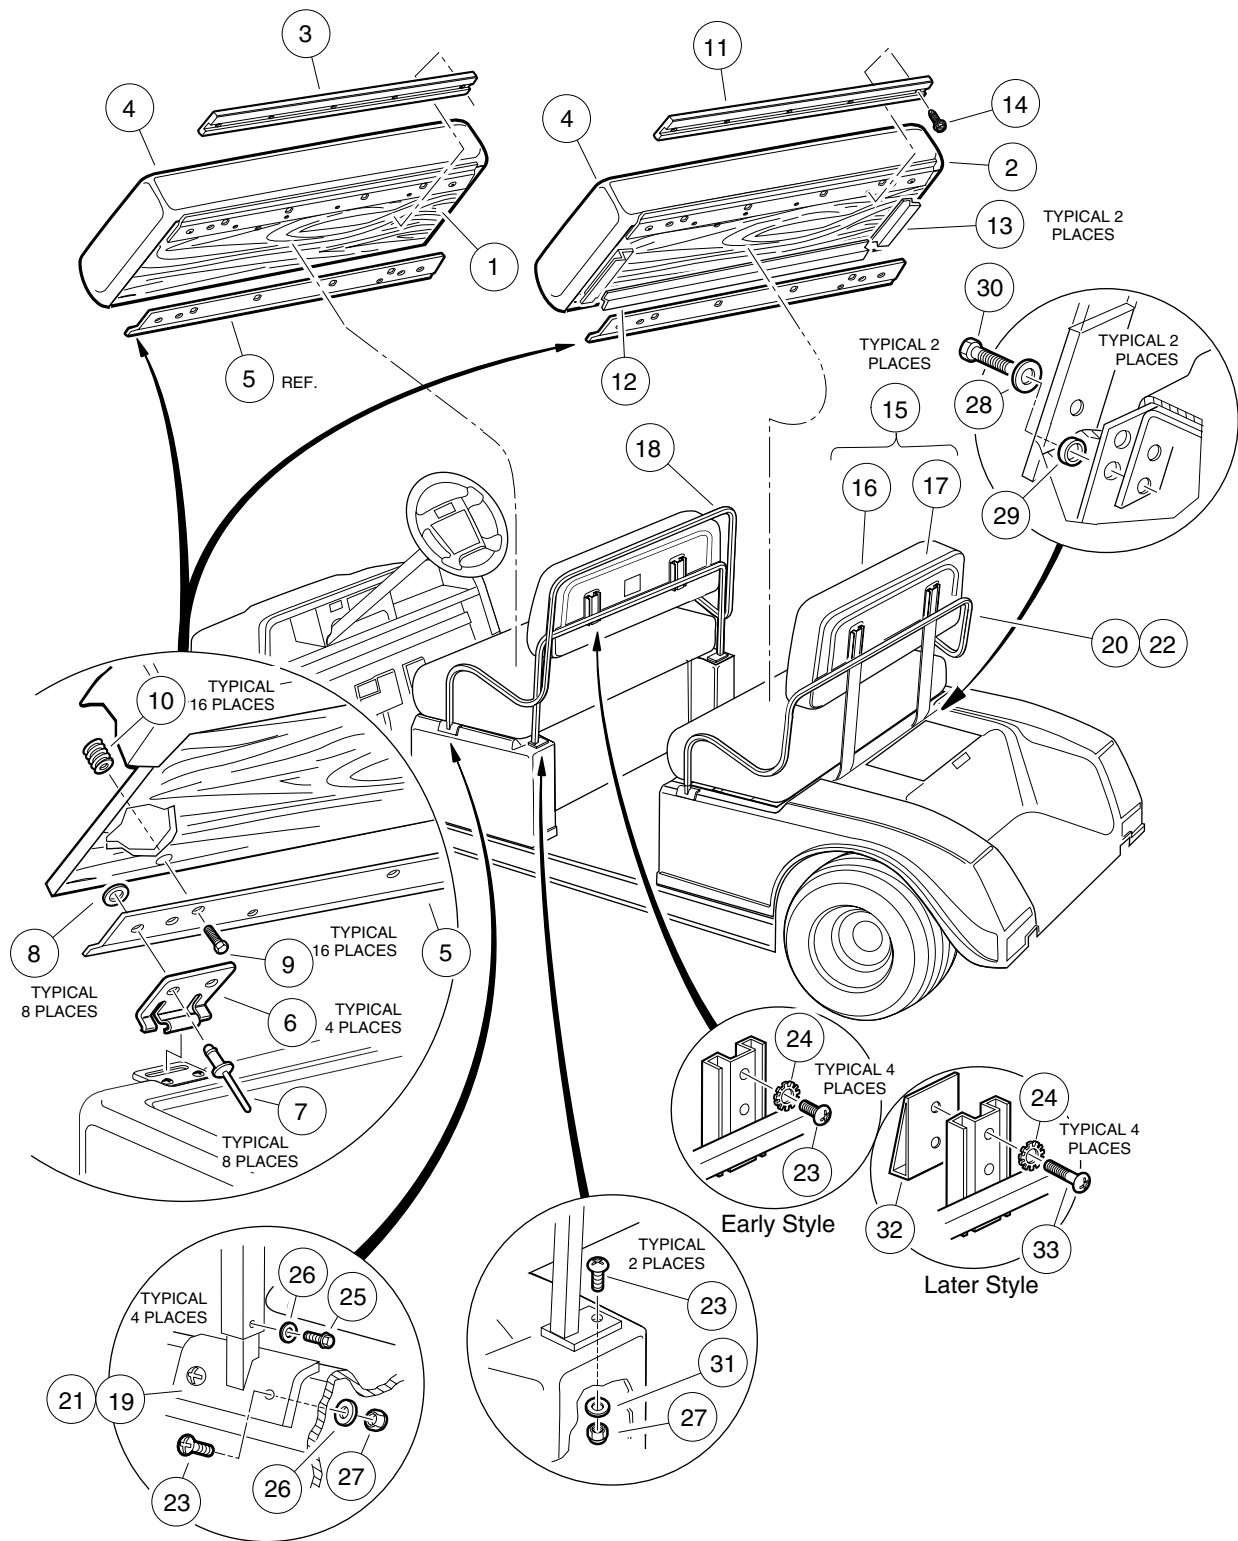

SEAT SUPPORT STRUCTURES


ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC	1 G E
		1 2 3 4			
1	<u>101728201</u>	Assembly, First Seat Bottom – White (includes items 3 - 10)	1	1	
1	<u>101728203</u>	Assembly, First Seat Bottom – Buff (includes items 3 - 10)	1	1	
2	<u>101728202</u>	Assembly, Second Seat Bottom – White (includes items 4 - 14)	1	1	
2	<u>101728204</u>	Assembly, Second Seat Bottom – Buff (includes items 4 - 14)	1	1	
3	<u>1013312</u>	Bumper, Seat – Long (first seat only)	1	1	
4	<u>101562701</u>	Cover, Vinyl Seat Bottom – Buff	1	1	
4	<u>101562702</u>	Cover, Vinyl Seat Bottom – White	1	1	
5	<u>1017695</u>	Bracket, Seat Support	2	2	
6	<u>1011652</u>	Plate, Seat Hinge	2	2	
7	<u>101880901</u>	Rivet, Pop, Stainless Steel, 3/16	4	4	
8	<u>101881701</u>	Washer, Flat, Stainless Steel, #8	4	4	
9	<u>101954301</u>	Screw, Hex-Head Cap (with adhesive patch), 1/4-20 x 3/4	8	8	
10	<u>1010543</u>	Insert, Wood	8	8	
11	<u>1012597</u>	Bumper, Seat (second seat only)	1	1	
12	<u>1012657</u>	Gasket, Seat – Long (second seat only)	1	1	
13	<u>1012656</u>	Gasket, Seat – Short (second seat only)	2	2	
14	<u>1017384</u>	Screw, Washer-Head Tap, #12 (second seat only)	5	5	
15	<u>101677701</u>	Assembly, Seat Back – White (includes items 16 and 17)	2	2	
15	<u>101677703</u>	Assembly, Seat Back – Buff (includes items 16 and 17)	2	2	
16	<u>101675501</u>	Cover, Vinyl Seat Back – Buff	2	2	
16	<u>101675502</u>	Cover, Vinyl Seat Back – White	2	2	
17	<u>1016751</u>	Cap, Seat Back – Black	2	2	
18	<u>1017259</u>	Weldment, First Armrest	1	1	
19	<u>1017310</u>	Weldment, Armrest Mounting	4	4	
20	<u>1017262</u>	Weldment, Armrest (second seat only)	1	1	
	<u>101946401</u>	Kit, Wide Armrest (12 pack) (optional equipment) (includes items 21 and 22)	1	1	
	<u>101946402</u>	Kit, Wide Armrest (optional equipment) (includes items 21 - 30)	1	1	
21	<u>101850701</u>	Weldment, Wide Armrest Mounting (second seat only) (optional equipment)	2	2	
22	<u>101850901</u>	Weldment, Wide Armrest (second seat only) (optional equipment)	1	1	
23	<u>1015902</u>	Screw, Phillips Truss-Head, 1/4-20 x 1-1/4 (qty. 8 in kit <u>101946402</u>)	18	18	
24	<u>101946201</u>	Washer, External Tooth Lock, 1/4 (qty. 4 in kit <u>101946402</u>)	8	8	
25	<u>1012285</u>	Screw, Thread-Rolling, 1/4-20 x 5/8 (qty. 2 in kit <u>101946402</u>)	4	4	
26	<u>332</u>	Washer, Flat, 1/4 (qty. 6 in kit <u>101946402</u>)	12	12	
27	<u>8233</u>	Nut, Nylon Lock, 1/4-20 (qty. 4 in kit <u>101946402</u>)	10	10	
28	<u>1241</u>	Washer, Flat, 5/16 (qty. 8 in kit <u>101946402</u>)	4	4	
29	<u>1017774</u>	Spacer, Body (qty. 4 in kit <u>101946402</u>)	4	4	
30	<u>101910401</u>	Screw, Thread-Forming, 5/16-18 x 1-1/4 (qty. 4 in kit <u>101946402</u>)	4	4	
31	<u>1014306</u>	Washer, Flat, Type B, 1/4	2	2	
32	<u>102358701</u>	Spacer, Seatback (later style only)	4	4	
33	<u>1011988</u>	Screw, Phillips Truss-Head, 1/4-20 x 2 (later style only)	8	8	

1
G
E

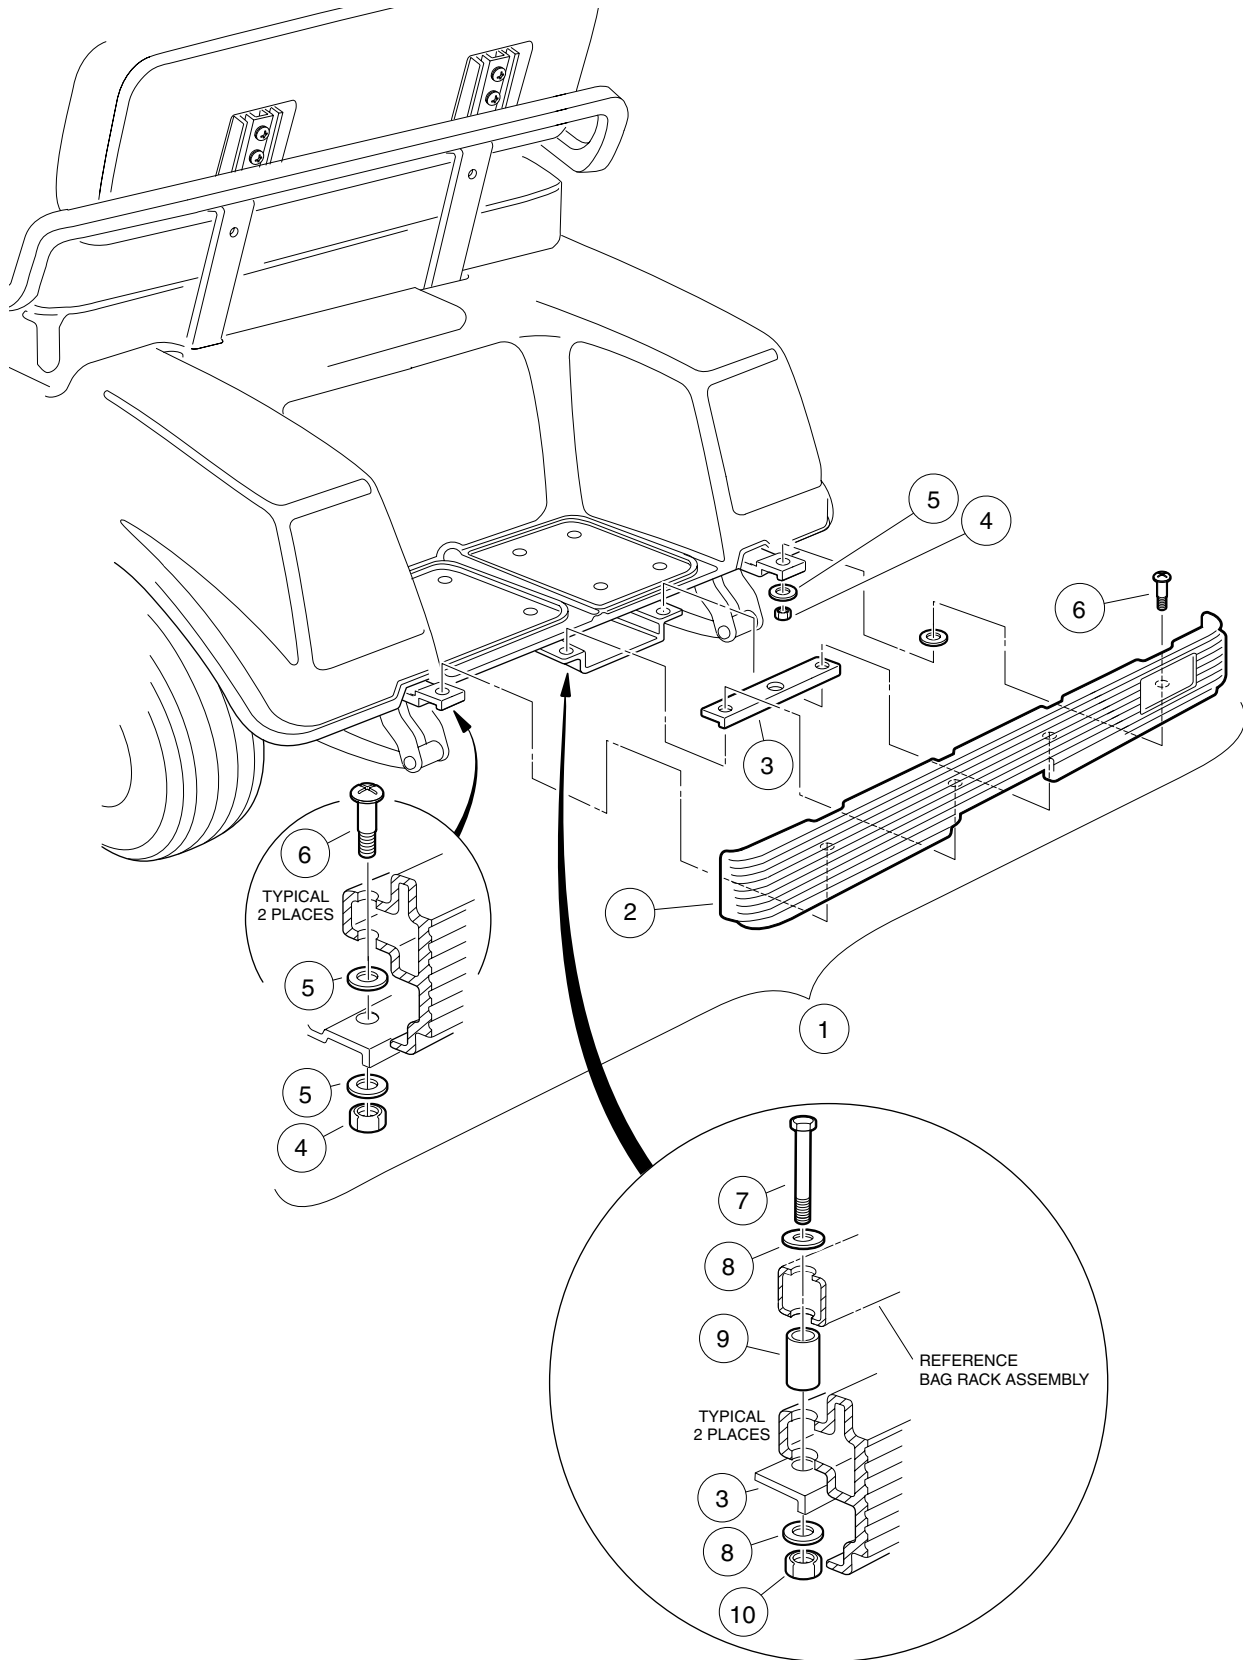


REAR BUMPER

ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC	1 G E
		1 2 3 4			
1	<u>1017079</u>	Kit, Rear Bumper (includes items 2 - 6)	1	1	
2	<u>1016379</u>	Bumper, Rear	1	1	
3	<u>1016875</u>	Plate, Mounting, Long	1	1	
4	<u>7473</u>	Nut, Nylon Lock, 5/16-18	2	2	
5	<u>1011697</u>	Washer, Special, 5/16	4	4	
6	<u>1016876</u>	Bolt, Phillips Truss-Head Shoulder, 3/8-18 x 2	2	2	
7	<u>343</u>	Bolt, Hex-Head Cap, 1/4-20 x 3	2	2	
8	<u>332</u>	Washer, Flat, 1/4	4	4	
9	<u>1017841</u>	Spacer, Steel	2	2	
10	<u>8233</u>	Nut, Nylon Lock, 1/4-20	2	2	

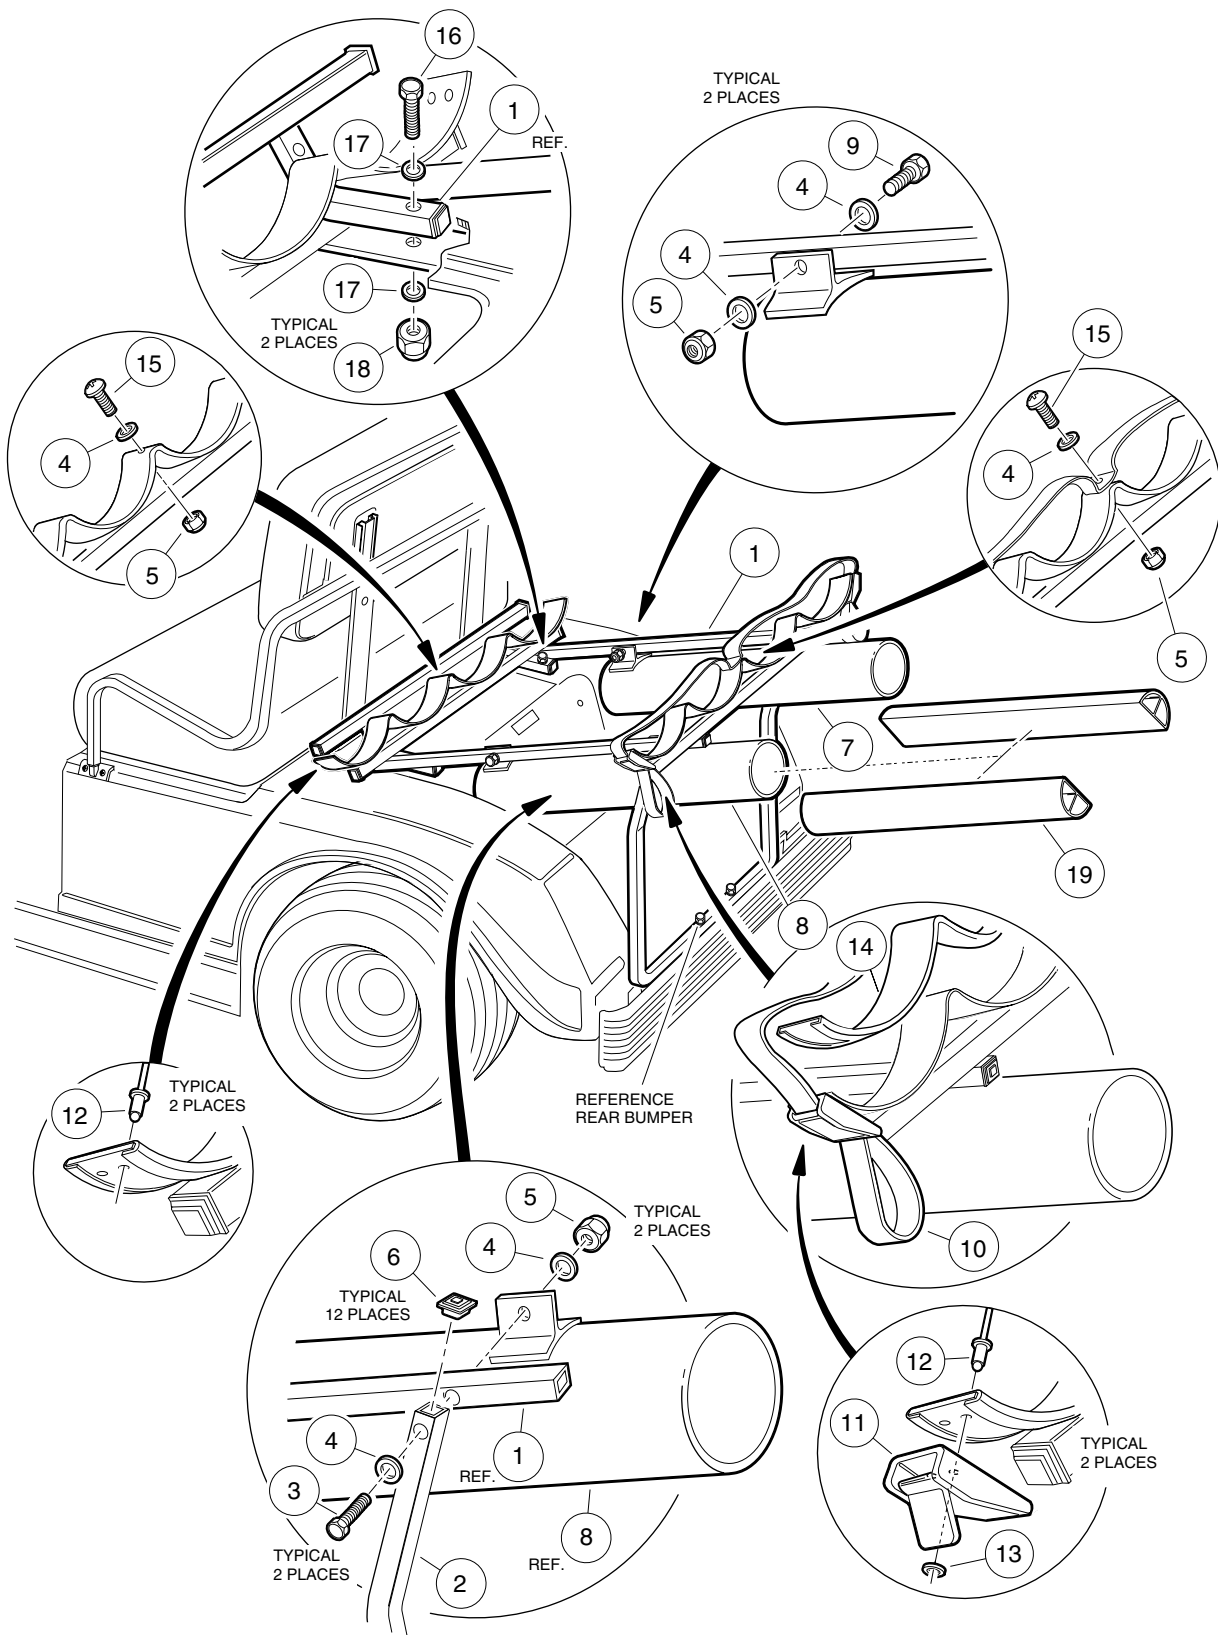

BAG RACK ASSEMBLY – EARLY STYLE

ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC	1 G E
		1 2 3 4			
	N/A	Assembly, Bag Rack (includes items 1 - 15)	1	1	
1	N/A	Weldment, Bag Rack	1	1	
2	<u>1017672</u>	Support, Bag Rack	1	1	
3	<u>1012159</u>	Screw, Hex-Head Cap, 1/4-20 x 2-3/4	2	2	
4	<u>332</u>	Washer, Flat, 1/4	10	10	
5	<u>8233</u>	Nut, Nylon Lock, 1/4-20	6	6	
6	<u>1017271</u>	Plug, Tube Finishing	12	12	
7	<u>101729401</u>	Weldment, Putter Tube, Passenger Side	1	1	
8	<u>101729402</u>	Weldment, Putter Tube, Driver Side	1	1	
9	<u>1013509</u>	Screw, Hex-Head Cap, 1/4-20 x 1-3/4	2	2	
10	<u>1017299</u>	Strap, Bag	1	1	
11	<u>1017284</u>	Buckle, Bag Strap	2	2	
12	<u>1606</u>	Pop Rivet, 3/16	8	8	
13	<u>183</u>	Washer, Flat, #10, Type A	4	4	
14	<u>1017281</u>	Cover, Vinyl Rack	2	2	
15	<u>8248</u>	Screw, Truss-Head, 1/4-20 x 3/4	2	2	
16	<u>1010921</u>	Screw, Hex-Head Cap, 5/16-18 x 2-1/2	2	2	
17	<u>1241</u>	Washer, Flat, 5/16	4	4	
18	<u>7473</u>	Nut, Nylon Lock, 5/16-18	2	2	
19	N/A	Divider, Putter Tube (optional equipment only)	2	2	
Note: The parts that are on this page will be sold to depletion. After the parts become unavailable, use the later style bag rack assembly, Page 1-17.					

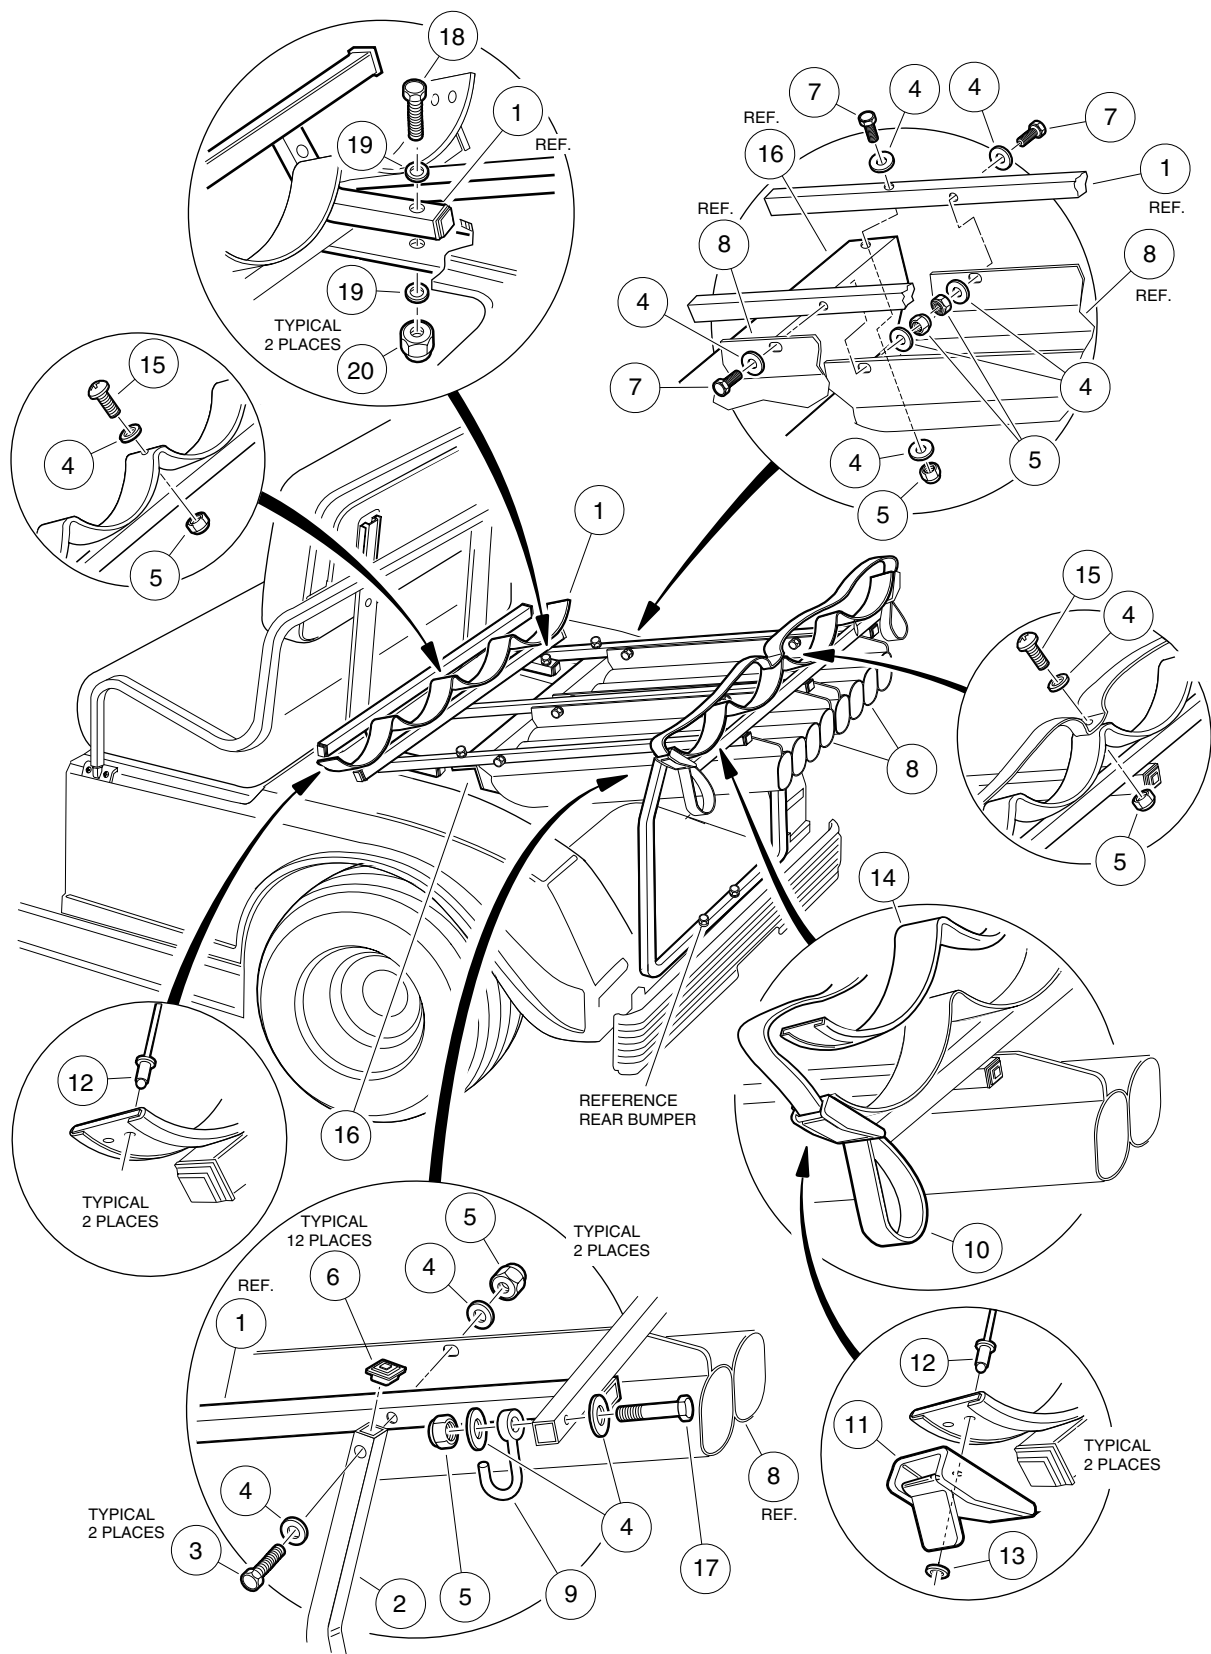


BAG RACK ASSEMBLY – LATER STYLE

ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC	1 G E
		1 2 3 4			
1	102362401	Assembly, Bag Rack (includes items 2 - 17)	1	1	
2	<u>1017672</u>	Support, Bag Rack	1	1	
3	<u>1012159</u>	Screw, Hex-Head Cap, 1/4-20 x 2-3/4	2	2	
4	<u>332</u>	Washer, Flat, 1/4	20	20	
5	<u>8233</u>	Nut, Nylon Lock, 1/4-20	11	11	
6	<u>1017271</u>	Plug, Tube Finishing	12	12	
7	<u>1013509</u>	Screw, Hex-Head Cap, 1/4-20 x 1-3/4	6	6	
8	<u>102359001</u>	Tube, Putter	2	2	
9	<u>102359301</u>	Hook, Bag	1	1	
10	<u>1017299</u>	Strap, Bag	1	1	
11	<u>1017284</u>	Buckle, Bag Strap	2	2	
12	<u>1606</u>	Pop Rivet, 3/16	8	8	
13	<u>183</u>	Washer, Flat, #10, Type A	4	4	
14	<u>1017281</u>	Cover, Vinyl Rack	2	2	
15	<u>8248</u>	Screw, Truss-Head, 1/4-20 x 3/4	2	2	
16	<u>102359101</u>	Backstop, Putter Tube	1	1	
17	<u>1014189</u>	Screw, Hex-Head Cap, 1/4-20 x 2	1	1	
18	<u>1010921</u>	Screw, Hex-Head Cap, 5/16-18 x 2-1/2	2	2	
19	<u>1241</u>	Washer, Flat, 5/16	4	4	
20	<u>7473</u>	Nut, Nylon Lock, 5/16-18	2	2	





CANOPY HARDWARE KIT

ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC	1 G E
		1 2 3 4			
	<u>101735701</u>	Kit, Canopy Hardware (early style) (includes items 1 - 30)	1	1	
	<u>102357901</u>	Kit, Canopy Hardware (later style) (includes items 1 - 31)	1	1	
1	<u>101987301</u>	Support, Rear Canopy	2	2	
2	<u>1011862</u>	Brace, Knee, Passenger Side (early style)	1	1	
2	<u>102358601</u>	Brace, Knee, Passenger Side (later style)	1	1	
3	<u>1012462</u>	Screw, Hex-Head Cap, 1/4-20 x 3-1/2	4	4	
4	<u>332</u>	Washer, Flat, 1/4 (early style)	4	4	
5	<u>1016848</u>	Spacer	4	4	
6	<u>8233</u>	Nut, Nylon Lock, 1/4-20	10	10	
7	<u>324</u>	Screw, Hex-Head Cap, 1/4-20 x 2-1/2 (early style)	2	2	
8	<u>1011988</u>	Screw, Phillips Truss-Head, 1/4-20 x 2	4	4	
9	<u>1015453</u>	Mount, Compression	8	8	
10	<u>1010921</u>	Screw, Hex-Head Cap, 5/16-18 x 2-1/2	2	2	
11	<u>1014306</u>	Washer, Wide Flat, 1/4	4	4	
12	<u>8963</u>	Screw, Hex-Head Cap, 5/16-18 x 1-3/4 (early style)	2	2	
12	<u>8916</u>	Screw, Hex-Head Cap, 5/16-18 x 2 (later style)	2	2	
13	<u>1241</u>	Washer, Flat, 5/16	10	10	
14	<u>7473</u>	Nut, Nylon Lock, 5/16-18	6	6	
15	<u>1017420</u>	Handle, Canopy	4	4	
16	<u>1017789</u>	Screw, Countersunk-Head, #10-24 x 1-3/4	16	16	
17	<u>183</u>	Washer, Flat, #10, Type A	16	16	
18	<u>1012438</u>	Nut, Nylon Lock, #10-24	16	16	
19	<u>1011937</u>	Screw, Hex-Head Cap, 5/16-18 x 1-1/4 (with thread-locking compound)	2	2	
20	<u>1011868</u>	Assembly, Windshield Frame (early style)	1	1	
20	<u>102358101</u>	Assembly, Windshield Frame (later style)	1	1	
21	<u>1011883</u>	Pad, Frame Mounting	2	2	
22	<u>1010577</u>	Screw, Hex-Head Cap, 5/16-18 x 1-1/2	2	2	
23	<u>1703</u>	Screw, Hex-Head Cap, 1/4-20 x 1-1/2	2	2	
24	<u>1011965</u>	Washer, Lock, 1/4	2	2	
25	<u>1011964</u>	Washer, Flat, 1/4	2	2	
26	<u>1010237</u>	Bushing	2	2	
27	<u>1011865</u>	Brace, Knee, Driver Side (early style)	1	1	
27	<u>102358501</u>	Brace, Knee, Driver Side (later style)	1	1	
28	<u>1011878</u>	Nut, "T" Capped, 1/4-20	2	2	
29	<u>1010142</u>	Cushion, Shock Absorber	8	8	
30	<u>1011852</u>	Plate, Canopy Trim	4	4	
31	<u>1016269</u>	Screw, Hex-Head, Thread-Rolling, 5/16-18 x 2 (later style)	2	2	

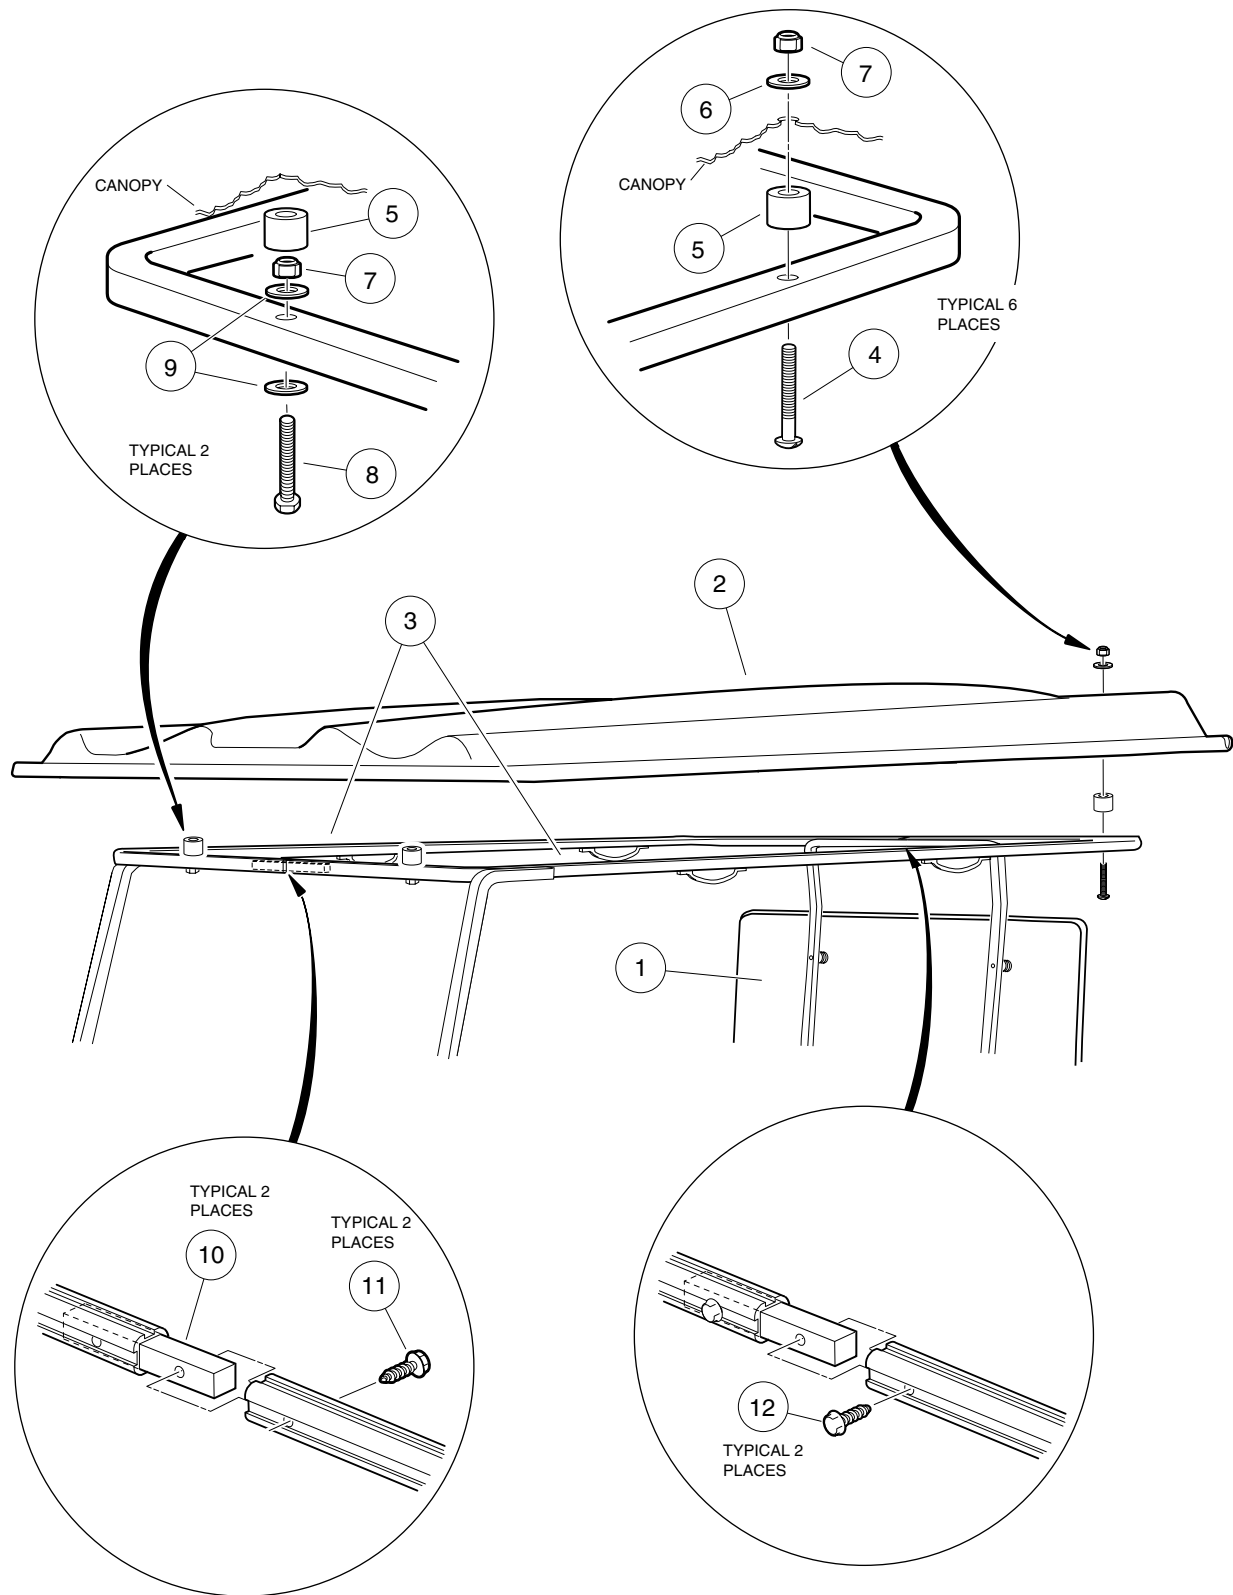

CANOPY KIT

ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC	1 G E
		1 2 3 4			
	<u>101736001</u>	Sub-Assembly, Canopy (early style) (includes items 1 - 12)	1	1	
	<u>102358001</u>	Sub-Assembly, Canopy – White (later style) (includes items 1 - 12)	1	1	
	<u>102358002</u>	Sub-Assembly, Canopy – Beige (later style) (includes items 1 - 12)	1	1	
1	1017417	Window, Rear	1	1	
2	<u>101735601</u>	Canopy – White (early style)	1	1	
2	102358401	Canopy – White (later style)	1	1	
2	102358402	Canopy – Beige (later style)	1	1	
3	<u>1017350</u>	Canopy, Frame Half (early style)	2	2	
3	102358301	Canopy, Frame Half (later style)	2	2	
4	1016845	Screw, Phillips Truss-Head, 1/4-20 x 2-1/8	6	6	
5	<u>1010142</u>	Cushion, Shock Absorber	8	8	
6	<u>1014306</u>	Washer, Wide Flat, 1/4	6	6	
7	<u>8233</u>	Nut, Nylon Lock, 1/4-20	8	8	
8	<u>1703</u>	Screw, Hex-Head Cap, 1/4-20 x 1-1/2	2	2	
9	<u>332</u>	Washer, Flat, 1/4	4	4	
10	<u>1016795</u>	Bar, Splice	2	2	
11	<u>101910401</u>	Screw, Hex-Head, Thread-Rolling, 5/16-18 x 1-1/4	2	2	
12	<u>1016269</u>	Screw, Hex-Head, Thread-Rolling, 5/16-18 x 2	2	2	

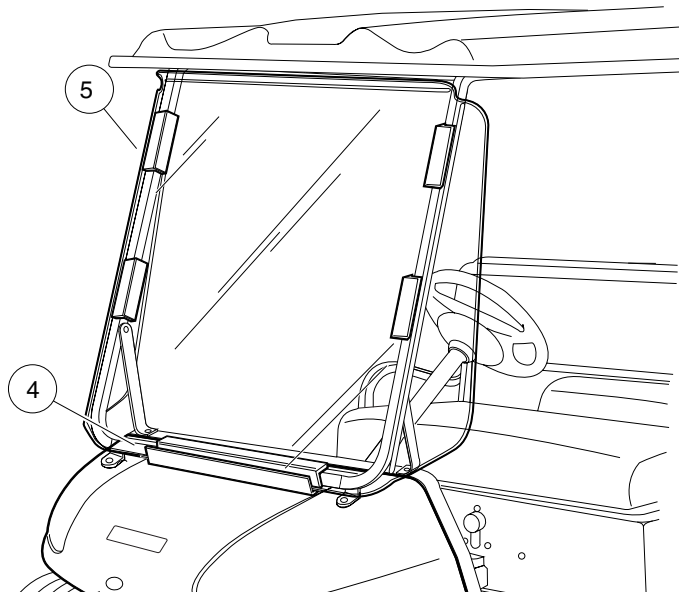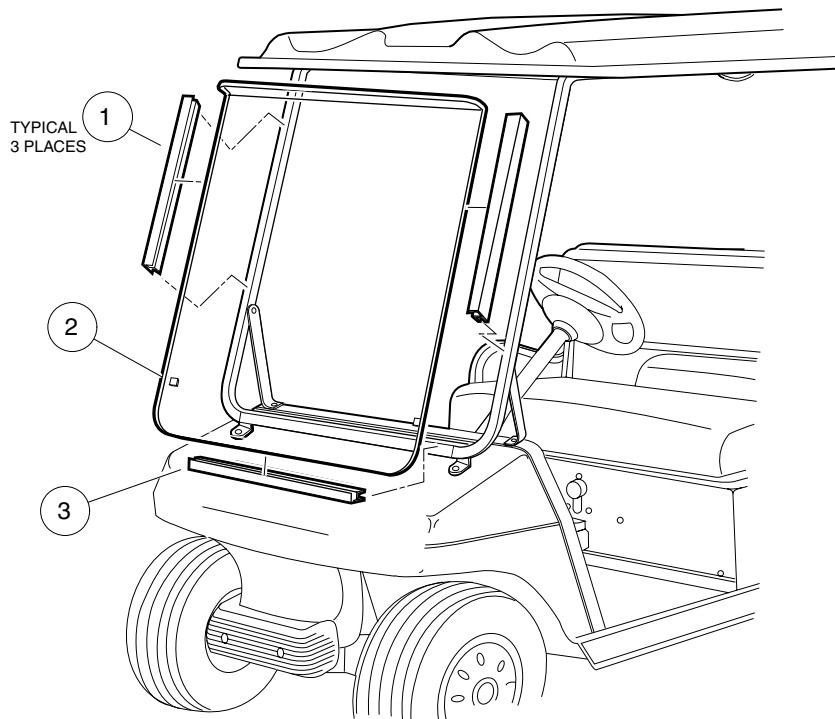

WINDSHIELD



ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC	1 G E
		1 2 3 4			
	1014435	Kit, Windshield (early style) (includes items 1 - 3)	1	1	
1	<u>101444101</u>	Channel, Windshield – 21 inch (53.3 cm) (sides)	2	2	
2	<u>1011897</u>	Bumper, Protective	2	2	
3	1014437	Channel, Windshield – 31 inch (78.7 cm) (bottom)	1	1	
	<u>102361501</u>	Kit, Windshield (later style) (includes items 4 and 5)	1	1	
4	<u>101444101</u>	Channel, Windshield – 21 inch (53.3 cm) (bottom)	1	1	
5	****	Channel, Windshield – 5 inch (12.7 cm) (sides)	4	4	
	****	Special order item available upon request.			

WHEELS AND TIRES

2

G

E

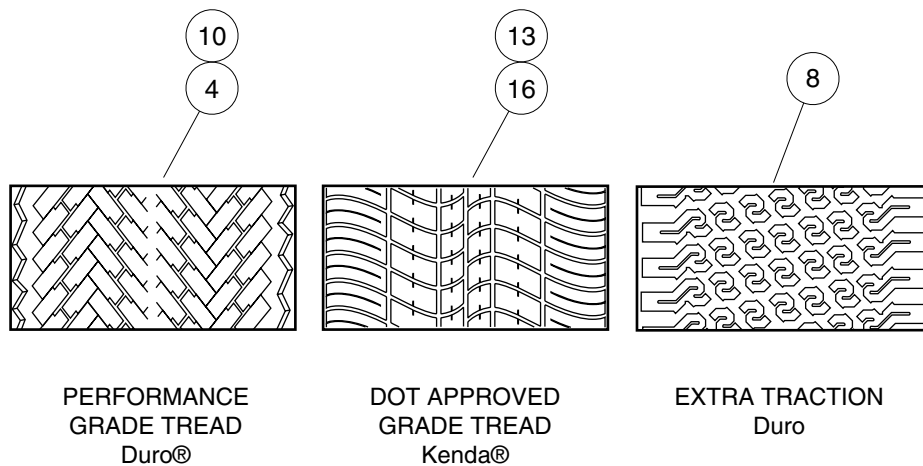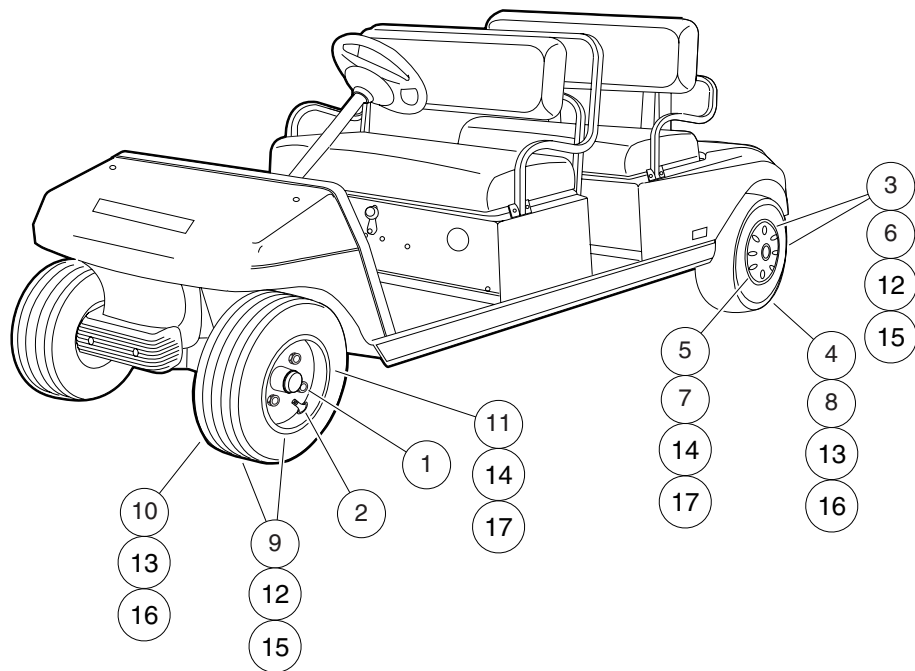

Note: The performance grade tire has the wheel and tire matched and balanced at the Duro tire factory.

WHEELS AND TIRES

ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC	2 G E
		1 2 3 4			
1	<u>1010984</u>	Nut, Lug	16	16	
2	<u>7310</u>	Stem, Valve*	4	4	
3	<u>101651406</u>	Assembly, Wheel (White) and Premium Tire (rear only) (early style only) (includes items 4 and 5)	2	2	
4	<u>101737002</u>	Tire, Unmounted, Premium Tread, 6-Ply Rated (18 x 8.50 - 8) (Duro®) .	1	1	
5	<u>1014771</u>	Wheel Rim – White	1	1	
6	<u>101651407</u>	Assembly, Wheel (White) and Extra Traction Tire (rear only) (includes items 7 and 8)	2	2	
7	<u>1014771</u>	Wheel Rim – White	1	1	
8	<u>101769302</u>	Tire, Unmounted, Extra Traction, 6-Ply Rated (18 x 8.50 - 8) (Duro)	1	1	
9	<u>101651409</u>	Assembly, Wheel (White) and Premium Tire (front only) (early style only) (includes items 10 and 11)	2	2	
10	<u>101884902</u>	Tire, Unmounted, Premium Tread, 6-Ply Rated (18 x 6.50 - 8) (Duro) ...	1	1	
11	<u>101918402</u>	Wheel Rim – White (front only)	1	1	
12	<u>102311803</u>	Assembly, Wheel (Beige) and DOT Approved Tire (later style only) (includes item 13 and 14)	4	4	
13	<u>102364002</u>	Tire, Standard Tread, 6-Ply Rated (18 x 8.50 - 8) (Kenda®)	1	1	
14	<u>1015707</u>	Wheel Rim – Beige	1	1	
15	<u>102311802</u>	Assembly, Wheel (White) and DOT Approved Tire (later style only) (includes item 16 and 17)	4	4	
16	<u>102364002</u>	Tire, Standard Tread, 6-Ply Rated (18 x 8.50 - 8) (Kenda)	1	1	
17	<u>1014771</u>	Wheel Rim – White	1	1	
* Item 2 is part of all wheel assemblies.					

2

G

E

DECALS

3

G

E

WARNING**ROLLOVER OR FALLING OFF MAY CAUSE DEATH.**

- Before using vehicle, read operating instructions.
- Remain seated and hold on to seat handle while moving.
- Do not start vehicle until all occupants are seated.
- Two (2) persons per seat maximum.
- Operate from driver side only and not on public roads.
- Keep entire body inside vehicle while moving.
- Drive slowly in turns and straight up and down slopes.
- Do not leave children unattended on vehicle.
- Never operate under the influence of alcohol or drugs.
- Use brakes to reduce speed when coasting downhill.
- Never stand in front of or behind vehicle.


CCI 101960601

**DRIVER / PASSENGER
WARNING DECAL****OFF | ON****KEY SWITCH
DECAL****OPERATING INSTRUCTIONS**

- Read Owner's Manual and safety warnings located on dash panel prior to driving.
- Study and understand controls.
- Make sure wheels are turned in desired direction.
- Turn key to "ON" position and be sure nothing is in your path.
- While vehicle is stopped, select direction by placing shift lever or switch in desired position:
F – Forward N – Neutral R – Reverse (Buzzer will sound)
- Vehicle will start moving when accelerator pedal is depressed.
- Slowly depress accelerator pedal to increase speed. Park brake will release when accelerator pedal is depressed.
- To stop, release accelerator pedal and depress brake pedal.
- After stopping, firmly depress park brake until it locks.
- Place forward and reverse switch in neutral position.

Turn key "OFF" and remove key when not in use.

CCI 1016216-01

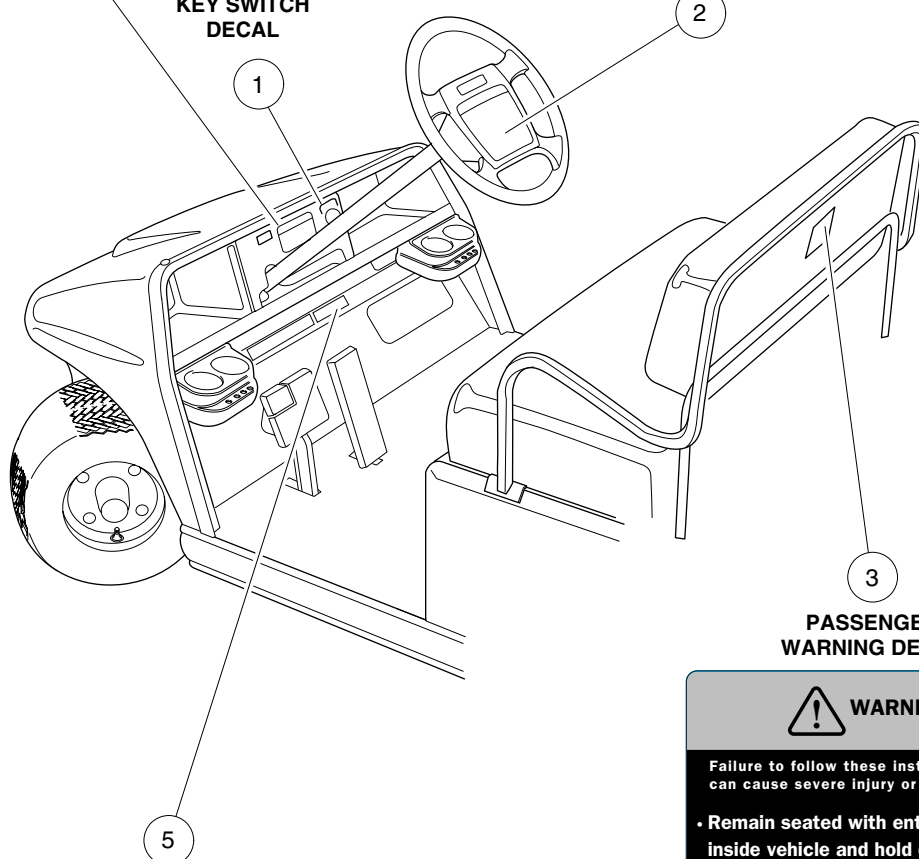OPERATING INSTRUCTIONS**PASSENGER
WARNING DECAL****WARNING**

Failure to follow these instructions can cause severe injury or death.

- Remain seated with entire body inside vehicle and hold on to seat handle or handrail at all times.
- No more than two persons per seat.
- Do not leave children unattended on vehicle at anytime.
- Never stand in front of or behind vehicle.

CCI 1017057-01

MOTOR BRAKING DECAL**IMPORTANT
NOTICE**

VEHICLE EQUIPPED TO
LIMIT DOWNHILL SPEED

- Maximum vehicle speed is limited during downhill operation with accelerator pedal depressed.
- Vehicle will brake gently when accelerator pedal is released.
- System is activated only when tow switch is in the "RUN" position.
- When towing vehicle, tow switch must be in the "TOW" position.

CCI 101959901

DECALS

ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC	3 G E
		1 2 3 4			
1	<u>101825101</u>	Decal, Key Switch	1	1	
2	<u>101621601</u>	Decal, Operating Instructions	1	1	
3	<u>101705701</u>	Decal, Passenger Warning	1	1	
4	<u>101960601</u>	Decal, Driver/Passenger Warning	1	1	
5	<u>101959901</u>	Decal, Motor Braking		1	

**TOW SWITCH WARNING DECAL
(ON TOW SWITCH BRACKET UNDER SEAT)**

WARNING

TOW

RUN

PLACE TOW SWITCH IN "TOW" POSITION BEFORE:

- TOWING
- EXTENDED STORAGE
- SERVICING
- DISCONNECTING BATTERIES

FAILURE TO DO SO COULD RESULT IN DAMAGE TO VEHICLE OR BATTERY EXPLOSION.

CCI 1019086-01

**BATTERY DANGER DECAL
(ON BODY UNDER SEAT)**

DANGER / POISON

EXPLOSIVE GASES CAN CAUSE BLINDNESS OR INJURY

SHIELD EYES


NO SPARKS
•SPARKS
•FLAMES
•SMOKING

SULFURIC ACID
CAN CAUSE BLINDNESS OR SEVERE BURNS

FLUSH EYES IMMEDIATELY WITH WATER
GET MEDICAL HELP FAST

KEEP OUT OF THE REACH OF CHILDREN – DO NOT TIP – KEEP VENT CAPS TIGHT AND LEVEL

ELECTRIC VEHICLE

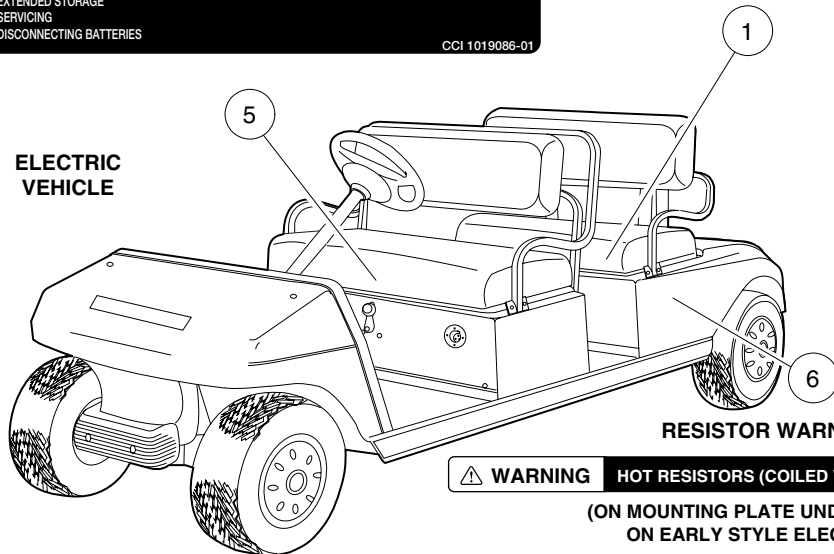

RESISTOR WARNING DECAL

WARNING

HOT RESISTORS (COILED WIRE) CAN CAUSE SEVERE BURNS.

(ON MOUNTING PLATE UNDER ACCESS PANEL
ON EARLY STYLE ELECTRIC VEHICLE)

**GASOLINE WARNING DECAL
(ON FRAME
NEAR FUEL TANK)**

WARNING

- GASOLINE EXPLOSION / FIRE.
- CAN CAUSE SEVERE INJURY OR DEATH.
- NO SMOKING, SPARKS, OR OPEN FLAME.
- STOP ENGINE, ALLOW TO COOL BEFORE REFUELING.
- TURN FUEL VALVE (—) ON DURING OPERATION.
- (—) OFF DURING STORAGE OR TRANSPORT.

CCI 1015476-01

**ROTATING PARTS AND
HOT MANIFOLD DECAL**

WARNING

CAN CAUSE SEVERE INJURY


Rotating parts

HOT manifold & muffler

KEEP CLEAR CCI 101960501

(ON
STARTER/GENERATOR
AND ENGINE)

GASOLINE VEHICLE

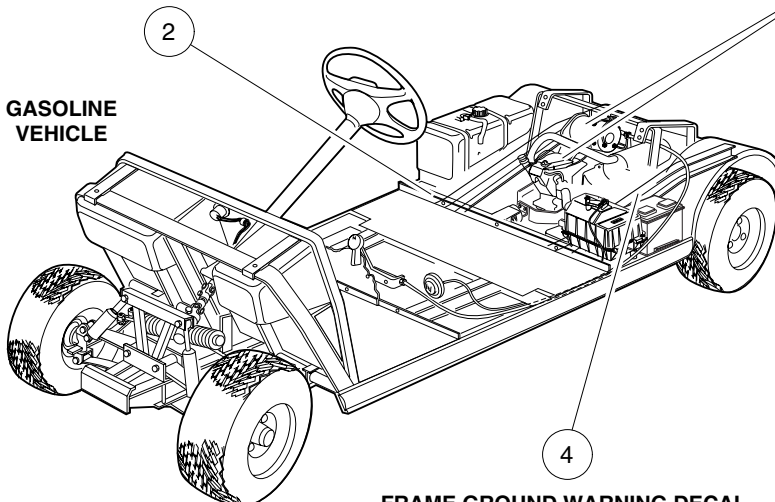

FRAME GROUND WARNING DECAL

WARNING

Negative frame ground. Can cause severe injury. Do not contact positive (+) battery post or cable to frame. Disconnect negative battery lead first.

WARNING

Excessive speed. Can cause severe injury or death. Do not tamper with engine governor adjustment.

DECALS, CONTINUED


ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC	3 G E
		1 2 3 4			
1	<u>1013677</u>	Decal, Battery Danger/Poison		1	
2	<u>101547601</u>	Decal, Gasoline Warning	1		
3	<u>101960501</u>	Decal, Rotating Parts and Hot Manifold	2		
4	<u>101915201</u>	Decal, Frame Ground Warning	1		
5	<u>101908601</u>	Decal, Tow/Run Switch Warning		1	
6	<u>1013496</u>	Decal, Resistor Warning (early style only)		1	

BRAKES, PEDAL, AND CABLE ASSEMBLIES

4

G


E

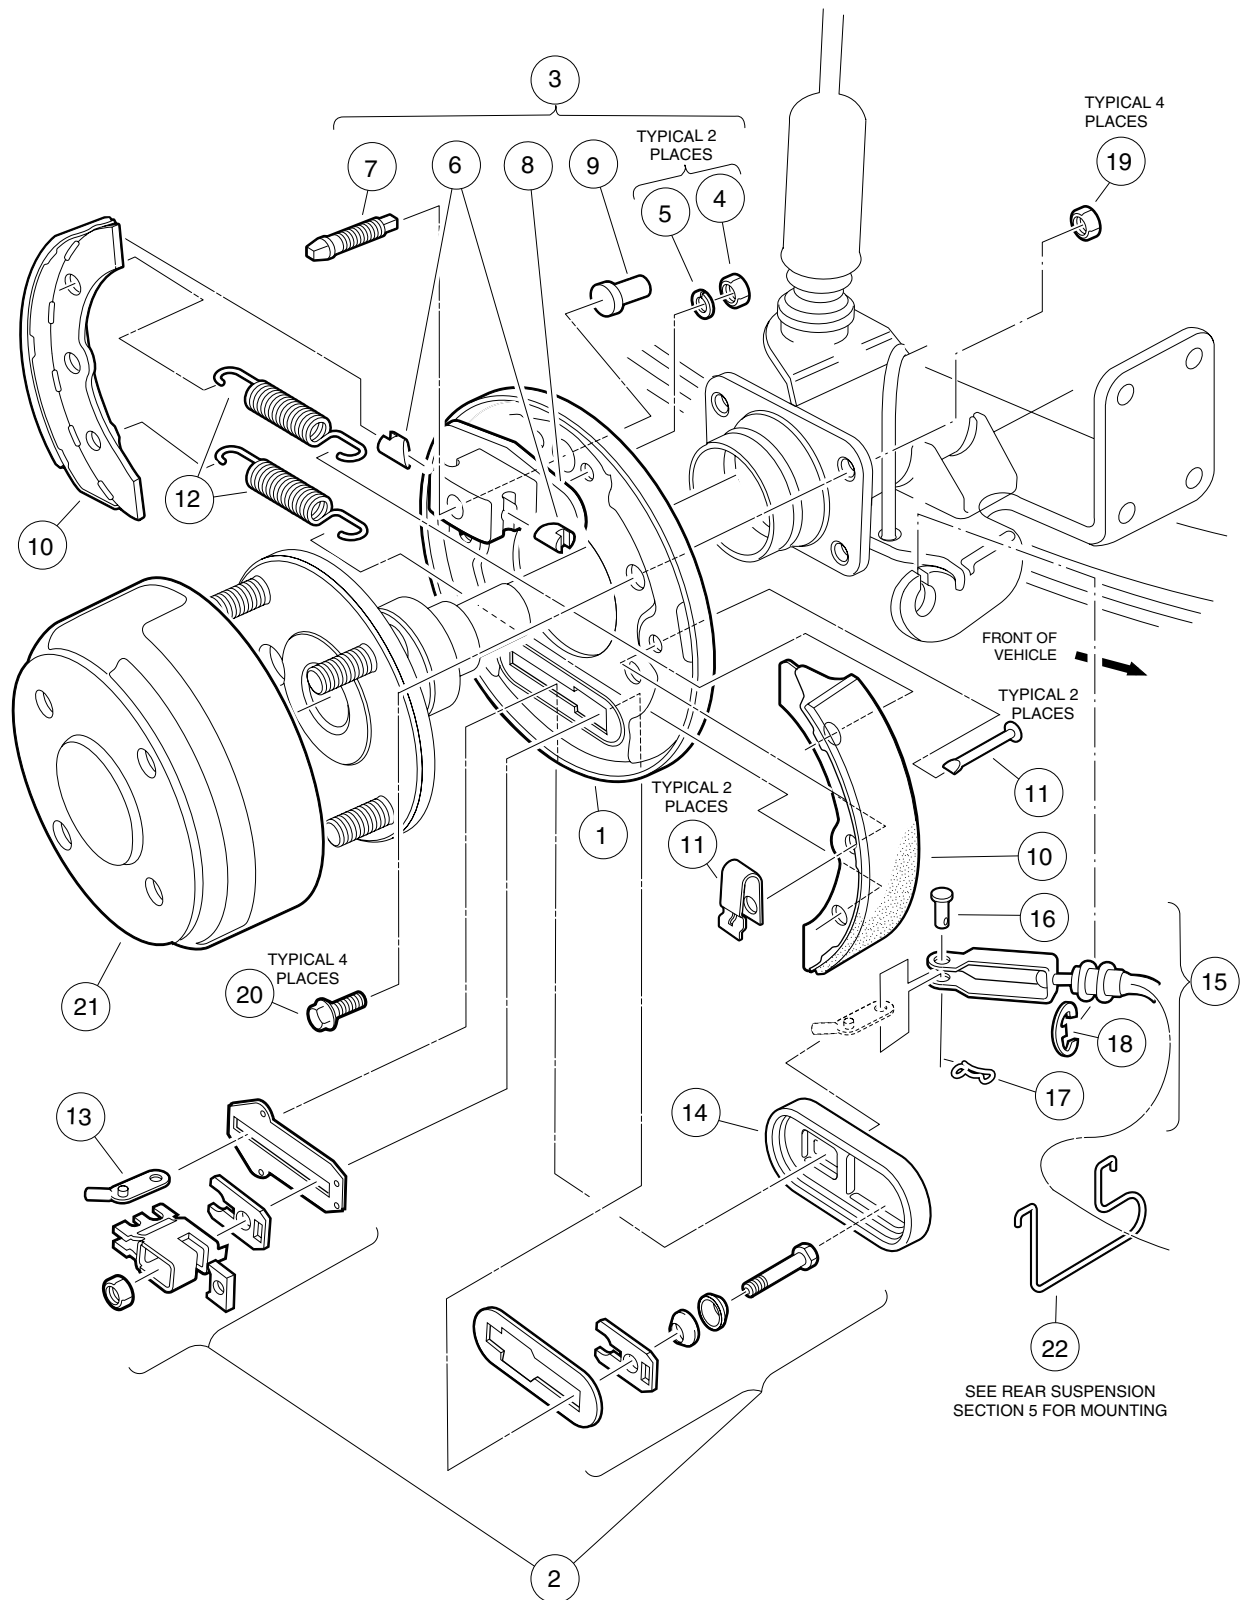

REAR BRAKE ASSEMBLY, MANUALLY ADJUSTED


ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC
		1 2 3 4		
	<u>1016573</u>	Cluster, Passenger-Side Brake, Without Brake Drum (includes items 1 - 14)	1	1
	<u>1016557</u>	Cluster, Driver-Side Brake, Without Brake Drum (includes items 1 - 14)	1	1
1	N/A	Plate, Backing, Driver-Side	1	1
1	N/A	Plate, Backing, Passenger-Side	1	1
2	<u>1011465</u>	Kit, Brake Actuator	1	1
3	<u>1011467</u>	Kit, Anchor Body (includes items 4 - 9)	1	1
4	<u>1011114</u>	Nut, M6 x 1	2	2
5	<u>451</u>	Washer, Lock, 1/4	2	2
6	N/A	Piston, Anchor	2	2
7	N/A	Bolt, Adjustment	1	1
8	N/A	Body, Anchor	1	1
9	<u>1011303</u>	Cap, Adjustment Bolt	1	1
10	<u>101146302</u>	Package, Brake Shoe (four pieces)	1	1
11	<u>1011466</u>	Kit, Shoe Retainer (four pieces)	1	1
12	<u>1011464</u>	Package, Brake Spring (four pieces)	1	1
13	N/A	Arm, Brake Lever	1	1
14	<u>1010850</u>	Cover, Dust	1	1
15	<u>102166901</u>	Kit, Brake Cable, Rear (includes items 16 - 18)	1	1
16	<u>1010829</u>	Pin, Clevis, 5/16	2	2
17	<u>102292801</u>	Pin, Bow Tie Locking	2	2
18	<u>1011779</u>	E-Clip, 1/2	4	4
19	<u>1013924</u>	Nut, Cone Lock, Grade 8, 5/16-24	8	8
20	<u>1014153</u>	Bolt, Brake Cluster Mounting, Grade 8, 5/16-24 x 7/8	8	8
21	<u>101791101</u>	Drum, Brake	2	2
22	<u>1013207</u>	Hanger, Brake Cable	2	2

4
G
E

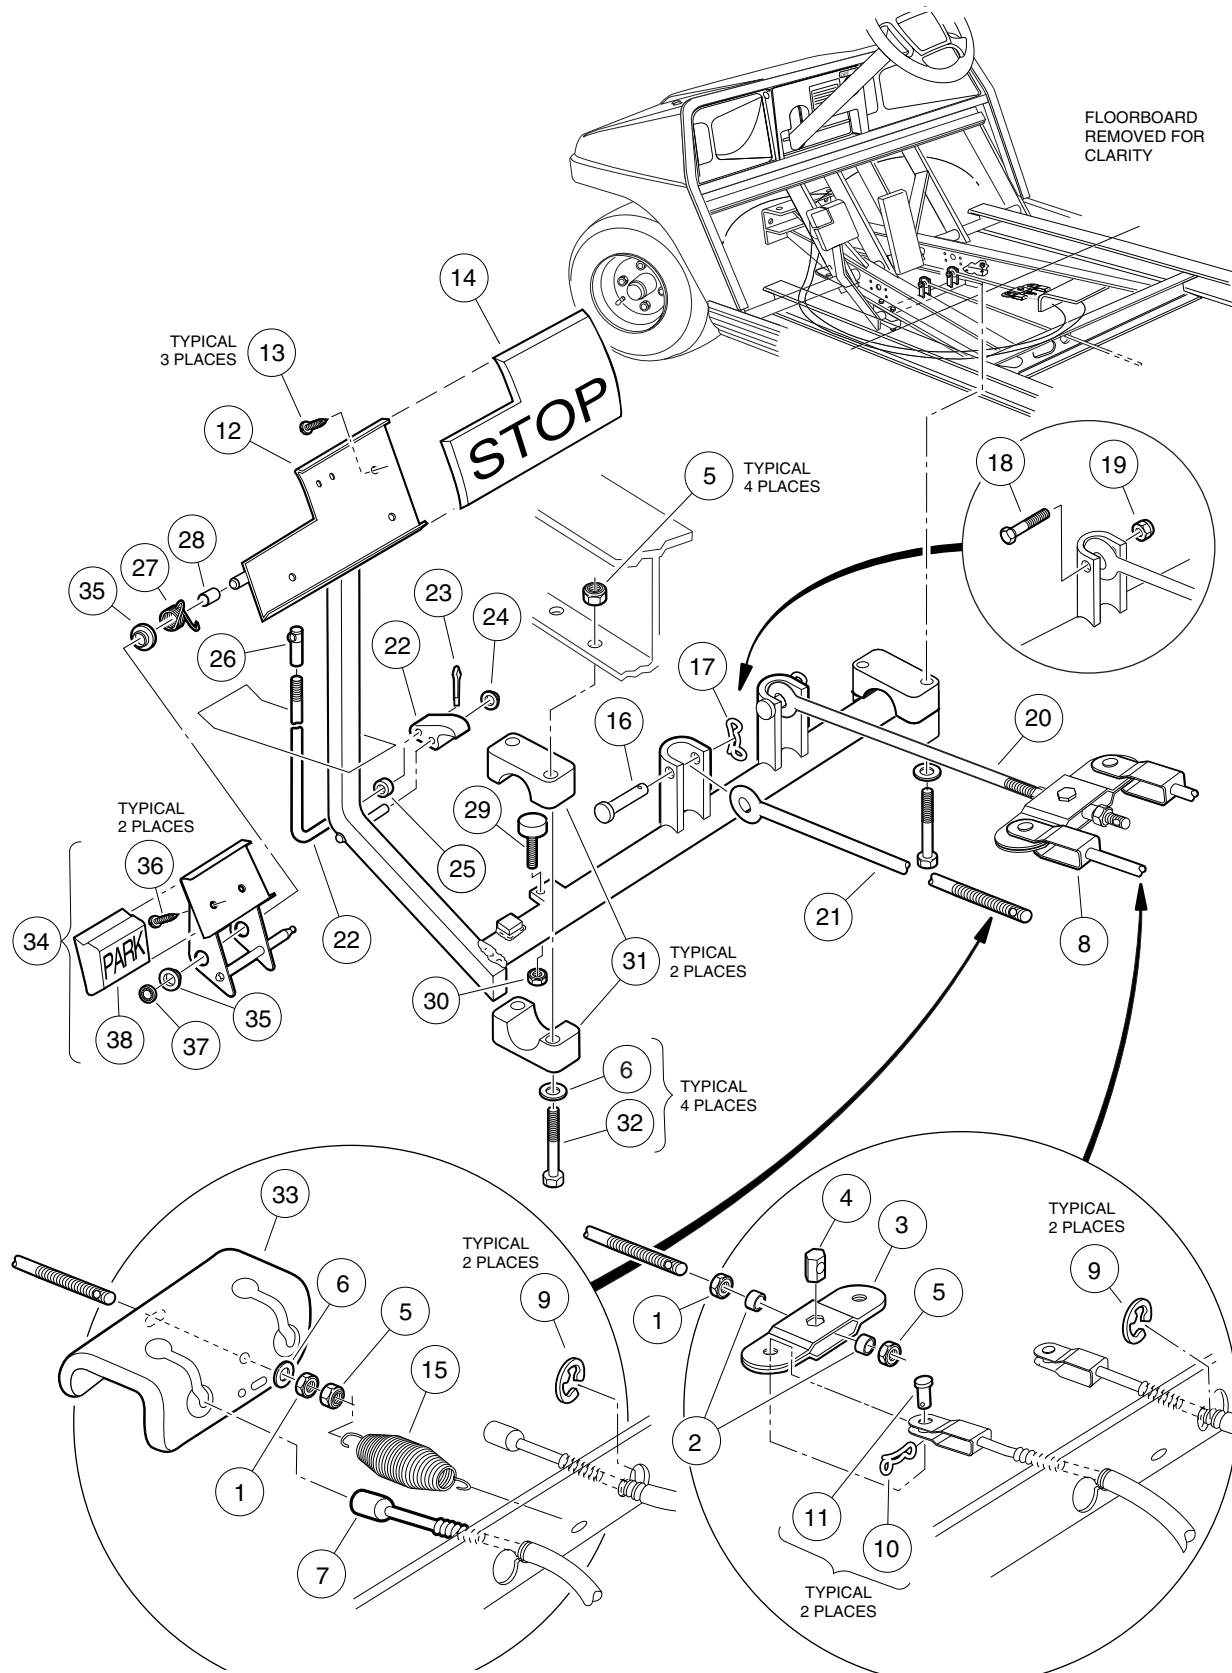

BRAKE PEDAL AND CABLE ASSEMBLY


ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC	4 G E
		1 2 3 4			
1	<u>1242</u>	Nut, Hex, 5/16-18	2	2	
2	<u>101865301</u>	Spacer, Equalizer	2	2	
3	<u>1017211</u>	Kit, Equalizer And Pivot Limiter (includes item 4)	1	1	
4	N/A	Pin, Equalizer Pivot	1	1	
5	<u>7473</u>	Nut, Nylon Lock, 5/16-18	5	5	
6	<u>1241</u>	Washer, Flat, 5/16	5	5	
7	<u>102166901</u>	Kit, Brake Cable, Rear (includes four each of item 9 and two each of items 10 and 11)	1	1	
8	<u>101874601</u>	Kit, Brake Cable, Front (includes items 9 - 11)	1	1	
9	<u>1011779</u>	E-Clip, 1/2	4	4	
10	<u>102292801</u>	Pin, Bow Tie Locking	4	4	
11	<u>1010829</u>	Pin, Clevis, 5/16	4	4	
12	<u>101878201</u>	Kit, Brake Pedal (includes items 13 and 14)	1	1	
13	<u>7716</u>	Screw, Slotted Hex Washer-Head, #10-16 x 1/2	3	3	
14	<u>1013869</u>	Pad, Brake Pedal	1	1	
15	<u>1013531</u>	Spring, Brake Return	1	1	
16	<u>102323201</u>	Pin, Clevis, 5/16 (later style hardware used with item 17)	2	2	
17	<u>102323101</u>	Pin, Bow Tie Locking	2	2	
18	<u>101953001</u>	Bolt, Hex-Head Shoulder, 3/8 x 1 (early style hardware used with item 19)	2	2	
19	<u>7473</u>	Nut, Nylon Lock, 5/16-18	2	2	
20	<u>101953106</u>	Rod, Equalizer, Front	1	1	
21	<u>101953103</u>	Rod, Equalizer, Rear	1	1	
	<u>101187702</u>	Kit, Park Brake Latch (includes items 22 - 26 and item 26 on page 4-9) ...	1	1	
22	N/A	Rod and Pawl	1	1	
23	<u>1017029</u>	Pin, Cotter, 7/64 x 1/2	1	1	
24	<u>1010877</u>	Nut, Push, 5/16	1	1	
25	<u>1010805</u>	Sleeve, Park Brake Rod	1	1	
26	<u>1010932</u>	Joint, Ball, 1/4-28	1	1	
27	<u>1010933</u>	Spring, Park Brake Torsion	1	1	
28	<u>1010927</u>	Spacer, Park Brake	1	1	
29	<u>1010878</u>	Bumper, Rubber	1	1	
30	<u>1028</u>	Nut, Hex, 1/4-20	1	1	
31	<u>1011402</u>	Package, Brake Mounting Block (contains upper and lower for left and right sides)	1	1	
32	<u>1010921</u>	Screw, Hex-Head Cap, 5/16-18 x 2-1/2	4	4	
33	<u>101990801</u>	Equalizer	1	1	
34	<u>1011418</u>	Kit, Park Brake Pedal (includes items 35 - 38)	1	1	
35	<u>1032</u>	Bushing, Nylon	2	2	
36	<u>8626</u>	Screw, Slotted Hex Washer-Head, #10-16 x 5/8	2	2	
37	<u>1013876</u>	Nut, Push, 3/8	1	1	
38	<u>1013870</u>	Pad, Park Brake	1	1	

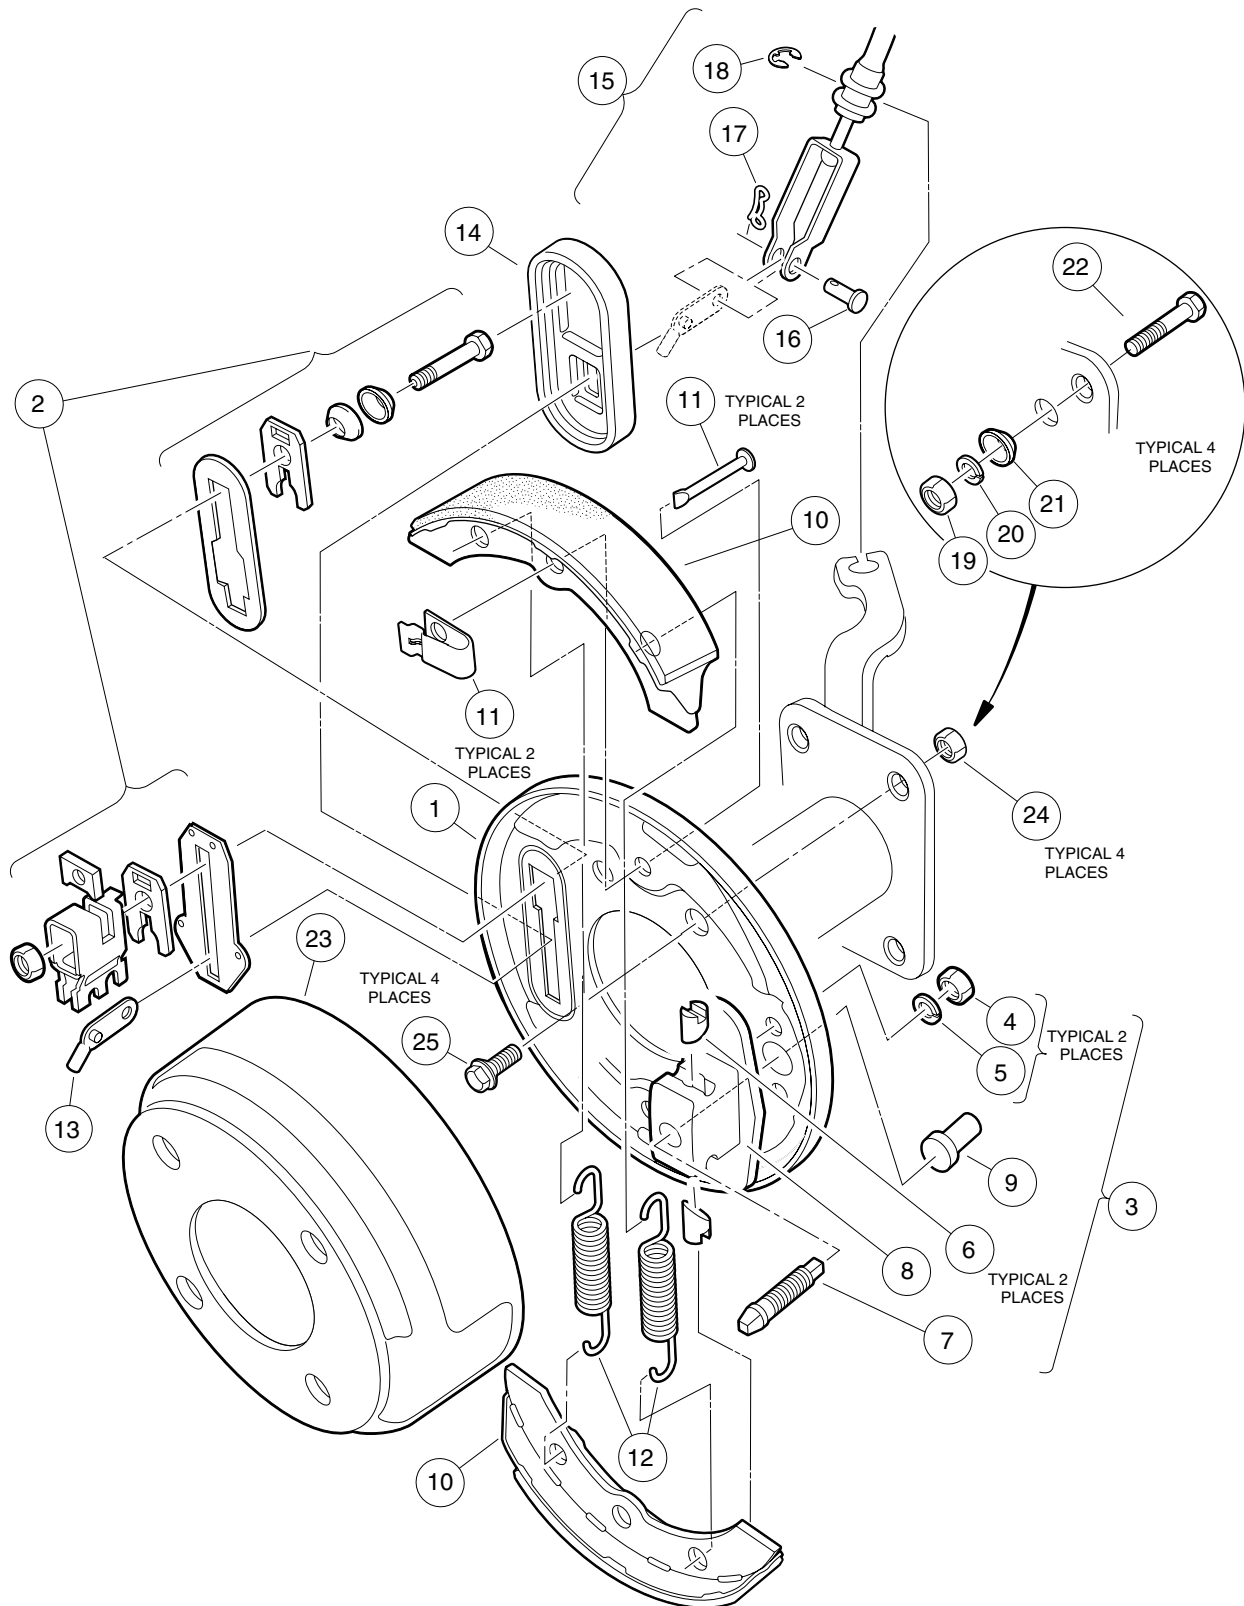

FRONT BRAKE ASSEMBLY, MANUALLY ADJUSTED

ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC
		1 2 3 4		
	<u>1016573</u>	Cluster, Passenger-Side Brake, Without Brake Drum (includes items 1 - 14)	1	1
	<u>1016557</u>	Cluster, Driver-Side Brake, Without Brake Drum (includes items 1 - 14)	1	1
1	N/A	Plate, Backing, Passenger-Side	1	1
1	N/A	Plate, Backing, Driver-Side	1	1
2	<u>1011465</u>	Kit, Brake Actuator	1	1
3	<u>1011467</u>	Kit, Anchor Body (includes items 4 - 9)	1	1
4	<u>1011114</u>	Nut, M6 x 1	2	2
5	<u>451</u>	Washer, Lock, 1/4	2	2
6	N/A	Piston, Anchor	2	2
7	N/A	Bolt, Adjustment	1	1
8	N/A	Body, Anchor	1	1
9	<u>1011303</u>	Cap, Adjustment Bolt	1	1
10	<u>101146302</u>	Package, Brake Shoe (four pieces)	1	1
11	<u>1011466</u>	Kit, Shoe Retainer (four pieces)	1	1
12	<u>1011464</u>	Package, Brake Spring (four pieces)	1	1
13	N/A	Arm, Brake Lever	1	1
14	<u>1010850</u>	Cover, Dust	1	1
15	<u>101874601</u>	Kit, Brake Cable Front (includes items 16, 17 and 18)	1	1
16	<u>1010829</u>	Pin, Clevis, 5/16	4	4
17	<u>102292801</u>	Pin, Bow Tie Locking	4	4
18	<u>1011779</u>	E-Clip, 1/2	4	4
19	101872701	Nut, Hex, 5/16-24	8	8
20	<u>7174</u>	Washer, Lock, 5/16	8	8
21	101869001	Washer, Cone, 5/16	8	8
22	1017232	Screw, Hex-Head Cap, 5/16-24 x 1	8	8
23	<u>1011137</u>	Drum, Brake	2	2
		Items 24 and 25 are for later 2003 vehicles:		
24	<u>1013924</u>	Nut, Cone Lock, Grade 8, 5/16-24	8	8
25	<u>1014153</u>	Bolt, Brake Cluster Mounting, Grade 8, 5/16-24 x 7/8	8	8
		Note: See pages 5-7 and 5-11 for front brake cable clamp and bracket.		

4
G
E

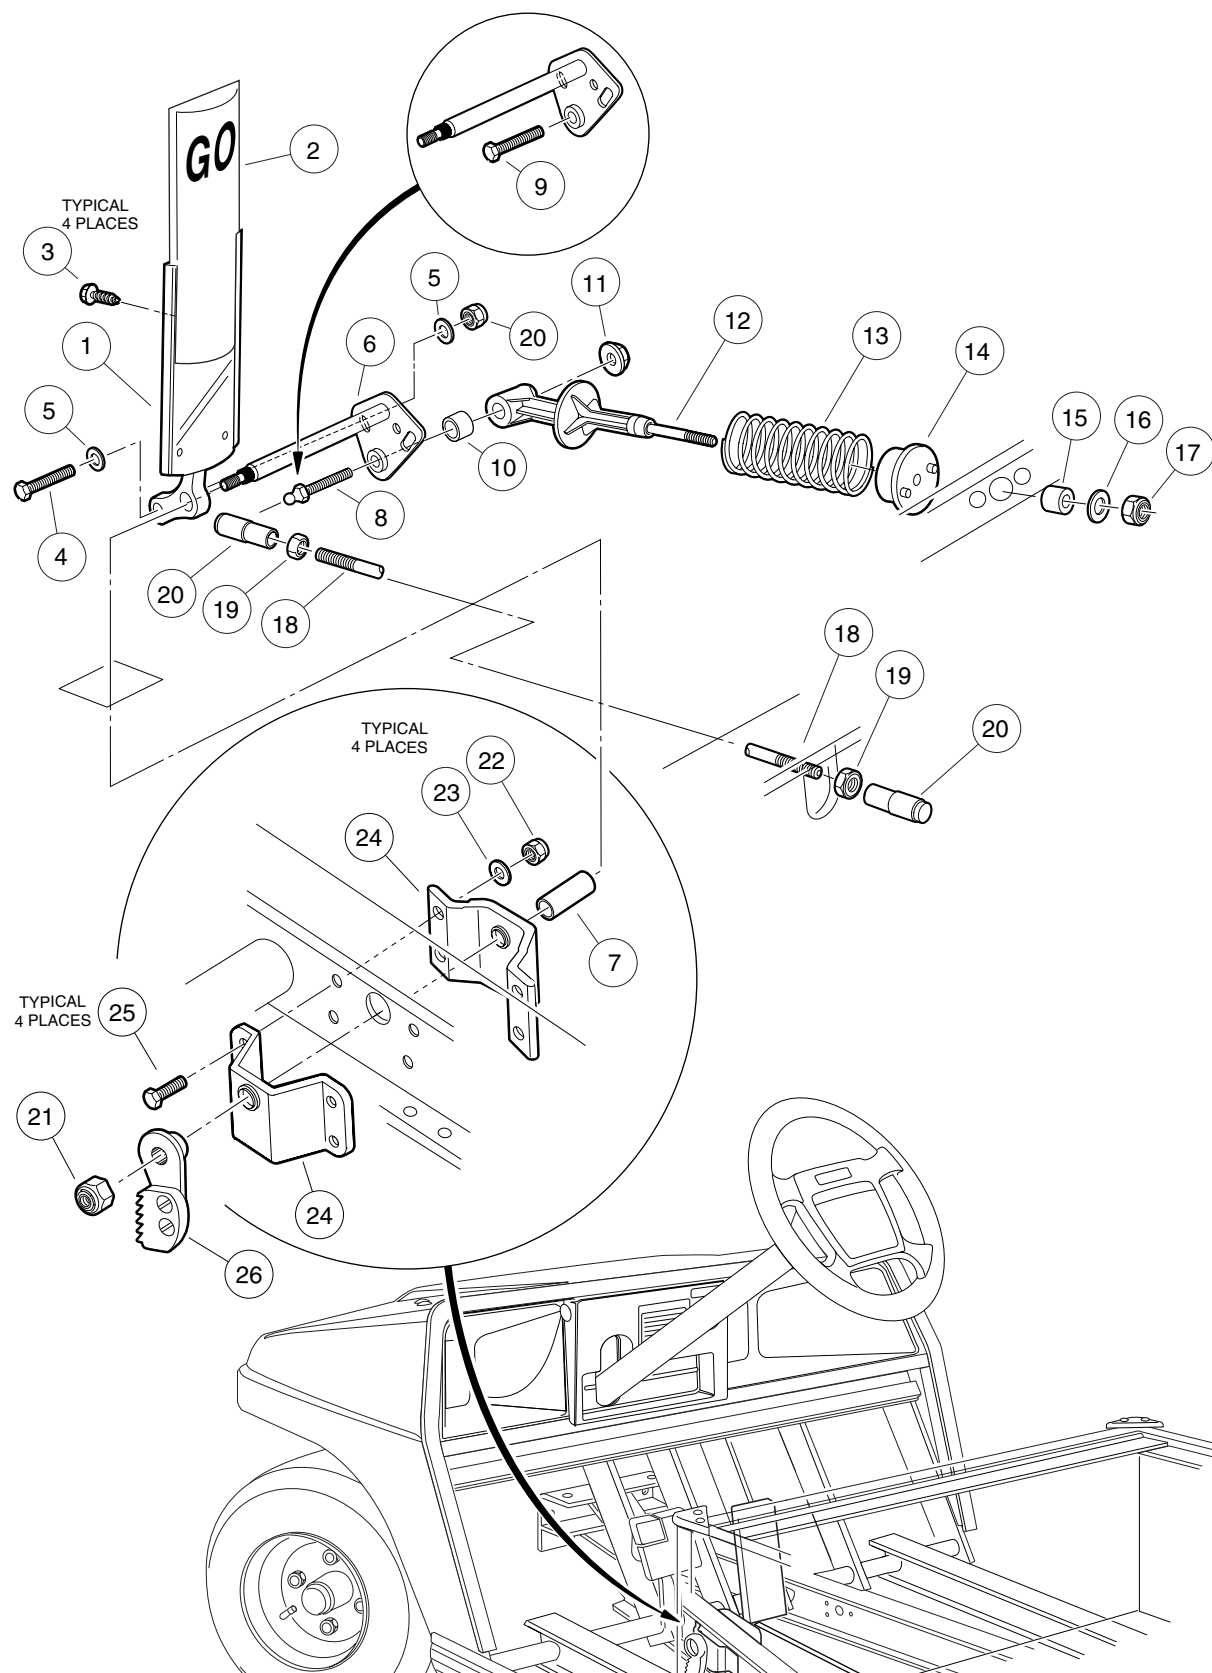

ACCELERATOR PEDAL ASSEMBLY

ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC	4 G E
		1 2 3 4			
1	<u>1017696</u>	Sub-Assembly, Accelerator Pedal (includes items 2 and 3)	1	1	
2	<u>1013871</u>	Pad, Accelerator Pedal	1	1	
3	<u>7716</u>	Screw, Slotted Hex Washer-Head, #10-16 x 1/2	4	4	
4	<u>1624</u>	Screw, Hex-Head Cap, 3/8-16 x 1-1/2	1	1	
5	<u>334</u>	Washer, Flat, 3/8	2	2	
6	<u>102026001</u>	Kit, Accelerator Pivot Rod (includes item 7)	1	1	
7	<u>1011700</u>	Spacer	1	1	
8	<u>101818801</u>	Stud, Ball	1		
9	<u>101862001</u>	Screw, Hex-Head Cap, 1/4-20 x 1-3/8 (MCOR vehicles)		1	
10	<u>1017424</u>	Bearing, Pivot Support	1	1	
11	<u>101966901</u>	Nut, Flange, 1/4-28	1	1	
12	<u>101817401</u>	Retainer, Spring	1	1	
13	<u>101796201</u>	Spring, Return	1	1	
14	<u>1017378</u>	Cup, Spring	1	1	
15	<u>1017380</u>	Bumper, Return Spring	1	1	
16	<u>1241</u>	Washer, Flat, 5/16	1	1	
17	<u>7473</u>	Nut, Nylon Lock, 5/16-18	1	1	
18	<u>101674702</u>	Assembly, Accelerator Rod (includes items 19 and 20)	1		
19	<u>1011084</u>	Nut, UNF Hex Jam, 1/4-28	2		
20	<u>1011734</u>	Joint, Spring-Loaded Ball	2		
21	<u>8754</u>	Nut, Nylon Lock, 3/8-16	2	2	
22	<u>8233</u>	Nut, Nylon Lock, 1/4-20	4	4	
23	<u>1014007</u>	Washer, Flat, Type B, 1/4	4	4	
24	<u>1011694</u>	Support, Accelerator Pivot Rod	2	2	
25	<u>101861901</u>	Screw, Hex-Head Cap, 1/4-20 x 1-1/8	4	4	
	<u>101187702</u>	Kit, Park Brake Latch (includes item 26 and items 22 - 26 on page 4-5) ...	1	1	
26	N/A	Ratchet, Park Brake	1	1	

4

G


E

STEERING, FRONT AND REAR SUSPENSION

5

G


E

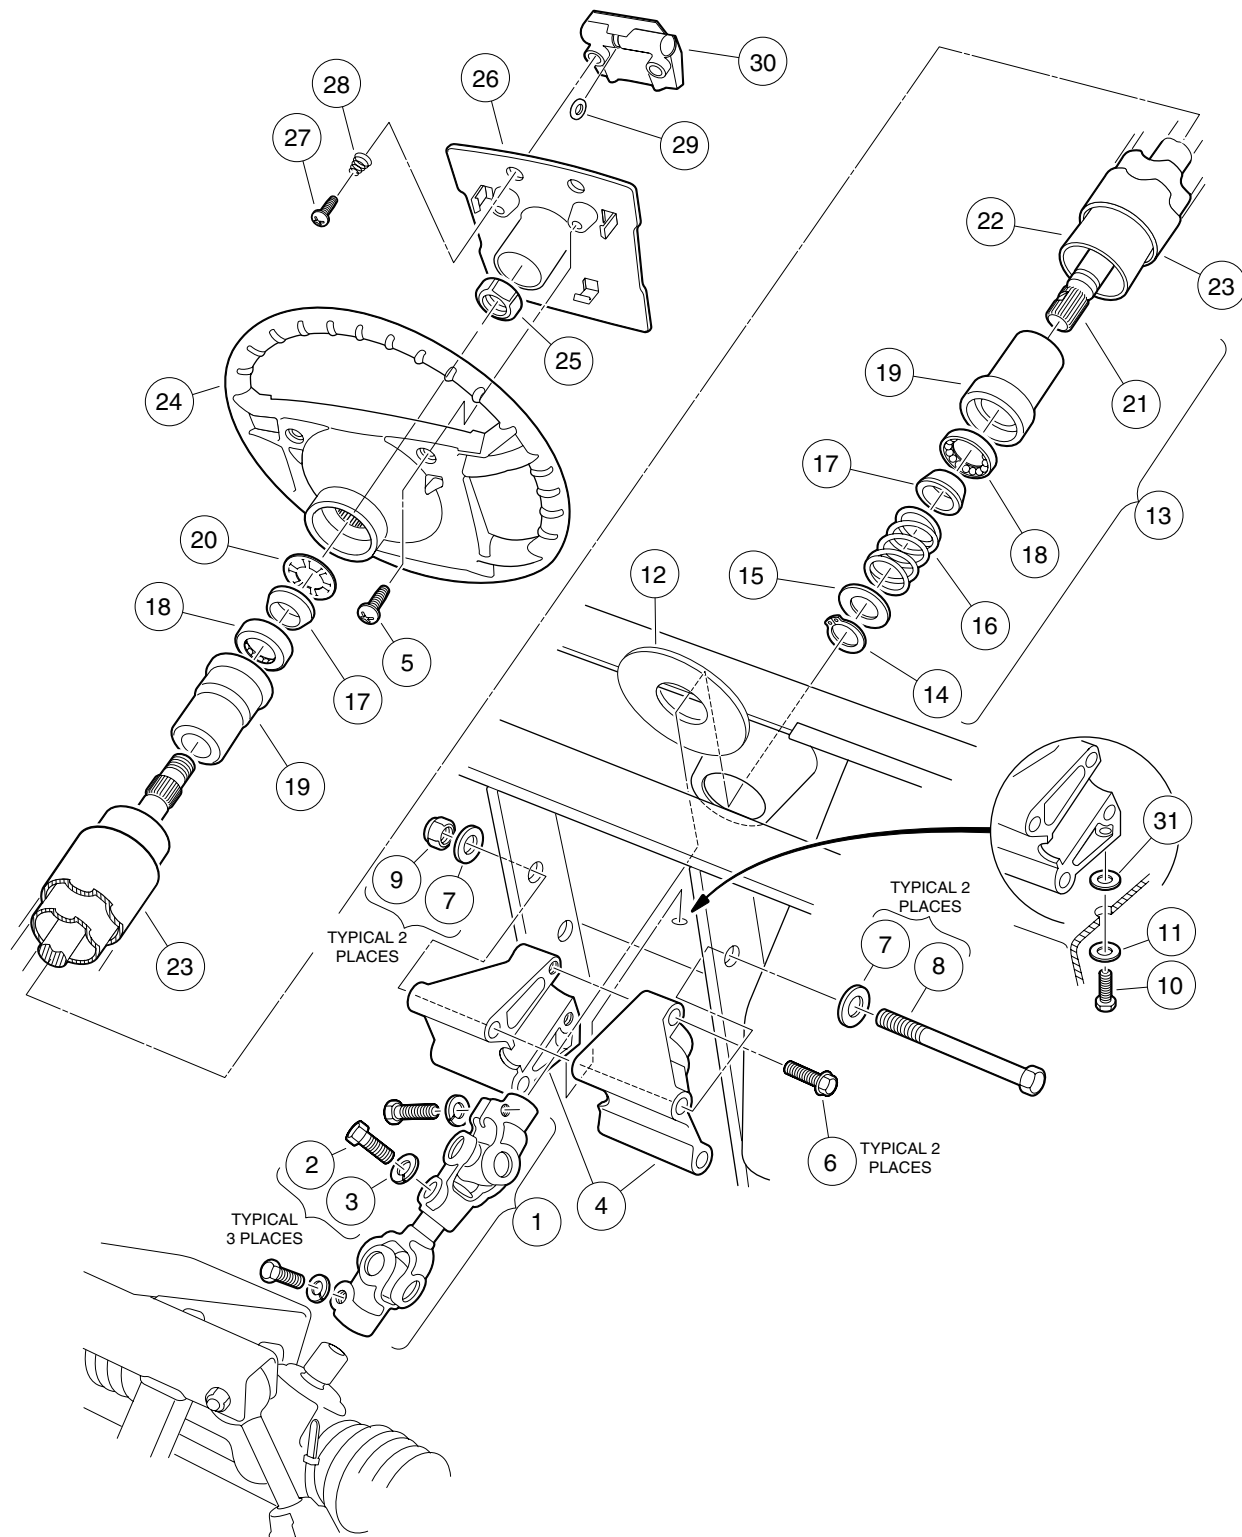

STEERING COLUMN


ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC
		1 2 3 4		
1	<u>1013861</u>	Joint, Compound Steering (includes items 2 and 3)	1	1
2	<u>1017226</u>	Screw, Hex-Head Cap, M8 x 1.25 x 30 mm	3	3
3	<u>7174</u>	Washer, Lock, 5/16	3	3
4	101984801	Kit, Steering Column Mounting Bracket	1	1
5	<u>1016663</u>	Screw, Phillips, Type A, #12-11 x 5/8	2	2
6	<u>1016269</u>	Screw, Hex Washer-Head Thread-Forming, 5/16-18 x 2	2	2
7	<u>334</u>	Washer, Flat, 3/8	4	4
8	<u>1016183</u>	Screw, Hex-Head Cap, 3/8-16 x 7	2	2
9	<u>8754</u>	Nut, Nylon Lock, 3/8-16	2	2
10	<u>1014288</u>	Screw, Hex Washer-Head Thread-Forming, 5/16-18 x 3/4	1	1
11	<u>1011697</u>	Washer, Flat, 5/16	1	1
12	<u>102278001</u>	Boot, Steering Column	1	1
13	<u>1017313</u>	Assembly, Steering Column (includes items 14 - 22)	1	1
14	<u>1012605</u>	Ring, Retaining	1	1
15	<u>1012604</u>	Washer, Steel, 5/8	1	1
16	<u>1014217</u>	Spring, Compression	1	1
17	1014125	Wedge	2	2
18	<u>1014213</u>	Assembly, Bearing	2	2
19	<u>1014126</u>	Seat, Bearing	2	2
20	1014214	Ring, Retaining	1	1
21	<u>1017315</u>	Shaft, Steering Column	1	1
22	<u>1017314</u>	Column, Aluminum Steering	1	1
23	<u>1017317</u>	Cover, Steering Column	1	1
24	<u>1016156</u>	Wheel, Steering	1	1
25	<u>1017273</u>	Nut, Nylon Lock, 5/8-18	1	1
26	1016219	Assembly, Scorecard Plate (includes items 27 - 30)	1	1
27	<u>1012565</u>	Screw, Round-Head, #12-14 x 1	2	2
28	<u>1012566</u>	Spring, Tapered Compression	2	2
29	<u>1016214</u>	Grip, Pencil	1	1
30	1016154	Clip, Scorecard	1	1
31	<u>1011578</u>	Washer, Flat, Type B, 5/16	1	1
	<u>1014216</u>	Kit, Steering Column Rebuild (not shown)	A/R	A/R

5
G
E

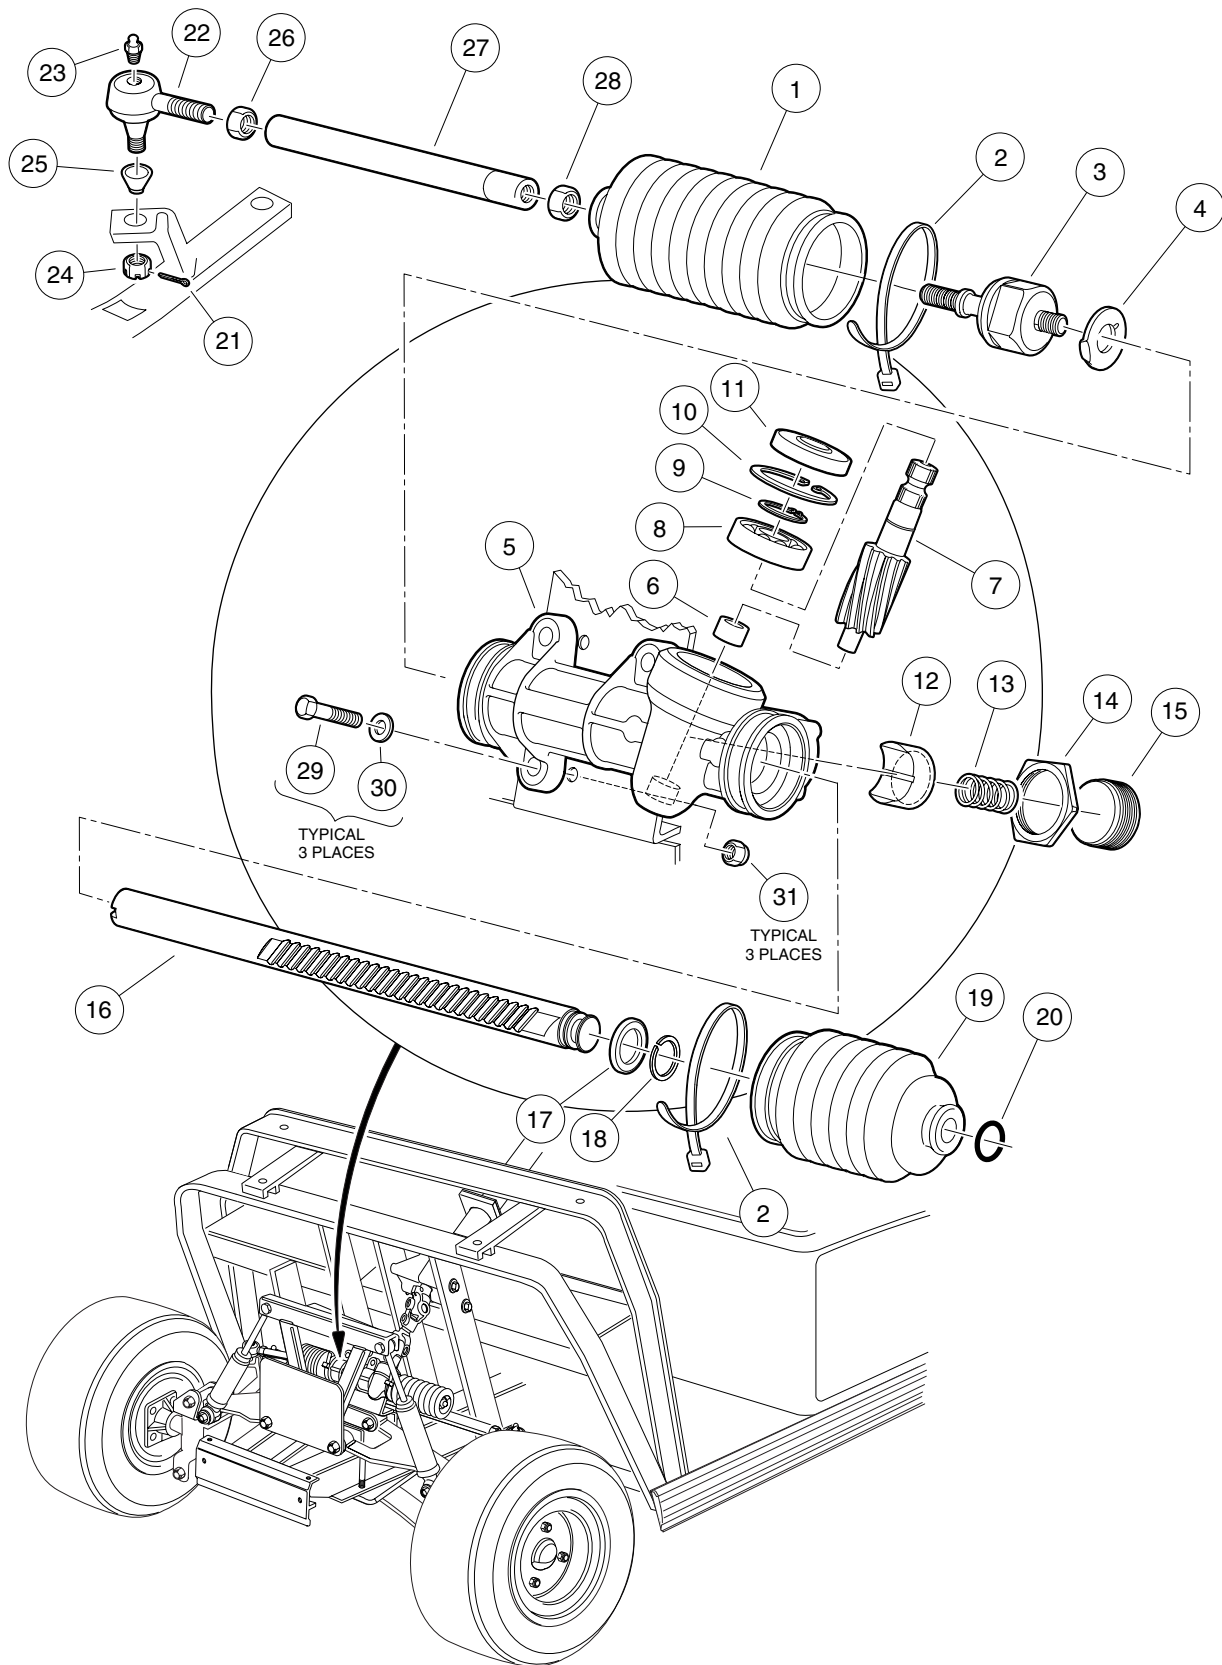


STEERING GEAR ASSEMBLY

ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC	5 G E
		1 2 3 4			
	<u>101878302</u>	Assembly, Steering Gear Box (includes items 1 - 20)	1	1	
1	<u>1013035</u>	Seal, Dust, Passenger-Side	1	1	
2	<u>8990</u>	Tie, Wire	2	2	
3	<u>101880201</u>	Assembly, Inner Ball Joint	1	1	
4	<u>101880301</u>	Washer, Tab	1	1	
5	N/A	Box, Steering Gear (later style marked with green paint)	1	1	
6	N/A	Bearing, Lower Pinion	1	1	
7	N/A	Pinion, Steering, 7-Tooth	1	1	
8	<u>101879401</u>	Bearing, Upper Pinion	1	1	
9	<u>101879901</u>	Ring, C-Type Stop	1	1	
10	<u>1013051</u>	Ring, Snap	1	1	
11	<u>1013052</u>	Seal, Dust, Steering Pinion	1	1	
12	<u>101879701</u>	Guide, Steering Rack	1	1	
13	<u>101879801</u>	Spring, Yoke	1	1	
14	<u>1013044</u>	Nut, Lock, Rack Screw	1	1	
15	N/A	Screw, Rack Guide	1	1	
16	N/A	Rack, Steering	1	1	
17	<u>101879501</u>	Washer, Stop	1	1	
18	<u>101879601</u>	Ring, C-Type Stop	1	1	
19	<u>101880001</u>	Seal, Dust, Driver-Side	1	1	
20	<u>101880101</u>	Ring, Retaining	1	1	
21	<u>1035</u>	Pin, Cotter, 3/32 x 1	1	1	
22	<u>7540</u>	Ball Joint, Left-Hand Thread (includes items 23, 24 and 25)	1	1	
23	<u>1015597</u>	Fitting, Thread-Forming Grease, 1/4-28	1	1	
24	<u>7602</u>	Nut, Hex Slotted, 3/8-24	1	1	
25	<u>1011930</u>	Boot, Dust	1	1	
26	<u>7555</u>	Nut, Hex, Left-Hand Thread, 1/2-20	1	1	
27	<u>1012467</u>	Link, Rack and Pinion Drag	1	1	
28	<u>1013042</u>	Nut, Hex, M12 x 1.75	1	1	
29	<u>1624</u>	Screw, Hex-Head Cap, 3/8-16 x 1-1/2	3	3	
30	<u>334</u>	Washer, Flat, 3/8	3	3	
31	<u>8754</u>	Nut, Nylon Lock, 3/8-16	3	3	

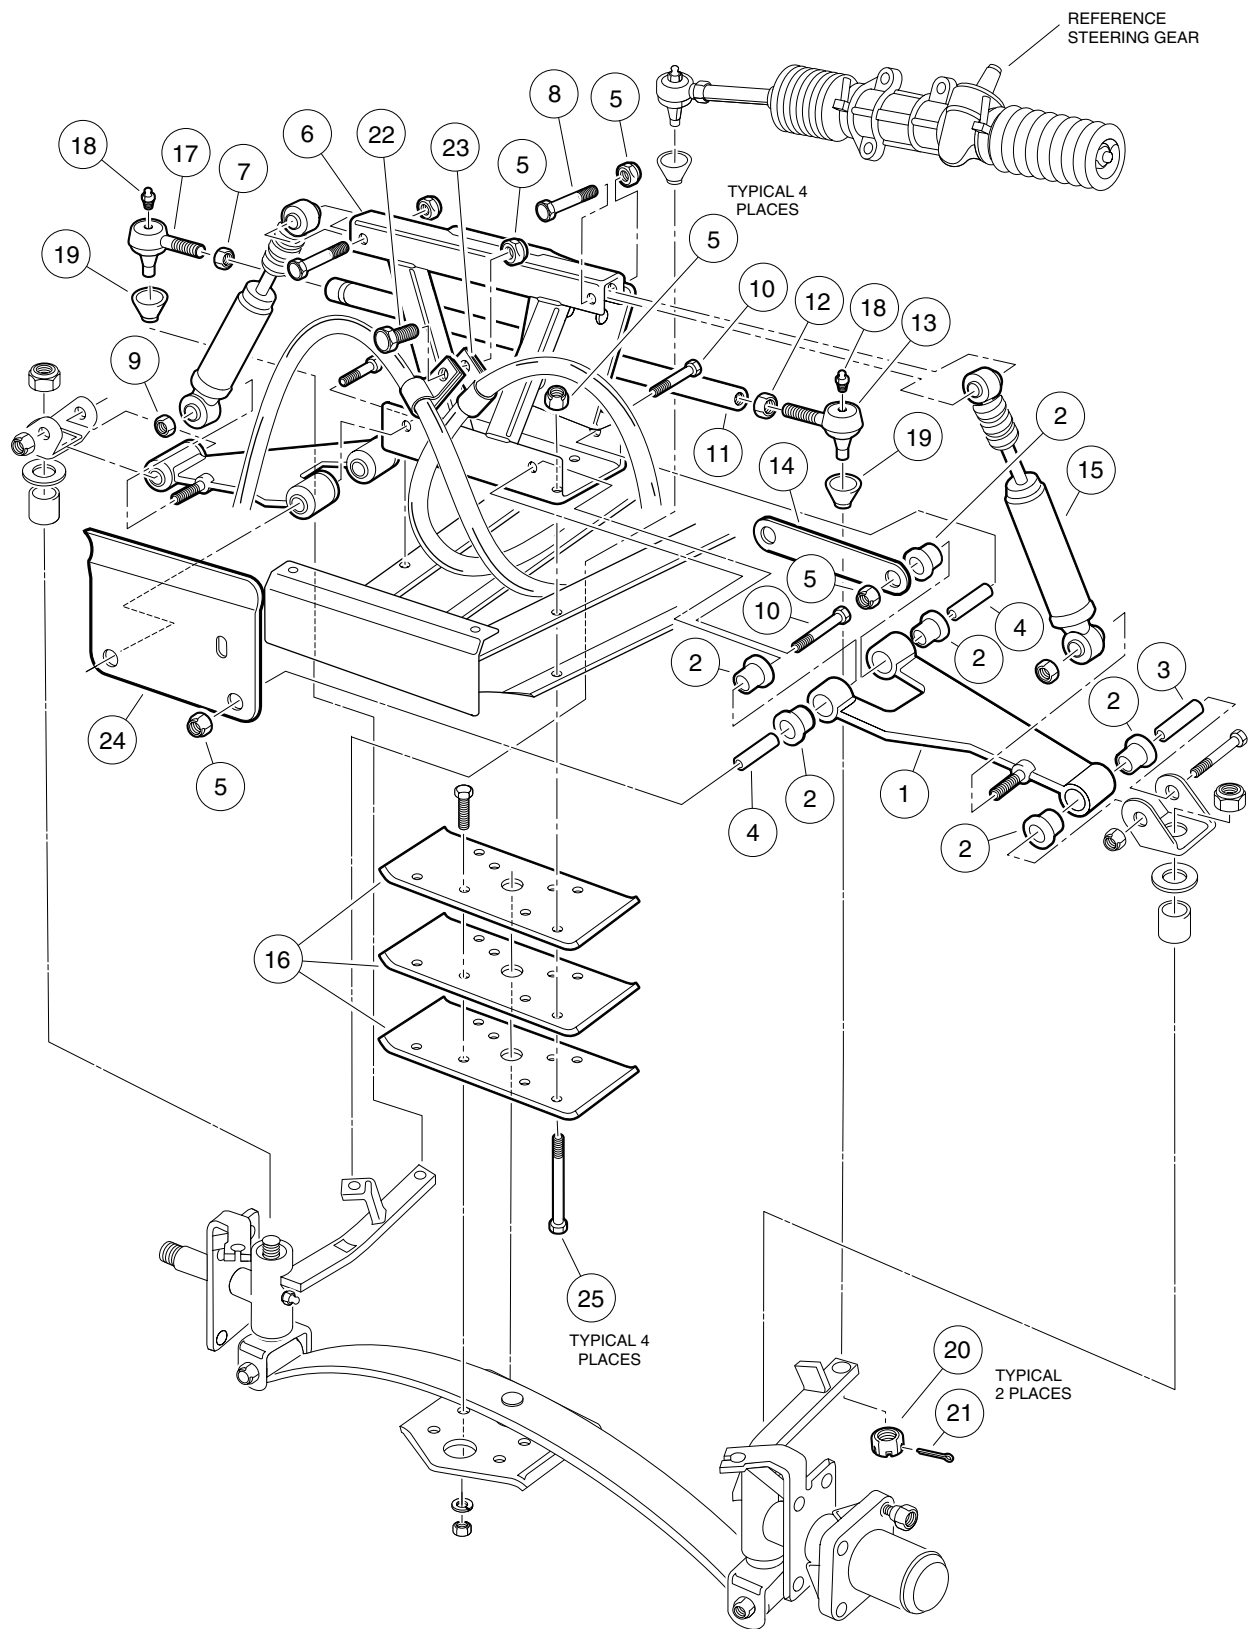


FRONT SUSPENSION, UPPER – EARLY STYLE

ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC	5 G E
		1 2 3 4			
1	<u>1016353</u>	Assembly, Delta A-Plate (includes items 2, 3 and 4)	2	2	
2	<u>1016346</u>	Bushing, Urethane	6	6	
3	<u>1016350</u>	Sleeve, Delta Outer	1	1	
4	<u>1016349</u>	Sleeve, Delta Inner	2	2	
5	<u>8754</u>	Nut, Nylon Lock, 3/8-16	11	11	
6	<u>1016385</u>	Assembly, Delta Shock and Gear Support	1	1	
7	<u>1308</u>	Nut, Hex, 1/2-20	1	1	
8	<u>8861</u>	Screw, Hex Head Cap, 3/8-16 x 1-3/4	2	2	
9	<u>1010138</u>	Nut, Dimpled Lock, 3/8-16	2	2	
10	<u>2402</u>	Screw, Hex Head Cap, 3/8-16 x 2-1/4	4	4	
11	<u>1010219</u>	Rod, Tie	1	1	
12	<u>7555</u>	Nut, Hex, Left-Hand Thread, 1/2-20	1	1	
13	<u>7540</u>	Ball Joint, Left-Hand Thread (includes items 18, 19 and 20)	1	1	
14	<u>1017266</u>	Strap, A-Plate	1	1	
15	<u>101870601</u>	Shock Absorber, Front	2	2	
16	<u>1010124</u>	Plate, Spring Mounting	3	3	
17	<u>7539</u>	Ball Joint (includes items 18, 19 and 20)	1	1	
18	<u>1015597</u>	Fitting, Thread-Forming Grease, 1/4-28	1	1	
19	<u>1011930</u>	Seal, Dust	1	1	
20	<u>7602</u>	Nut, Slotted Hex, 3/8-24	1	1	
21	<u>1035</u>	Pin, Cotter, 3/32 x 1	2	2	
22	<u>320</u>	Screw, Hex Head Cap, 3/8-16 x 1	1	1	
23	<u>101935301</u>	Clamp, Brake Cable (part of brake cable assembly)	2	2	
24	<u>101955001</u>	Bracket, Brake Cable Guide	1	1	
25	<u>101870501</u>	Screw, Hex Head Cap, 3/8-16 x 4-3/4	4	4	

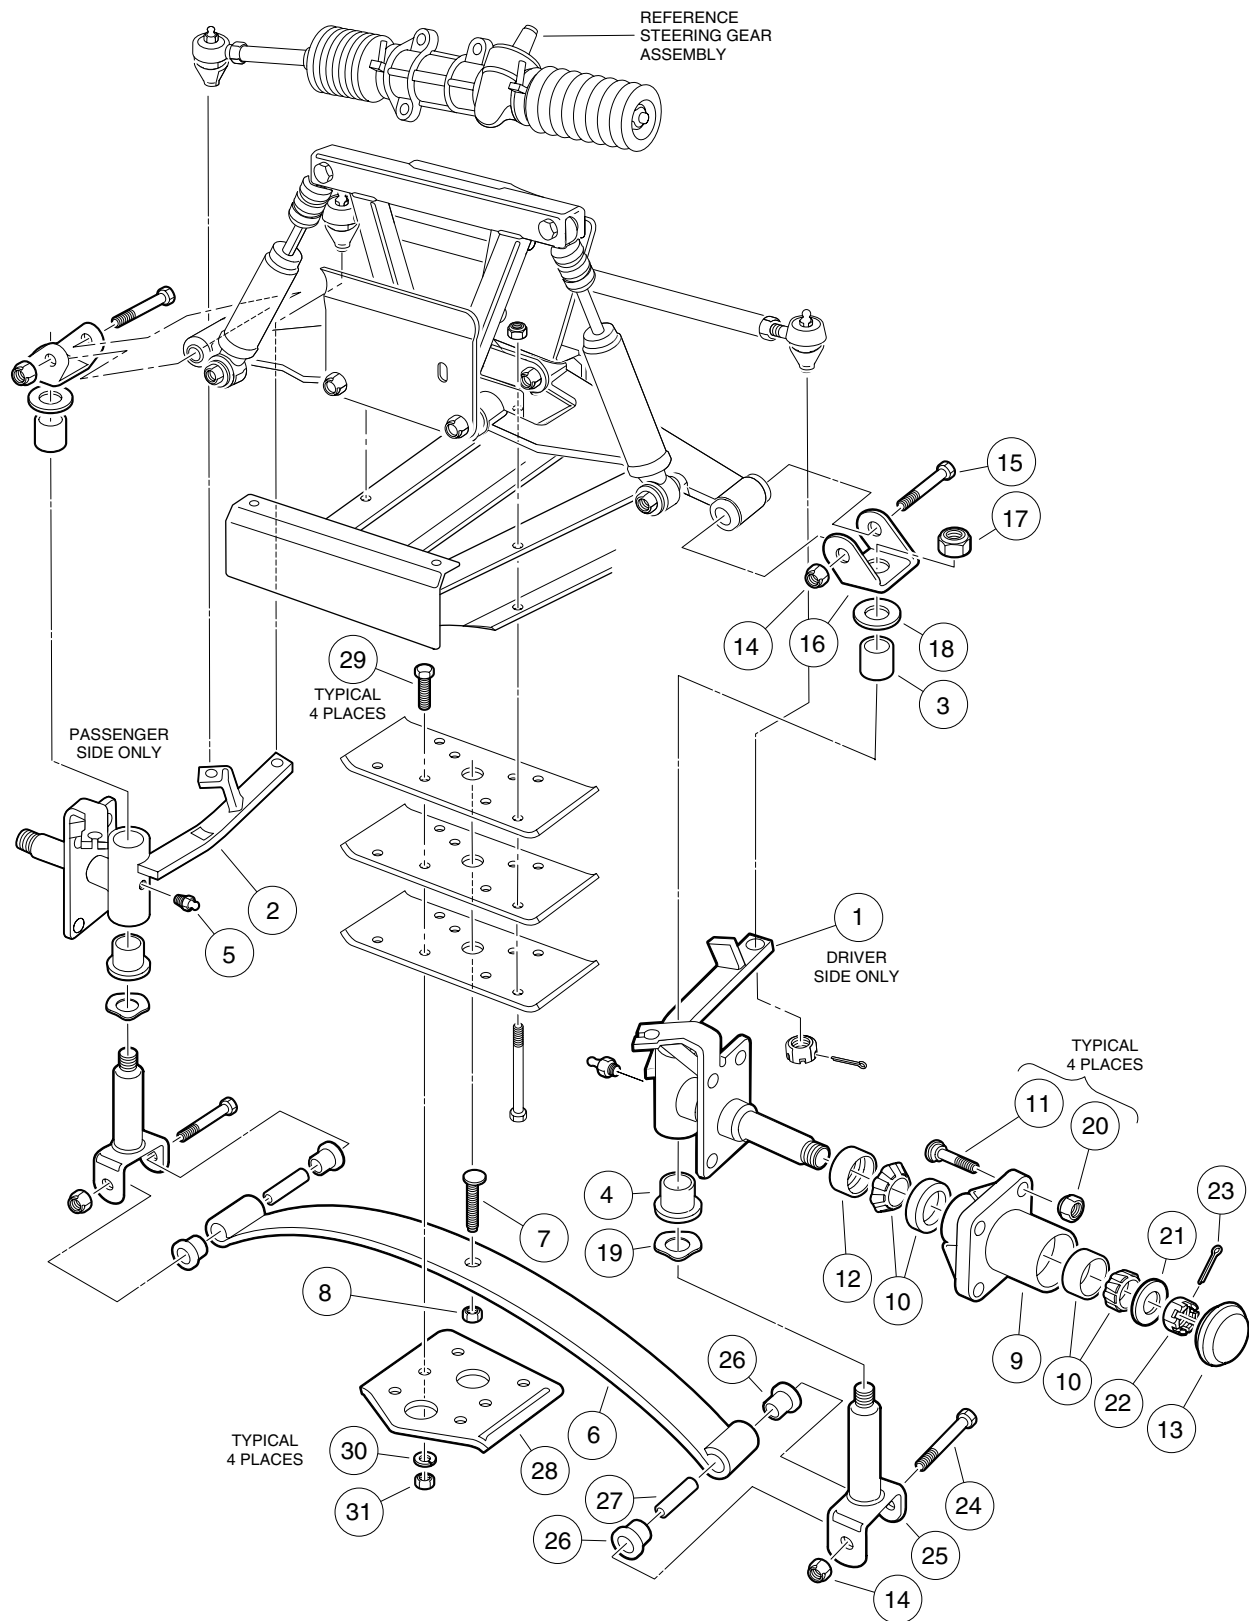


FRONT SUSPENSION, LOWER – EARLY STYLE

ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC	5 G E
		1 2 3 4			
1	101876901	Assembly, Spindle, Driver Side (includes items 3, 4 and 5)	1	1	
2	101877001	Assembly, Spindle, Passenger Side (includes items 3, 4 and 5)	1	1	
3	8067	Bushing, Bronze Spindle	1	1	
4	7048	Bushing, Bronze	1	1	
5	1015597	Fitting, Grease, 1/4-28	1	1	
6	1012030	Spring, Tapered Leaf	1	1	
7	8745	Assembly, Eccentric	1	1	
8	706	Nut, Hex, 3/8-16	1	1	
9	1011892	Assembly, Hub (includes items 10 - 13)	2	2	
10	1011393	Package, Hub Bearing	2	2	
11	1011304	Stud, Lug, 1/2-20	4	4	
12	1013135	Seal, Double Lip	1	1	
13	1011887	Cover, Dust	1	1	
14	8754	Nut, Nylon Lock, 3/8-16	4	4	
15	1016387	Screw, Hex Head Cap, 3/8-16 x 2-3/4	2	2	
16	1016384	Clevis, Upper Delta	2	2	
17	101903101	Nut, Nylon Lock, 1/2-20	2	2	
18	1010150	Bearing, Thrust	2	2	
19	1016389	Washer, Kingpin Wave	2	2	
20	1010984	Nut, Lug	8	8	
21	1010005	Washer, Flat, 3/4	2	2	
22	7840	Nut, Hex Slotted, 3/4-16	2	2	
23	7910	Pin, Cotter, 5/32 x 1	2	2	
24	8755	Screw, Hex Head Cap, 3/8 - 16 x 3-3/8	2	2	
25	1016386	Kingpin	2	2	
26	1015583	Bushing, Urethane	4	4	
27	1012303	Bushing, Steel	2	2	
28	1014276	Plate, Front Spring Retainer	1	1	
29	1010177	Screw, Hex Head Cap, 3/8-16 x 2	4	4	
30	357	Washer, Lock, 3/8	4	4	
31	706	Nut, Hex, 3/8-16	4	4	

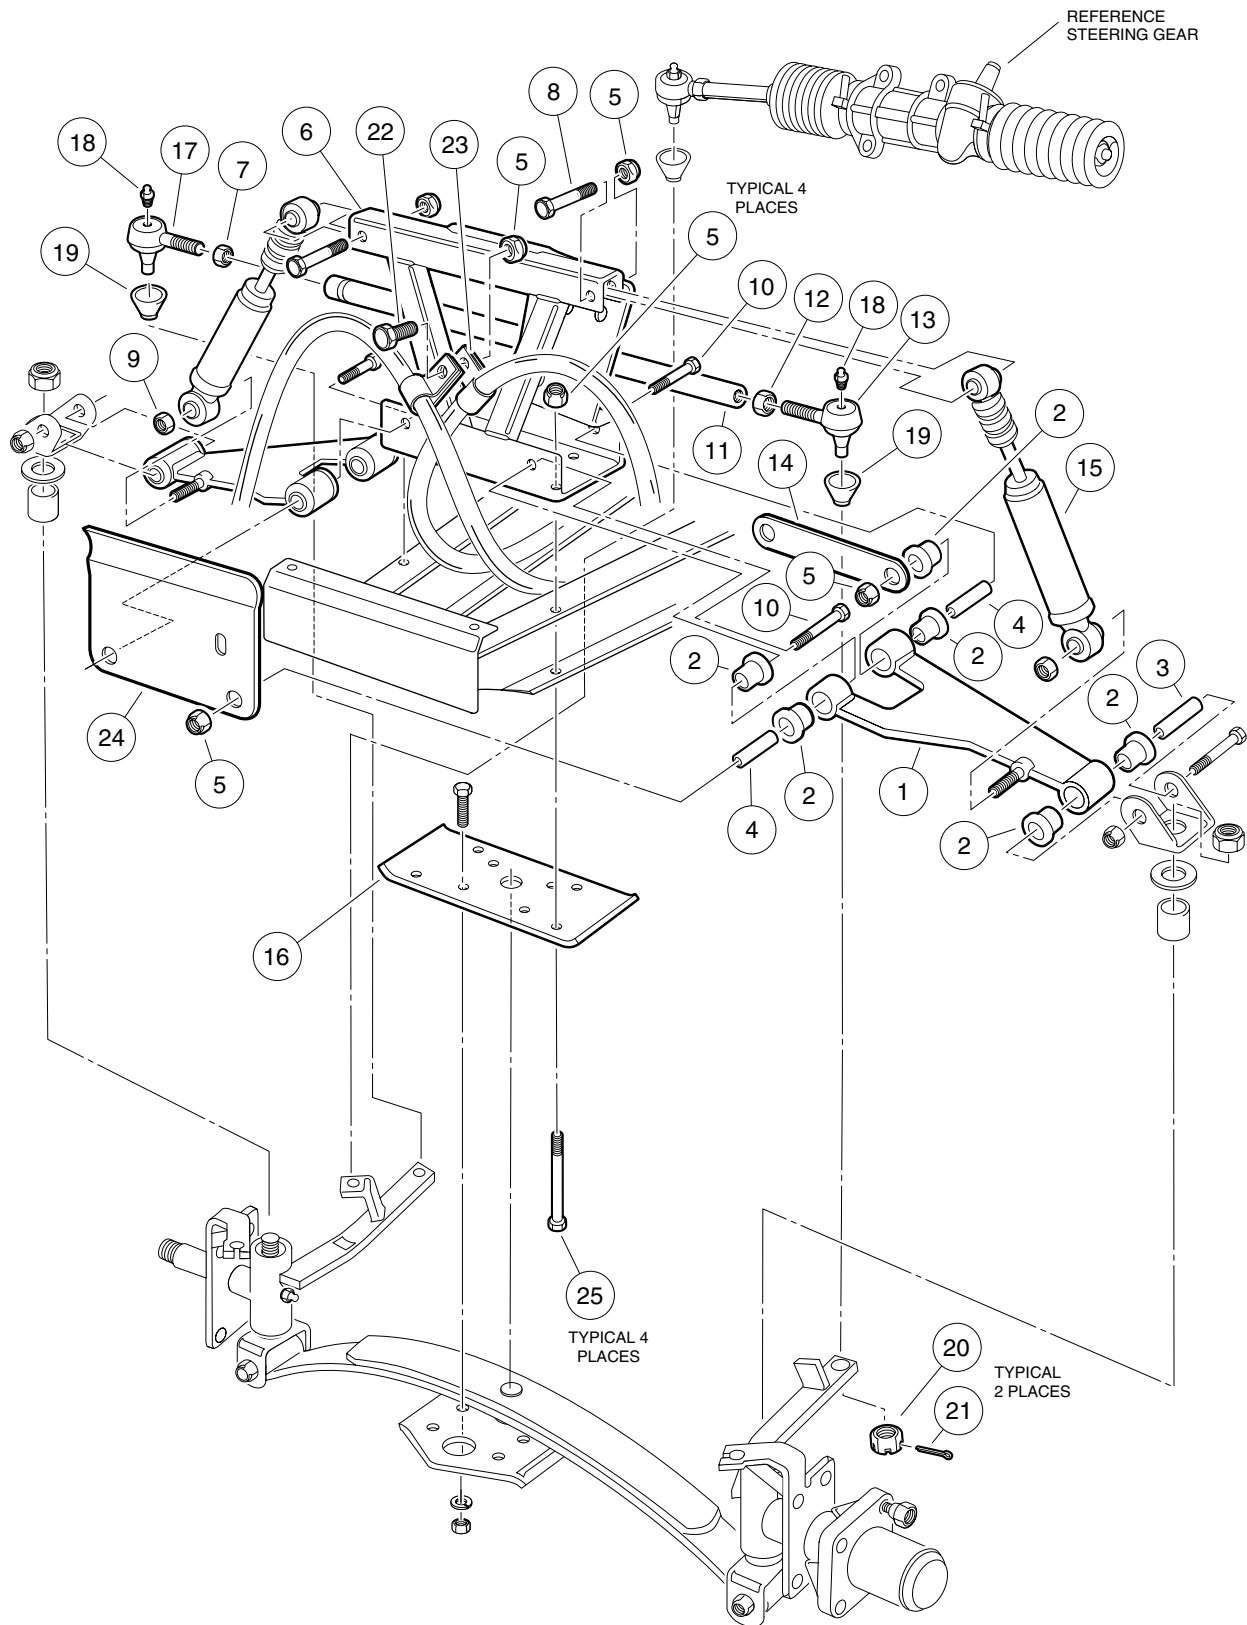


FRONT SUSPENSION, UPPER – LATER STYLE

ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC	5 G E
		1 2 3 4			
1	<u>1016353</u>	Assembly, Delta A-Plate (includes items 2, 3 and 4)	2	2	
2	<u>1016346</u>	Bushing, Urethane	6	6	
3	<u>1016350</u>	Sleeve, Delta Outer	1	1	
4	<u>1016349</u>	Sleeve, Delta Inner	2	2	
5	<u>8754</u>	Nut, Nylon Lock, 3/8-16	11	11	
6	<u>1016385</u>	Assembly, Delta Shock and Gear Support	1	1	
7	<u>1308</u>	Nut, Hex, 1/2-20	1	1	
8	<u>8861</u>	Screw, Hex-Head Cap, 3/8-16 x 1-3/4	2	2	
9	<u>1010138</u>	Nut, Dimpled Lock, 3/8-16	2	2	
10	<u>2402</u>	Screw, Hex-Head Cap, 3/8-16 x 2-1/4	4	4	
11	<u>1010219</u>	Rod, Tie	1	1	
12	<u>7555</u>	Nut, Hex, Left-Hand Thread, 1/2-20	1	1	
13	<u>7540</u>	Ball Joint, Left-Hand Thread (includes items 18, 19 and 20)	1	1	
14	<u>1017266</u>	Strap, A-Plate	1	1	
15	<u>101870601</u>	Shock Absorber, Front	2	2	
16	<u>1010124</u>	Plate, Spring Mounting	1	1	
17	<u>7539</u>	Ball Joint (includes items 18, 19 and 20)	1	1	
18	<u>1015597</u>	Fitting, Thread-Forming Grease, 1/4-28	1	1	
19	<u>1011930</u>	Seal, Dust	1	1	
20	<u>7602</u>	Nut, Slotted Hex, 3/8-24	1	1	
21	<u>1035</u>	Pin, Cotter, 3/32 x 1	2	2	
22	<u>320</u>	Screw, Hex-Head Cap, 3/8-16 x 1	1	1	
23	<u>101935301</u>	Clamp, Brake Cable (part of brake cable assembly)	2	2	
24	<u>101955001</u>	Bracket, Brake Cable Guide	1	1	
25	<u>101870501</u>	Screw, Hex-Head Cap, 3/8-16 x 4-3/4	4	4	

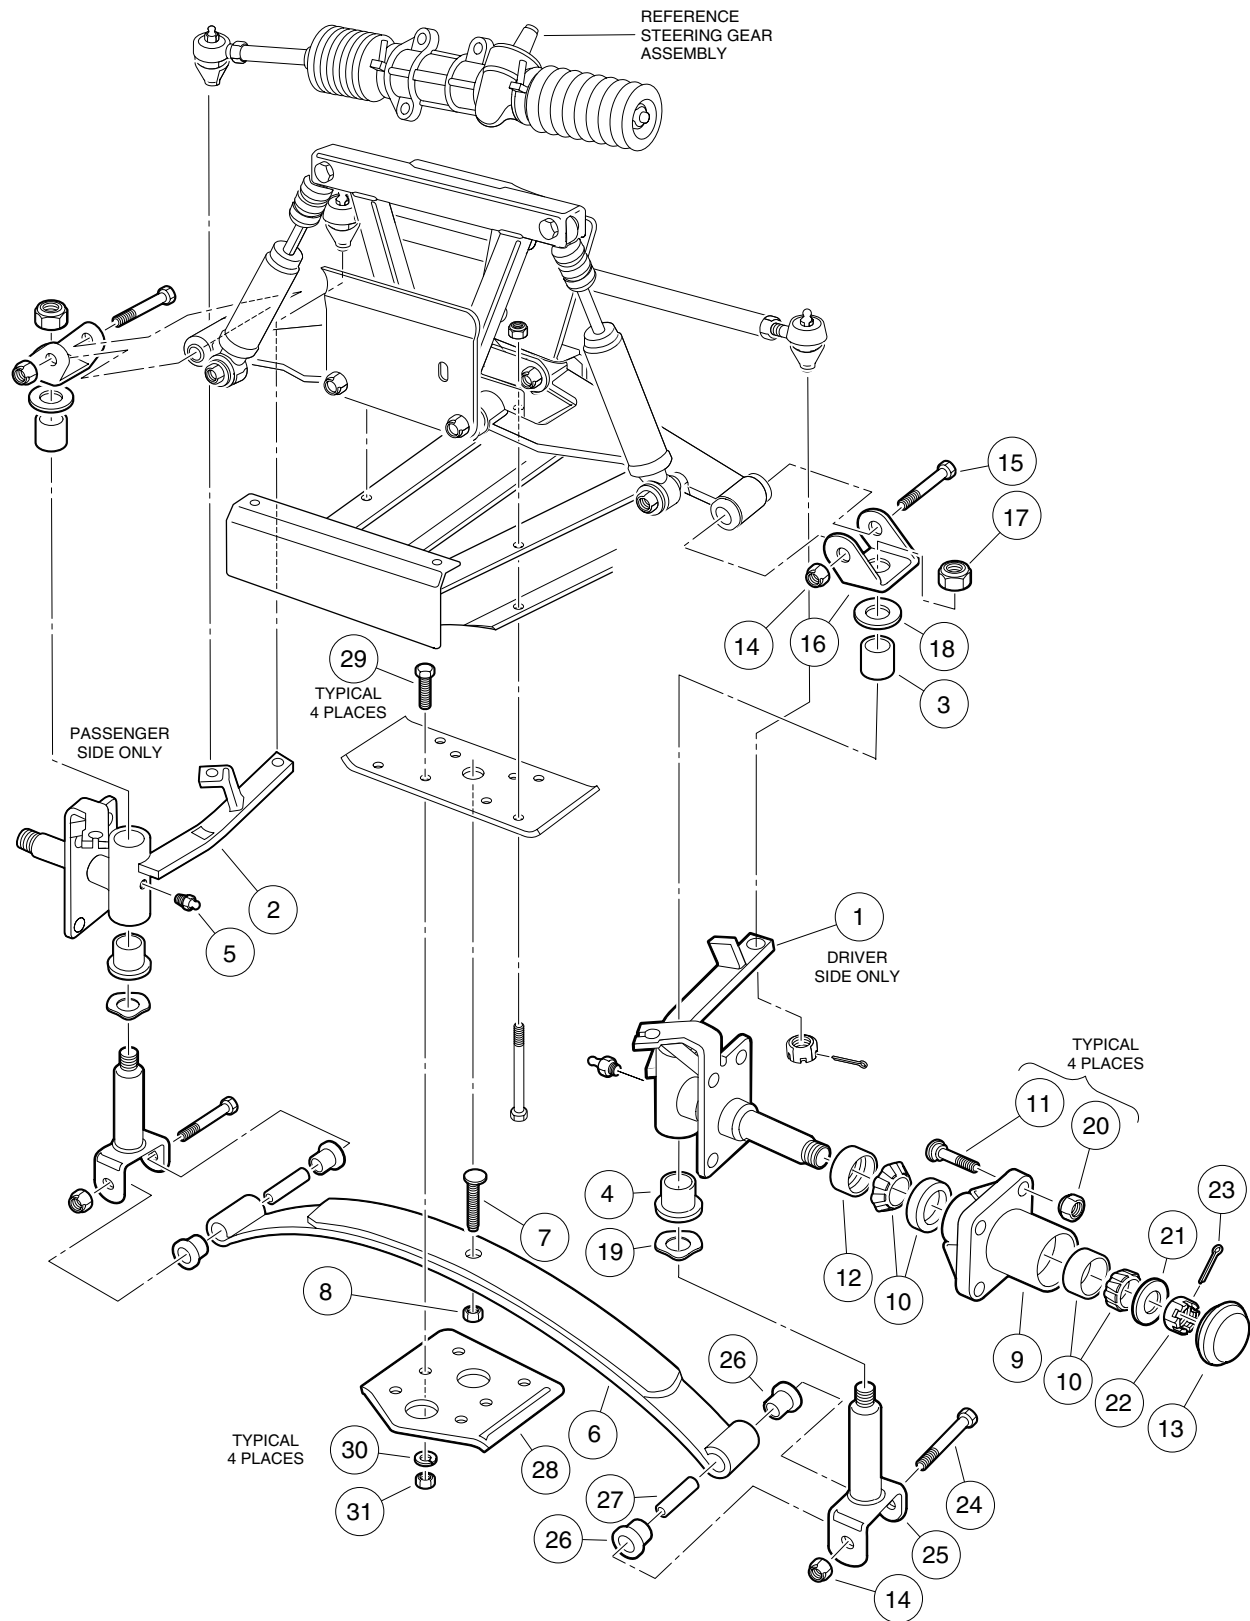

FRONT SUSPENSION, LOWER – LATER STYLE

ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC	5 G E
		1 2 3 4			
1	101876901	Assembly, Spindle, Driver-Side (includes items 3, 4 and 5)	1	1	
2	<u>101877001</u>	Assembly, Spindle, Passenger-Side (includes items 3, 4 and 5)	1	1	
3	<u>8067</u>	Bushing, Bronze Spindle	1	1	
4	<u>7048</u>	Bushing, Bronze	1	1	
5	<u>1015597</u>	Fitting, Grease, 1/4-28	1	1	
6	<u>102004001</u>	Spring, Tapered Leaf	1	1	
7	<u>8745</u>	Assembly, Eccentric	1	1	
8	<u>706</u>	Nut, Hex, 3/8-16	1	1	
9	<u>1011892</u>	Assembly, Hub (includes items 10 - 13)	2	2	
10	<u>1011393</u>	Package, Hub Bearing	2	2	
11	<u>1011304</u>	Stud, Lug, 1/2-20	4	4	
12	<u>1013135</u>	Seal, Double Lip	1	1	
13	<u>1011887</u>	Cover, Dust	1	1	
14	<u>8754</u>	Nut, Nylon Lock, 3/8-16	4	4	
15	<u>1016387</u>	Screw, Hex-Head Cap, 3/8-16 x 2-3/4	2	2	
16	<u>1016384</u>	Clevis, Upper Delta	2	2	
17	<u>101903101</u>	Nut, Nylon Lock, 1/2-20	2	2	
18	<u>1010150</u>	Bearing, Thrust	2	2	
19	<u>1016389</u>	Washer, Kingpin Wave	2	2	
20	<u>1010984</u>	Nut, Lug	8	8	
21	<u>1010005</u>	Washer, Flat, 3/4	2	2	
22	<u>7840</u>	Nut, Hex Slotted, 3/4-16	2	2	
23	<u>7910</u>	Pin, Cotter, 5/32 x 1	2	2	
24	<u>8755</u>	Screw, Hex-Head Cap, 3/8-16 x 3-3/8	2	2	
25	<u>1016386</u>	Kingpin	2	2	
26	<u>1015583</u>	Bushing, Urethane	4	4	
27	<u>1012303</u>	Bushing, Steel	2	2	
28	<u>1014276</u>	Plate, Front Spring Retainer	1	1	
29	<u>1010177</u>	Screw, Hex-Head Cap, 3/8-16 x 2	4	4	
30	<u>357</u>	Washer, Lock, 3/8	4	4	
31	<u>706</u>	Nut, Hex, 3/8 - 16	4	4	

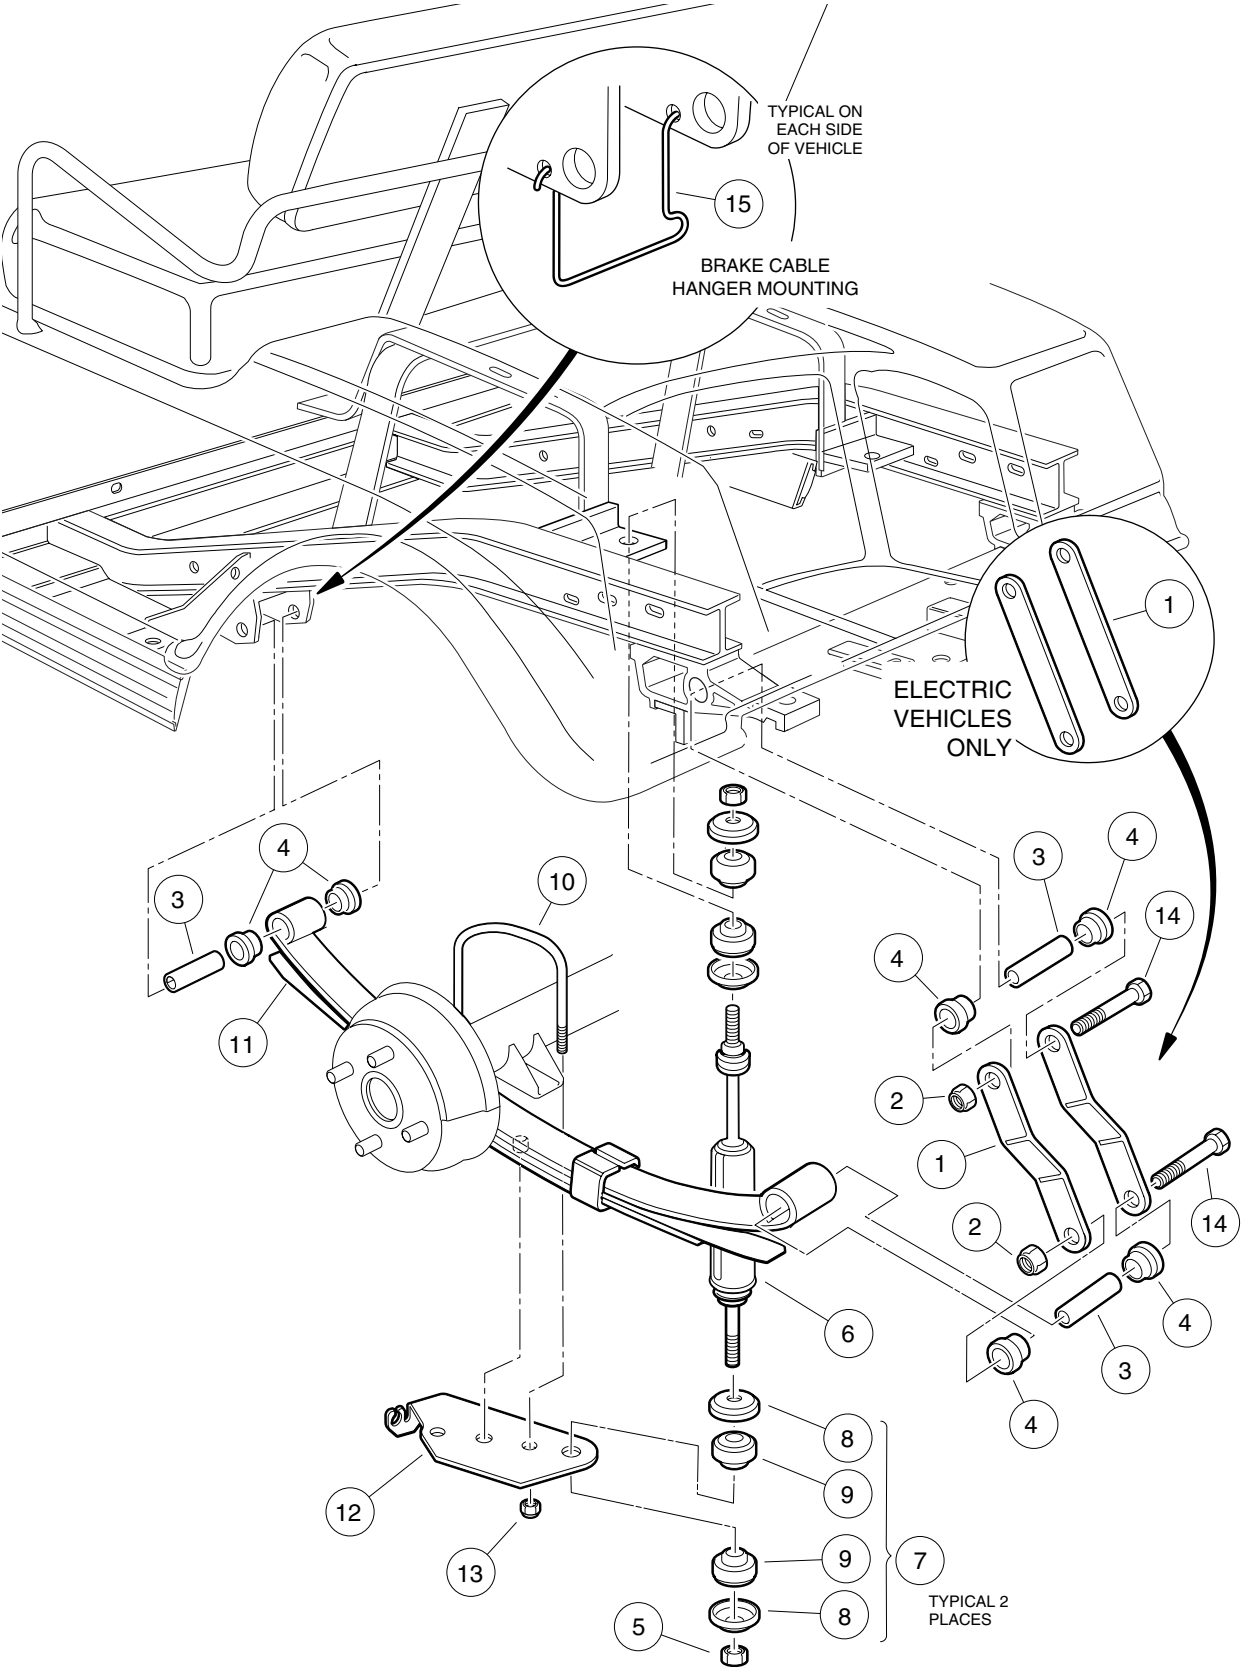

REAR SUSPENSION

ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC
		1 2 3 4		
1	<u>7569</u>	Shackle, Rear Spring (electric vehicle)		4
1	<u>1012304</u>	Shackle, Rear Spring (gasoline vehicle)	4	
2	<u>8754</u>	Nut, Nylon Lock, 3/8-16	6	6
3	<u>1012303</u>	Bushing, Steel	6	6
4	<u>1015583</u>	Bushing, Urethane	12	12
5	<u>1010145</u>	Nut, UNF Hex, 3/8-24	4	4
6	<u>101975101</u>	Shock Absorber, Rear	2	2
7	<u>1011415</u>	Kit, Shock Absorber Cushion (includes 2 each of items 8 and 9)	4	4
8	N/A	Retainer, Shock Absorber Cushion	8	8
9	N/A	Cushion, Shock Absorber	8	8
10	<u>1014902</u>	U-Bolt	2	2
11	<u>101975201</u>	Spring, Rear Leaf	2	2
12	<u>1012182</u>	Pad, Spring, Driver-Side	1	1
12	<u>1012181</u>	Pad, Spring, Passenger-Side	1	1
13	<u>1014555</u>	Nut, Nylon Lock, 7/16-24	4	4
14	<u>8755</u>	Screw, Hex-Head Cap, 3/8-16 x 3-3/8	6	6
15	<u>1013207</u>	Hanger, Brake Cable	2	2

5

 
G

E

ELECTRICAL SYSTEM – GASOLINE VEHICLE

6


G



WIRING – GASOLINE VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
	<u>101990202</u>	Wire Harness Assembly (includes items 1 and 2)	1
1	<u>1015769</u>	Wire Assembly, #6 White	1
2	<u>1016380</u>	Wire Assembly, #6 Black	1
3	N/A	Wire Assembly, #18 Black	1
4	<u>1012382</u>	Wire Assembly, #6 Black	1
5	N/A	Wire Assembly, #18 Orange (part of electrical component box)	1
6	N/A	Wire Assembly, #18 Black (part of reverse buzzer kit)	1
7	N/A	Wire Assembly, #18 Black	1
8	<u>1015737</u>	Wire Assembly, #10 Red (part of electrical component box)	1
9	<u>1015332</u>	Wire Assembly, #10 Braided Ground	1
10	<u>101837301</u>	Wire Assembly, #6 Green	1
11	<u>1014119</u>	Wire Assembly, #6 Red	1
12	N/A	Wire Assembly, #18 Black (part of reverse buzzer kit)	1
13	102231101	Assembly, Fuel Pump Wire and Fuse (includes item 14)	1
14	102165701	Fuse, 5-Amp	1


6
G

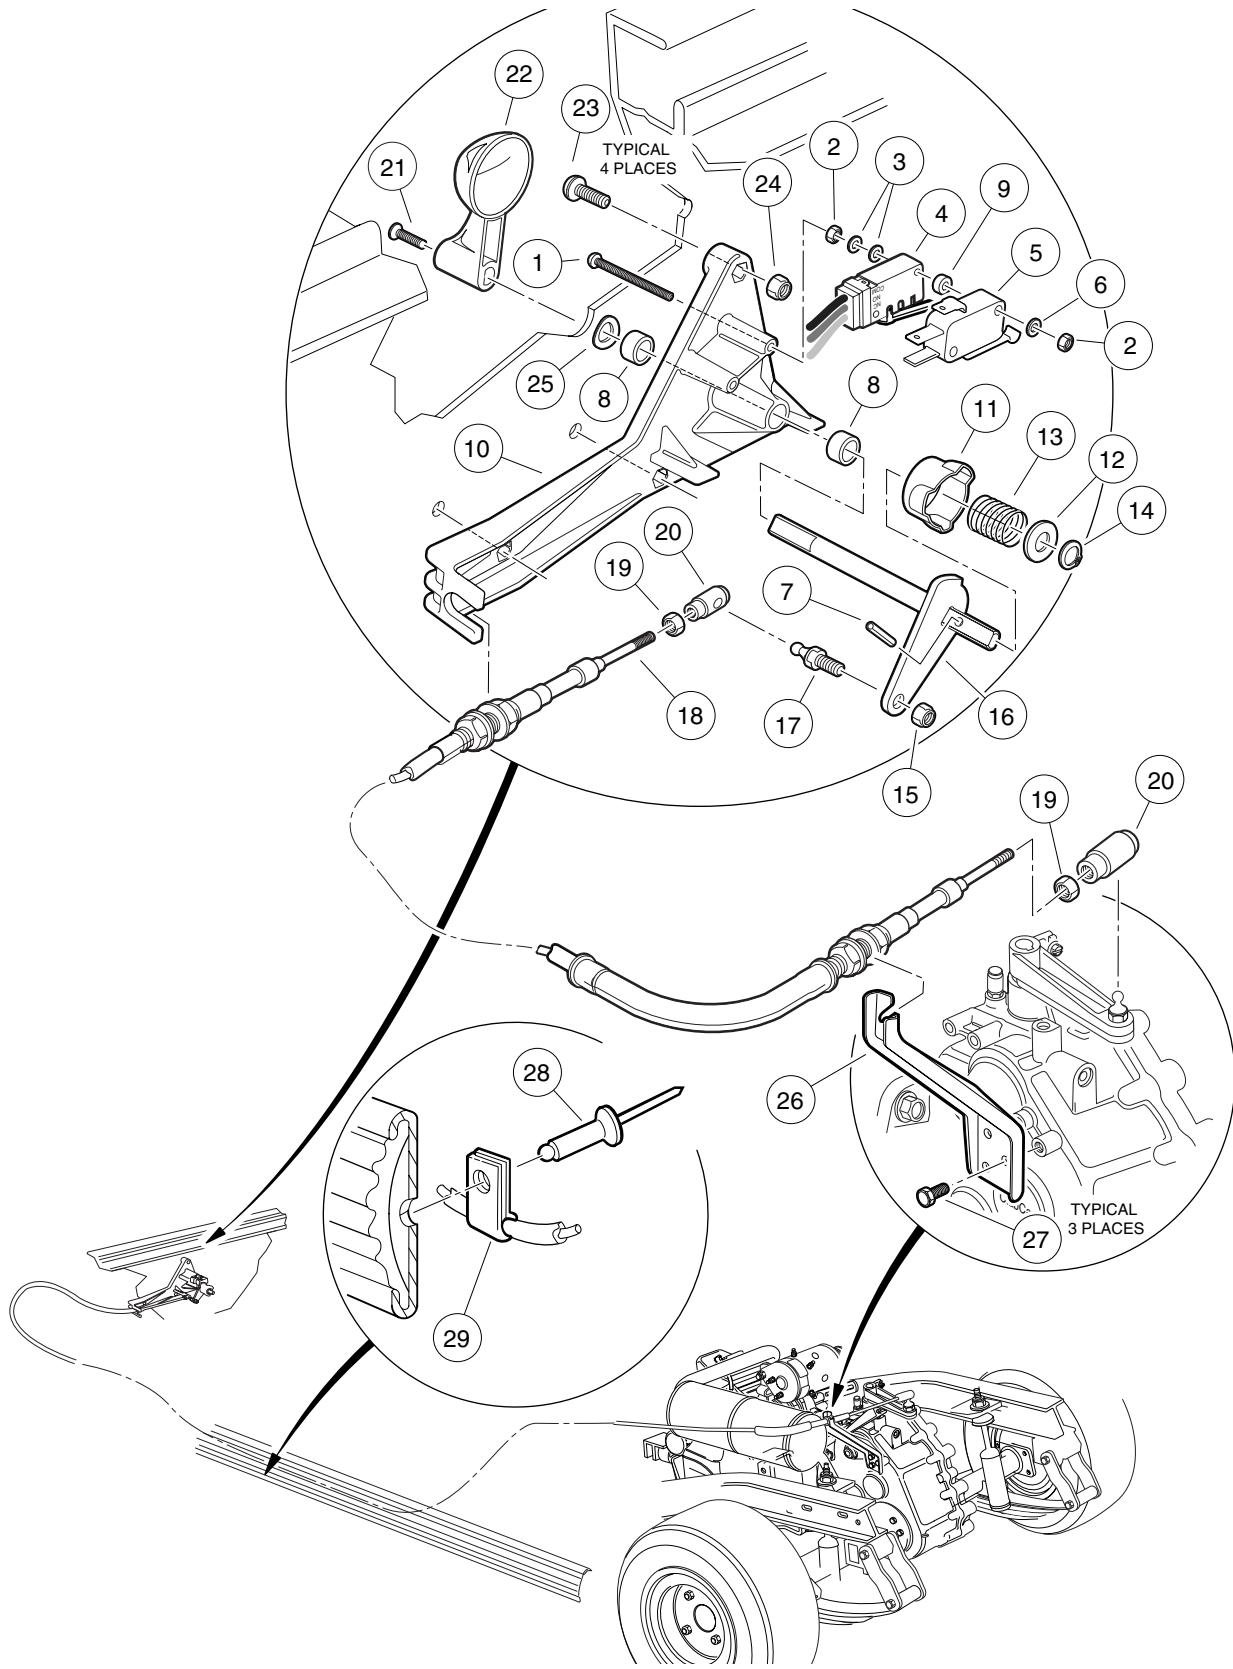

FORWARD/REVERSE SHIFTER ASSEMBLY – GASOLINE VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
	1016947	Assembly, Forward/Reverse Shifter (includes items 1 - 17)	1
1	<u>1012594</u>	Screw, Machine, #4-40 x 1-1/2	2
2	<u>8057</u>	Nut, Hex-Head, #4-40	4
3	1012431	Washer, Flat, #4	4
4	<u>101979101</u>	Switch, Limit	1
5	<u>1014807</u>	Switch, Limit	1
6	<u>8058</u>	Washer, Lock, #4	2
7	<u>1013591</u>	Pin, Roll, 1/8	1
8	<u>1014145</u>	Bushing, Bronze	2
9	<u>1014727</u>	Washer, Nylon Flat, #4	2
10	<u>1016342</u>	Base, Forward/Reverse Shifter	1
11	1014089	Kit, Neutral Lock-out Cam (includes item 12)	1
12	<u>1014065</u>	Washer, Flat	1
13	<u>1013590</u>	Spring, Forward/Reverse Cam	1
14	<u>1013589</u>	Ring, Retaining	1
15	<u>8717</u>	Nut, Nylon Lock, 1/4-28	1
16	1013587	Weldment, Forward/Reverse Bell Crank	1
17	<u>1010954</u>	Stud, Ball, 1/4-28 x 1/4	1
18	<u>101672701</u>	Cable, Transmission (includes items 19 and 20)	1
19	<u>7893</u>	Nut, Hex, #10-32	2
20	<u>1012333</u>	Joint, Ball	2
21	<u>1015064</u>	Screw, Phillips Oval Countersunk Machine, #8-32 x 5/8	1
22	<u>1012987</u>	Handle, Forward/Reverse Switch	1
23	<u>8248</u>	Screw, Phillips Truss-Head, 1/4-20 x 3/4	4
24	8233	Nut, Nylon Lock, 1/4-20	8
25	<u>1016201</u>	Washer, Wave, 3/8	1
26	101922601	Bracket, Transmission Cable Support	1
27	<u>1012285</u>	Screw, Hex Washer-Head, Thread-Rolling, 1/4-20 x 5/8	3
28	<u>7973</u>	Rivet, Pop, 3/16	1
29	8455	Clamp	1


6
G

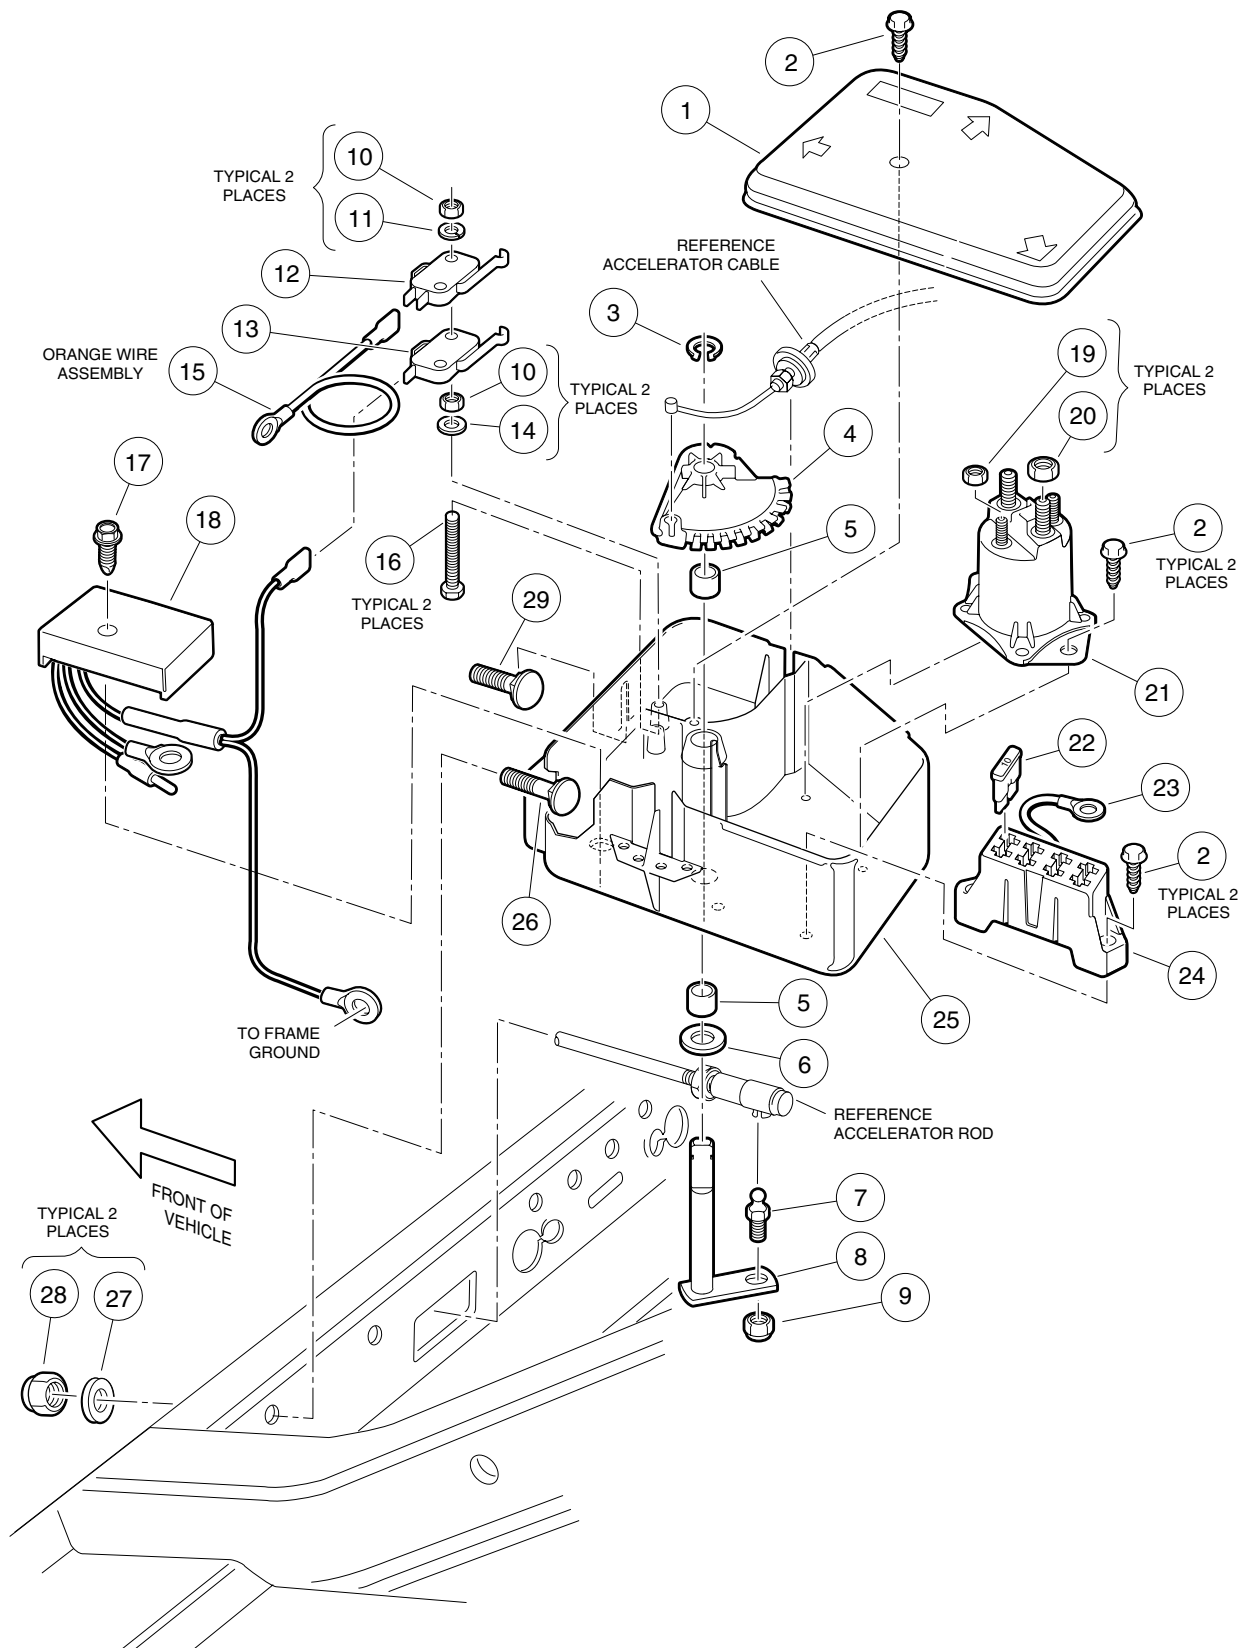

ELECTRICAL COMPONENT BOX – GASOLINE VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
	101992602	Box, Electrical Component, Complete (includes items 1 - 25)	1
1	<u>1015372</u>	Cover, Electrical Component Box	1
2	<u>1015752</u>	Screw, Hi-Lo, #12-16 x 5/8	5
3	<u>1013589</u>	Ring, Retaining	1
4	<u>1015373</u>	Cam, Electrical Box	1
5	<u>1014145</u>	Bushing, Bronze	2
6	<u>1014065</u>	Washer, Flat	1
7	<u>1010954</u>	Stud, Ball, 1/4-28	1
8	1015345	Assembly, Bell Crank and Shaft	1
9	<u>8717</u>	Nut, Nylon Lock, 1/4-28	1
10	<u>8057</u>	Nut, Hex, #4-40	4
11	<u>8058</u>	Washer, Lock, #4	2
12	<u>1014807</u>	Switch, Limit	1
13	<u>1014808</u>	Switch, Limit	1
14	1012431	Washer, Flat, #4	2
15	N/A	Wire Assembly, #16 Orange	1
16	<u>1015878</u>	Screw, Hex-Head Machine, #4-40 x 1-5/8	2
17	<u>101856102</u>	Screw, Hex Washer-Head Hi-Lo, 1/4-15 x 1-1/2	1
18	<u>1015777</u>	Assembly, Voltage Regulator	1
19	<u>7893</u>	Nut, Hex, #10-32	2
20	<u>1242</u>	Nut, Hex, 5/16-18	2
21	<u>1013609</u>	Solenoid, 12-Volt	1
22	<u>1012295</u>	Fuse, 10-Amp	1
23	<u>1015737</u>	Wire Assembly, #10 Red	1
24	<u>1015741</u>	Block, Fuse	1
25	<u>1015371</u>	Box, Electrical Component	1
26	<u>1015405</u>	Bolt, Carriage, 5/16-18 x 2	1
27	<u>1241</u>	Washer, Flat, 5/16	2
28	<u>7473</u>	Nut, Nylon Lock, 5/16-18	2
29	<u>7818</u>	Bolt, Carriage, 5/16-18 x 1-1/2	1


6
G

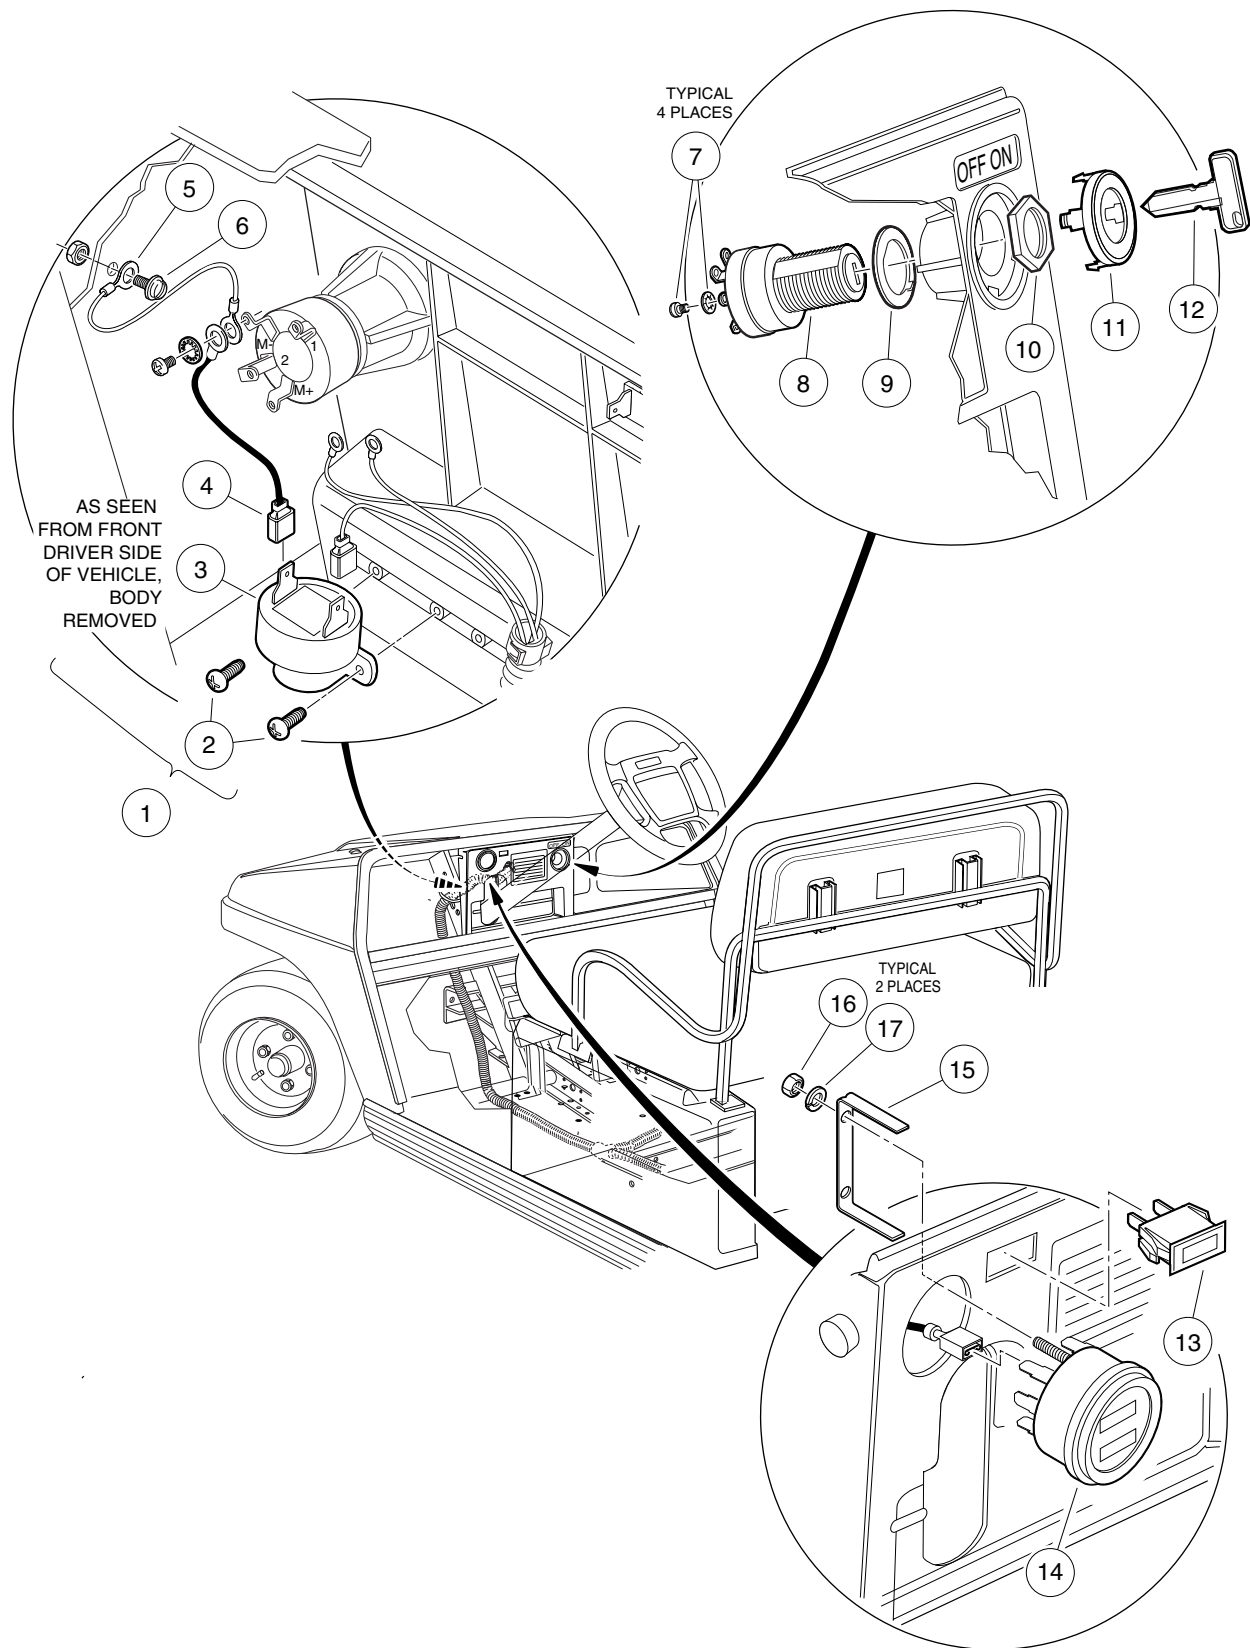

ELECTRICAL COMPONENTS, FRONT BODY – GASOLINE VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1016859</u>	Kit, Reverse Buzzer (includes items 2, 3 and 4)	1
2	<u>1016849</u>	Screw, Pan-Head Hi-Lo, #4-24 x 5/16	2
3	<u>1016851</u>	Buzzer, Reverse	1
4	N/A	Wire Assembly, #18 Black	1
5	<u>1011229</u>	Nut, K-lock, #6-32	1
6	<u>1015720</u>	Screw, Hex Washer-Head, # 6-32 x 1/2	1
7	101830601	Assembly, Screw and Washer	4
8	<u>101826301</u>	Switch, Key	1
9	<u>101851101</u>	Washer, Key Switch	1
10	<u>101830701</u>	Nut, Key Switch	1
11	<u>101834502</u>	Cap, Key Switch	1
12	<u>1012505</u>	Key (pair)	1
13	<u>1016630</u>	Light, Low Oil Warning	1
14	<u>101990701</u>	Fuel Gauge/Hour Meter (includes item 15)	1
15	N/A	Bracket	1
16	<u>101991101</u>	Nut, M4 x 0.7	2
17	<u>1012986</u>	Washer, Lock, M4	2


6
G

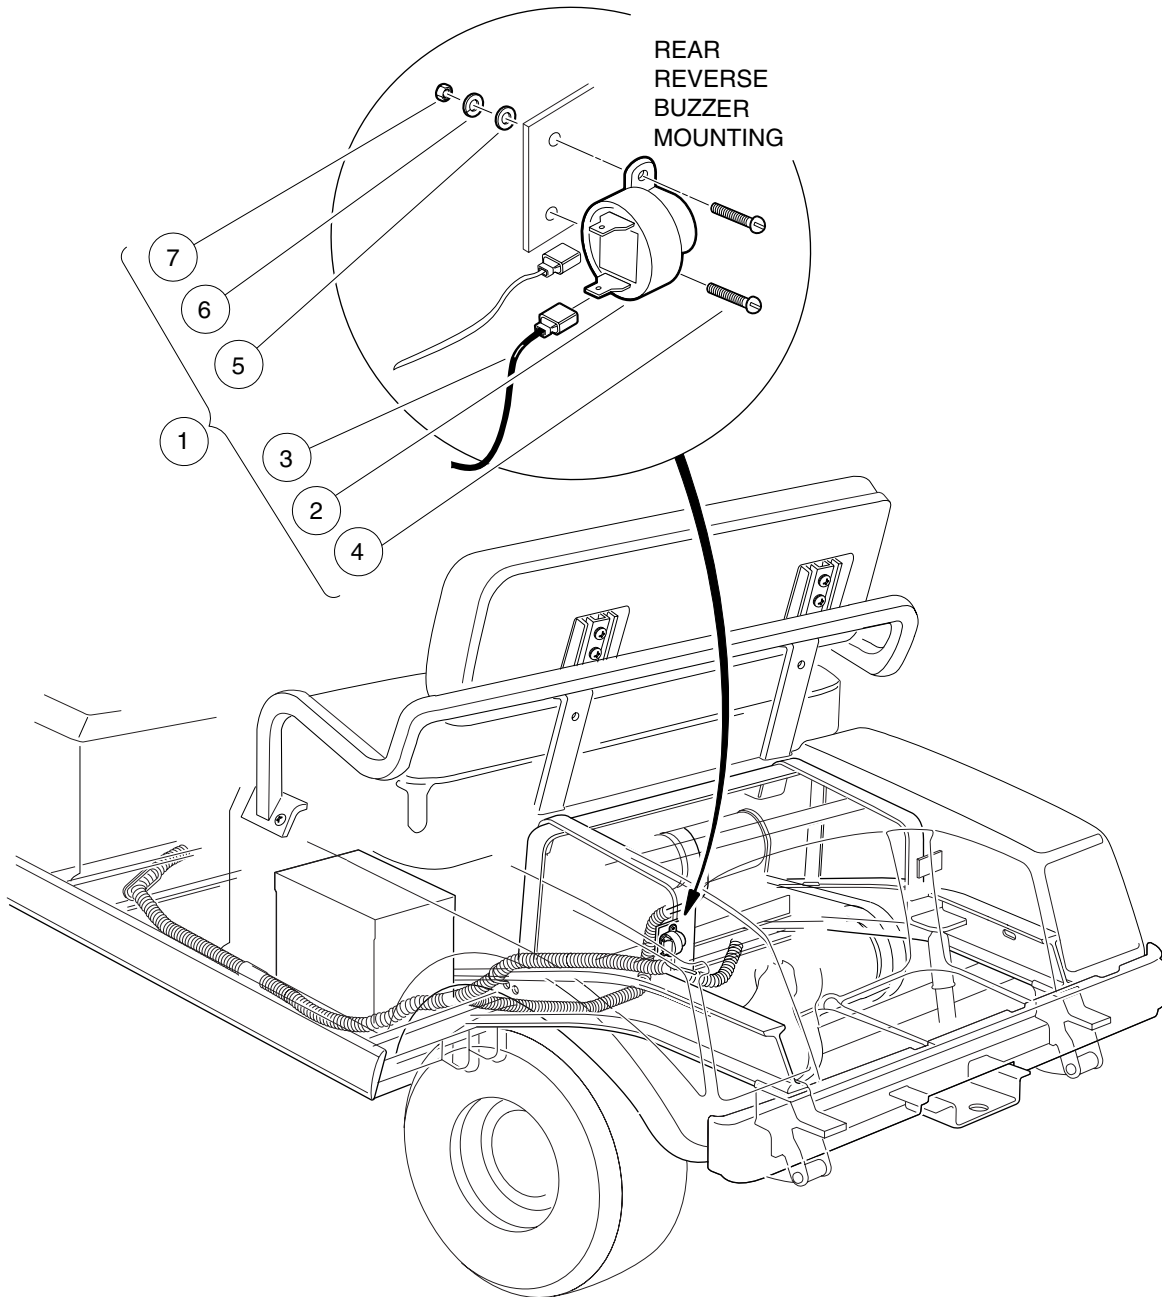

ELECTRICAL COMPONENTS, REAR BODY – GASOLINE VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1016859</u>	Kit, Reverse Buzzer (includes items 1 - 7)	1
2	<u>1016851</u>	Buzzer, Reverse	1
3	N/A	Wire Assembly, #18 Black	1
4	<u>8056</u>	Screw, Round-Head, #4-40 x 3/4	2
5	1012431	Washer, Flat, #4	2
6	<u>8058</u>	Washer, Lock, #4	2
7	<u>8057</u>	Nut, Hex, #4-40	2

6
G

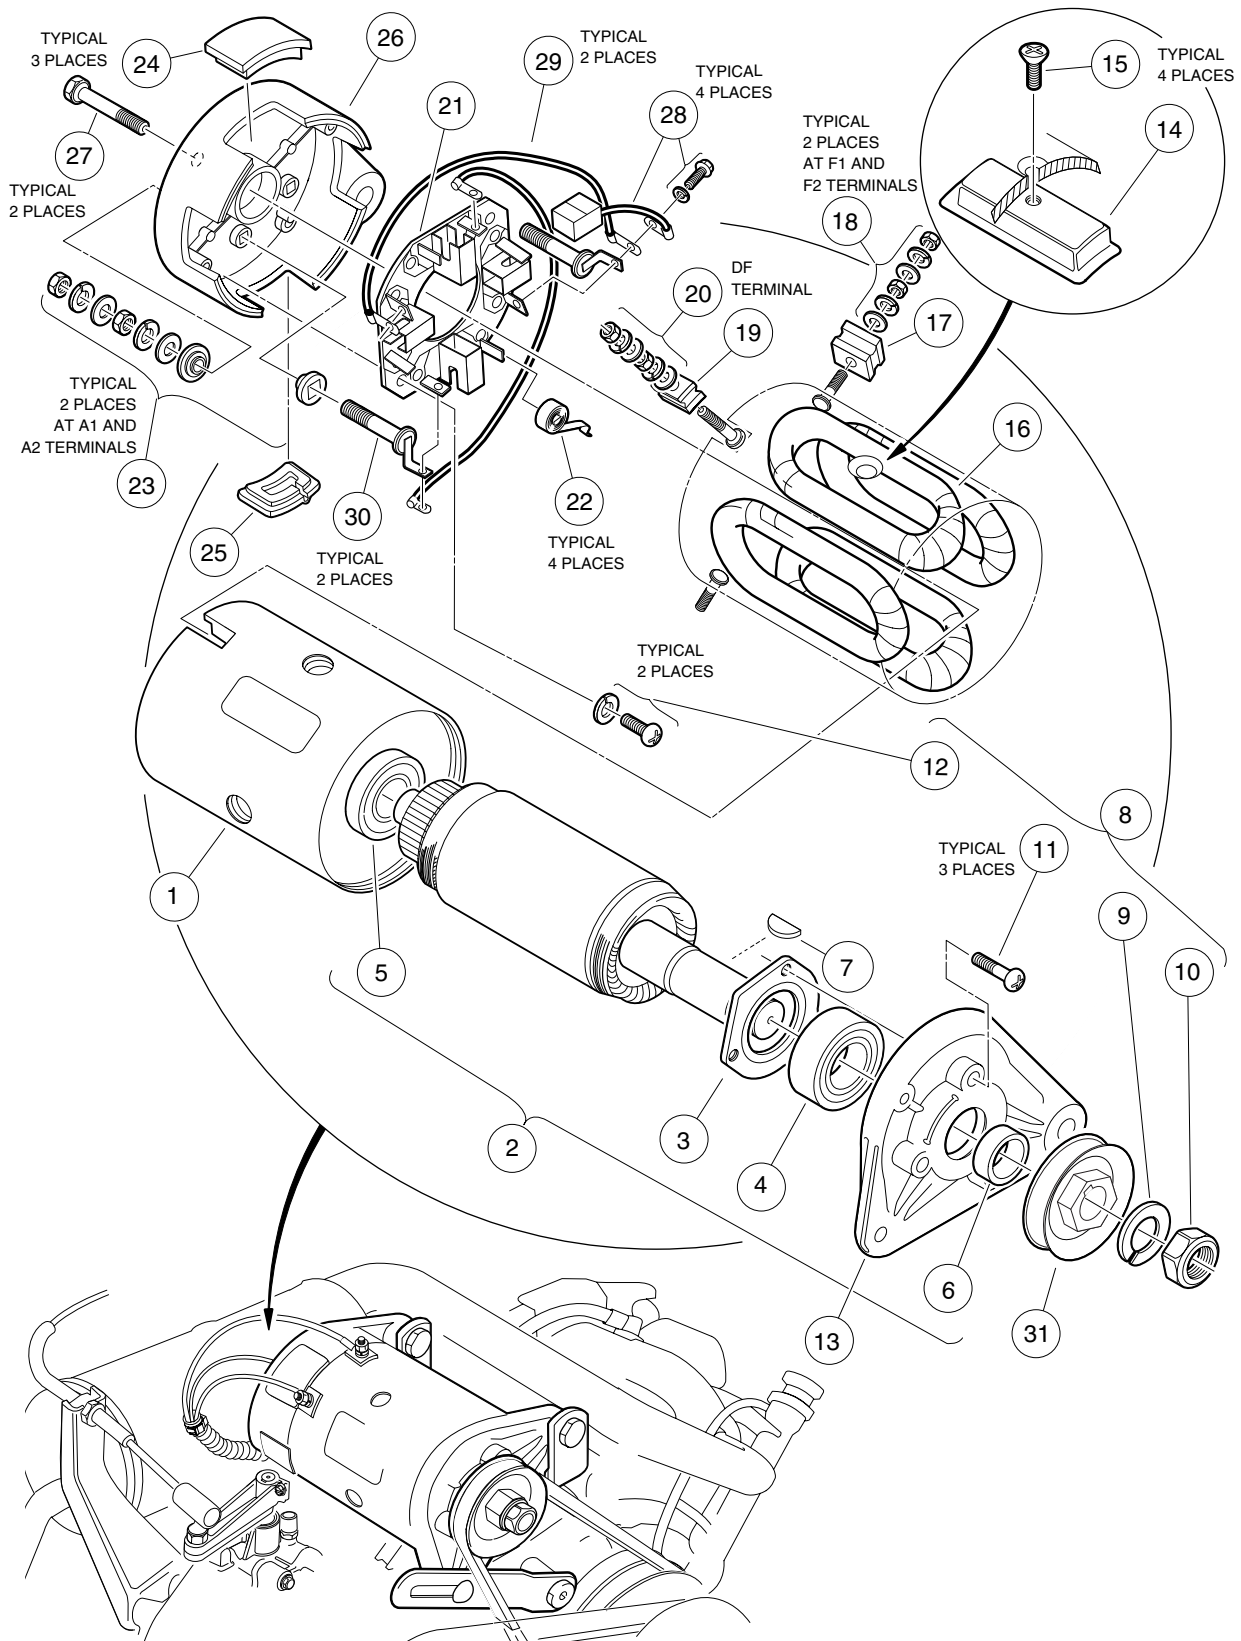


STARTER/GENERATOR ASSEMBLY

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
	<u>101833701</u>	Starter/Generator (clockwise rotation) (includes items 1 - 30)	1
1	<u>101875201</u>	Housing, Field Coil	1
2	<u>101875101</u>	Assembly, Armature (includes items 3 - 6)	1
3	<u>101875001</u>	Retainer, Bearing	1
4	<u>1013001</u>	Ball Bearing, Output Shaft	1
5	<u>1013005</u>	Commutator, Ball Bearing	1
6	<u>101939901</u>	Spacer, 5/16	1
7	<u>1013003</u>	Key, Woodruff	1
8	<u>101876501</u>	Kit, Pulley Nut and Screw (includes items 9 - 12)	1
9	N/A	Washer, Lock, M14	1
10	N/A	Nut, Hex, M14 x 2	1
11	N/A	Screw, Cross-Recessed, M5 x 0.8 x 18 mm	3
12	<u>101896501</u>	Screw, Cross-Recessed, M5 x 0.8 x 16 mm (with lock washer)	2
13	<u>101874901</u>	End Bell, Output Shaft	1
14	<u>101875301</u>	Set, Pole (set of 4)	1
15	<u>101875401</u>	Screw, Pole Piece (set of 4)	1
16	<u>101875501</u>	Coil, Field	1
17	<u>101875601</u>	Insulator, F Terminal	2
18	<u>101877601</u>	Package, Terminal Hardware (F1 and F2)	2
19	<u>101875701</u>	Insulator, DF Terminal	1
20	<u>101877701</u>	Package, Terminal Hardware (DF)	1
21	<u>101301102</u>	Holder, Brush (includes item 22)	1
22	<u>101878101</u>	Spring, Brush	4
23	<u>101876001</u>	Package, Terminal Hardware (A1 and A2)	2
24	<u>101876301</u>	Cover, Brush Inspection Port (Set of 4) (includes item 25)	1
25	<u>1017653</u>	Cover, Brush Inspection Port, with Drain	1
26	<u>101876402</u>	End Bell, Commutator	1
27	<u>101879001</u>	Bolt, Clamp, M6 x 1 x 180 mm	2
28	<u>101869302</u>	Package, Brush (includes 4 brushes, 4 screws, 4 washers)	1
29	<u>101876202</u>	Connector, Brush	2
30	<u>101875802</u>	A Connector (set of 2)	1
31	<u>1014289</u>	Pulley	1


6

G

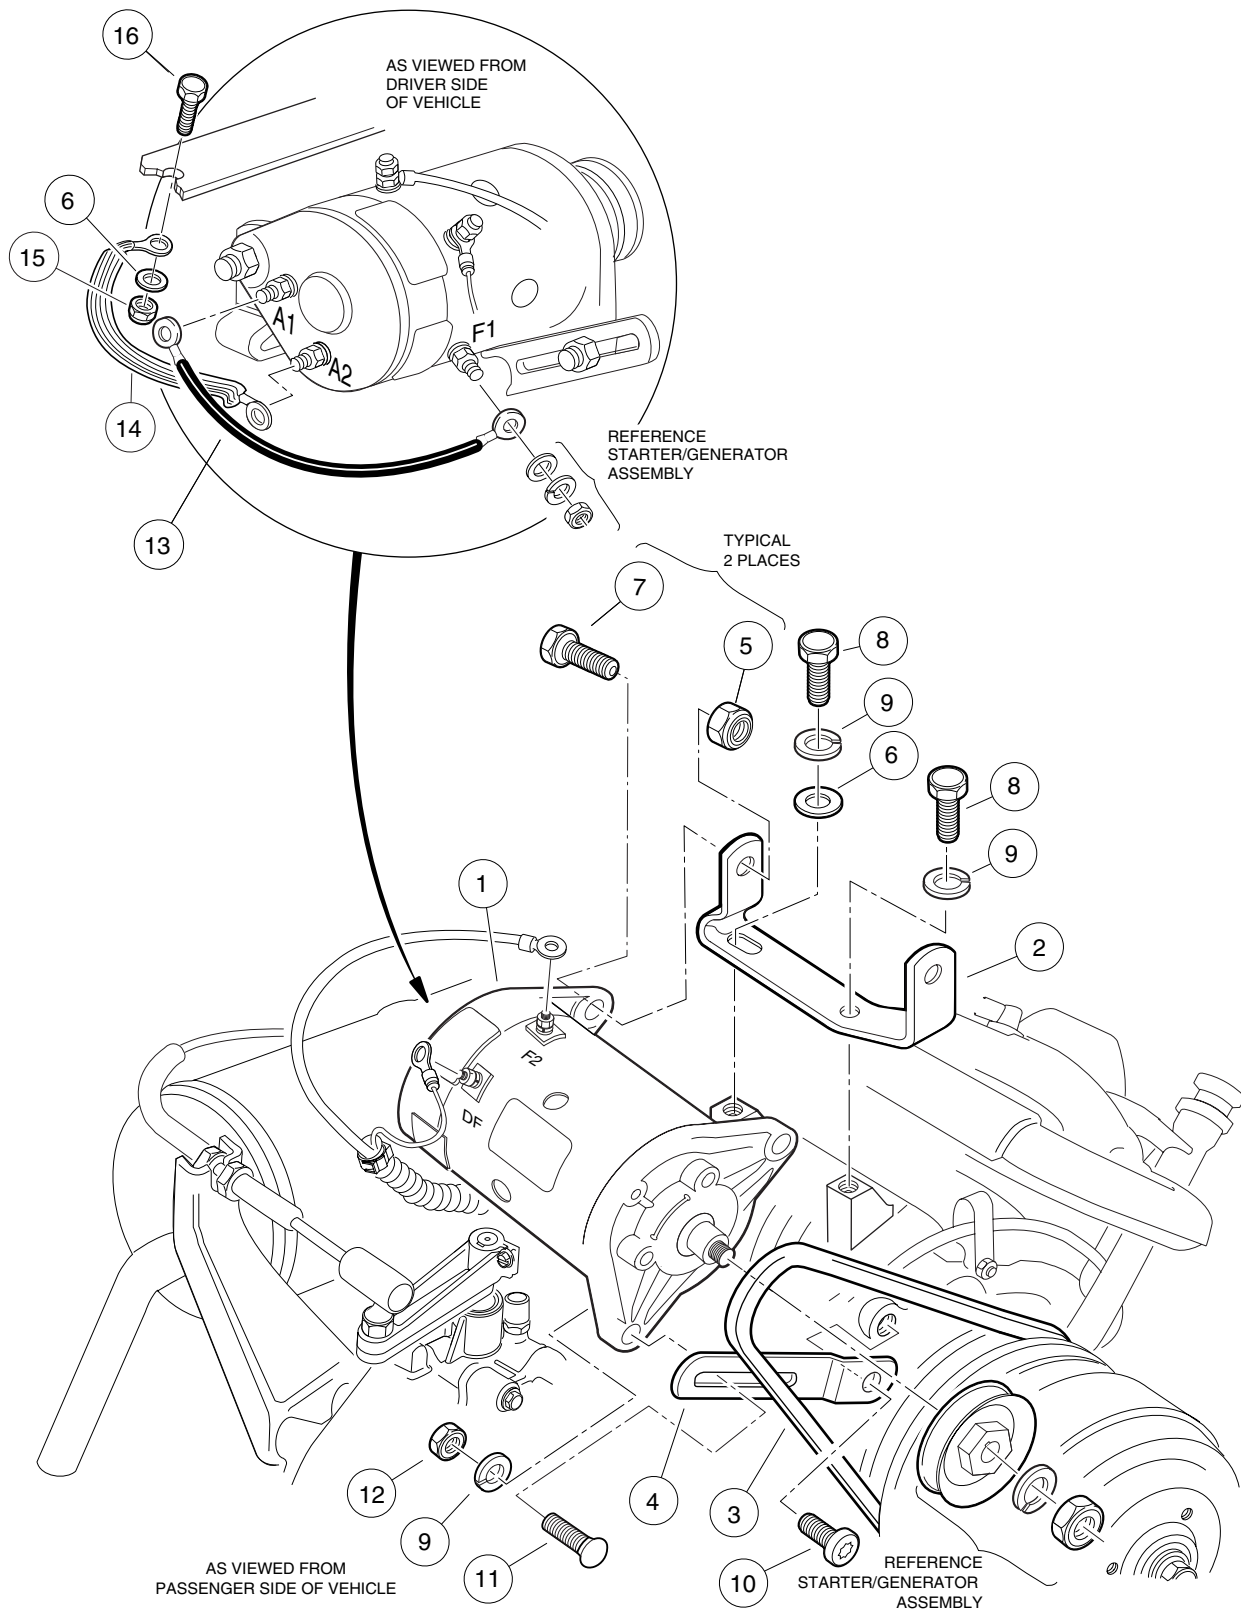

STARTER/GENERATOR MOUNTING

ITEM	PART NO.	DESCRIPTION	QTY	6
		1 2 3 4		G
1	<u>101833701</u>	Starter/Generator	1	
2	<u>101524002</u>	Bracket, Mounting	1	
3	<u>101916701</u>	Belt, Starter/Generator	1	
4	<u>1016883</u>	Bracket, Adjusting	1	
5	<u>8754</u>	Nut, Nylon Lock, 3/8-16	2	
6	<u>1241</u>	Washer, Flat, Type A, 5/16	2	
7	<u>705</u>	Screw, Hex-Head Cap, 3/8-16 x 1-1/4	2	
8	<u>1012830</u>	Screw, Hex-Head Cap, M8 x 1.25 x 22 mm	2	
9	<u>7174</u>	Washer, Lock, 5/16	3	
10	<u>1016074</u>	Screw, Torx-Head, M8 x 1.25 x 18 mm	1	
11	<u>1015932</u>	Bolt, Carriage, 5/16-18 x 1	1	
12	<u>1242</u>	Nut, Hex, 5/16-18	1	
13	<u>101837301</u>	Wire Assembly, #6 Green	1	
14	<u>1015920</u>	Wire Assembly, #6 Braided Ground	1	
15	<u>7473</u>	Nut, Nylon Lock, 5/16-18	1	
16	<u>7173</u>	Screw, Hex-Head Cap, 5/16-18 x 3/4	1	

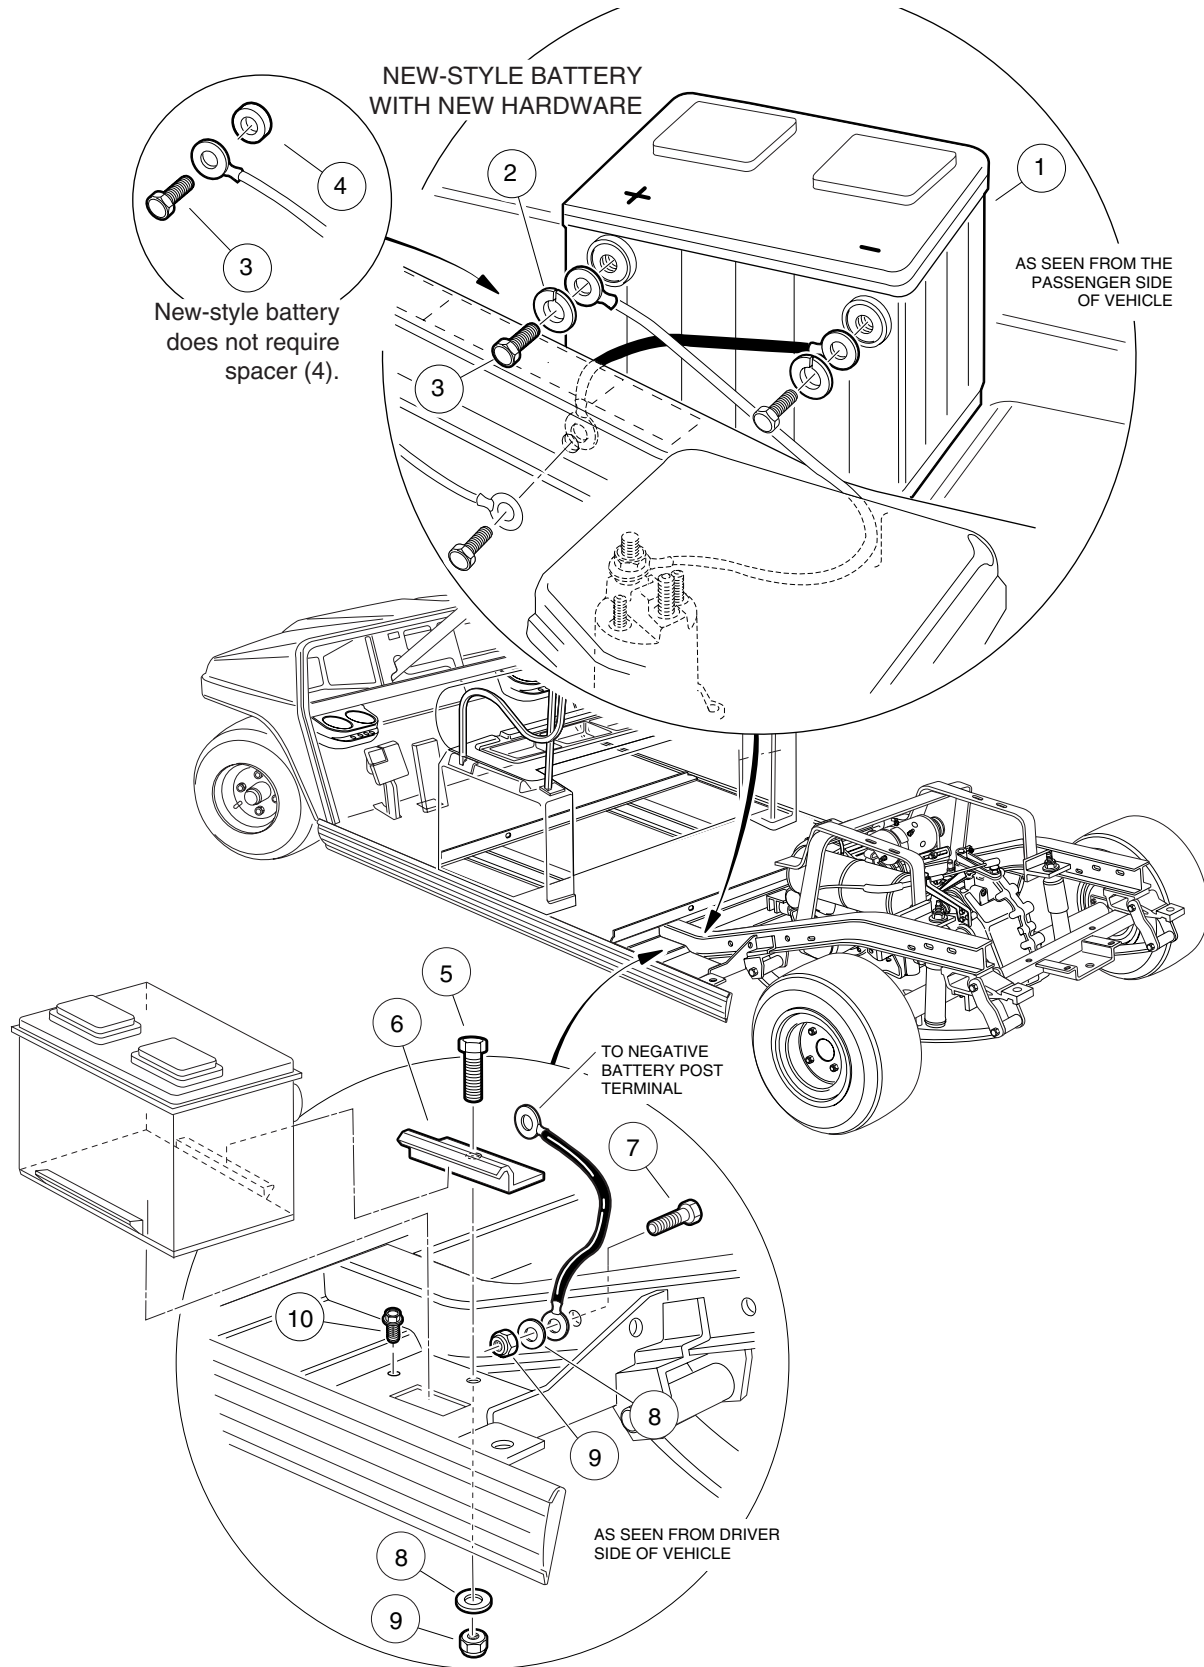



BATTERY – GASOLINE VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY	6	G
		1 2 3 4			
1	<u>1012328</u>	Battery, 12-Volt	1		
2	<u>102355301</u>	Washer, Lock, Stainless Steel, 3/8*	2		
3	<u>1014375</u>	Screw, Hex-Head Cap, Stainless Steel, 3/8-16 x 1/2	2		
4	<u>1014374</u>	Spacer, Battery Terminal Bolt	2		
5	<u>1010934</u>	Screw, Hex-Head Cap, 5/16-18 x 1	1		
6	<u>101898001</u>	Clamp, Battery	1		
7	<u>7173</u>	Screw, Hex-Head Cap, 5/16-18 x 3/4	1		
8	<u>1241</u>	Washer, Flat, 5/16	2		
9	<u>7473</u>	Nut, Nylon Lock, 5/16-18	2		
10	<u>1014288</u>	Screw, Thread-Forming, 5/16-16 x 3/4	1		
*NOTE: When ordering a new battery, you must order the new stainless steel lockwasher (2). Lockwasher cannot be used if battery terminal spacer (4) is required by battery design.					

6

G

FE350 ENGINE

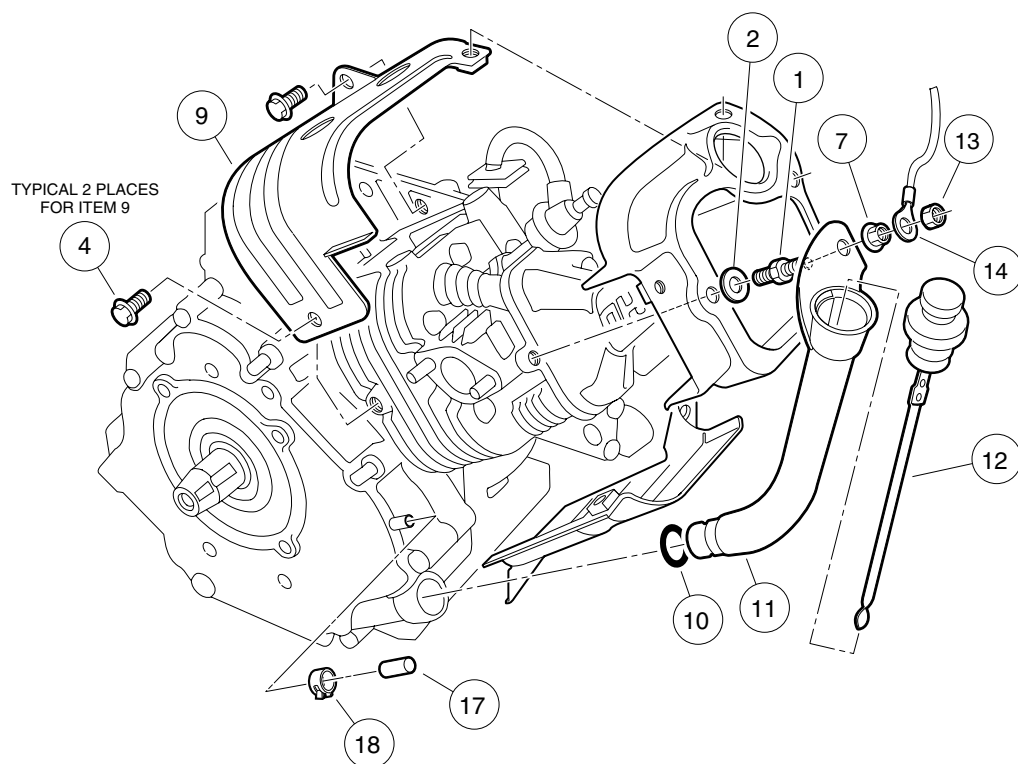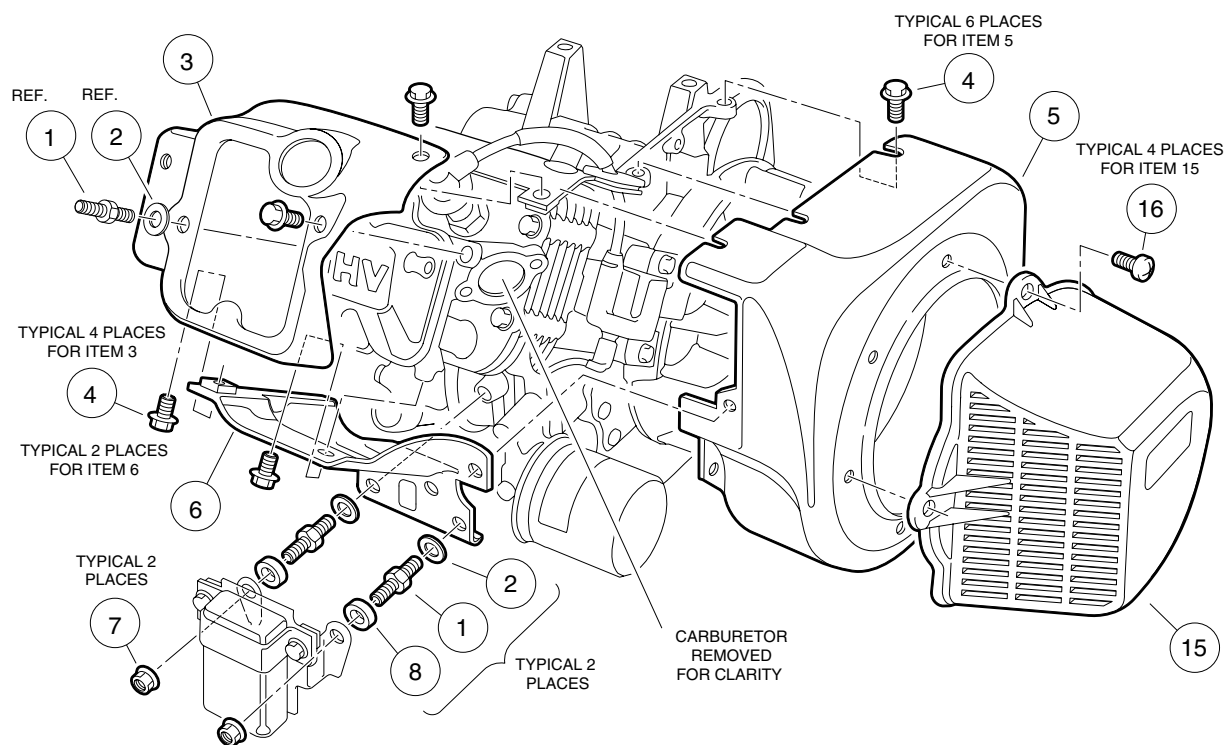


FE350 ENGINE – SHROUDS AND BRACKETS

ITEM	PART NO.	DESCRIPTION	QTY
	<u>101953802</u>	1 2 3 4 FE350 OHV Gasoline Engine, Complete (clockwise rotation) without automatic compression release (w/o ACR) and with Carburetor (does not include items 13 - 18)	1
1	<u>1016507</u>	Bolt, 2-Ended, M6 x 1 x 29 mm	3
2	N/A	Washer, Flat, 6 mm	3
3	<u>1017474</u>	Shroud, Cylinder Head	1
4	<u>1016456</u>	Bolt, Flanged, M6 x 1 x 12 mm	14
5	<u>101916101</u>	Housing, Fan	1
6	<u>1017476</u>	Shroud, Lower Cylinder	1
7	<u>1016547</u>	Nut, Flange, M6 x 1	3
8	<u>1017500</u>	Spacer	2
9	<u>1017475</u>	Shroud, Upper Cylinder	1
10	<u>1016539</u>	O-Ring	1
11	<u>1017486</u>	Tube, Oil Filler	1
12	<u>1016531</u>	Dipstick	1
13	<u>101887601</u>	Nut, Nylon, M6 x 1	1
14	<u>1015332</u>	Wire Assembly, #10 Braided Ground	1
15	<u>1015649</u>	Shroud, Fan	1
16	<u>1015969</u>	Screw, Pan-Head, M6 x 1 x 14 mm	4
17	<u>102232901</u>	Cap, Black EPDM	1
18	<u>101313401</u>	Clamp, Hose	1

7

G

FE350 ENGINE

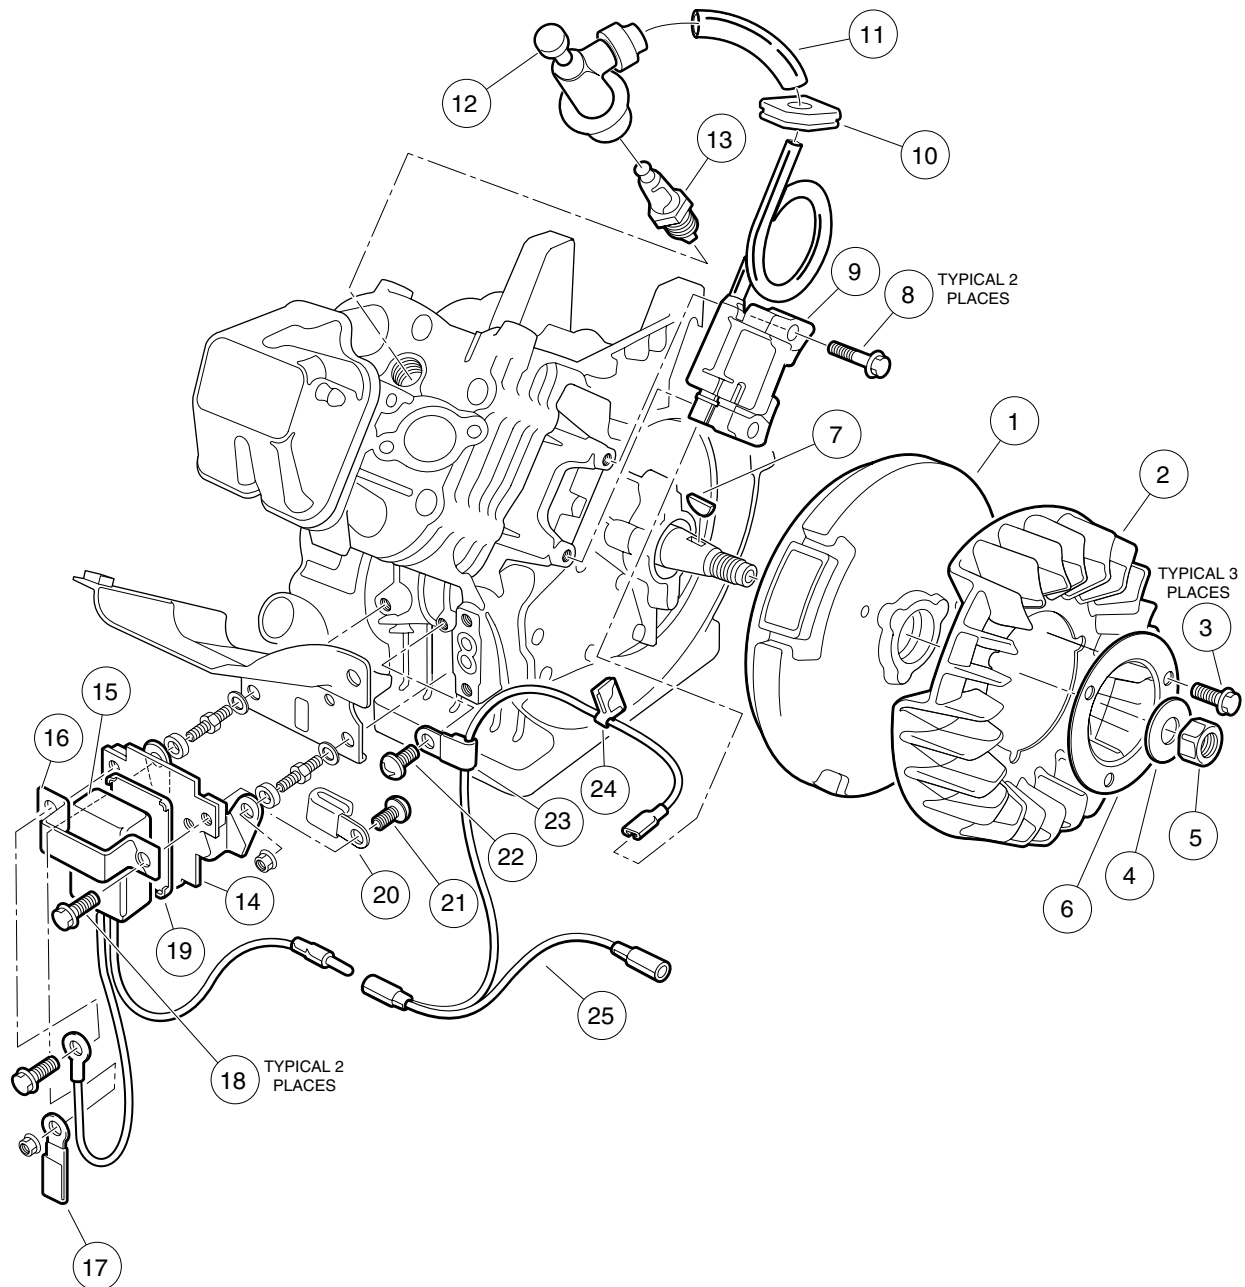


FE350 ENGINE – IGNITION COMPONENTS AND FLYWHEEL

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101916201</u>	Flywheel	1
2	<u>101916301</u>	Fan, Flywheel – Gray	1
3	<u>1017448</u>	Screw, Flanged Hex-Head, M6 x 1 x 10 mm	3
4	<u>1017490</u>	Washer, Flat, 18 mm	1
5	N/A	Nut, Hex, 18 mm Fine	1
6	<u>1017455</u>	Plate, Flywheel Fan	1
7	<u>1016562</u>	Key	1
8	<u>1016455</u>	Screw, Flanged Hex-Head, M5 x 0.8 x 25 mm	2
9	<u>101909201</u>	Coil, Ignition (with internal igniter)	1
10	<u>1016578</u>	Grommet	1
11	<u>1016588</u>	Tube, 7 mm I.D. x 10 mm O.D. x 70 mm	1
12	<u>1017463</u>	Assembly, Plug Cap	1
13	<u>101881101</u>	Plug, Spark, OHV (Autolite®)	1
13	<u>AM10724</u>	Plug, Spark, OHV (NGK®)	1
14	<u>1016445</u>	Bracket, RPM Limiter	1
15	<u>101909401</u>	Limiter, RPM	1
16	<u>1016579</u>	Band, RPM Limiter Mount	1
17	<u>1012981</u>	Clamp	1
18	<u>1016456</u>	Screw, Flanged Hex-Head, M6 x 1 x 12 mm	2
19	<u>1016586</u>	Damper	1
20	<u>101909501</u>	Clamp	1
21	<u>1016497</u>	Screw, Cross Pan-Head, M5 x 0.8 x 8 mm	1
22	<u>1016544</u>	Screw, Cross Pan-Head Self-Tapping, M5 x 12 mm	1
23	<u>1016561</u>	Clamp	1
24	<u>1016587</u>	Clamp	1
25	<u>101909301</u>	Wire, Lead	1

7
G

FE350 ENGINE

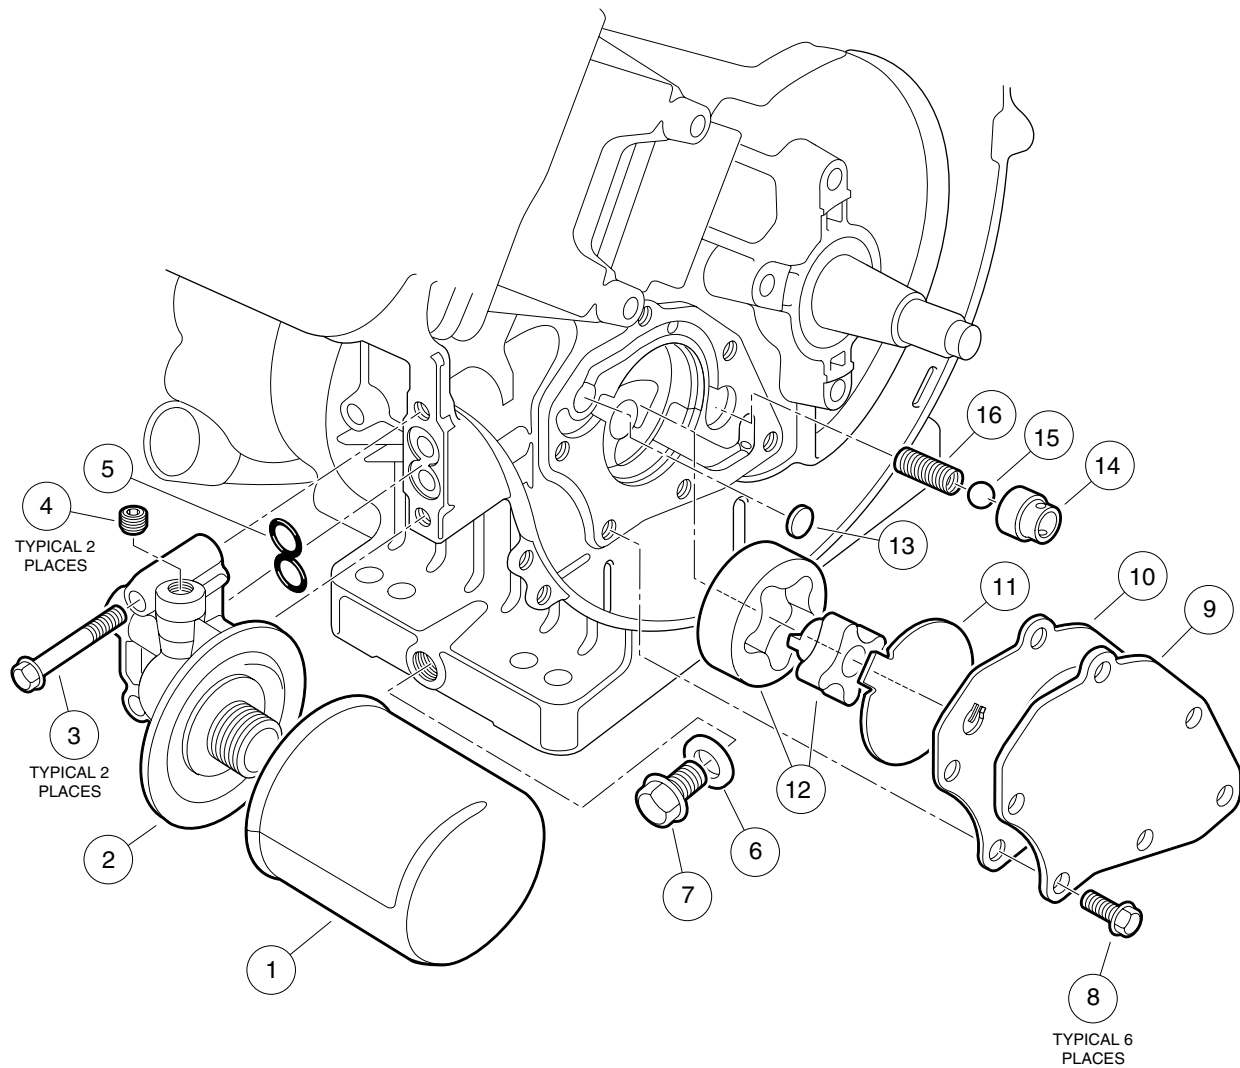


FE350 ENGINE – OIL CIRCULATION

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1016467</u>	Oil Filter	1
2	<u>1016502</u>	Bracket, Oil Filter	1
3	<u>1016457</u>	Bolt, Flanged Hex-Head, M6 x 1 x 40 mm	2
4	<u>1017507</u>	Plug	2
5	<u>1016570</u>	O-Ring	1
6	<u>1016432</u>	Gasket, Drain Plug	1
7	<u>1016576</u>	Plug, Drain	1
8	<u>1017456</u>	Screw, Flanged Hex-Head, M6 x 1 x 12 mm	6
9	<u>1017460</u>	Cover, Pump	1
10	<u>1017442</u>	Gasket, Oil Pump	1
11	<u>1016473</u>	Plate, Oil Pump	1
12	<u>101648203</u>	Pump and Rotor, Oil	1
13	<u>1017458</u>	Filter	1
14	<u>1016429</u>	Seat, Valve	1
15	<u>1016537</u>	Ball, Steel, Pressure Relief	1
16	<u>1016581</u>	Spring	1

7

G

FE350 ENGINE

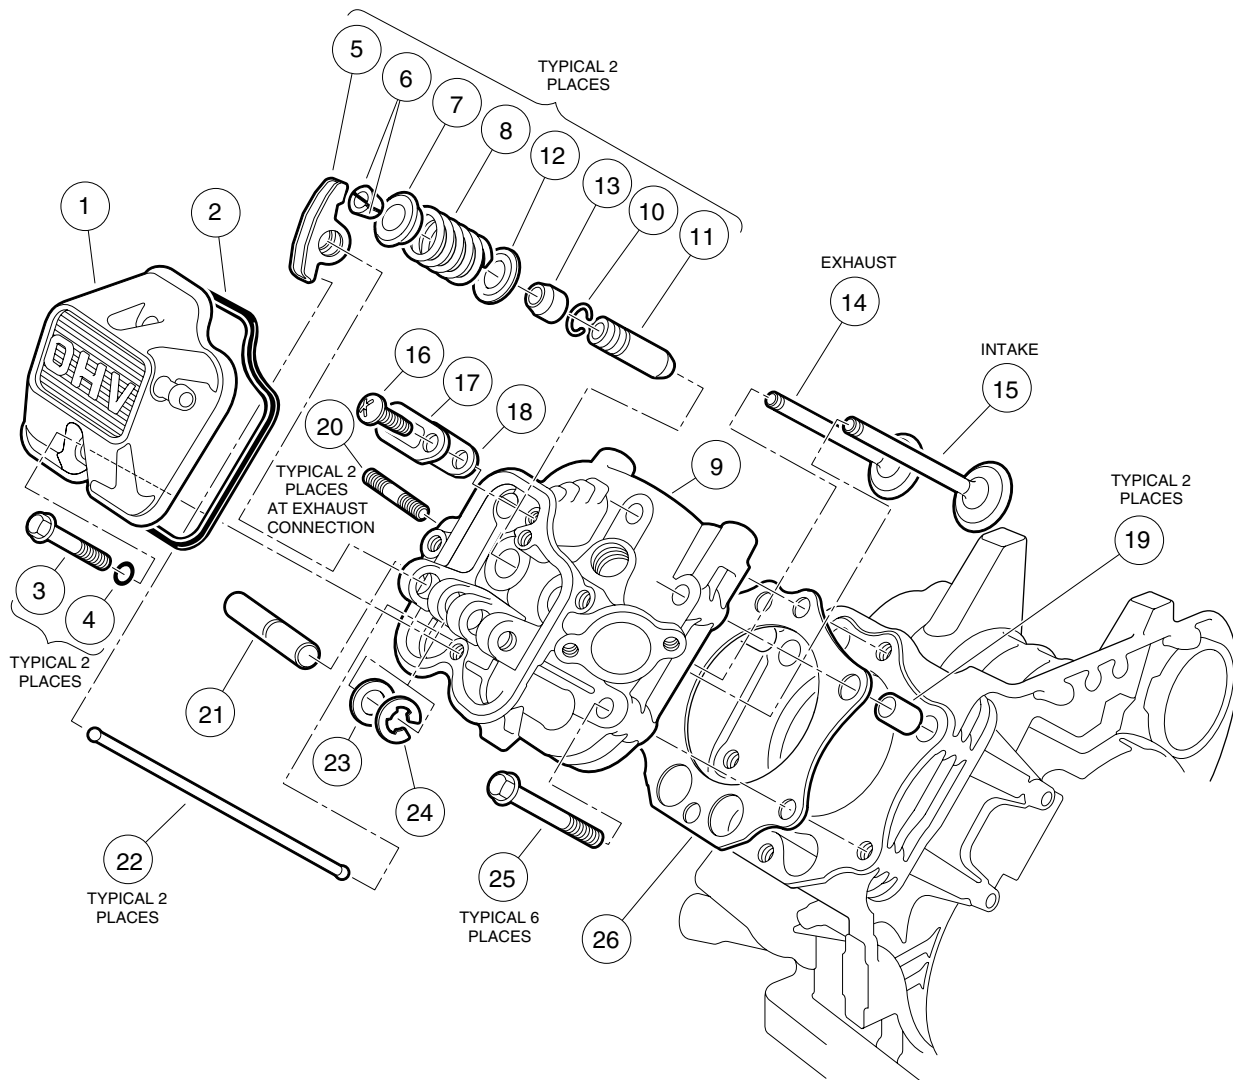


FE350 ENGINE – CYLINDER HEAD

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1016442</u>	Case, Rocker	1
2	<u>1016436</u>	Gasket, Rocker Case	1
3	<u>1016583</u>	Bolt, Flanged, M6 x 1 x 35 mm	2
4	<u>1016569</u>	O-Ring	2
5	<u>1017446</u>	Arm, Rocker	2
6	<u>1016450</u>	Collet	4
7	<u>1016449</u>	Retainer, Valve Spring	2
8	<u>1017473</u>	Spring, Engine Valve	2
9	<u>1017435</u>	Assembly, Cylinder Head, FE350 (includes items 10 and 11)	1
10	<u>1016560</u>	Ring, Snap	2
11	<u>1016519</u>	Guide, Intake Valve	1
11	<u>1016518</u>	Guide, Exhaust Valve	1
12	<u>1016479</u>	Seat, Spring	2
13	<u>1016566</u>	Seal, Valve	2
14	<u>1017445</u>	Valve, Exhaust	1
15	<u>1017444</u>	Valve, Intake	1
16	<u>1016544</u>	Screw, Cross Pan-Head Self-Tapping, M5 x 0.8 x 12 mm	1
17	<u>1016474</u>	Plate	1
18	<u>1016483</u>	Valve	1
19	<u>1016563</u>	Pin	2
20	<u>1016489</u>	Bolt, Stud, M8 x 1.25 x 29 mm	2
21	<u>1016452</u>	Shaft, Rocker	1
22	<u>1017454</u>	Rod, Push	2
23	<u>1016549</u>	Washer, Flat, M12	1
24	<u>1016517</u>	Circlip, Type E	1
25	<u>1016458</u>	Bolt, Flanged, M8 x 1.25 x 45 mm	6
26	<u>1017434</u>	Gasket, Head	1
27	<u>102304801</u>	Kit, Gasket, FE350 (contains one each of all internal gaskets for FE350 engine) (not shown)	1

7
G

FE350 ENGINE

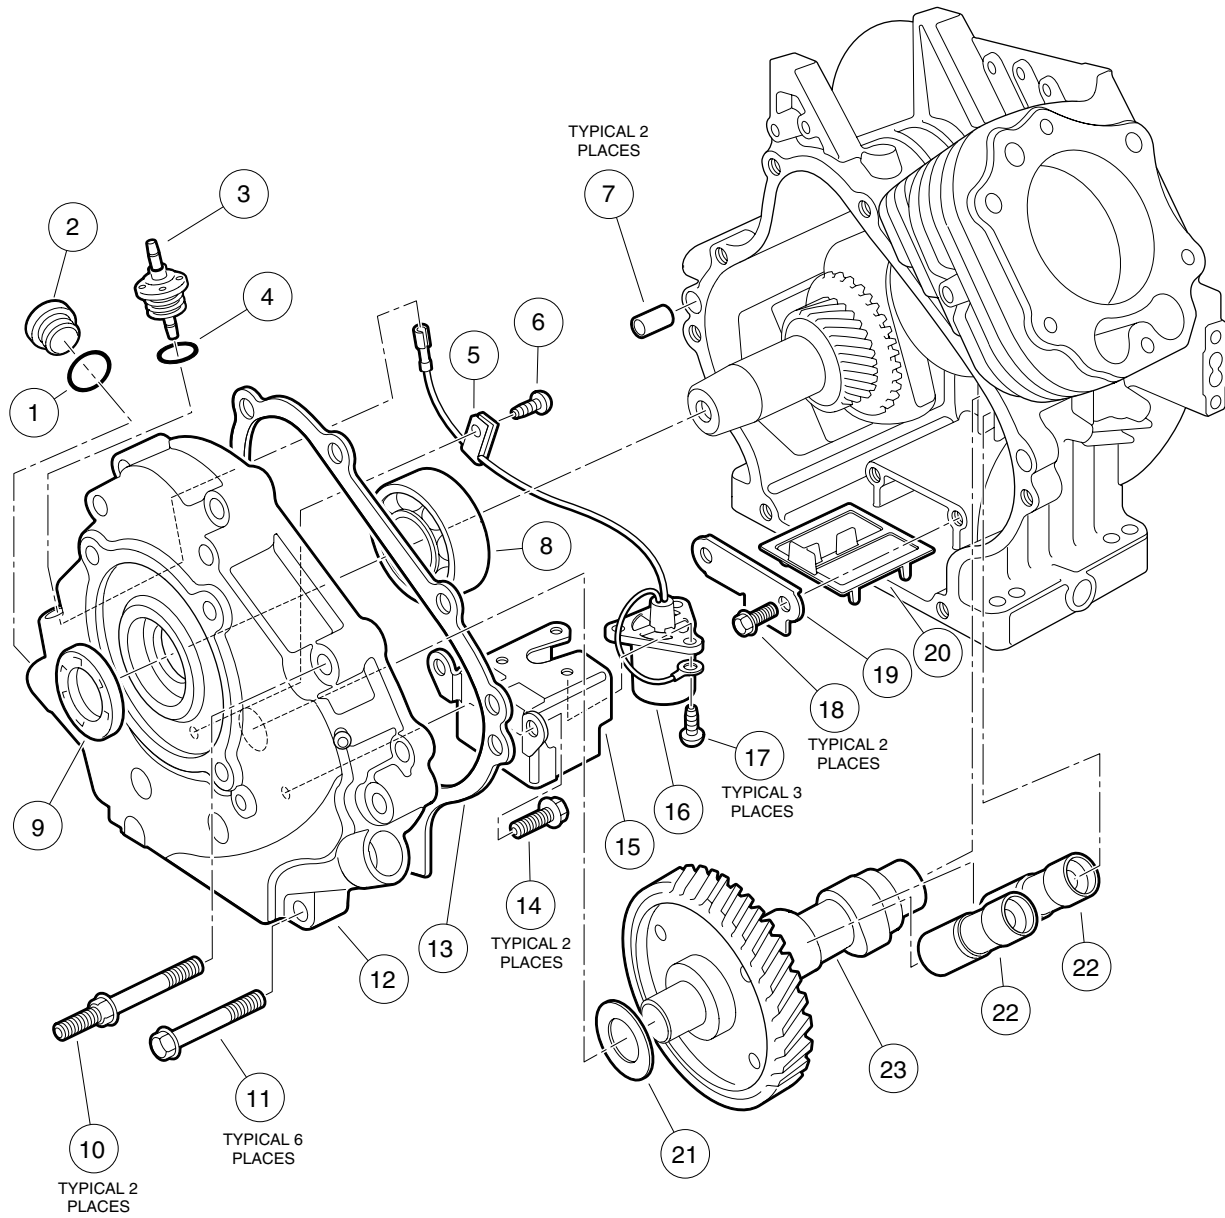


FE350 ENGINE – CRANKCASE, CAMSHAFT, AND OIL SENSOR

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1016538</u>	O-Ring	1
2	<u>1017508</u>	Plug	1
3	<u>1016535</u>	Connector, Oil Sending Unit	1
4	<u>1016538</u>	O-Ring	1
5	<u>1016506</u>	Clamp	1
6	<u>1016544</u>	Screw, Cross Pan-Head Self-tapping, M5 x 0.8 x 12 mm	1
7	<u>1016564</u>	Pin	2
8	<u>1017487</u>	Bearing, Crankshaft	1
9	<u>1017504</u>	Seal, Crankshaft	1
10	<u>1016584</u>	Bolt, 2-Ended Flanged Hex-Head, M8 x 1.25 x 69 mm	2
11	<u>1017514</u>	Bolt, Flanged Hex-Head, M8 x 1.25 x 45 mm	6
12	<u>1017472</u>	Cover, Crankcase	1
13	<u>1017443</u>	Gasket, Crankcase Cover	1
14	<u>1017513</u>	Bolt, Flanged, M6 x 1 x 12 mm	2
15	<u>1016510</u>	Bracket, Oil Level Switch	1
16	<u>1016494</u>	Sensor, Oil Level	1
17	<u>1016496</u>	Screw, Cross Pan-Head, M4 x 0.7 x 8 mm	3
18	<u>1016454</u>	Bolt, Flanged Hex-Head, M5 x 0.8 x 8 mm	2
19	<u>1016472</u>	Plate, Oil Filter Screen	1
20	<u>1016521</u>	Screen, Oil Filter	1
21	<u>101751801</u>	Shim, 0.3 mm Thick	A/R
21	<u>101751802</u>	Shim, 0.4 mm Thick	A/R
21	<u>101751803</u>	Shim, 0.5 mm Thick	A/R
22	<u>1017447</u>	Lifter, Hydraulic	2
23	<u>101947601</u>	Camshaft (without automatic compression release) (for engines with serial numbers lower than 094171)	1
23	<u>102431001</u>	Camshaft, FE350 (without automatic compression release) (for engines with serial numbers 094171 and greater)	1
24	<u>102304801</u>	Kit, Gasket, FE350 (contains one each of all internal gaskets for FE350 engine) (not shown)	1

7
G

FE350 ENGINE

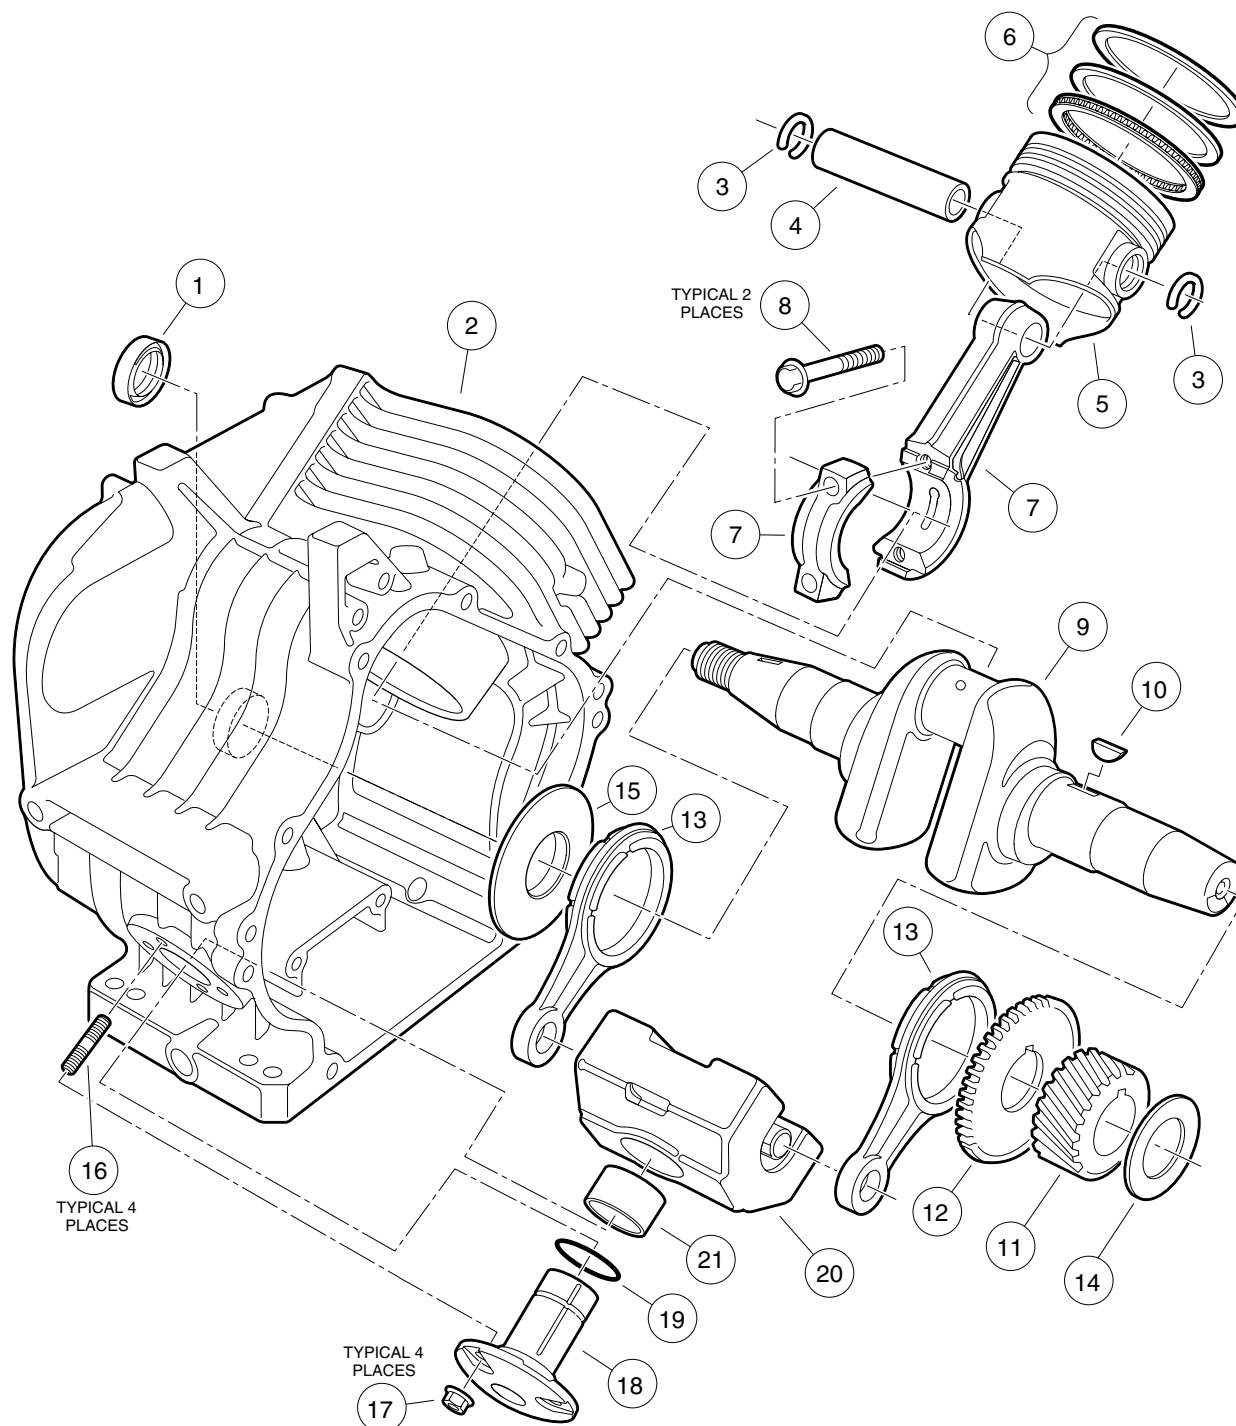

FE350 ENGINE – CRANKCASE AND CRANKSHAFT

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1017503</u>	Seal, Oil	1
2	<u>101916001</u>	Crankcase, FE350 (clockwise rotation)	1
3	<u>1017502</u>	Ring, Snap	2
4	<u>1017450</u>	Pin, Piston	1
5	<u>101744901</u>	Piston, Standard	1
5	<u>101744902</u>	Piston, .50 mm Oversized	1
6	<u>101745101</u>	Ring Set, Piston, Standard	1
6	<u>101745102</u>	Ring Set, Piston, .50 mm Oversized	1
7	<u>101745701</u>	Assembly, Connecting Rod, Standard (includes 2 each of item 8)	1
7	<u>101745702</u>	Assembly, Connecting Rod, .50 mm Undersized (includes 2 each of item 8)	1
8	<u>1017512</u>	Bolt, Hex-Head, M7 x 1 x 36 mm	2
9	<u>101922302</u>	Crankshaft, FE350 (left-hand threads) (for engines with serial numbers lower than 094171) (includes items 10 - 12 and one each of item 13)	1
9	<u>102430901</u>	Crankshaft, FE350 (left-hand threads) (for engines with serial numbers 094171 and greater (includes items 10 - 12 and one each of item 13)	1
10	<u>1016562</u>	Key	1
11	N/A	Gear, Helical	1
12	N/A	Gear, Spur	1
13	<u>1017471</u>	Rod, Connecting	2
14	<u>101773301</u>	Shim, Crankshaft, 1.18 mm Thick	A/R
14	<u>101773302</u>	Shim, Crankshaft, 1.25 mm Thick	A/R
14	<u>101773303</u>	Shim, Crankshaft, 1.32 mm Thick	A/R
14	<u>101773304</u>	Shim, Crankshaft, 1.39 mm Thick	A/R
14	<u>101773305</u>	Shim, Crankshaft, 1.46 mm Thick	A/R
14	<u>101773306</u>	Shim, Crankshaft, 1.53 mm Thick	A/R
14	<u>101773307</u>	Shim, Crankshaft, 1.60 mm Thick	A/R
14	<u>101773308</u>	Shim, Crankshaft, 1.67 mm Thick	A/R
14	<u>101773309</u>	Shim, Crankshaft, 1.74 mm Thick	A/R
14	<u>101773310</u>	Shim, Crankshaft, 1.11 mm Thick	A/R
14	<u>101773311</u>	Shim, Crankshaft, 1.81 mm Thick	A/R
15	<u>1017501</u>	Spacer	1
16	<u>1016541</u>	Bolt, Stud, M6 x 1 x 22 mm	4
17	<u>1016547</u>	Nut, Flanged, M6 x 1	4
18	<u>1016470</u>	Shaft, Counterbalance Guide	1
19	<u>1016571</u>	O-Ring	1
20	<u>1017453</u>	Weight, Counterbalance (includes item 21)	1
21	<u>1017510</u>	Bearing	1

7
G



ENGINE MOUNTING

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1012164	Snubber	1
2	1013924	Nut, Hex Lock, 5/16-24, UNF	10
3	101834601	Bracket, Snubber	1
4	101827101	Plate, Mounting	1
5	101833001	Nut, Flange, M8 x 1.25	6
6	101884801	Screw, Hex Washer, 5/16-24 x 7/8	10
7	101833301	Screw, Hex-Head Cap, M10 x 1.25 x 30 mm	4
8	101833101	Stud, M8 x 1.25 x 50 mm	2
9	1011697	Washer, Flat, 5/16	2
10	101832901	Nut, Flange, M10 x 1.25	4
11	1012571	Washer, Heavy Flat, 5/16	4
12	101855901	Screw, Hex-Head Cap, M8 x 1.25 x 43 mm	4
13	101832701	Stiffener, Flywheel Side	1
14	101832601	Stiffener, PTO Side	1

7

G


7

G

FUEL, INTAKE, AND GOVERNOR SYSTEMS

8


G

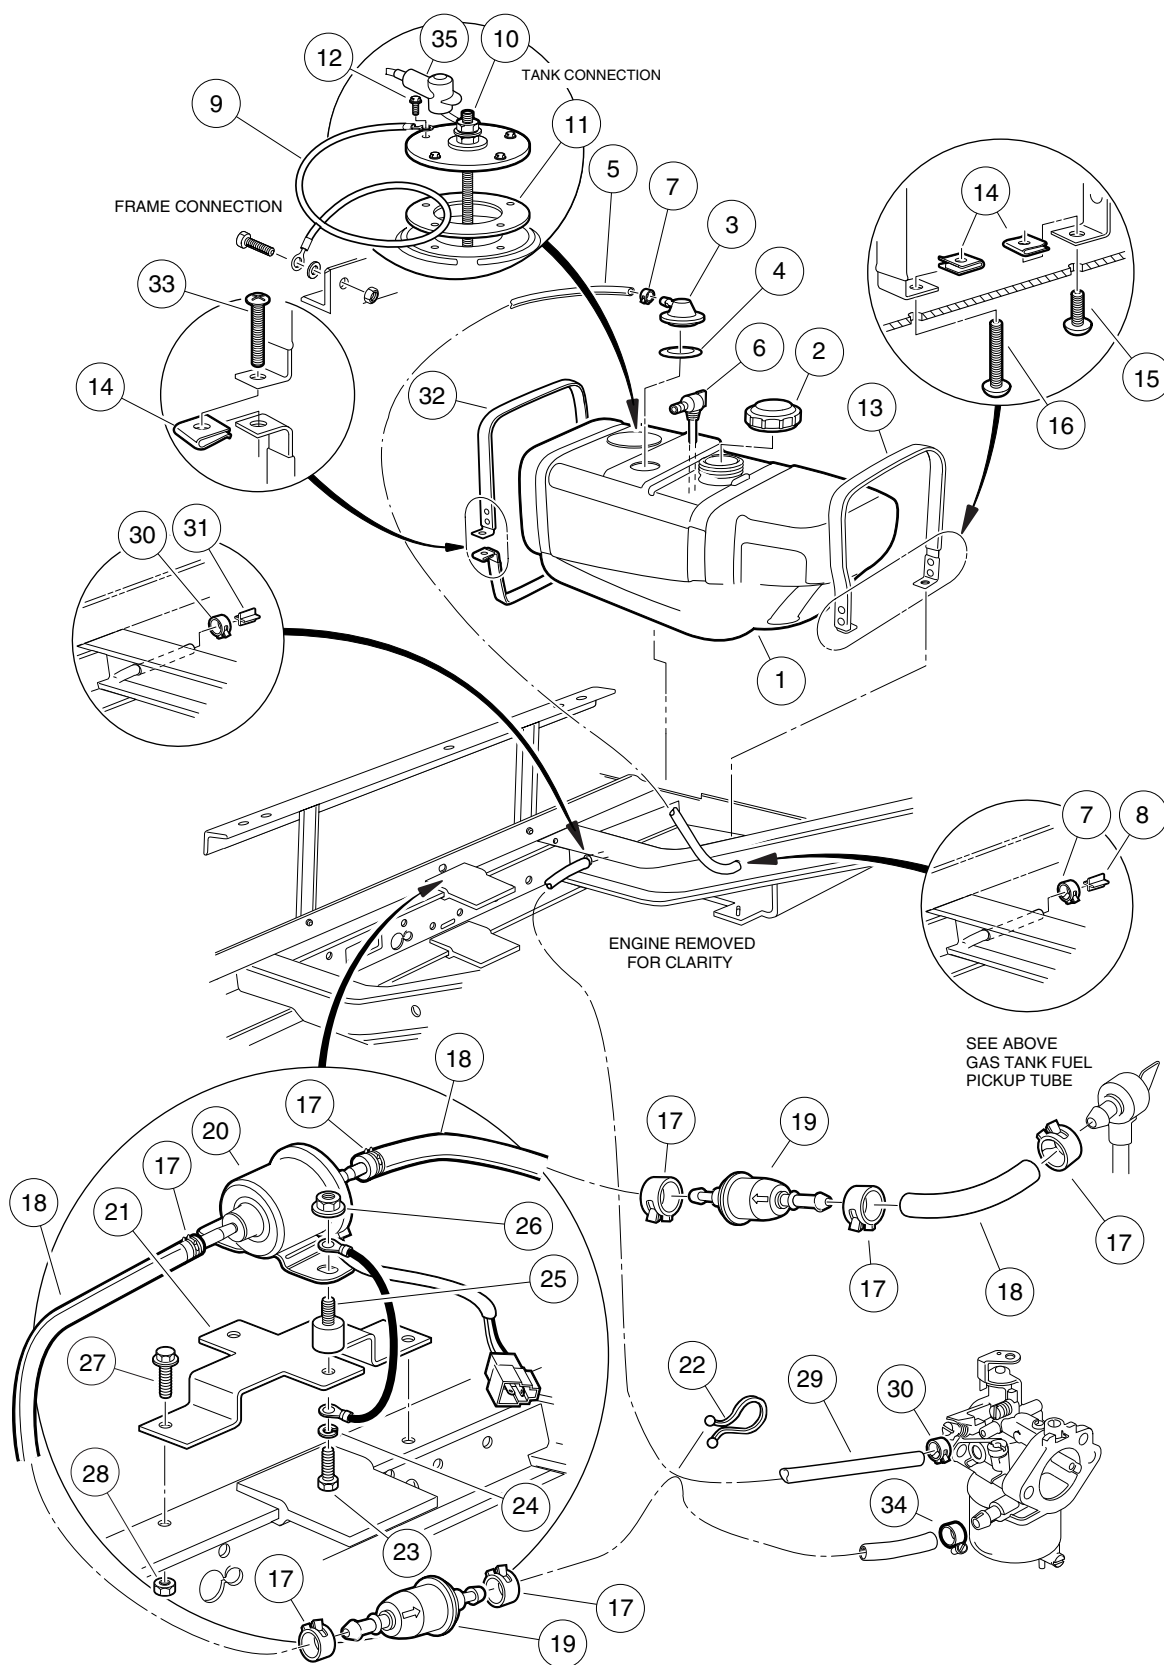

FUEL SYSTEM WITH ELECTRIC FUEL PUMP

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1016003</u>	Kit, Fuel Tank (includes items 2 - 8)	1
1	<u>1016004</u>	Kit, Fuel Tank with Sending Unit (optional equipment) (includes items 2 - 12)	1
2	<u>1015188</u>	Cap, Fuel Tank, Nonvented	1
3	<u>1015143</u>	Assembly, Fuel Tank Vent	1
4	<u>1015139</u>	Grommet, Insulation	1
5	<u>1015137</u>	Line, Bulk Vent (available by the foot)	A/R
6	<u>101896901</u>	Valve, Fuel Pickup Tube with Shut-Off	1
7	<u>1013746</u>	Clamp, Hose (gray)	2
8	<u>101824401</u>	Barb, Vent	1
9	N/A	Wire Assembly, #16 Black	1
10	<u>1013462</u>	Unit, Sending	1
11	<u>1013583</u>	Gasket	1
12	<u>1013461</u>	Screw, Hex-Head Hi-Lo, #10-16 x 1/2	5
13	<u>1014928</u>	Assembly, Rear Fuel Strap	1
14	<u>1014116</u>	Nut, U-Type Speed, 1/4-20	3
15	<u>8248</u>	Screw, Phillips Truss-Head, 1/4-20 x 3/4	1
16	<u>1011988</u>	Screw, Phillips Truss-Head, 1/4-20 x 2	2
17	<u>1012649</u>	Clamp, Hose (red)	7
18	<u>1013692</u>	Line, Bulk Fuel (black) (available by the foot*)	A/R
19	<u>102003201</u>	Filter, Fuel	2
20	<u>102225101</u>	Pump, Electric Fuel	1
21	<u>102227101</u>	Bracket, Fuel Pump	1
22	<u>101987701</u>	Clamp, Plastic	1
23	<u>1012124</u>	Bolt, Hex-Head, 1/4-20 x 1/2	2
24	<u>1011965</u>	Washer, Spring Lock, 1/4	2
25	<u>102227501</u>	Mount, Sandwich	2
26	<u>101835601</u>	Nut, Flanged Lock, 1/4-20	2
27	<u>1017082</u>	Screw, Hex Washer-Head, #10-32 x 3/4	2
28	<u>1013061</u>	Nut, Nylon Lock, #10-32	2
29	<u>1015137</u>	Line, Bulk Vent (available by the foot)	A/R
30	<u>1013746</u>	Clamp, Hose (gray)	2
31	<u>101824401</u>	Barb, Vent	1
32	<u>101955301</u>	Assembly, Front Fuel Strap	1
33	<u>1011988</u>	Screw, Phillips Truss-Head, 1/4-20 x 2	1
34	<u>1013687</u>	Clamp, Hose, 3/8	1
35	<u>102048501</u>	Boot, Rubber	1
		*The total fuel line length for the Limo vehicle equipped with an electric fuel pump is 30 inches (76.2 cm).	


8
G

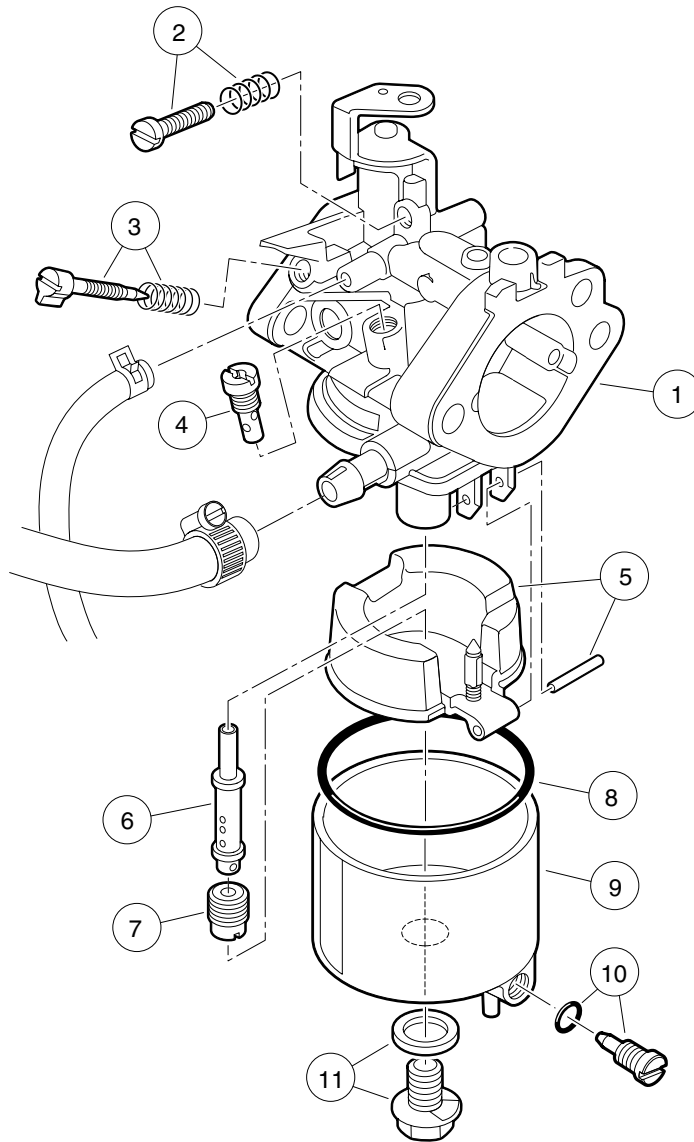

CARBURETOR ASSEMBLY

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101905901</u>	Assembly, Carburetor (includes items 2 - 11)	1
2	<u>1016501</u>	Assembly, Idle Screw	1
3	N/A	Assembly, Pilot Air Screw	1
4	<u>101973101</u>	Jet, Pilot, #40	1
5	1016486	Assembly, Float	1
6	<u>101973301</u>	Nozzle, Main	1
		Standard Jetting:	
7	<u>101642585</u>	Jet, Main, 0-3,000 Feet	1
7	<u>101642582</u>	Jet, Main, 3,000-5,000 Feet	A/R
7	<u>101642580</u>	Jet, Main, 5,000-8,000 Feet	A/R
7	<u>101642578</u>	Jet, Main, 8,000-10,000 Feet	A/R
7	<u>101642575</u>	Jet, Main, 10,000 Feet and Above	A/R
8	<u>1016437</u>	Gasket, Float Chamber	1
9	<u>1017461</u>	Assembly, Float Chamber (includes item 10)	1
10	<u>1016499</u>	Assembly, Screw	1
11	1016585	Assembly, Bolt	1

8
G

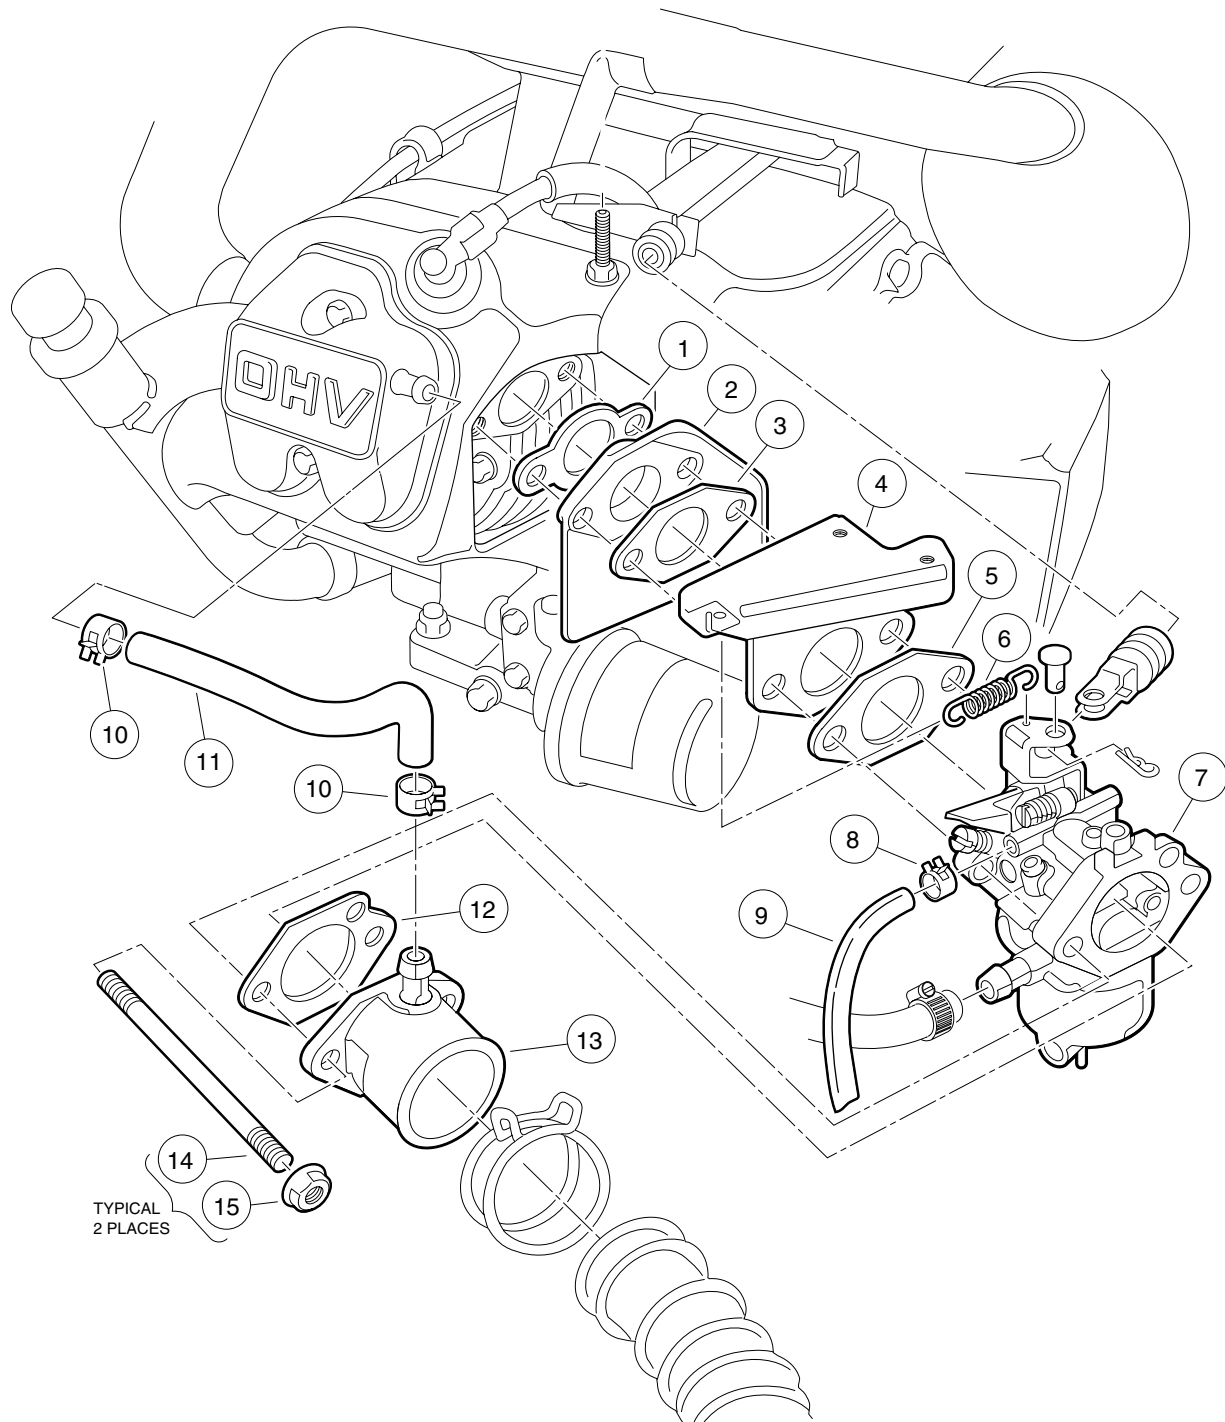


CARBURETOR INSTALLATION

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1016440</u>	Gasket, Insulator	1
2	<u>101648102</u>	Insulator, Carburetor	1
3	<u>101973401</u>	Gasket, Carburetor Insulator to Throttle Bracket	1
4	<u>1016444</u>	Bracket, Throttle	1
5	<u>1016441</u>	Gasket, Throttle Bracket to Carburetor	1
6	<u>1016582</u>	Spring, Throttle Return	1
7	<u>101905901</u>	Assembly, Carburetor	1
8	<u>1013746</u>	Clamp, Hose	1
9	<u>1015137</u>	Line, Bulk Vent (available by the foot)	A/R
10	<u>1017466</u>	Clamp, Hose	2
11	<u>1016572</u>	Tube, Crankcase Vent	1
12	<u>1016438</u>	Gasket, Carburetor to Intake Manifold	1
13	<u>1016480</u>	Pipe, Intake	1
14	<u>101649002</u>	Screw, 2-Ended Stud, M6 x 1 x 90 mm	2
15	<u>1016547</u>	Nut, Flanged, M6 x 1	2


8

G

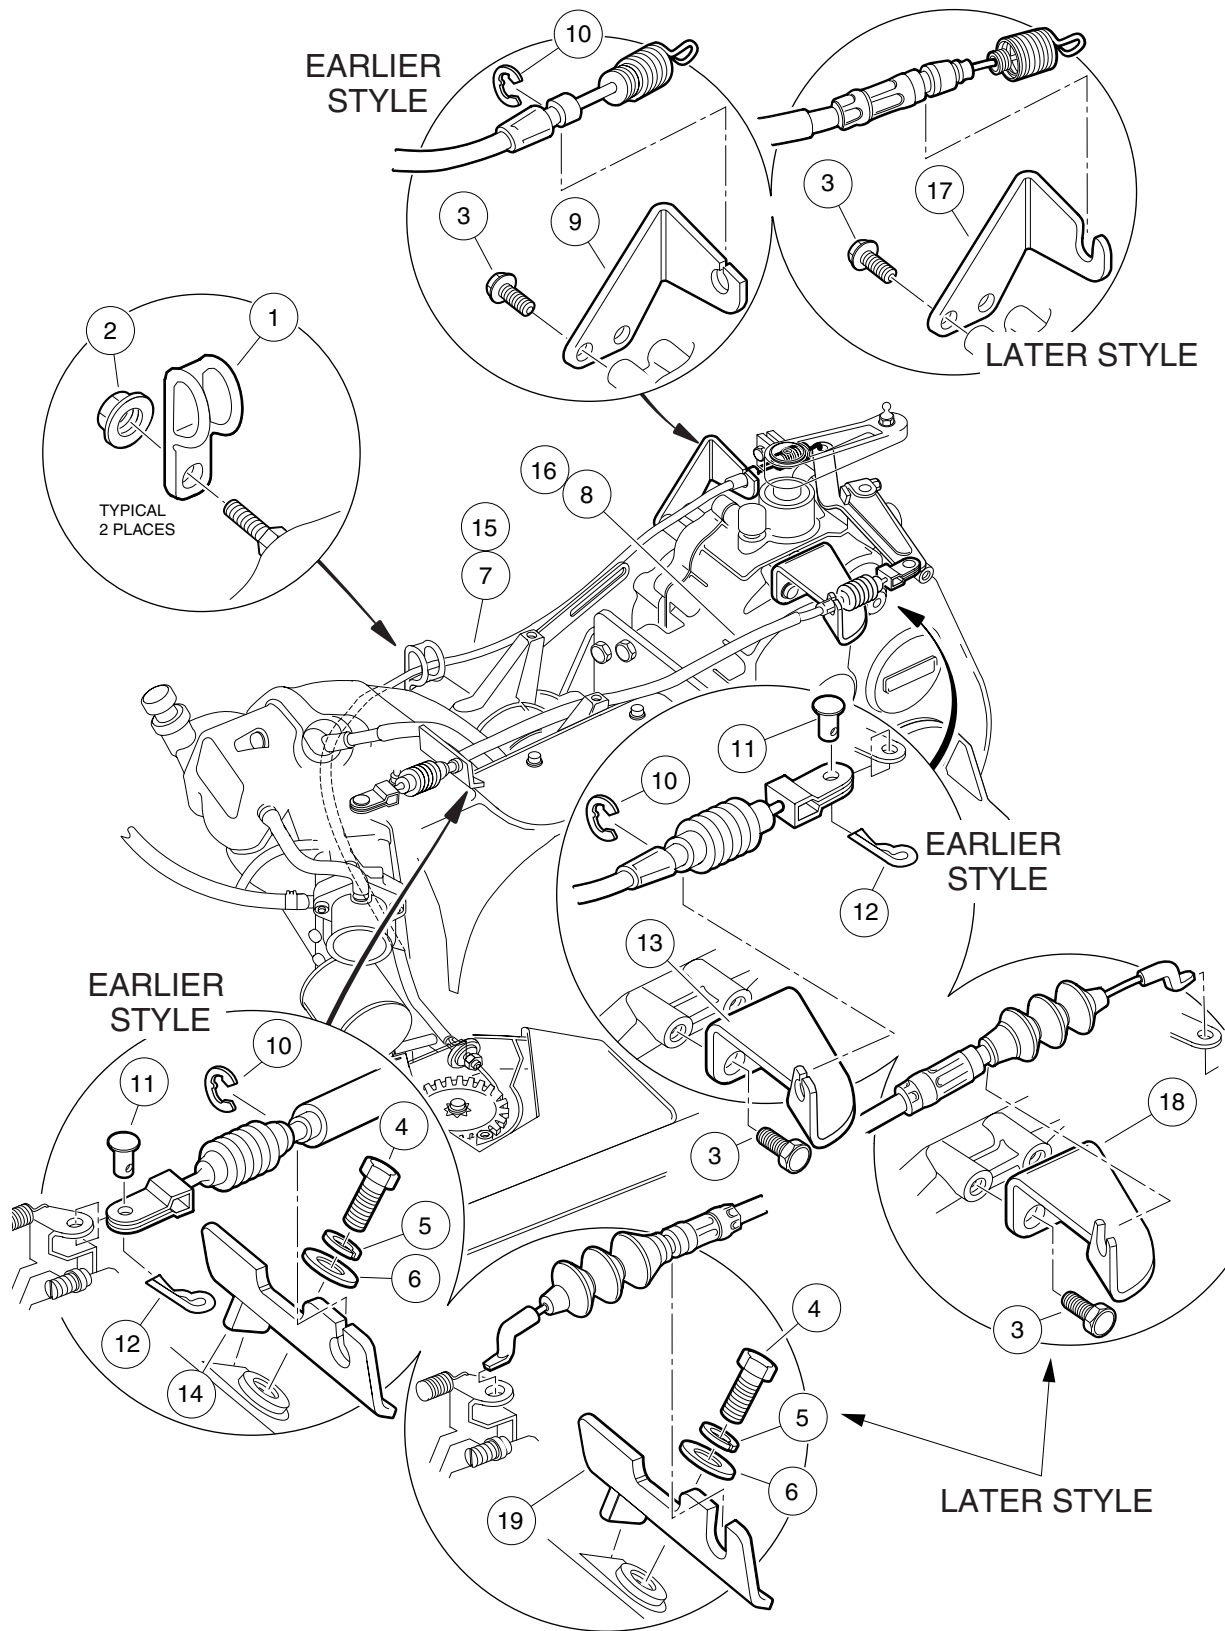

GOVERNOR AND ACCELERATOR CABLES

ITEM	PART NO.	DESCRIPTION	QTY	8	G
		1 2 3 4			
1	<u>1013700</u>	Clamp, Cable Retaining	2		
2	<u>1016546</u>	Nut, Flanged Hex, M8 x 1.25	2		
3	<u>1012285</u>	Screw, Hex Washer-Head, Thread-Rolling, 1/4-20 x 5/8	4		
4	101903501	Screw, Hex-Head Cap, M8 x 1.25 x 24 mm	1		
5	<u>7174</u>	Washer, Lock, 5/16	1		
6	<u>1011697</u>	Washer, Flat, 5/16	1		
		Earlier style cables (early 2003 models)*:			
7	<u>101832501</u>	Cable, Accelerator	1		
8	<u>101832402</u>	Cable, Governor	1		
9	101832301	Bracket, Accelerator Support	1		
10	<u>1016202</u>	E-Ring	3		
11	<u>1015408</u>	Pin, Governor Cable Clevis	2		
12	<u>1014413</u>	Pin, Hair Spring Cotter, 1/8 I.D. x 5/8	2		
13	101832201	Bracket, Support	1		
14	<u>1015845</u>	Bracket, Governor Cable Engine	1		
		Later style cables (beginning mid-model year 2003)*:			
15	<u>102336101</u>	Cable, Accelerator, Snap-in	1		
16	<u>102336001</u>	Cable, Governor, Snap-in	1		
17	<u>101832302</u>	Bracket, Accelerator Support	1		
18	<u>101832202</u>	Bracket, Support	1		
19	<u>101584502</u>	Bracket, Governor Cable Engine	1		
		* Brackets and cables must be of the same style.			

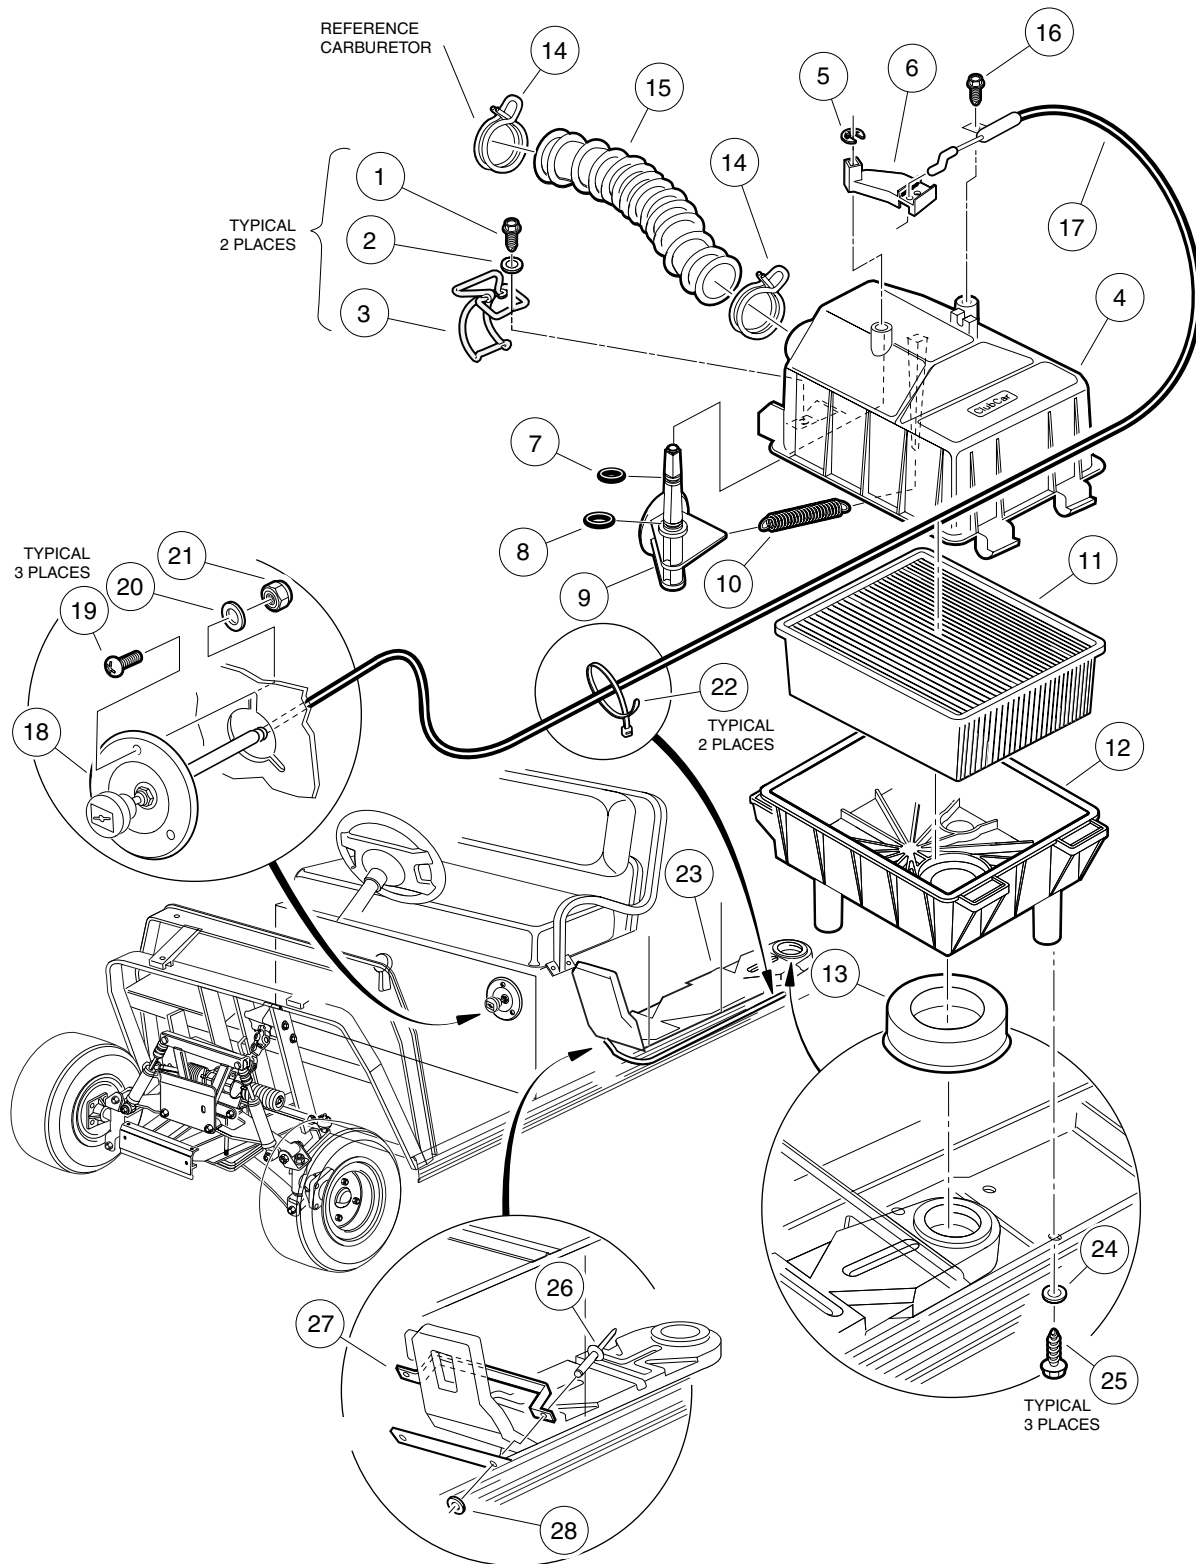

INTAKE DUCT, CHOKE, AND AIR BOX ASSEMBLY

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
	<u>101821501</u>	Assembly, Air Box (includes items 1 - 13)	1
1	<u>101804301</u>	Screw, Hi-Lo Hex-Head, #8-1/2	2
2	<u>101881701</u>	Washer, Stainless Steel, #8	2
3	<u>101925701</u>	Latch, Wire	2
4	<u>101972801</u>	Assembly, Air Box Top (includes items 5 - 10)	1
5	<u>101813001</u>	E-Clip	1
6	<u>101917601</u>	Lever, Choke	1
7	N/A	O-Ring, 5/16 (red)	1
8	N/A	O-Ring, 3/8 (green)	1
9	N/A	Valve, Choke	1
10	<u>101812301</u>	Spring, Return	1
11	<u>1015426</u>	Filter, Air	1
12	<u>101811901</u>	Bottom, Air Box	1
13	<u>101921501</u>	Seal, Intake	1
14	<u>101971301</u>	Clamp, Hose (air intake)	2
15	<u>101837101</u>	Hose, Intake	1
16	<u>101804301</u>	Screw, Hex-Head Hi-Lo, #8 x 1/2	1
17	<u>101926802</u>	Cable, Choke with Bezel (includes item 18)	1
18	<u>101933701</u>	Bezel, Choke Cable	1
19	<u>1631</u>	Screw, Pan-Head, #10-24 x 3/4	3
20	<u>183</u>	Washer, Flat, #10, Type A	3
21	<u>1012438</u>	Nut, Nylon Lock, #10-24	3
22	8168	Tie, Wire	2
23	<u>101811301</u>	Duct, Air	1
24	<u>332</u>	Washer, Flat, 1/4	3
25	1015752	Screw, Hi-Lo, #12-16 x 5/8	3
26	1606	Rivet, Pop, 3/16	2
27	<u>101825701</u>	Bracket, Retaining	1
28	<u>183</u>	Washer, Flat, #10, Type A	2

8

G


8

G

EXHAUST SYSTEM

9

G

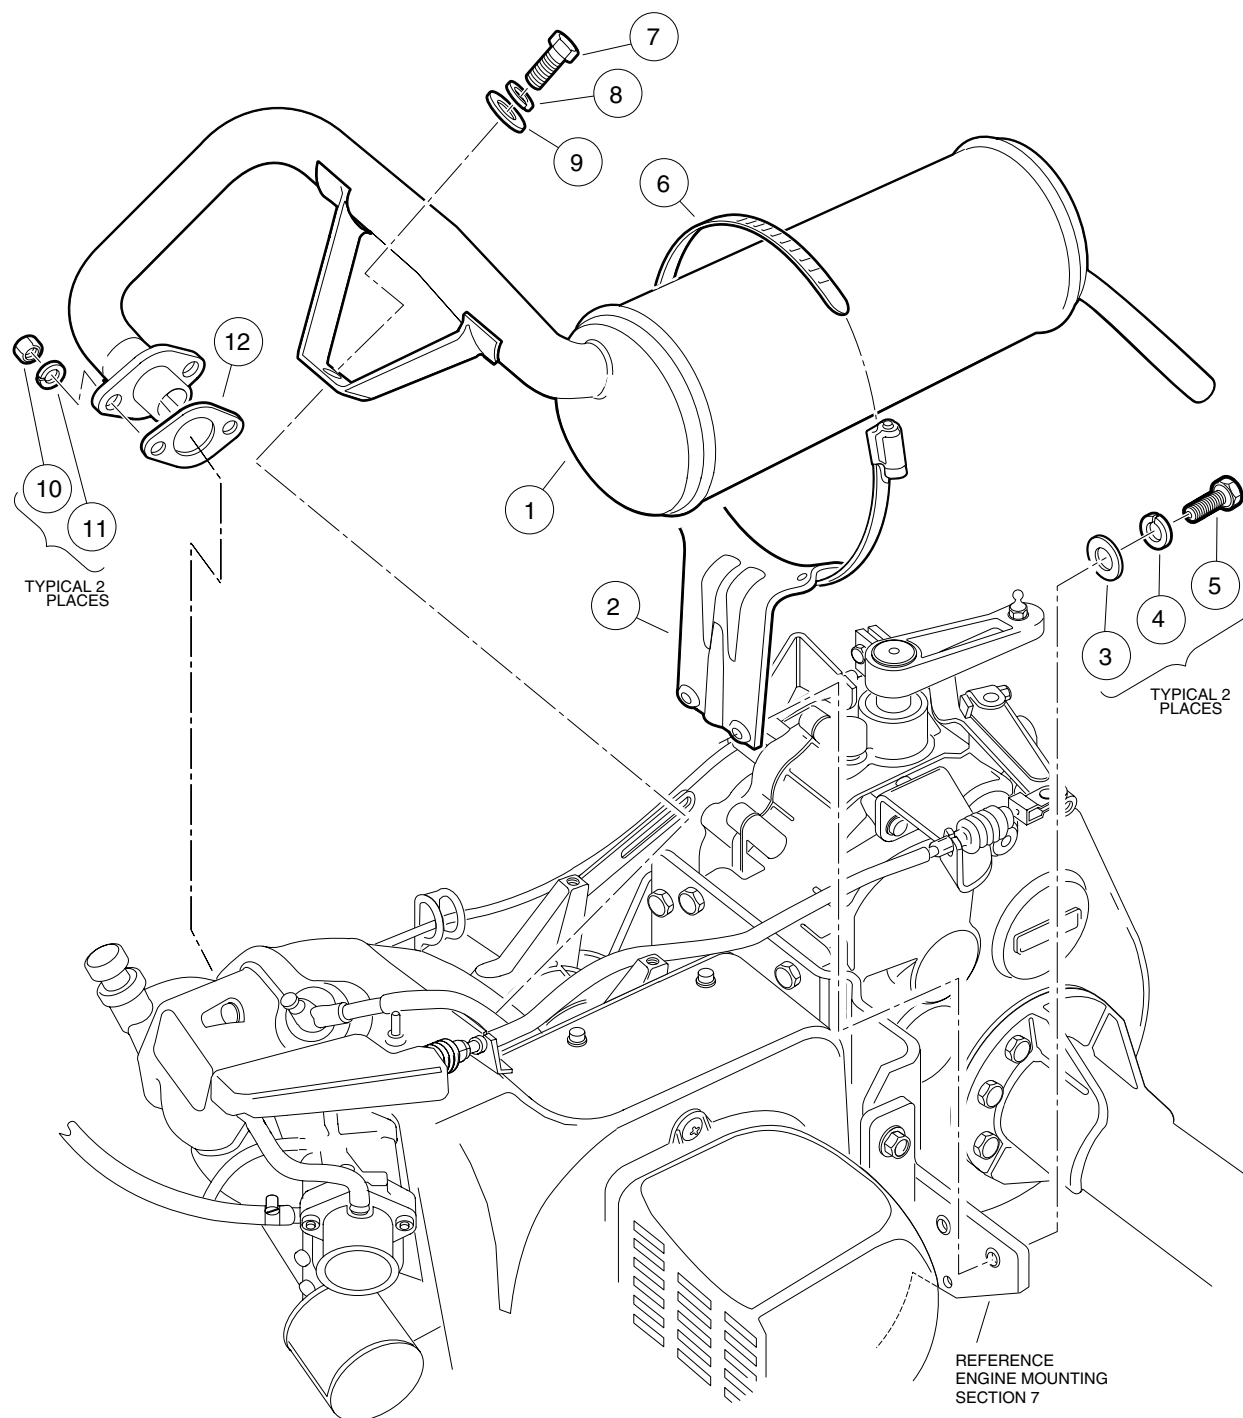

EXHAUST SYSTEM

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101859401</u>	System, Exhaust	1
2	<u>1015814</u>	Bracket, Muffler Mounting	1
3	<u>332</u>	Washer, Flat, 1/4	2
4	<u>451</u>	Washer, Lock, 1/4	2
5	<u>7847</u>	Screw, Hex-Head, 1/4-20 x 3/4	2
6	<u>1017689</u>	Clamp, Muffler	1
7	<u>1012830</u>	Screw, Hex-Head Cap, M8 x 1.25 x 22 mm	1
8	<u>7174</u>	Washer, Lock, 5/16	1
9	<u>1011697</u>	Washer, Flat, 5/16	1
10	<u>1012528</u>	Nut, Hex, M8 x 1.25	2
11	<u>1013734</u>	Washer, Lock, 8 mm	2
12	<u>1016904</u>	Gasket, Exhaust	1

9

G


9

G

TORQUE CONVERTER

10


G

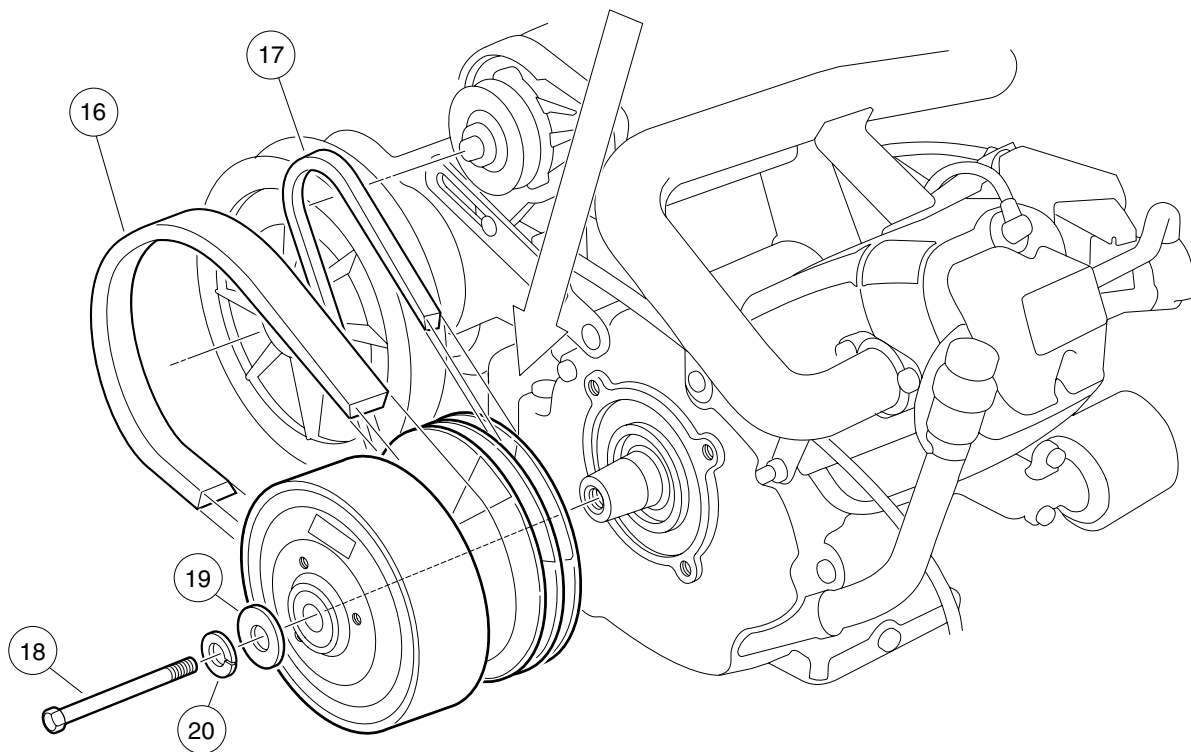

DRIVE CLUTCH

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
	<u>101833902</u>	Assembly, Drive Clutch (includes items 1 - 15)	1
1	<u>1016801</u>	Kit, Drive Clutch Weight	1
2	<u>101929801</u>	Assembly, Fixed Face	1
3	<u>1014049</u>	Bearing, Idler	1
4	<u>1014050</u>	Spring, Retainer	1
5	<u>1014051</u>	Spring, Drive Clutch – Black	1
6	<u>1016289</u>	Spacer, Fixed Face Shaft	1
7	<u>1014057</u>	Ring, Retaining	1
8	<u>1014059</u>	Assembly, Drive Hub	1
9	N/A	Plug, Drive Clutch	3
10	<u>1014453</u>	Kit, Drive Clutch Button (includes three each of the spring, screw, washer, and button)	1
11	<u>1014058</u>	Washer, Thrust	1
12	<u>1014056</u>	Ring, Spiral Back-Up	2
13	<u>1014052</u>	Assembly, Moveable Face (includes items 14 and 15)	1
14	N/A	Bushing	1
15	<u>1014055</u>	Retainer	1
16	<u>1017188</u>	Belt, Drive	1
17	<u>101916701</u>	Belt, Starter/Generator	1
18	<u>101916501</u>	Screw, Hex-Head Cap (left-hand threads), 3/8-24 x 5-1/2	1
19	<u>808</u>	Washer, Plain, Type B, 3/8	1
20	<u>357</u>	Washer, Lock, 3/8	1

10
G

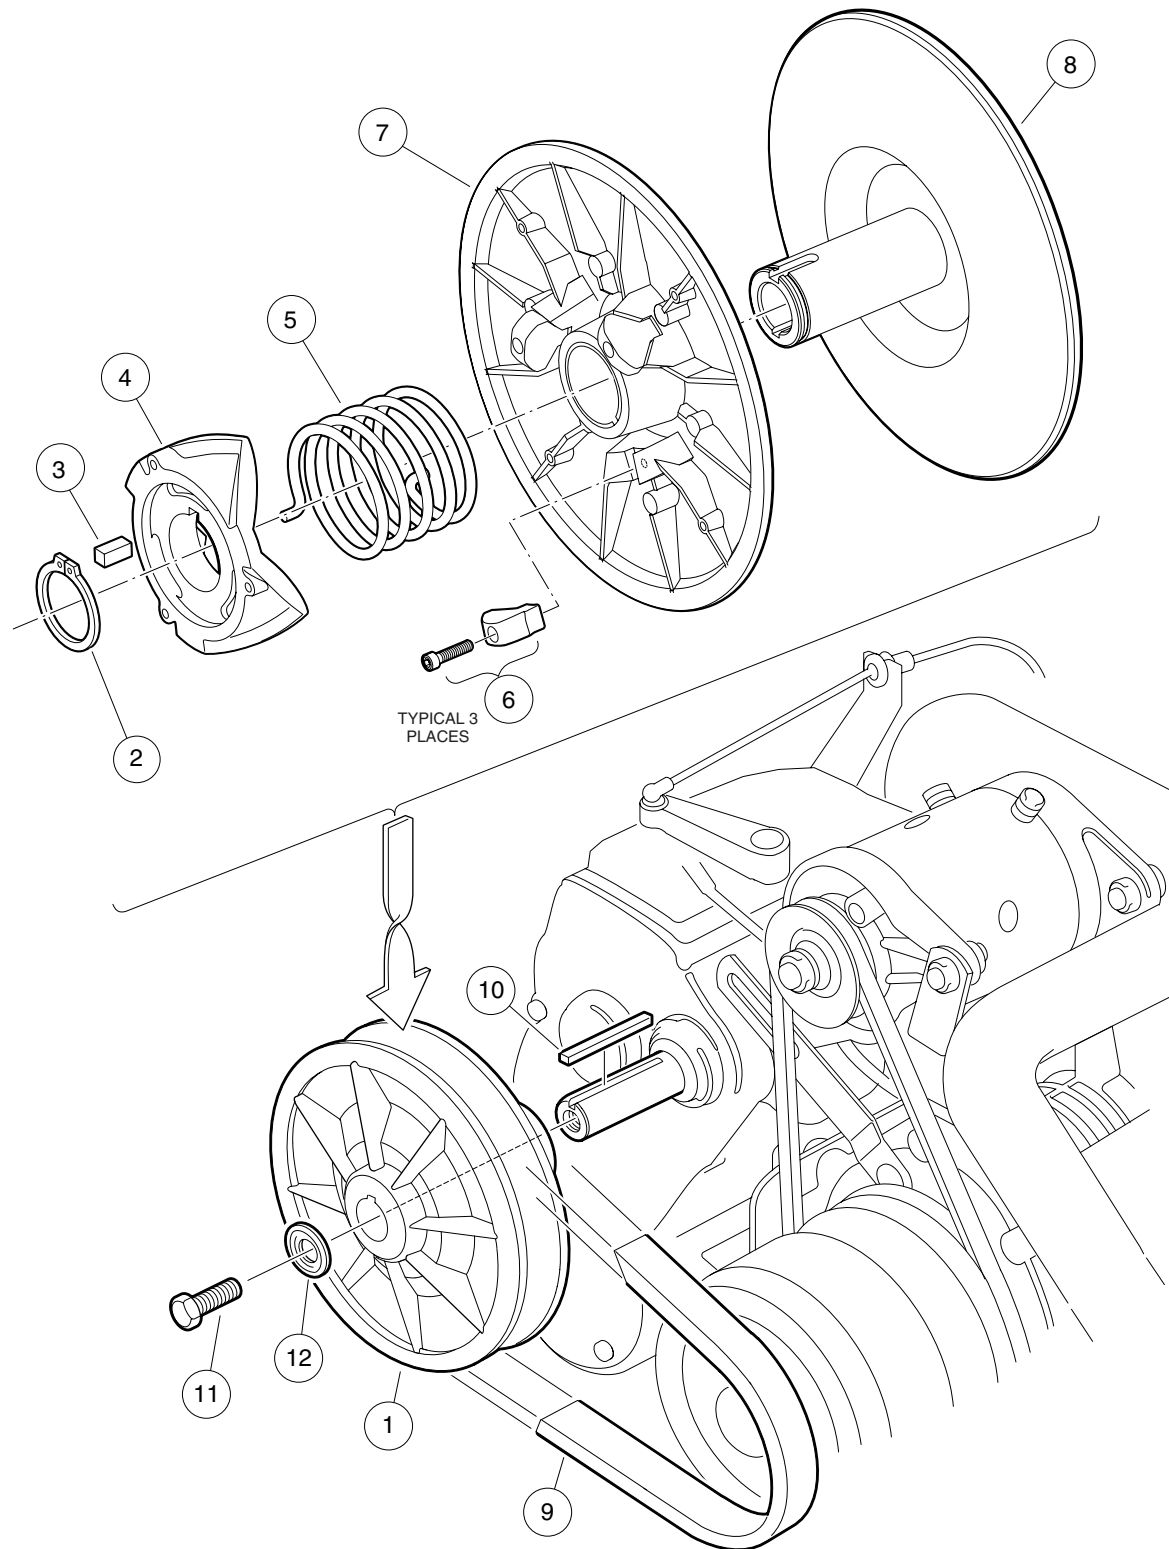

DRIVEN CLUTCH

ITEM	PART NO.	DESCRIPTION	QTY	10
		1 2 3 4		G
1	<u>101834001</u>	Assembly, Driven Clutch (includes items 2 - 8)	1	
2	<u>1014080</u>	Ring, Retaining	1	
3	<u>1014078</u>	Key	1	
4	<u>1017686</u>	Cam	1	
5	<u>101836201</u>	Spring – Green	1	
6	<u>1014454</u>	Kit, Driven Clutch Button (includes 3 buttons and 3 screws)	1	
7	<u>1014072</u>	Assembly, Moveable Face with Bushing	1	
8	<u>1014070</u>	Assembly, Fixed Face	1	
9	<u>1017188</u>	Belt, Drive	1	
	<u>AM10419</u>	Kit, Driven Clutch Hardware Repair (includes items 10 - 12)	1	
10	<u>101833401</u>	Key, Square Transmission	1	
11	<u>102242101</u>	Screw, Hex-Head Cap, Thread-Locking, 5/16-18 x 3/4	1	
12	<u>1017327</u>	Washer, Driven Clutch	1	


10

G

UNITIZED TRANSAXLE

11


G

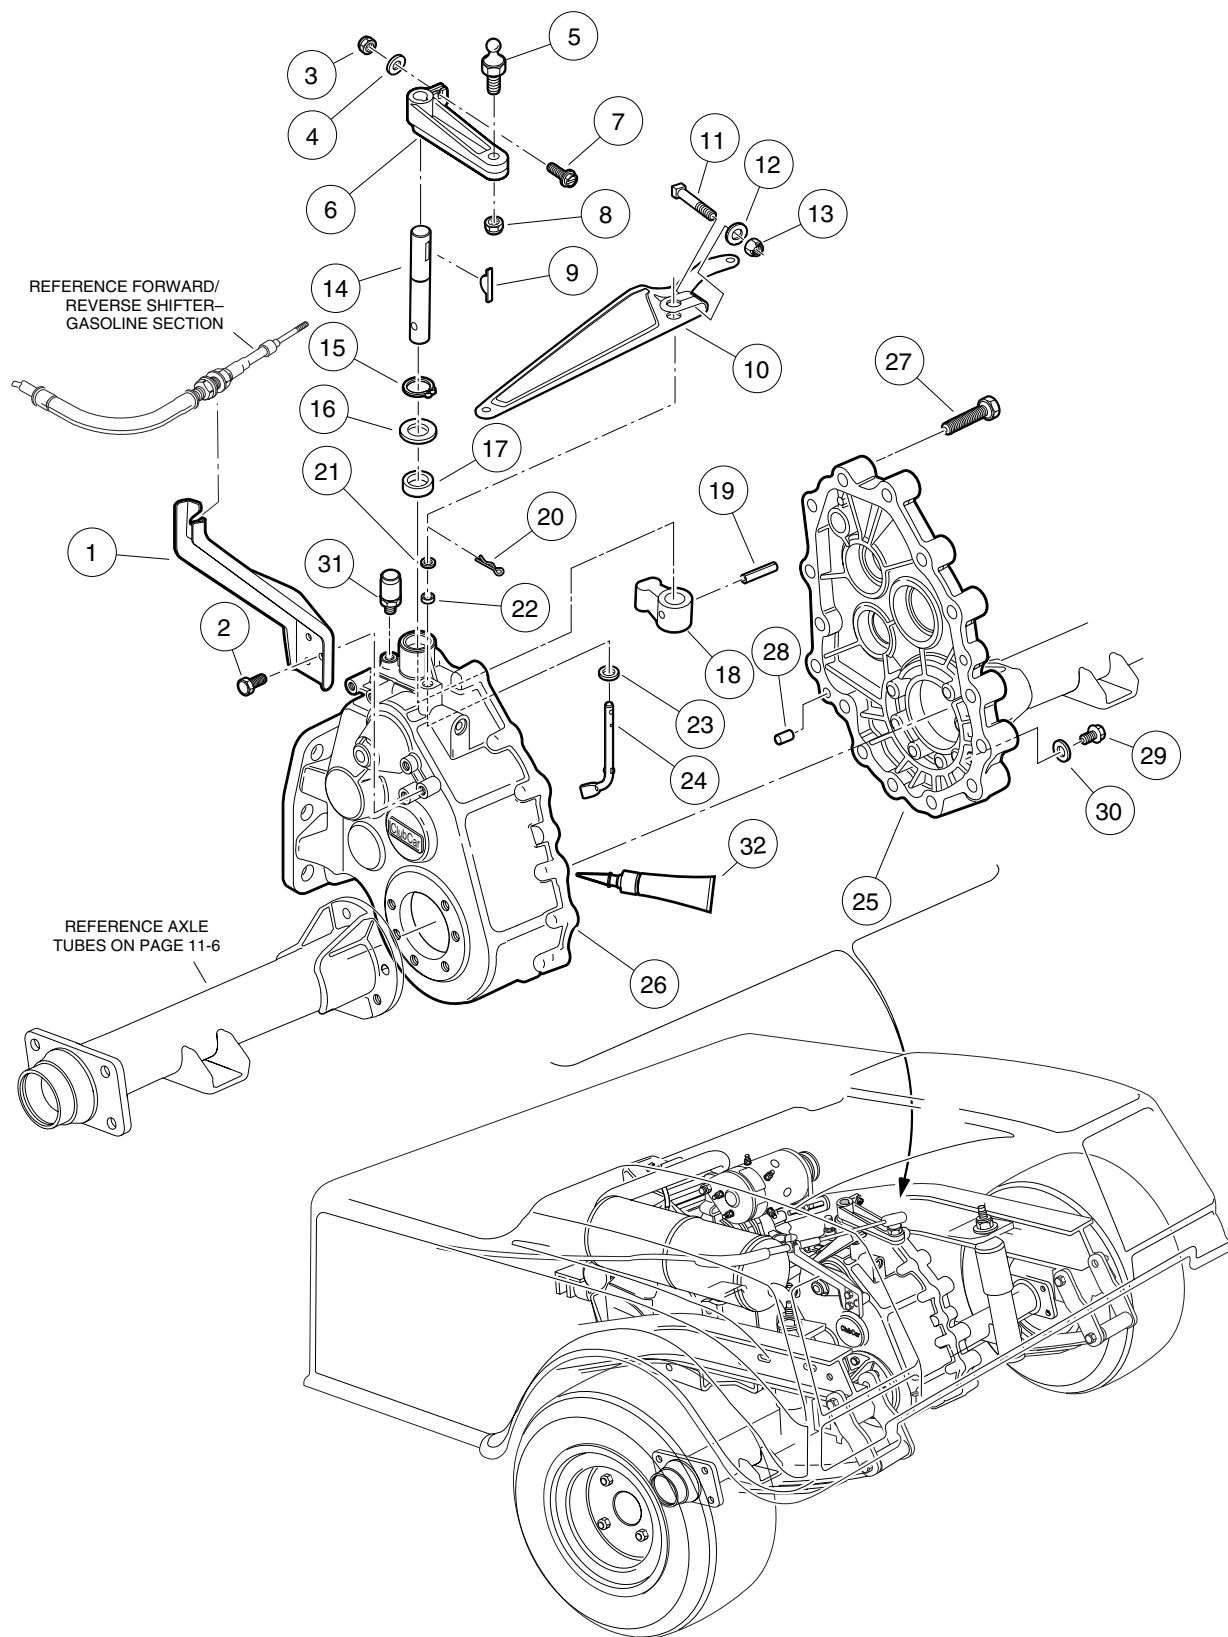

UNITIZED TRANSAXLE – GEAR CASES AND BRACKETS

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	101922601	Bracket, Transmission Cable Support	1
2	<u>1012285</u>	Screw, Hex Washer-Head, Thread-Rolling, 1/4-20 x 5/8	3
3	<u>1013061</u>	Nut, Nylon Lock, #10-32	1
4	<u>183</u>	Washer, Flat, #10, Type A	1
5	<u>1010954</u>	Stud, Ball, 1/4-28 x 9/16	1
6	<u>1016341</u>	Lever, Transmission Shifter	1
7	<u>1017082</u>	Screw, Hex Washer-Head, #10-32 x 3/4	1
8	<u>8717</u>	Nut, Nylon Lock, 1/4-28	1
9	<u>1017231</u>	Key, Woodruff	1
10	<u>101834801</u>	Arm, Governor Lever	1
11	<u>101886101</u>	Screw, Square-Head, 1/4-20 x 1	1
12	<u>1014007</u>	Washer, Flat, Type B, 1/4	1
13	<u>8233</u>	Nut, Nylon Lock, 1/4-20	1
	<u>101833601</u>	Transaxle, Unitized (includes items 14 - 88)	1
14	<u>101890201</u>	Shaft, Shifter	1
15	<u>101927301</u>	Ring, Snap	1
16	<u>101892901</u>	Washer, Flat	1
17	<u>101927201</u>	Seal, Oil	1
18	<u>101890101</u>	Lever, Shifter	1
19	<u>1012752</u>	Pin, Roll	1
20	<u>101928601</u>	Pin, Hair Spring Cotter	1
21	<u>1016513</u>	Washer, Flat	1
22	<u>101927101</u>	Seal, Oil	1
23	<u>101893801</u>	Washer	1
24	<u>101891301</u>	Arm, Pivot	1
25	<u>101890601</u>	Gear Case (passenger side)	1
26	<u>101890501</u>	Gear Case (driver side)	1
27	<u>101926901</u>	Bolt, Flanged, M8 x 1.25 x 40 mm	15
28	<u>1012896</u>	Pin, Dowel	2
29	<u>1013759</u>	Plug, Drain (includes item 30)	2
30	<u>1016432</u>	Gasket	1
31	<u>1012711</u>	Breather	1
32	<u>101928701</u>	Gasket, Liquid, 8.8 oz. (250 grams)	A/R


11
G

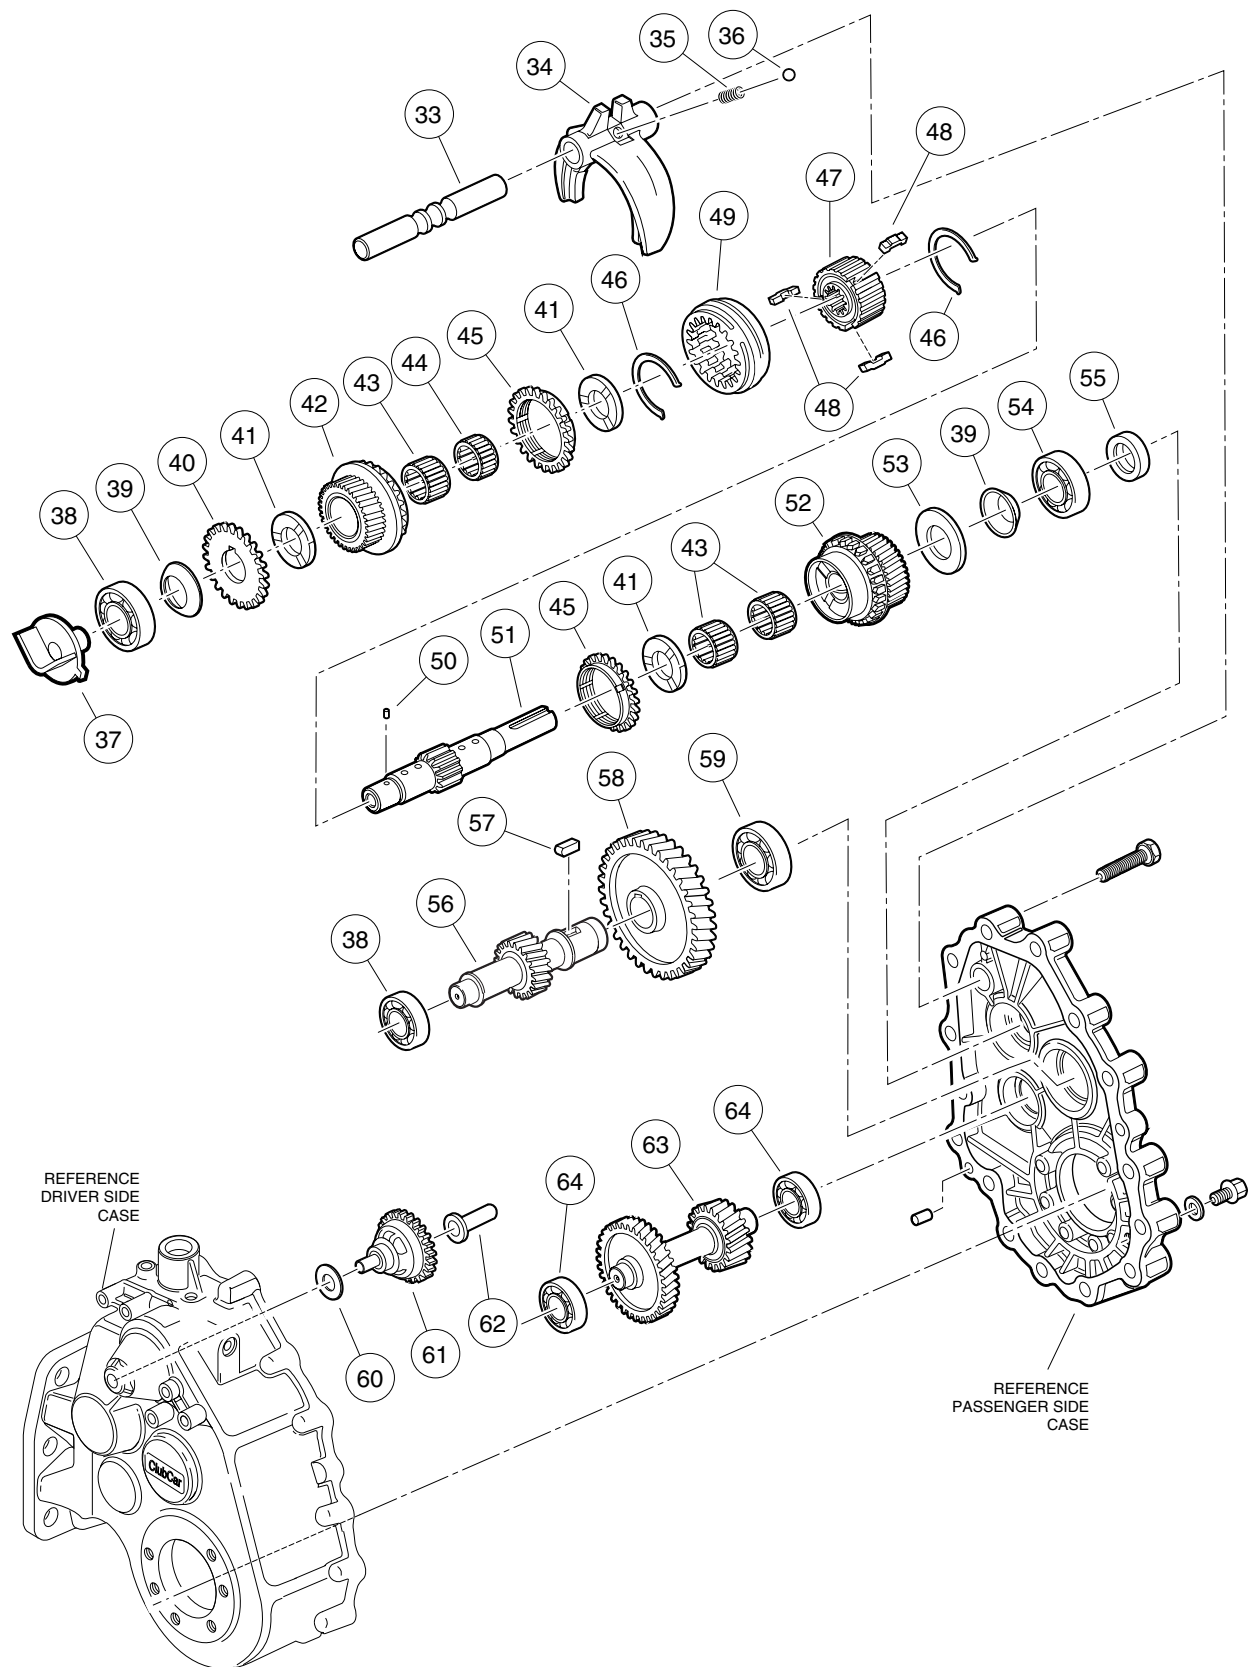

UNITIZED TRANSAXLE – F&R TRANSMISSION AND GEAR REDUCTION

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
33	101892001	Rod, Shift	1
34	<u>101890001</u>	Fork, Shift	1
35	<u>1012748</u>	Spring	1
36	<u>1012747</u>	Ball, Steel	1
37	<u>101889401</u>	Guide	1
38	<u>AM10080</u>	Bearing, Ball	2
39	<u>1016338</u>	Washer, Spring	2
40	<u>101892401</u>	Gear, Spur	1
41	<u>101892201</u>	Plate, Thrust	3
42	<u>101980901</u>	Gear Assembly, Input, 28 Tooth (16°)	1
43	<u>101927601</u>	Bearing, Needle	3
44	<u>101927501</u>	Bearing, Needle	1
45	<u>101981001</u>	Ring, Synchronizer (16°)	2
46	<u>1012741</u>	Spring, Synchronizer	2
47	<u>101928001</u>	Hub, Synchronizer Clutch	1
48	<u>1012740</u>	Insert, Synchronizer	3
49	<u>101927901</u>	Sleeve, Synchronizer	1
50	<u>101927701</u>	Pin, Dowel	1
51	<u>101889901</u>	Shaft, Input	1
52	<u>101980801</u>	Gear Assembly, Input, 25 Tooth (16°)	1
53	<u>1016337</u>	Washer, Thrust	1
54	<u>AM10081</u>	Bearing, Ball	1
55	<u>1012714</u>	Seal, Oil, Input Shaft	1
56	<u>101892601</u>	Gear, 17 Tooth	1
57	<u>101893201</u>	Key	1
58	<u>101892501</u>	Gear, 61 Tooth	1
59	<u>101928101</u>	Bearing, Ball	1
60	<u>101893901</u>	Washer	1
61	<u>101892301</u>	Governor Assembly	1
62	<u>101891601</u>	Sleeve	1
63	<u>101891901</u>	Gear, Cluster Idler	1
64	<u>7335</u>	Bearing, Ball	2

11
G

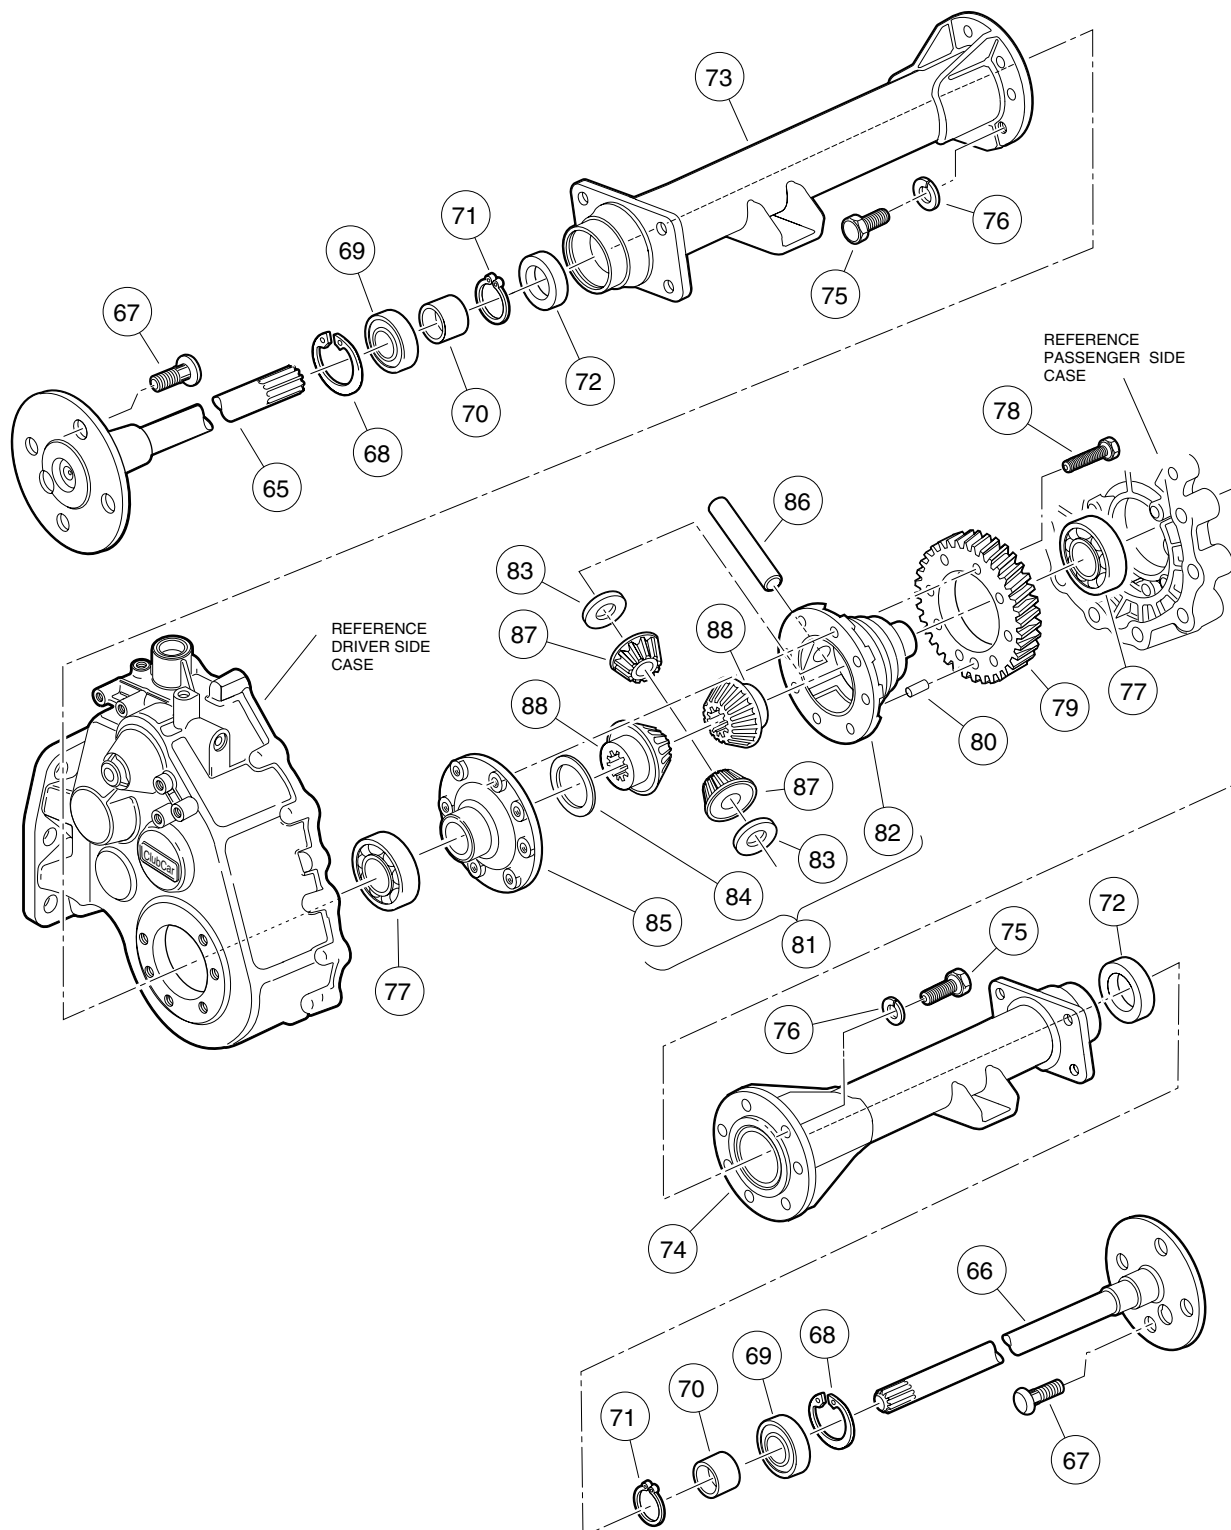

UNITIZED TRANSAXLE – DIFFERENTIAL AND AXLES


ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
65	<u>101891501</u>	Axle Assembly, Driver Side (includes items 67 - 71)	1
66	<u>101891401</u>	Axle Assembly, Passenger Side (includes items 67 - 71)	1
67	<u>1013787</u>	Stud, Lug	4
68	<u>1013792</u>	Ring, Retaining	1
69	<u>1011291</u>	Bearing, Outer Axle Tube	1
70	<u>1014207</u>	Bushing, 25 mm I. D.	1
71	<u>1016672</u>	Ring, Retaining	1
72	<u>1013794</u>	Seal, Oil	2
73	<u>101891001</u>	Assembly, Axle Tube, Driver Side	1
74	<u>101890901</u>	Assembly, Axle Tube, Passenger Side	1
75	<u>1013790</u>	Bolt, M10 x 1.5 x 30 mm	14
76	<u>1013791</u>	Washer, Lock, M10	14
77	<u>7330</u>	Bearing, Inner Axle Tube	2
78	<u>101928301</u>	Bolt, M8 x 1.25 x 37 mm	8
79	<u>101892701</u>	Gear, Output	1
80	<u>1014193</u>	Pin, Dowel	1
81	<u>101910501</u>	Kit, Differential Gear Case (includes items 82 - 85)	1
82	<u>1013768</u>	Case, Gear Carrier	1
83	<u>1013774</u>	Plate, Thrust (idler gear)	2
84	<u>1013773</u>	Plate, Thrust (differential gear)	1
85	<u>1013769</u>	Cover, Gear Case	1
86	<u>1013772</u>	Pin, Differential	1
87	<u>1013770</u>	Gear, Differential Idler	2
88	<u>1013771</u>	Gear, Differential	2

11
G

ELECTRICAL SYSTEM – ELECTRIC VEHICLE

12

E

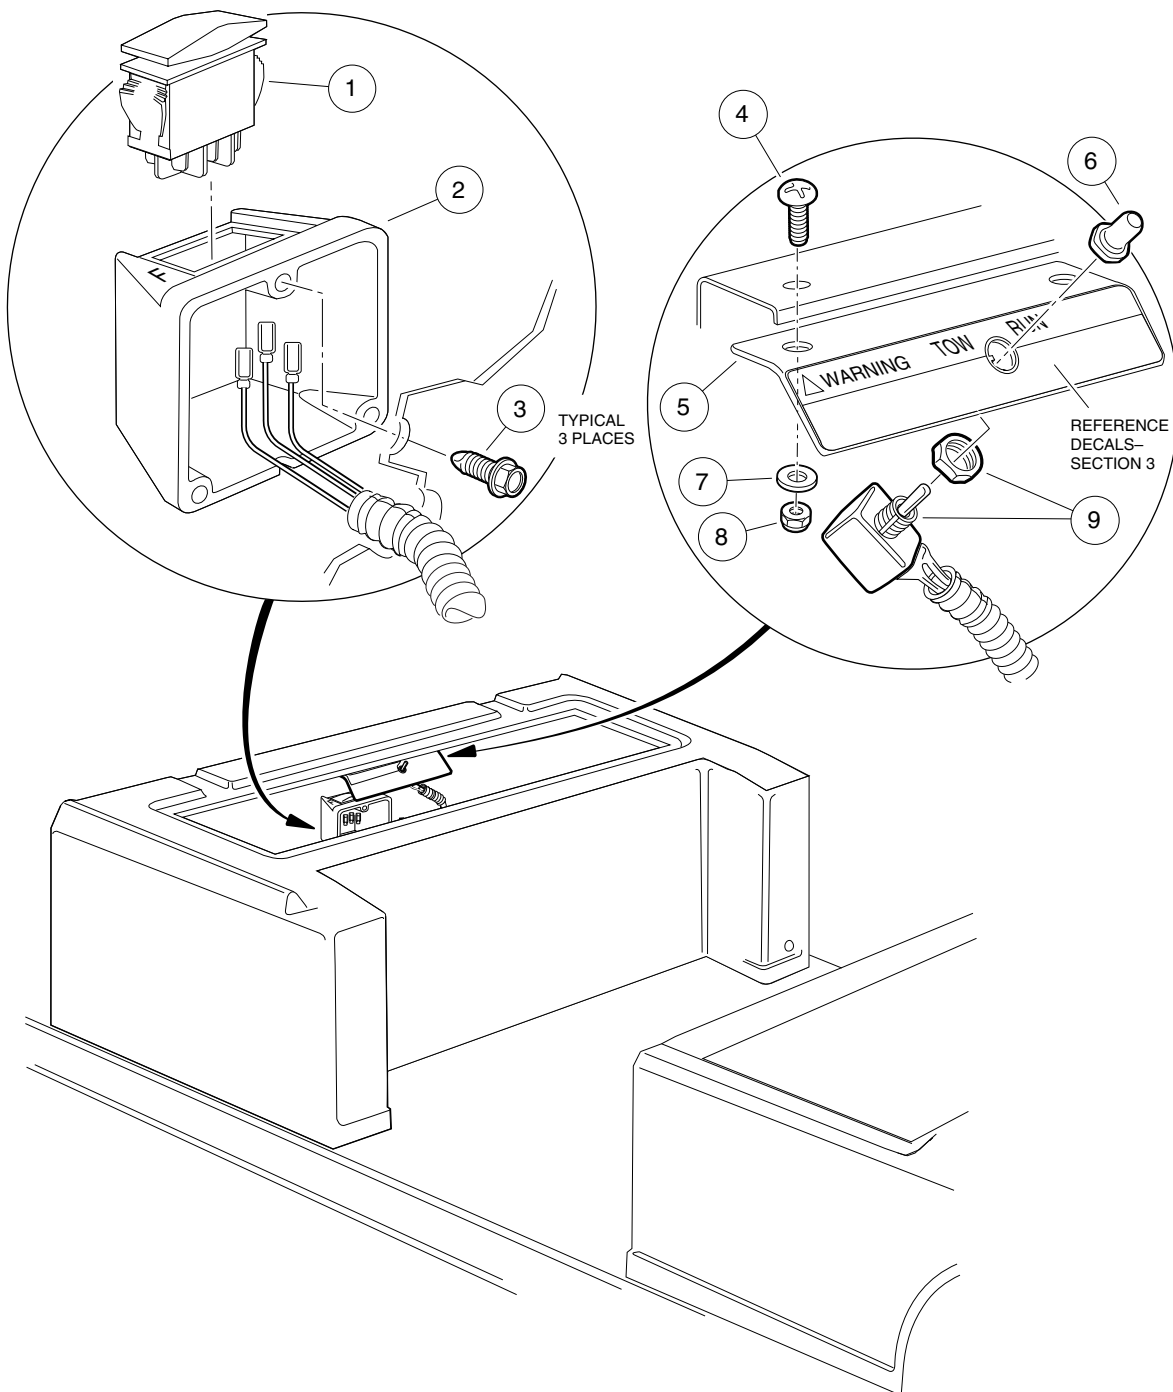


FORWARD/REVERSE SWITCH, TOW/RUN SWITCH – ELECTRIC VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101856001</u>	Switch, Forward/Reverse	1
2	<u>101855001</u>	Case, Forward/Reverse Switch	1
3	<u>101856101</u>	Screw, Hi-Lo Hex-Head, 1/4-15 x 1/2	3
4	<u>8248</u>	Screw, Truss Phillips Machine, 1/4-20 x 3/4	2
5	<u>101922501</u>	Bracket, Tow/Run Switch	1
6	<u>101908401</u>	Boot, Tow/Run Switch (with nut)	1
7	<u>332</u>	Washer, Flat, 1/4	2
8	<u>8233</u>	Nut, Nylon Lock, 1/4-20	2
9	<u>101908101</u>	Switch, Tow/Run	1

12

E

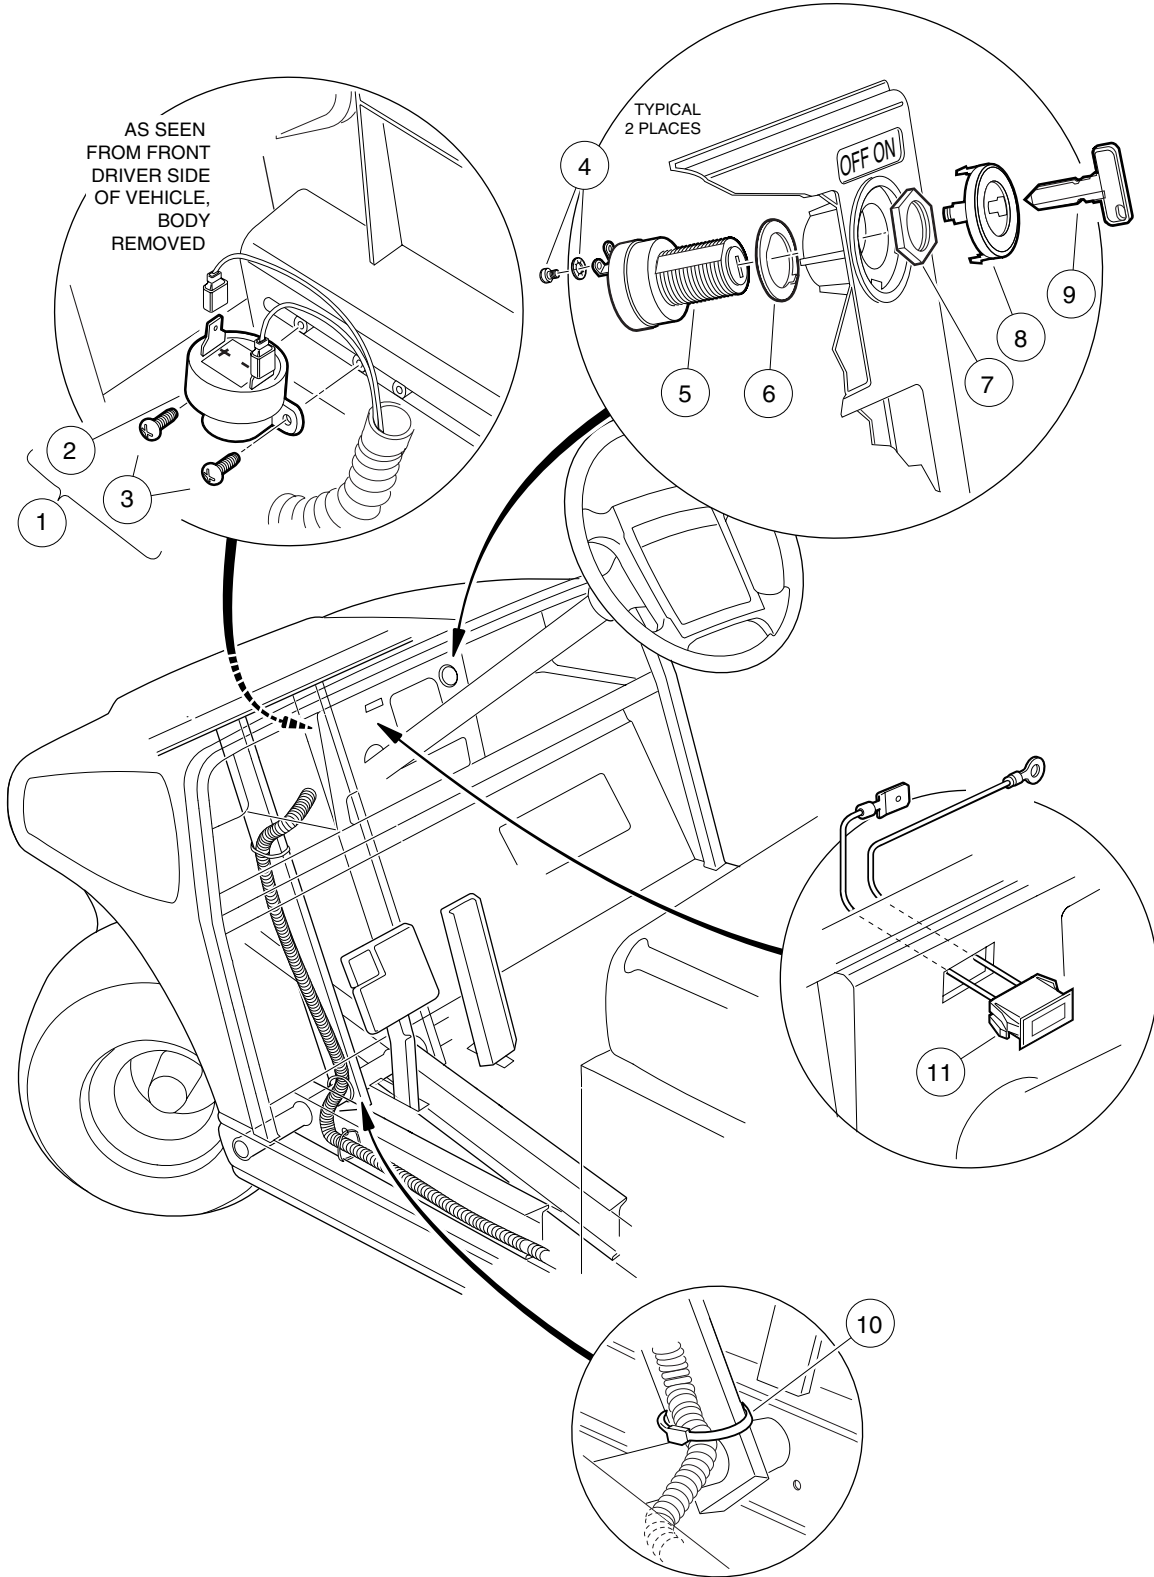


ELECTRICAL COMPONENTS, FRONT BODY – ELECTRIC VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1016859</u>	Kit, Reverse Buzzer (includes items 2 and 3)	1
2	<u>1016851</u>	Buzzer, Reverse	1
3	<u>1016849</u>	Screw, Pan-Head Hi-Lo, #4-24 x 5/16	2
4	101830601	Assembly, Screw and Washer	2
5	<u>101826201</u>	Switch, Key	1
6	<u>101851101</u>	Washer, Key Switch	1
7	<u>101830701</u>	Nut, Key Switch	1
8	<u>101834502</u>	Cap, Key Switch	1
9	<u>1012505</u>	Key (pair)	1
10	<u>8990</u>	Tie, Wire	2
11	<u>101935501</u>	Light, Battery Warning (amber)	1

12

E

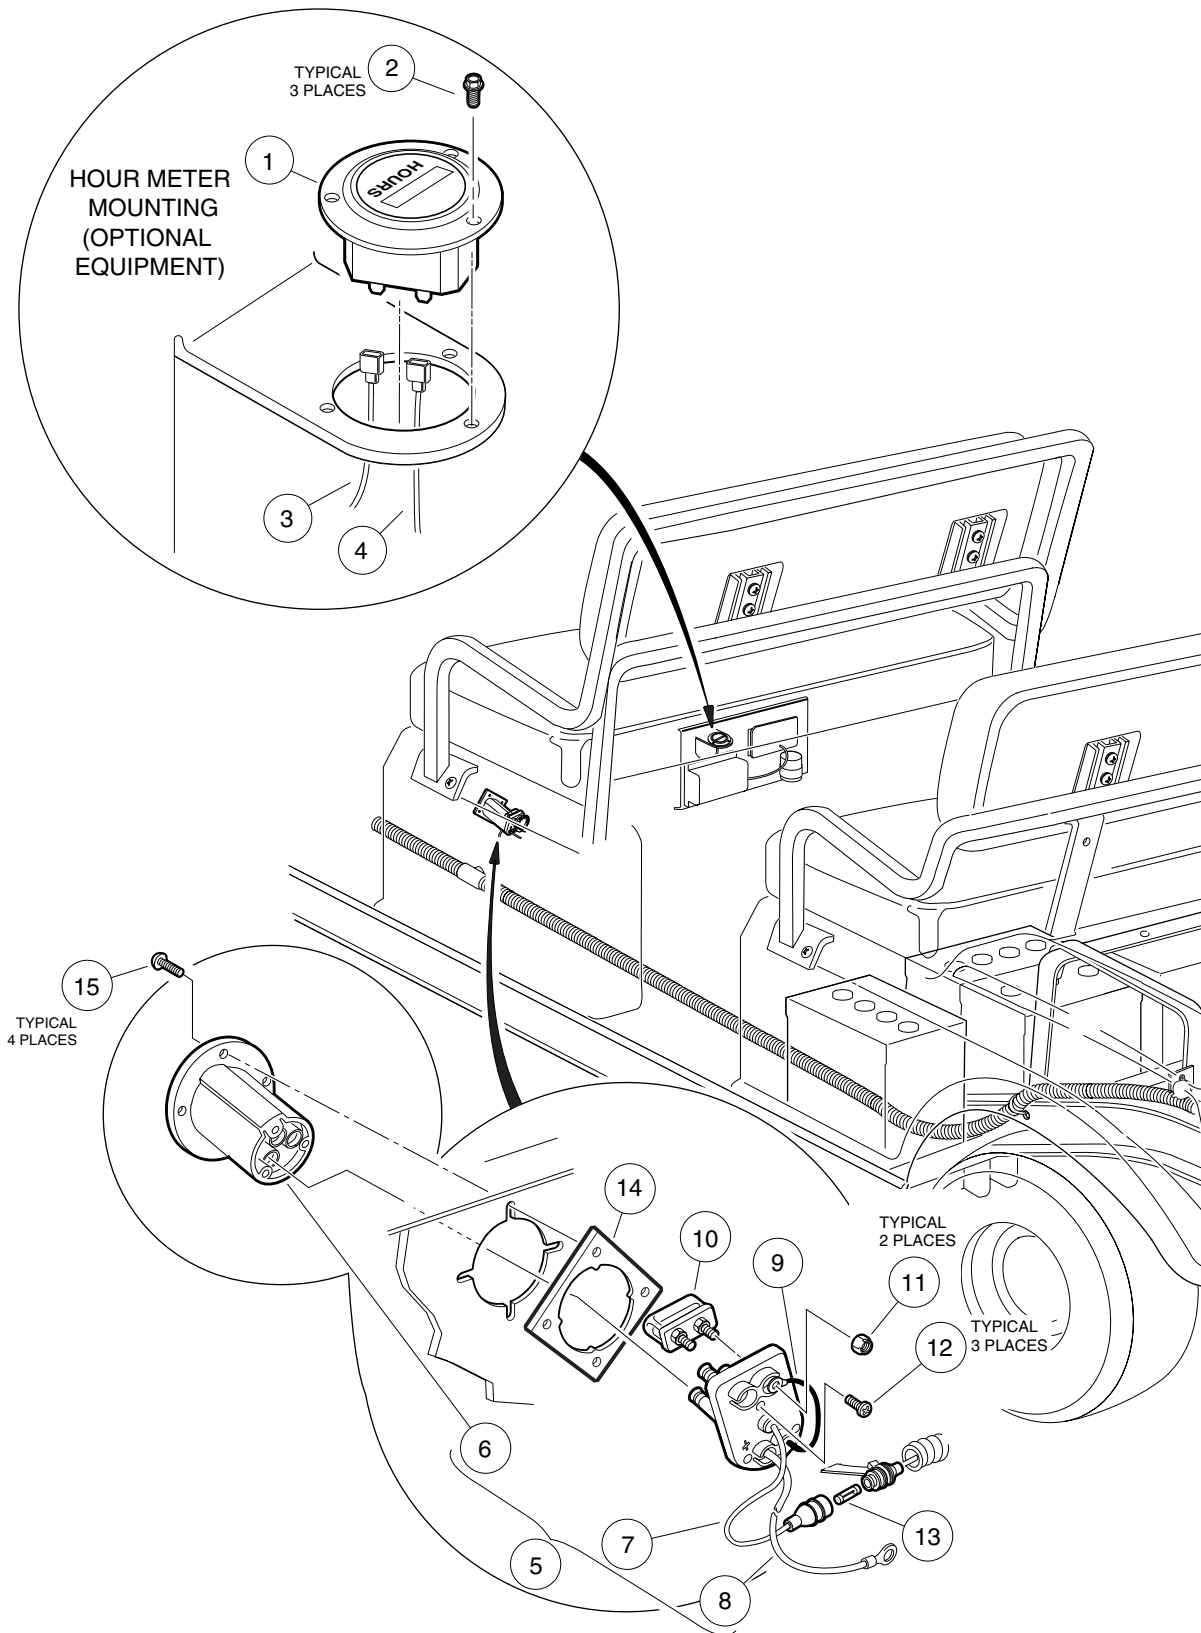


HOUR METER AND CHARGER RECEPTACLE – ELECTRIC VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1016877</u>	Hour Meter, 48 Volt (optional equipment)	1
2	<u>1014540</u>	Screw, Thread-Rolling, #6-32 x 3/8 (optional equipment)	3
3	N/A	Wire Assembly, #18 Red (optional equipment)	1
4	N/A	Wire Assembly, #18 Black (optional equipment)	1
5	<u>101802101</u>	Kit, Fuse And Receptacle (includes items 6 - 13)	1
6	<u>101796501</u>	Bezel, Receptacle	1
7	N/A	Wire Assembly, Sense Lead, Gray	1
8	N/A	Wire Assembly, #10 Red	1
9	N/A	Wire Assembly, #10 Black	1
10	<u>101796801</u>	Assembly, Fuse, 48 Volt (includes item 11)	1
11	<u>1013061</u>	Nut, Nylon Lock, #10	2
12	<u>1017705</u>	Screw, Phillips Pan-Head, #8 Type AB	3
13	<u>101894901</u>	Fuse, 3/8 Amp	1
14	<u>101801001</u>	Plate, Receptacle Backing	1
15	<u>101832001</u>	Screw, Phillips Pan-Head, #7-18 x 3/4	4

12

E

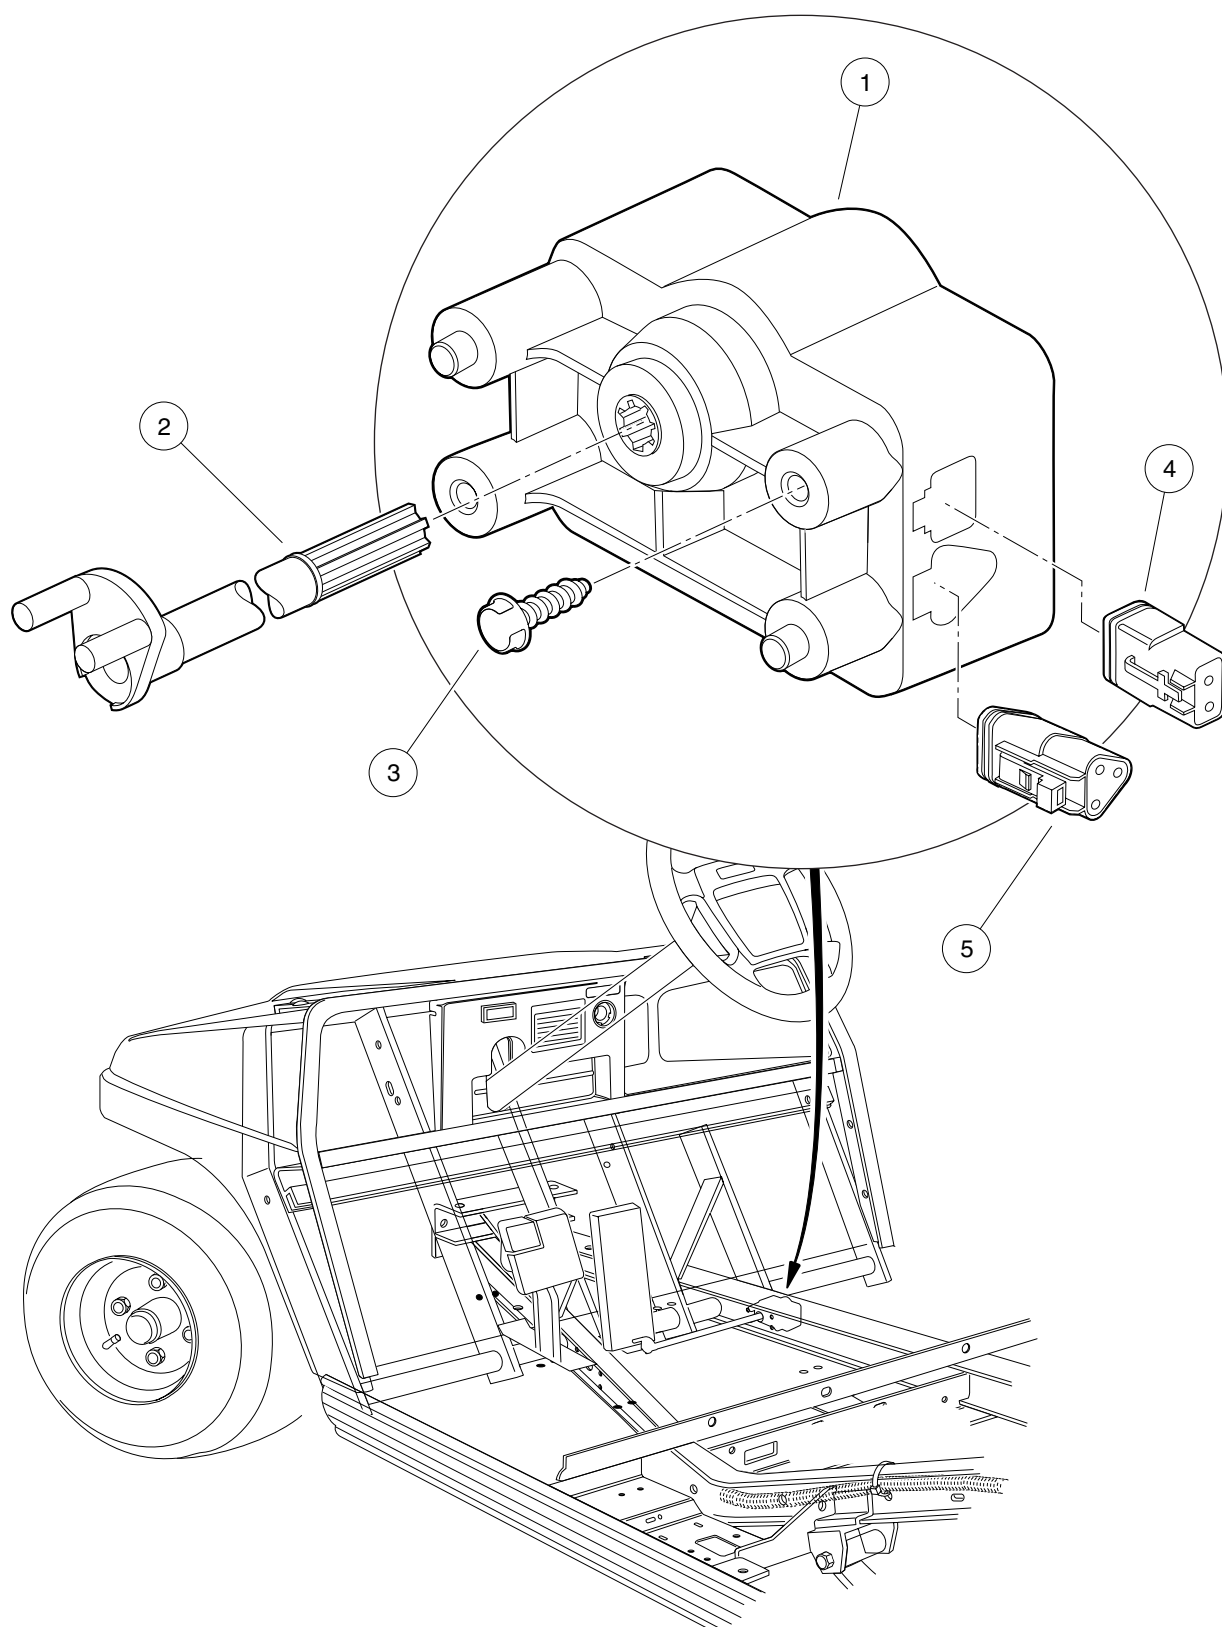


MOTOR CONTROLLER OUTPUT REGULATOR (MCOR) – ELECTRIC VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>102101101</u>	Regulator, Motor Controller Output (MCOR)	1
2	<u>102101001</u>	Bar, Drive	1
3	<u>1015752</u>	Screw, Hex-Head, Hi-Lo, #12-16 x 5/8	2
4	<u>101936801</u>	Kit, 2-Pin Plug and Wedge Lock	1
5	<u>101920101</u>	Kit, 3-Pin Plug and Wedge Lock	1

12

E

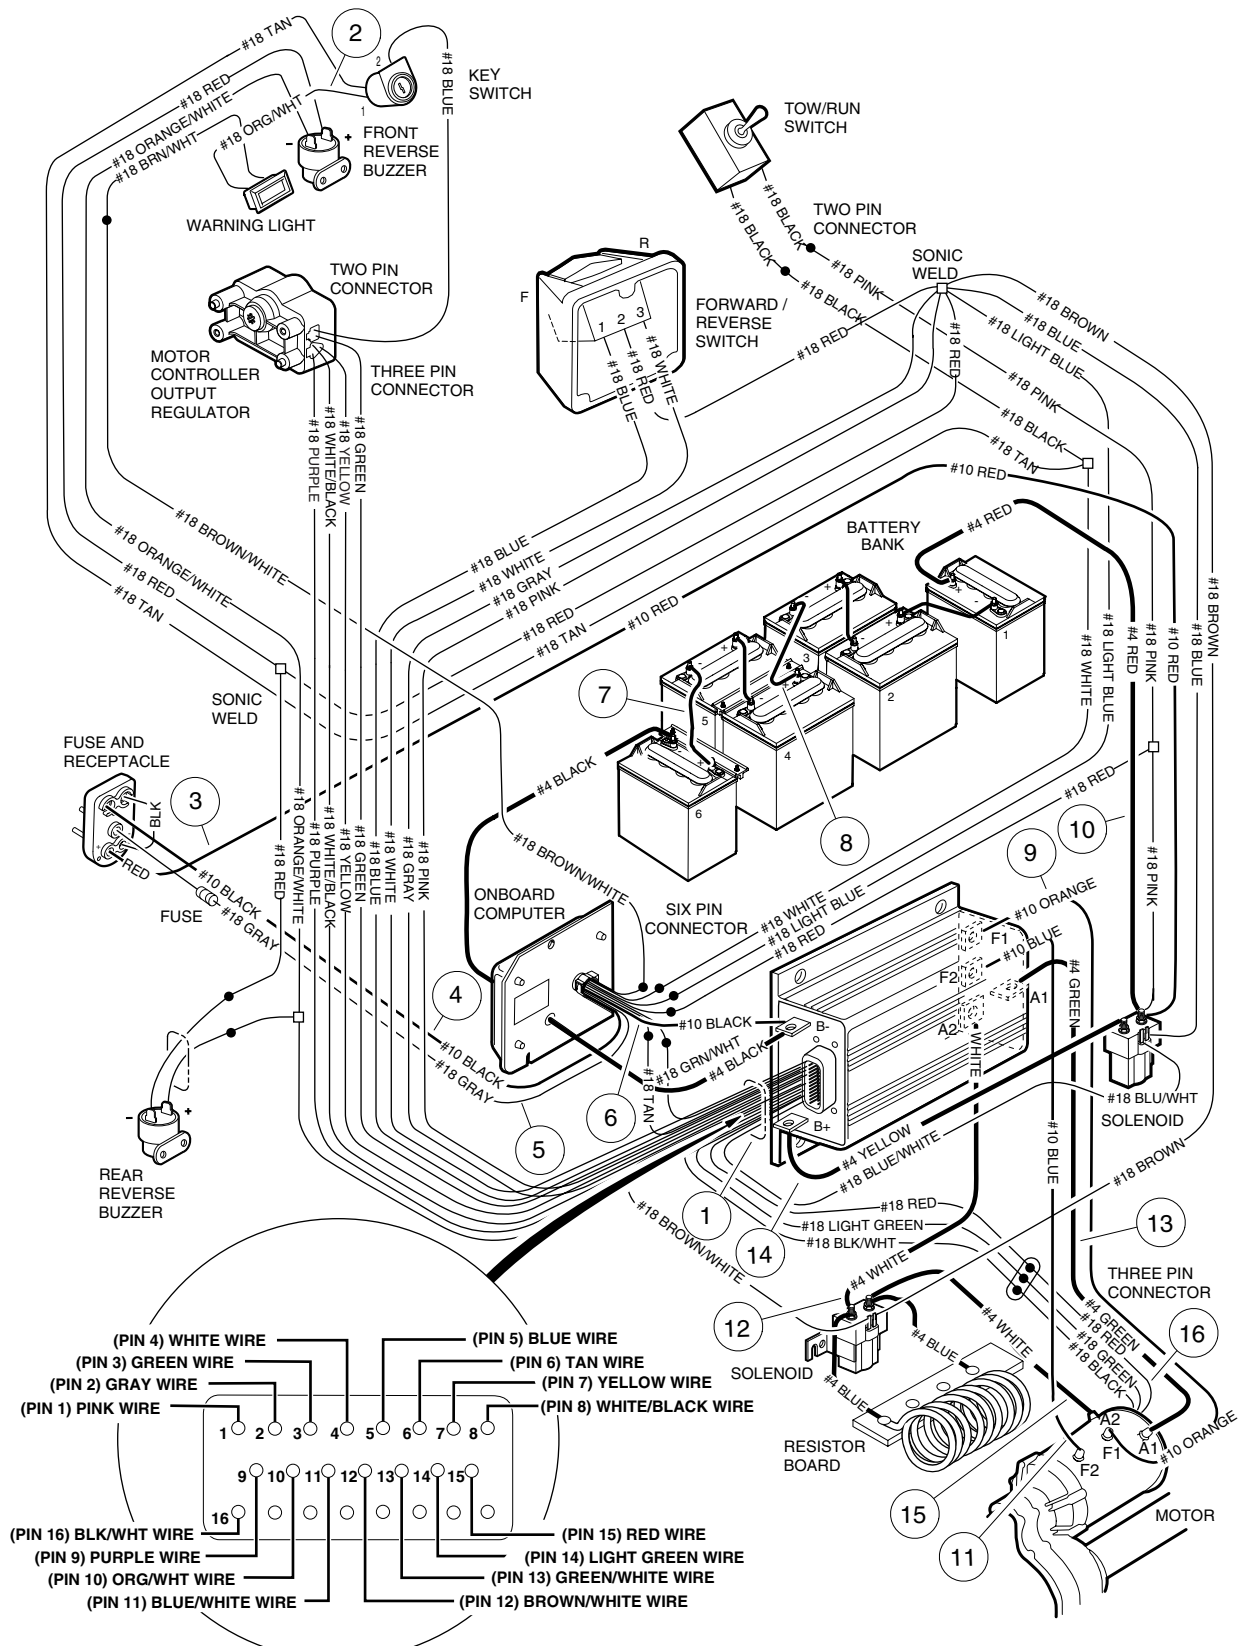


WIRING – EARLY STYLE VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>102193401</u>	Wire Harness	1
2	N/A	Wire Assembly, #18 Orange/White (part of battery light)	1
3	N/A	Wire Assembly, #10 Red (part of fuse and receptacle assembly)	1
4	N/A	Wire Assembly, #10 Black (part of onboard computer assembly)	1
5	N/A	Wire Assembly, #18 Gray (part of onboard computer assembly)	1
6	N/A	Wire Assembly, #10 Black (part of onboard computer assembly)	1
7	<u>102002801</u>	Wire Assembly, #4 Black	4
8	<u>102002901</u>	Wire Assembly, #4 Black	1
9	<u>101988701</u>	Wire Assembly, #10 Orange	1
10	<u>101988801</u>	Wire Assembly, #4 Red	1
11	<u>101988601</u>	Wire Assembly, #10 Blue	1
12	<u>101981501</u>	Wire Assembly, #4 White	1
13	<u>101988401</u>	Wire Assembly, #4 Green	1
14	<u>101981301</u>	Wire Assembly, #4 Yellow	1
15	<u>101988301</u>	Wire Assembly, #4 White	1
16	<u>101988901</u>	Wire Harness, Motor Speed Sensor	1

12


E

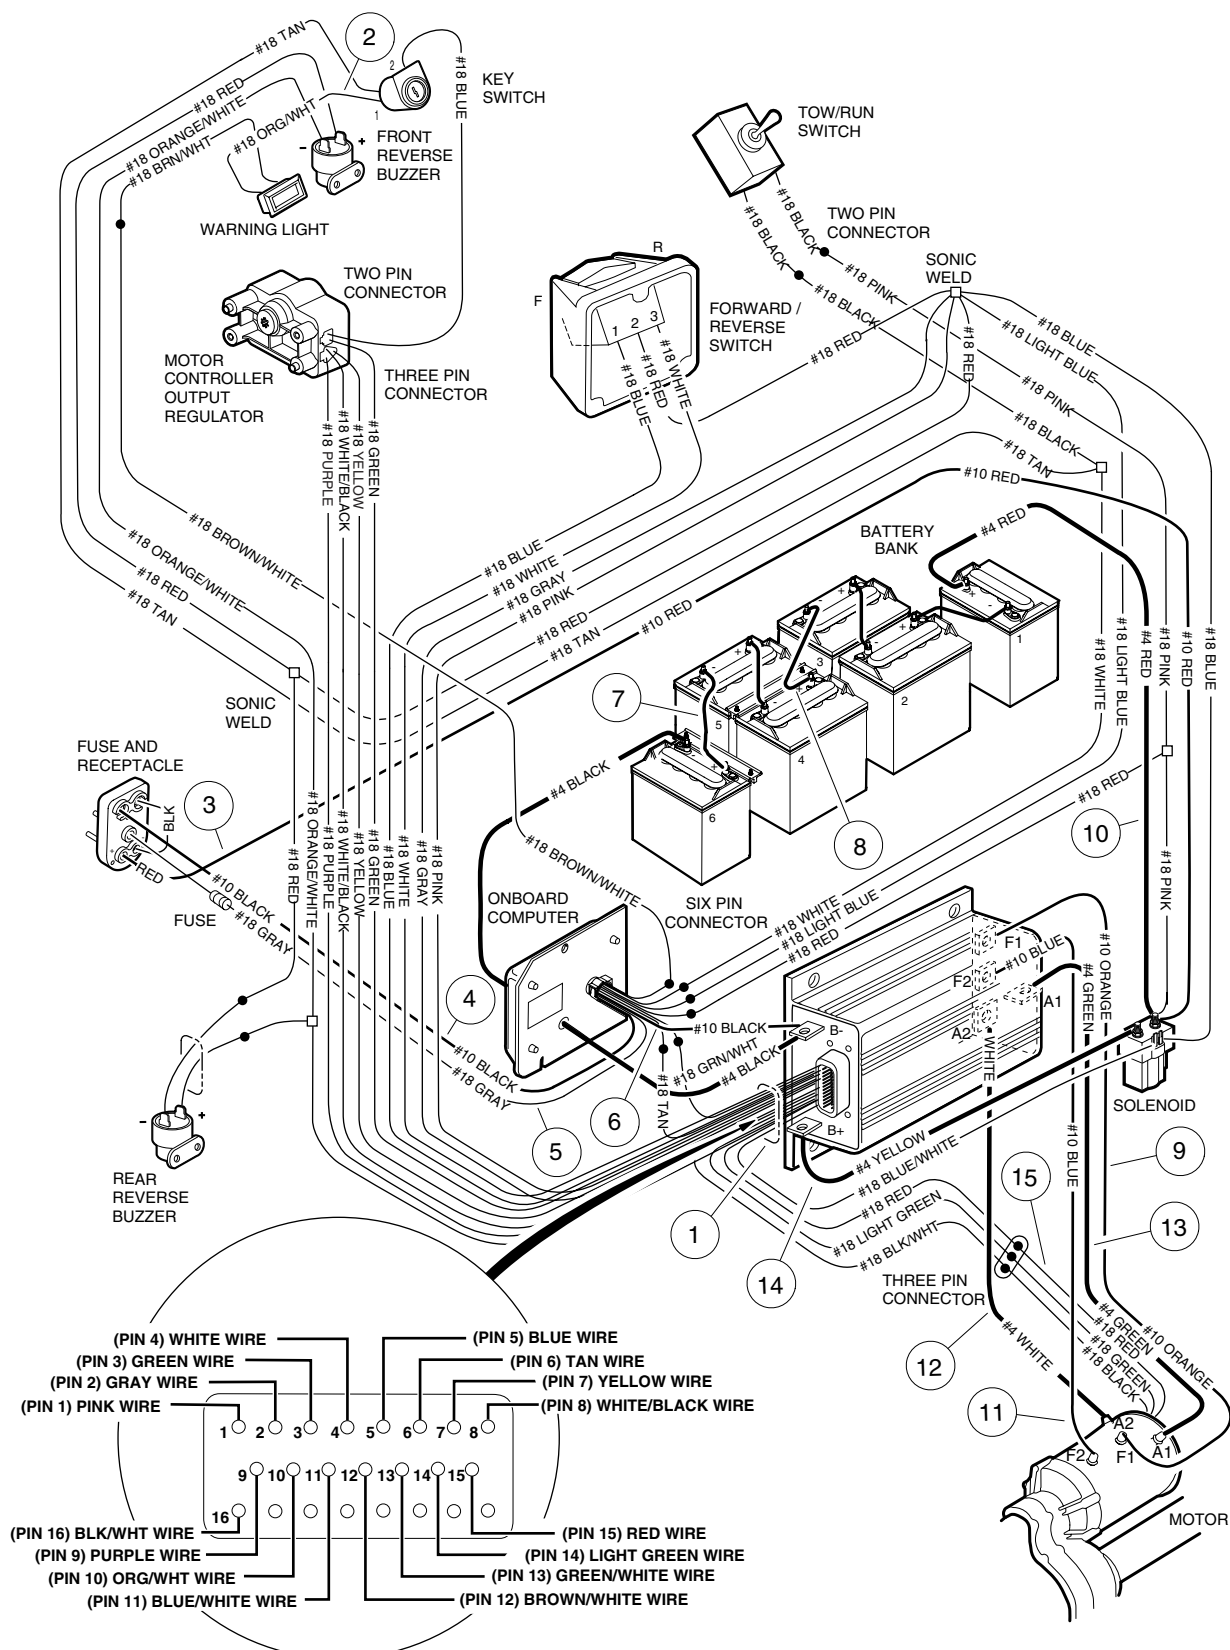

WIRING – LATER STYLE VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>102193401</u>	Wire Harness	1
2	N/A	Wire Assembly, #18 Orange/White (part of battery light)	1
3	N/A	Wire Assembly, #10 Red (part of fuse and receptacle assembly)	1
4	N/A	Wire Assembly, #10 Black (part of onboard computer assembly)	1
5	N/A	Wire Assembly, #18 Gray (part of onboard computer assembly)	1
6	N/A	Wire Assembly, #10 Black (part of onboard computer assembly)	1
7	<u>102002801</u>	Wire Assembly, #4 Black	4
8	<u>102002901</u>	Wire Assembly, #4 Black	1
9	<u>101988701</u>	Wire Assembly, #10 Orange	1
10	<u>101988801</u>	Wire Assembly, #4 Red	1
11	<u>101988601</u>	Wire Assembly, #10 Blue	1
12	<u>101988301</u>	Wire Assembly, #4 White	1
13	<u>101988401</u>	Wire Assembly, #4 Green	1
14	<u>101981301</u>	Wire Assembly, #4 Yellow	1
15	<u>101988901</u>	Wire Harness, Motor Speed Sensor	1


12
E

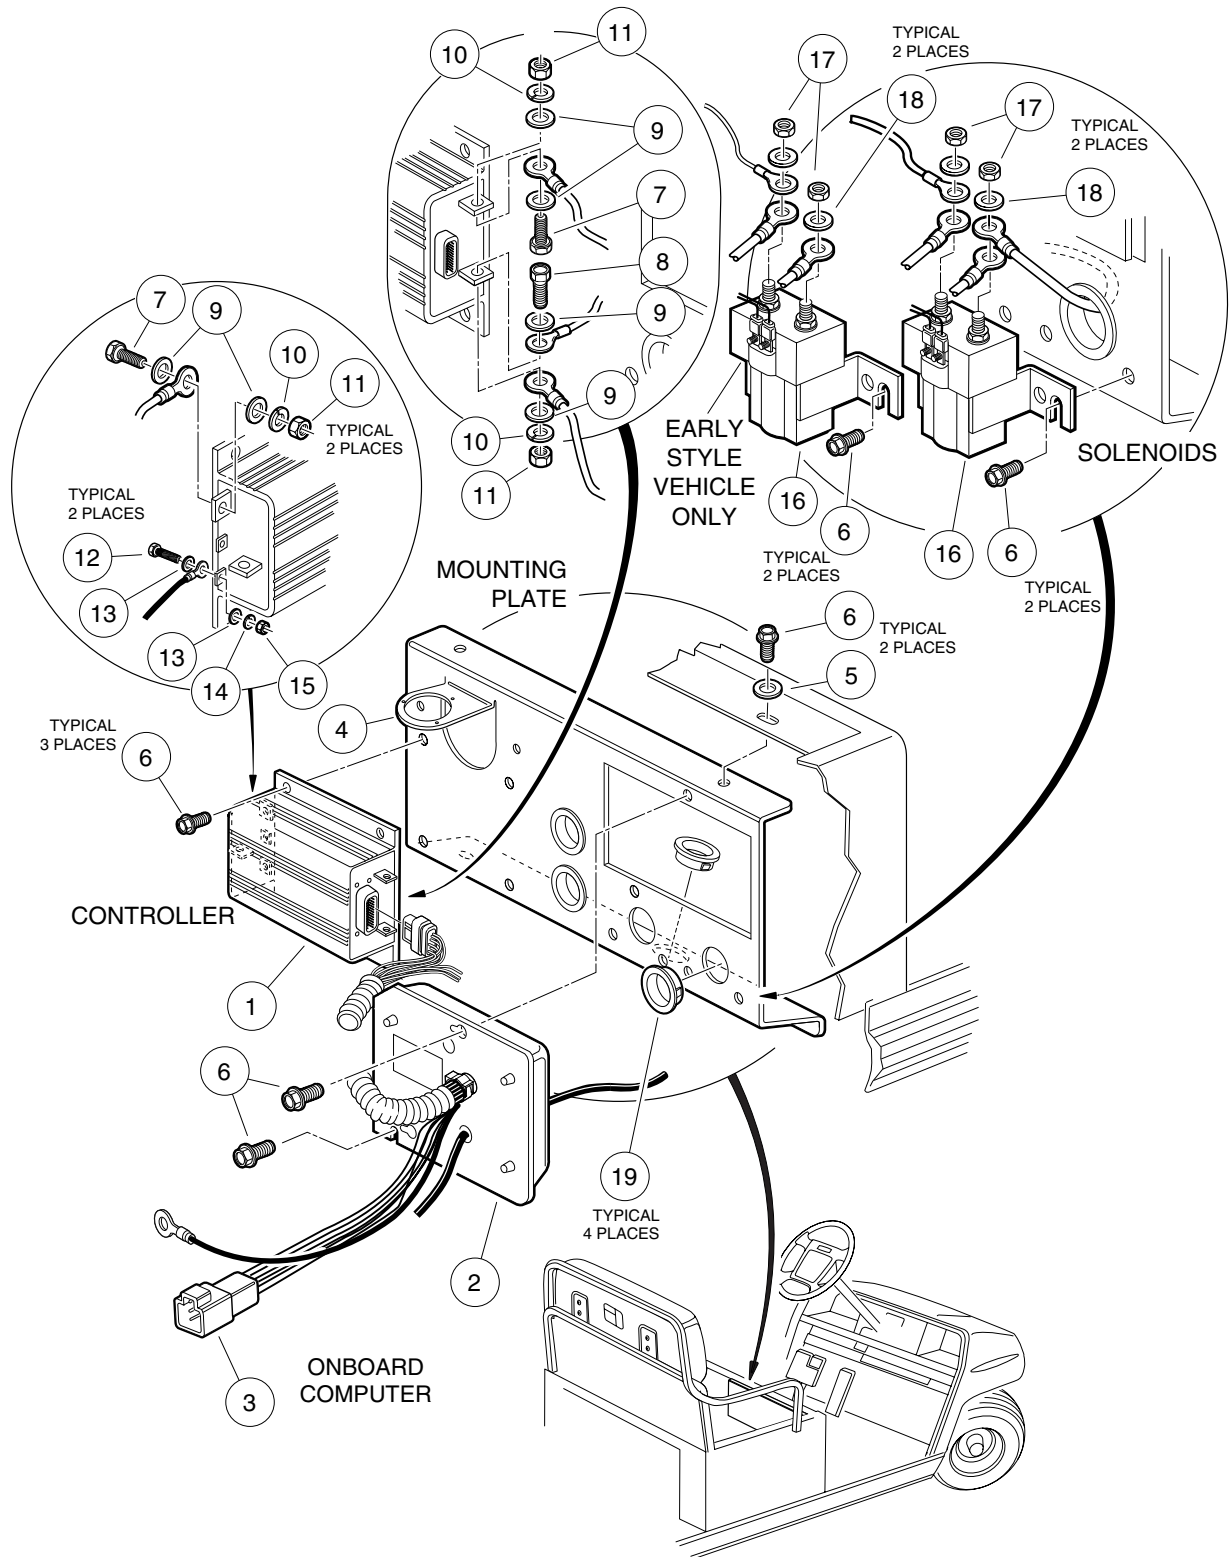

CONTROLLER, ONBOARD COMPUTER, AND SOLENOID – ELECTRIC VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101887903</u>	Controller (350 amp)	1
2	<u>101909909</u>	Computer, Onboard (includes item 3)	1
3	<u>101932601</u>	Kit, 6-Pin Receptacle	1
4	<u>101911701</u>	Plate, Component Mounting	1
5	<u>332</u>	Washer, Flat, 1/4	2
6	<u>1012285</u>	Screw, Hex Washer-Head, Thread-Rolling, 1/4-20 x 5/8 (early style vehicles use a quantity of 11)	9
7	<u>7173</u>	Screw, Hex-Head Cap, 5/16-18 x 3/4	3
8	<u>1218</u>	Screw, Hex-Head Cap, 5/16-18 x 1-1/4	1
9	<u>1241</u>	Washer, Flat, 5/16	8
10	<u>7174</u>	Washer, Lock, 5/16	4
11	<u>1242</u>	Nut, Hex, 5/16-18	4
12	<u>8450</u>	Screw, Hex-Head Machine, #10-24 x 1/2	2
13	<u>1018038</u>	Washer, Flat, #10	4
14	<u>1016175</u>	Washer, Lock, #10	2
15	<u>1017</u>	Nut, Hex, #10-24	2
16	<u>101908701</u>	Solenoid, 48-Volt (early style vehicles use a quantity of 2) (includes items 17 and 18)	1
17	<u>1012528</u>	Nut, Hex, M8 x 1.25 (early style vehicles use a quantity of 4)	2
18	<u>1013734</u>	Washer, Lock, 8 mm (early style vehicles use a quantity of 4)	2
19	<u>101924301</u>	Bushing, Snap	4


12
E

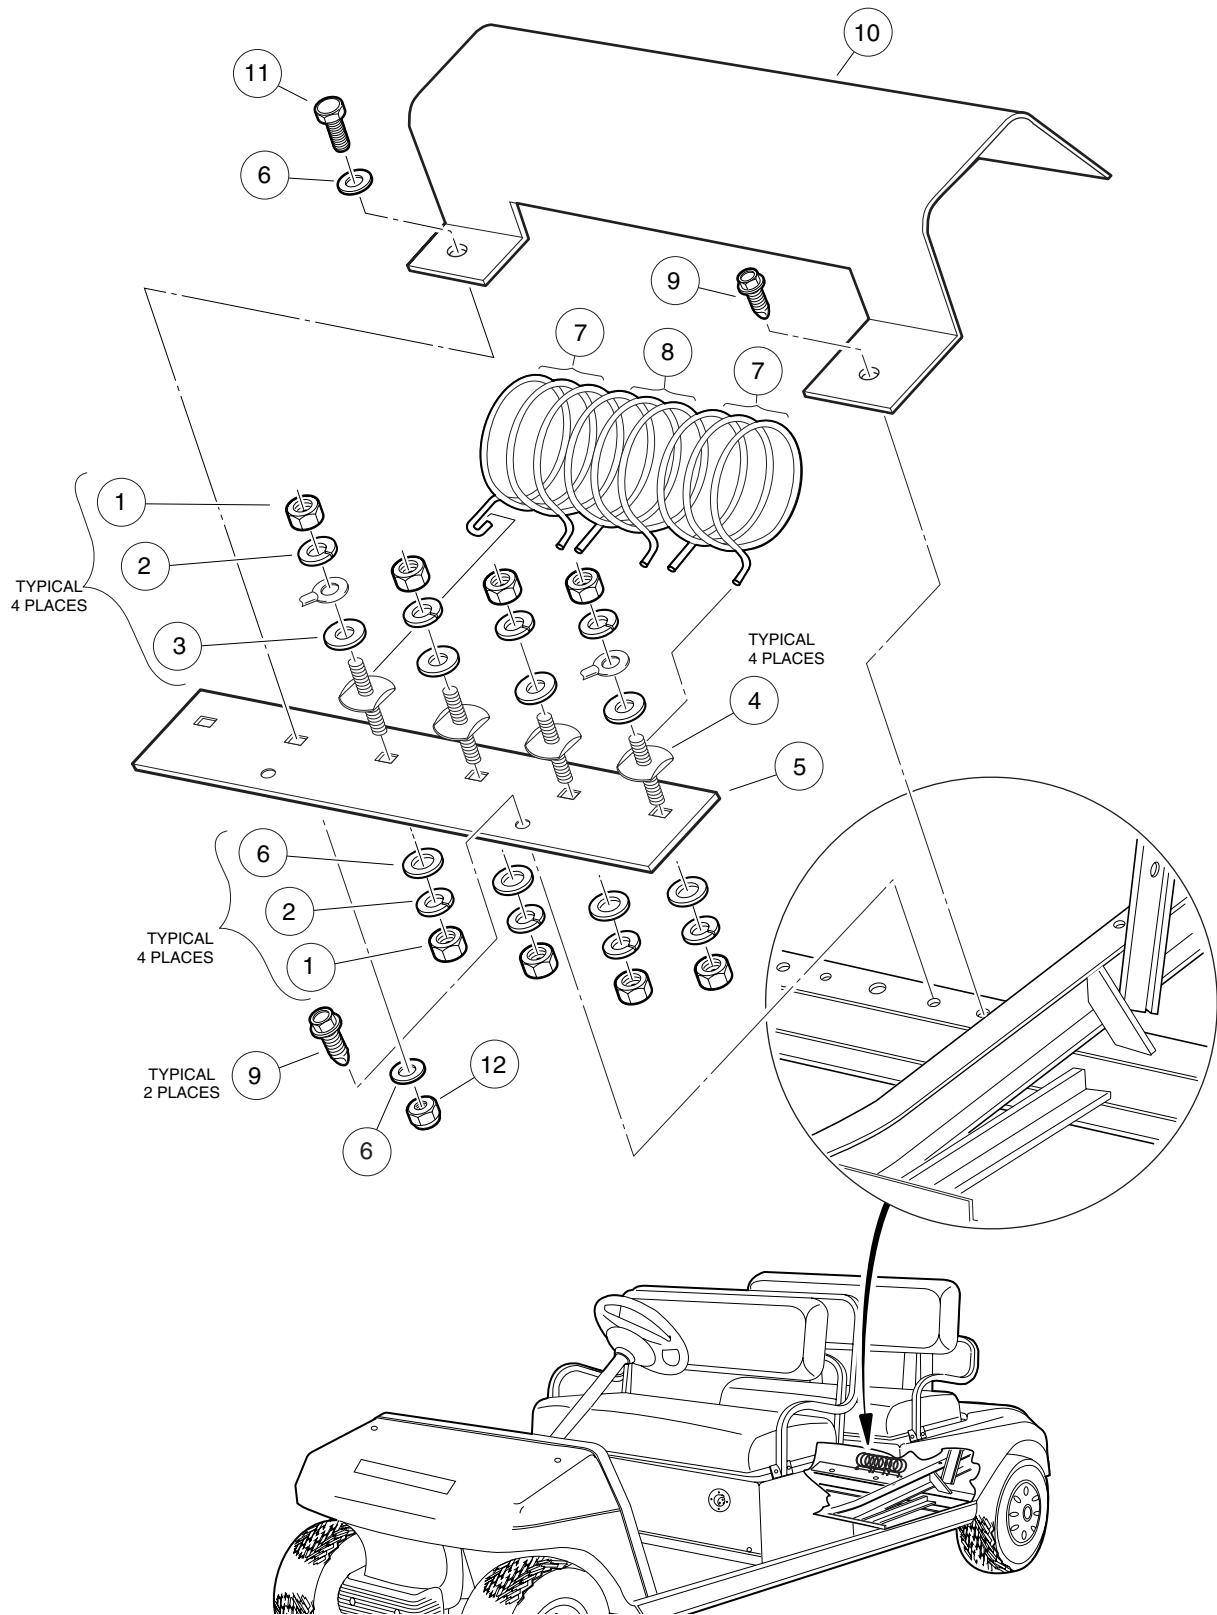

ENERGY DISPLACEMENT MODULE – EARLY STYLE VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
	101997101	Assembly, Resistor Coil (includes items 1 - 8)	1
1	<u>1028</u>	Nut, Hex, 1/4-20	8
2	<u>451</u>	Washer, Lock, 1/4	8
3	<u>1011931</u>	Washer, Flat, 1/4	4
4	1014045	Stand-Off, Resistor Coil	4
5	1014728	Board, Resistor Mounting	1
6	<u>332</u>	Washer, Flat, 1/4	6
7	1014476	Coil, Resistor, .182-Inch Wire Diameter, 3-Coil	2
8	<u>1014654</u>	Coil, Resistor, .182-Inch Wire Diameter, 4-Coil	1
9	<u>1012285</u>	Screw, Hex Washer-Head, Thread-Rolling, 1/4-20 x 5/8	3
10	<u>102065201</u>	Shield, Resistor	1
11	<u>7847</u>	Bolt, Hex-Head Cap, 1/4-20 x 3/4	1
12	<u>8233</u>	Nut, Nylon Lock, 1/4-20	1

12
E

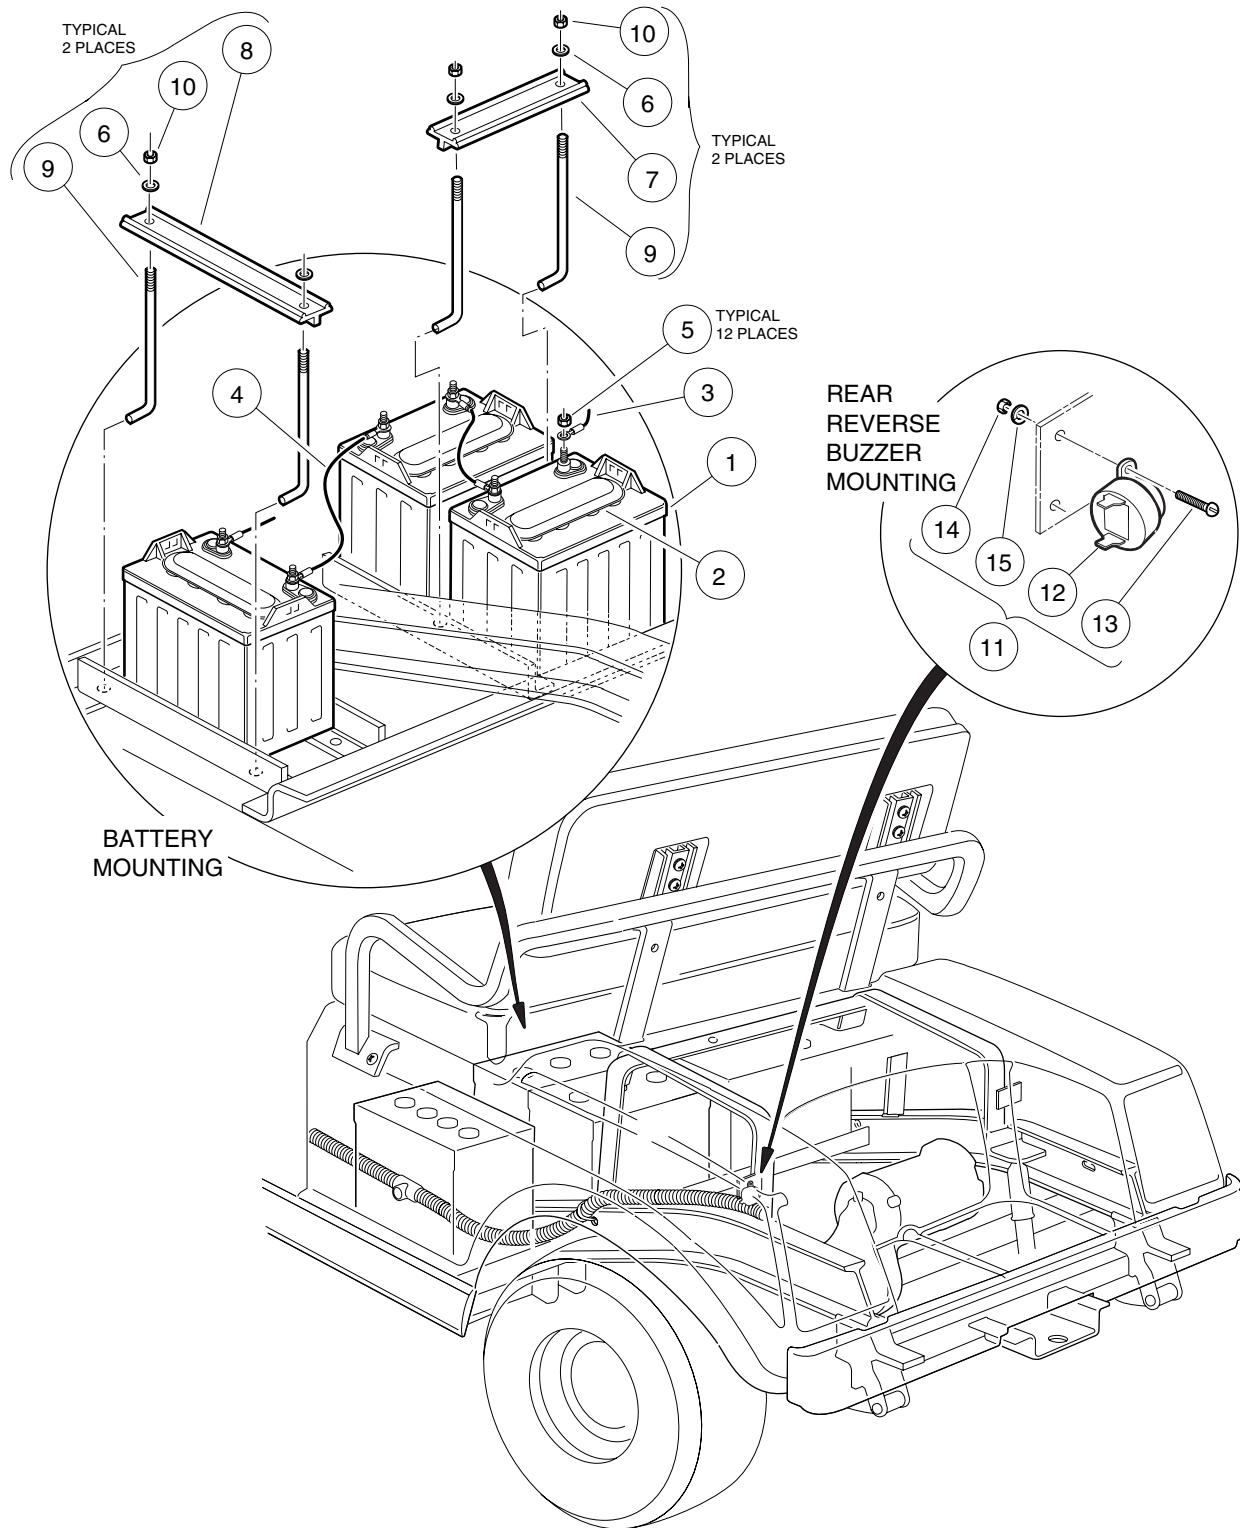

ELECTRICAL COMPONENTS, REAR BODY – ELECTRIC VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101964201</u>	Battery, 8-Volt Heavy Duty (includes item 2)	6
1	<u>101964202</u>	Battery, 8-Volt Heavy Duty, Dry (includes item 2)	6
2	<u>101797801</u>	Cap, Battery, 4 Port Gang	6
3	<u>102002801</u>	Wire Assembly, #4 Black	4
4	<u>102002901</u>	Wire Assembly, #4 Black	1
5	<u>1014304</u>	Nut, Hex, Stainless Steel, 5/16-18	12
6	<u>1011578</u>	Washer, Flat, Type B Wide, 5/16	8
7	<u>101803001</u>	Hold-Down, Battery, Short	2
8	<u>101803002</u>	Hold-Down, Battery, Long	2
9	<u>101668201</u>	Rod, Battery Hold-Down	8
10	<u>1015072</u>	Nut, Nylon Lock, Stainless Steel, 5/16-18	8
11	<u>1016859</u>	Kit, Reverse Buzzer (includes items 12 - 15)	1
12	<u>1016851</u>	Buzzer, Reverse	1
13	<u>8056</u>	Screw, Round-Head Machine, #4-40 x 3/4	2
14	<u>8057</u>	Nut, Hex, #4-40	2
15	<u>8058</u>	Washer, Lock, #4	2

12

E


12

E

ELECTRIC MOTOR

13

E

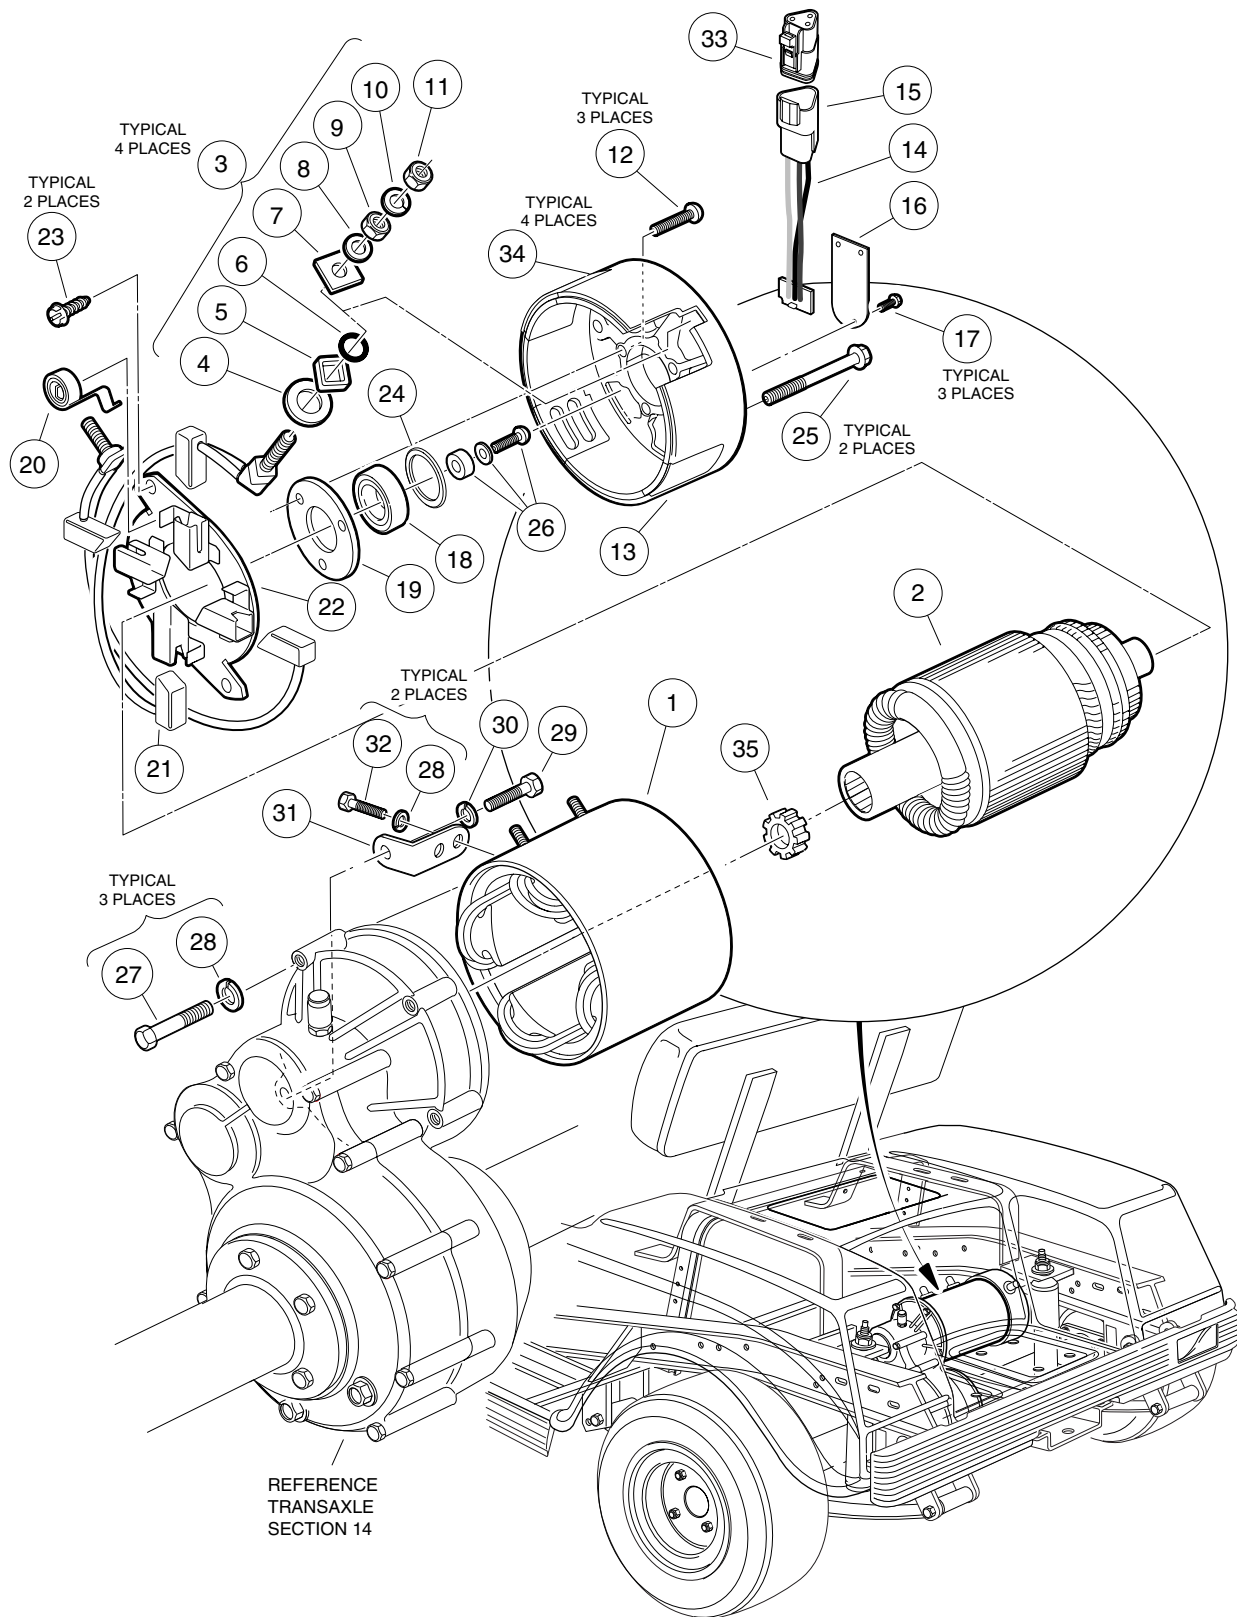


MOTOR – ELECTRIC VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
	102237301	Assembly, 48-Volt Shunt Motor, 3.75-HP (early style) (includes items 1 - 26)	1
	<u>102237302</u>	Assembly, 48-Volt Shunt Motor, 3.75-HP (later style) (includes items 1 - 26)	1
1	<u>102064301</u>	Assembly, Stator Shell and Winding	1
2	N/A	Armature	1
3	<u>102063701</u>	Package, Hardware (includes items 4 - 11)	1
4	N/A	Bushing, Insulator	4
5	N/A	Spacer	4
6	N/A	O-Ring	4
7	N/A	Bushing, Insulator	4
8	N/A	Washer, Flat, 5/16	4
9	N/A	Nut, Hex, Serrated Lock, 5/16-18	4
10	N/A	Lock, Washer, 5/16	4
11	N/A	Nut, Hex, 5/16-18	4
12	<u>102063501</u>	Screw, Bearing Retainer	3
13	<u>102061901</u>	Shield, End (includes items 14 - 17)	1
14	<u>101925801</u>	Sensor, Hall Effect (includes item 15)	1
15	<u>101895101</u>	Housing, Female 3-Wire, Gray	1
16	N/A	Plate, Retaining	1
17	N/A	Screw, Retaining	3
18	<u>102064401</u>	Bearing, Ball	1
19	102062101	Retainer, Bearing	1
20	1011411	Package, Brush Spring (4 pieces)	1
21	<u>102302201</u>	Package, Brush – Copper (2 pieces) (includes 4 brushes)	1
22	<u>102302301</u>	Rigging, Brush	1
23	<u>1011283</u>	Screw, Brush Holder	2
24	<u>102063301</u>	Spacer	1
25	<u>102063601</u>	Screw, Clamp	2
26	<u>102176401</u>	Kit, Speed Sensor Magnet	1
27	1014201	Screw, Hex-Head Cap, 1/4-20 x 2-1/4	3
28	<u>451</u>	Washer, Lock, 1/4	5
29	<u>1010934</u>	Screw, Hex-Head Cap, 5/16-18 x 1	1
30	<u>7174</u>	Washer, Lock, 5/16	1
31	<u>1012177</u>	Clip, Motor Axle	1
32	<u>7847</u>	Screw, Hex-Head Cap, 1/4-20 x 3/4	2
33	<u>101920101</u>	Kit, 3-Pin Plug and Wedge Lock	1
34	<u>102064501</u>	Cap, Dust	4
35	102200801	Bumper, Motor	1

13
E

13

E

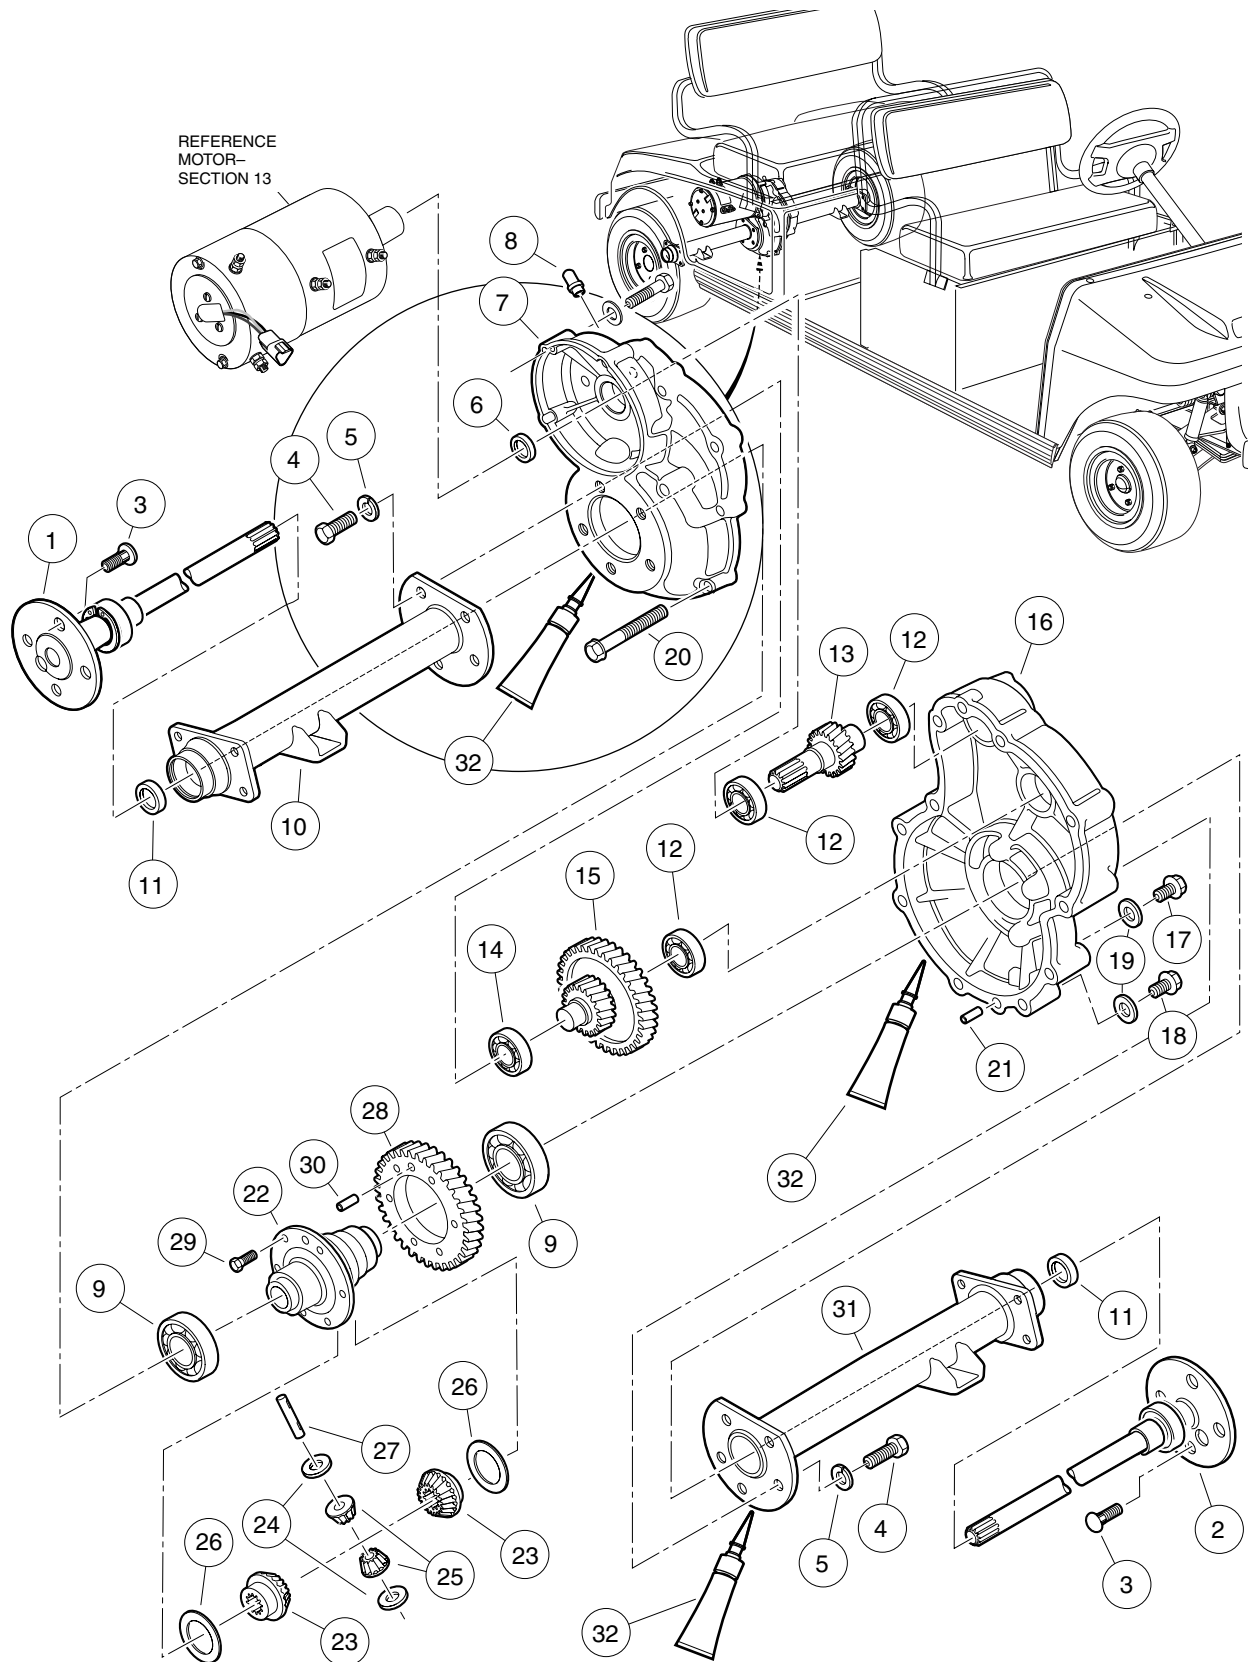

TRANSAXLE, TYPE G – ELECTRIC VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
	<u>101896001</u>	Transaxle, Type G (includes items 1 - 32)	1
1	<u>101895801</u>	Axle Assembly, Passenger Side (includes item 3)	1
2	<u>101895901</u>	Axle Assembly, Driver Side (includes item 3)	1
3	<u>101922201</u>	Stud, Lug	4
4	<u>101976001</u>	Bolt, M10 x 1.5 x 35 mm	10
5	<u>101897901</u>	Washer, Lock	10
6	<u>101923501</u>	Seal, Oil, Input Shaft	1
7	<u>101895501</u>	Gear Case, Passenger Side	1
8	<u>101897201</u>	Breather	1
9	<u>7330</u>	Bearing, Differential	2
10	<u>101895601</u>	Assembly, Axle Tube, Passenger Side	1
11	<u>1013794</u>	Seal, Oil, Axle Shaft	2
12	<u>7335</u>	Bearing, Input Gear	3
13	<u>101923701</u>	Shaft, Input	1
14	<u>7336</u>	Bearing, Intermediate Gear	1
15	<u>101906901</u>	Assembly, Intermediate Gear	1
16	<u>101895401</u>	Gear Case, Driver Side	1
17	<u>101972201</u>	Plug, Fill	1
18	<u>101972101</u>	Plug, Magnetic	1
19	<u>101923201</u>	Gasket, Plug	2
20	<u>101897001</u>	Bolt, M8 x 1.25 x 60 mm	11
21	<u>101897601</u>	Pin, Dowel	2
22	<u>101923601</u>	Housing, Differential	1
23	<u>101923901</u>	Gear, Differential	2
24	<u>101903601</u>	Plate, Thrust (idler gear)	2
25	<u>101923001</u>	Gear, Differential Idler	2
26	<u>101903701</u>	Plate, Thrust	2
27	<u>101922101</u>	Pin, Differential	1
28	<u>101906201</u>	Gear, Output	1
29	<u>101897401</u>	Bolt, M10 x 1.5 x 25 mm	4
30	<u>101972401</u>	Pin, Dowel	1
31	<u>101895701</u>	Assembly, Axle Tube, Driver Side	1
32	<u>101928701</u>	Gasket, Liquid, 8.8 oz. (250 gram)	A/R
Note: Transaxle type is identified by orientation of gear case bolts (item 20). The type G transaxle has gear case bolt heads facing toward the passenger side of the vehicle.			


14

E

BATTERY CHARGER

15

E

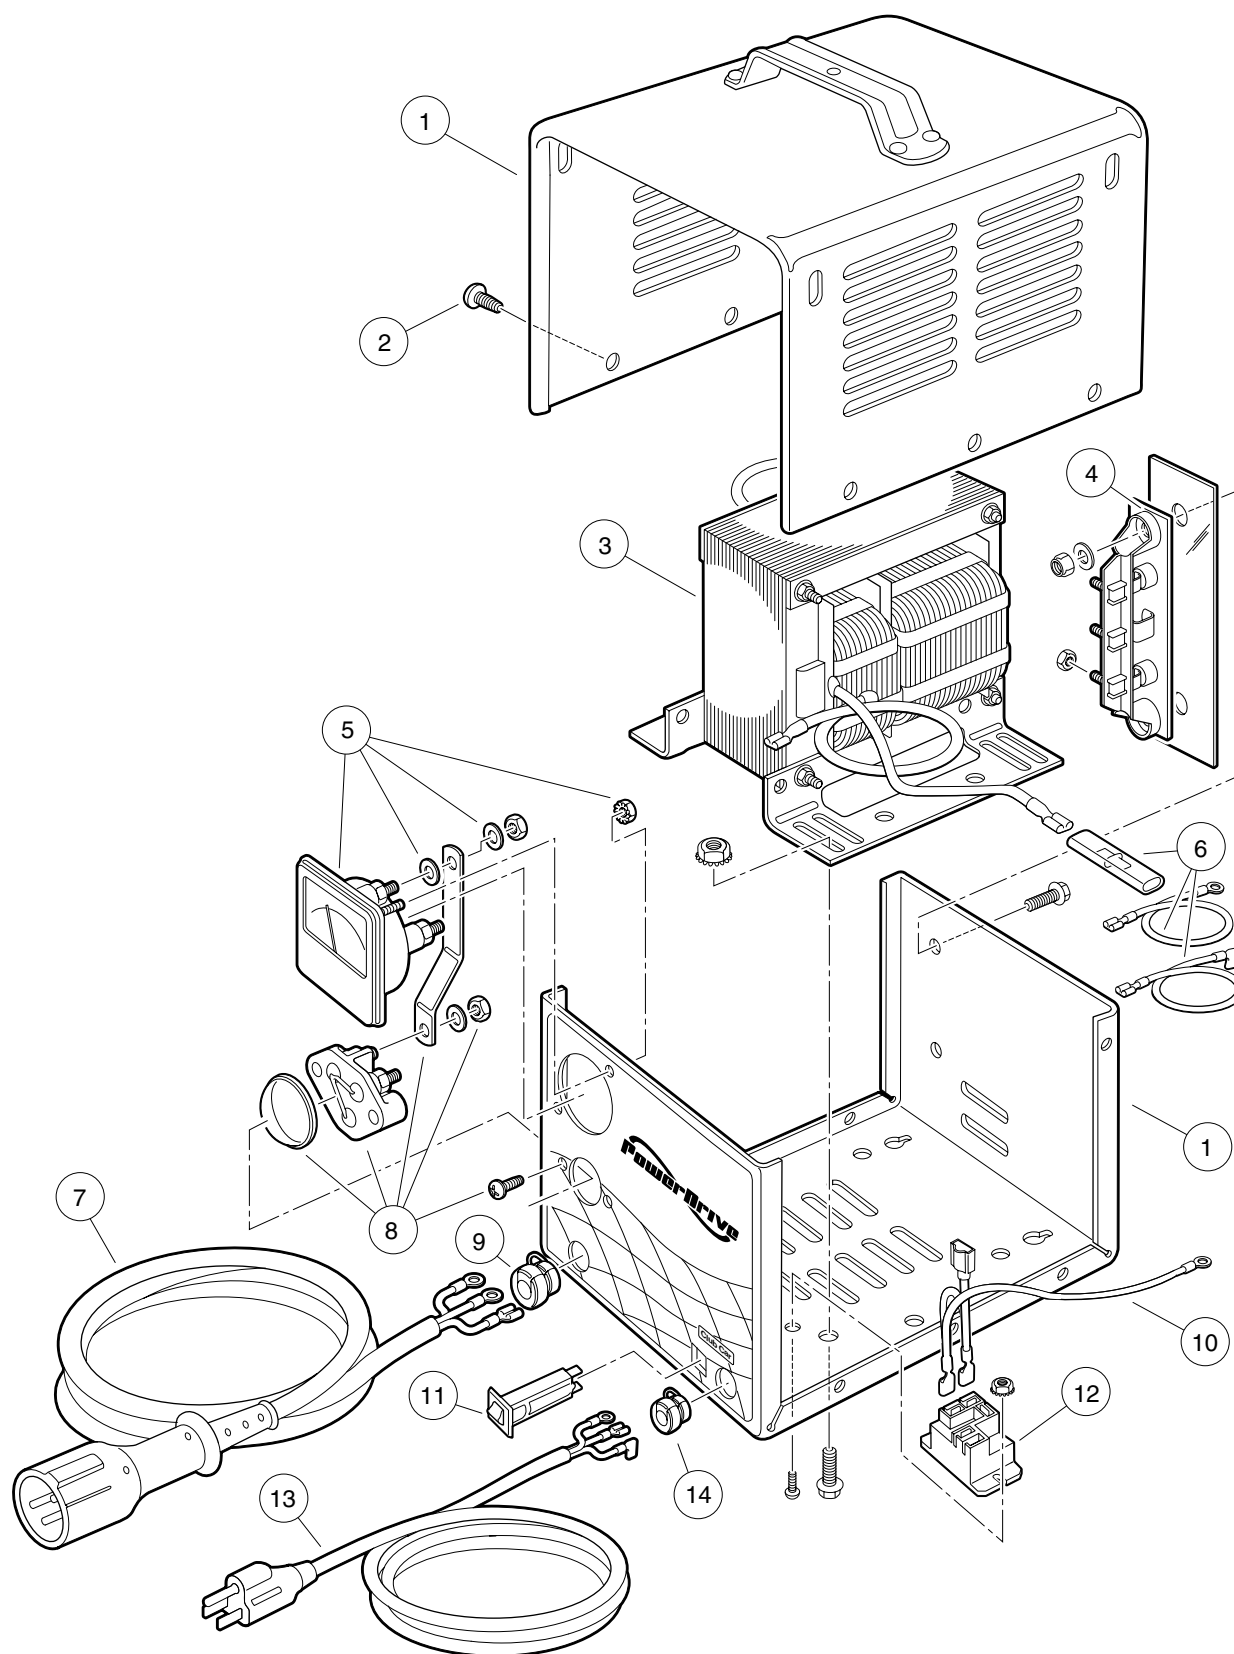


POWERDRIVE CHARGER, DOMESTIC

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
	<u>101802201</u>	Charger, Battery, PowerDrive, Domestic 120-V AC 48-V DC 60-Hz (model number 17930-11) (includes items 1 - 14) 103-inch DC cord with male 3-pin plug, 12-AWG 74-inch AC cord with male grounded plug	1
	<u>101802202</u>	Charger, Battery, PowerDrive 120-V AC 48-V DC 60-Hz (model number 17930-18) (includes items 1 - 14) 144-inch DC cord with male 3-pin plug, 12-AWG 108-inch AC cord with male grounded plug	1
	<u>101802203</u>	Charger, Battery, PowerDrive 120-V AC 48-V DC 60-Hz (model number 17930-19) (includes items 1 - 14) 240-inch DC cord with male 3-pin plug, 12-AWG 108-inch AC cord with male grounded plug	1
1	<u>101828301</u>	Assembly, Case (includes fasteners)	1
2	7577	Screw, Pan-Head, Self-Tapping, #10-16 x 1/2	10
3	<u>101819701</u>	Assembly, Transformer	1
4	<u>1015914</u>	Assembly, Heatsink, with Diodes (includes mounting hardware)	1
5	<u>101828501</u>	Ammeter (includes mounting hardware)	1
6	<u>101831101</u>	Kit, Wire Assembly	1
7	<u>101828901</u>	Cordset, DC, 113-Inch Long with Male 3-Pin Plug, 12-AWG	1
7	<u>101828902</u>	Cordset, DC, 154-Inch Long with Male 3-Pin Plug, 12-AWG	1
7	<u>101828903</u>	Cordset, DC, 250-Inch Long with Male 3-Pin Plug, 12-AWG	1
8	<u>1012101</u>	Assembly, Fuse (includes mounting hardware)	1
9	<u>1012098</u>	Bushing, Strain Relief, DC Cord, 12-AWG	1
10	<u>101914401</u>	Assembly, AC Voltage Suppressor	1
11	<u>CCX8506</u>	Breaker, Circuit, 15-Amp, 120 V AC	1
12	<u>101828601</u>	Relay, Power, 48-V DC	1
13	<u>101828801</u>	Cordset, AC, 80-Inch Long	1
13	<u>101828802</u>	Cordset, AC, 116-Inch Long	1
14	<u>1015917</u>	Bushing, Strain Relief, AC Cord	1

15

E

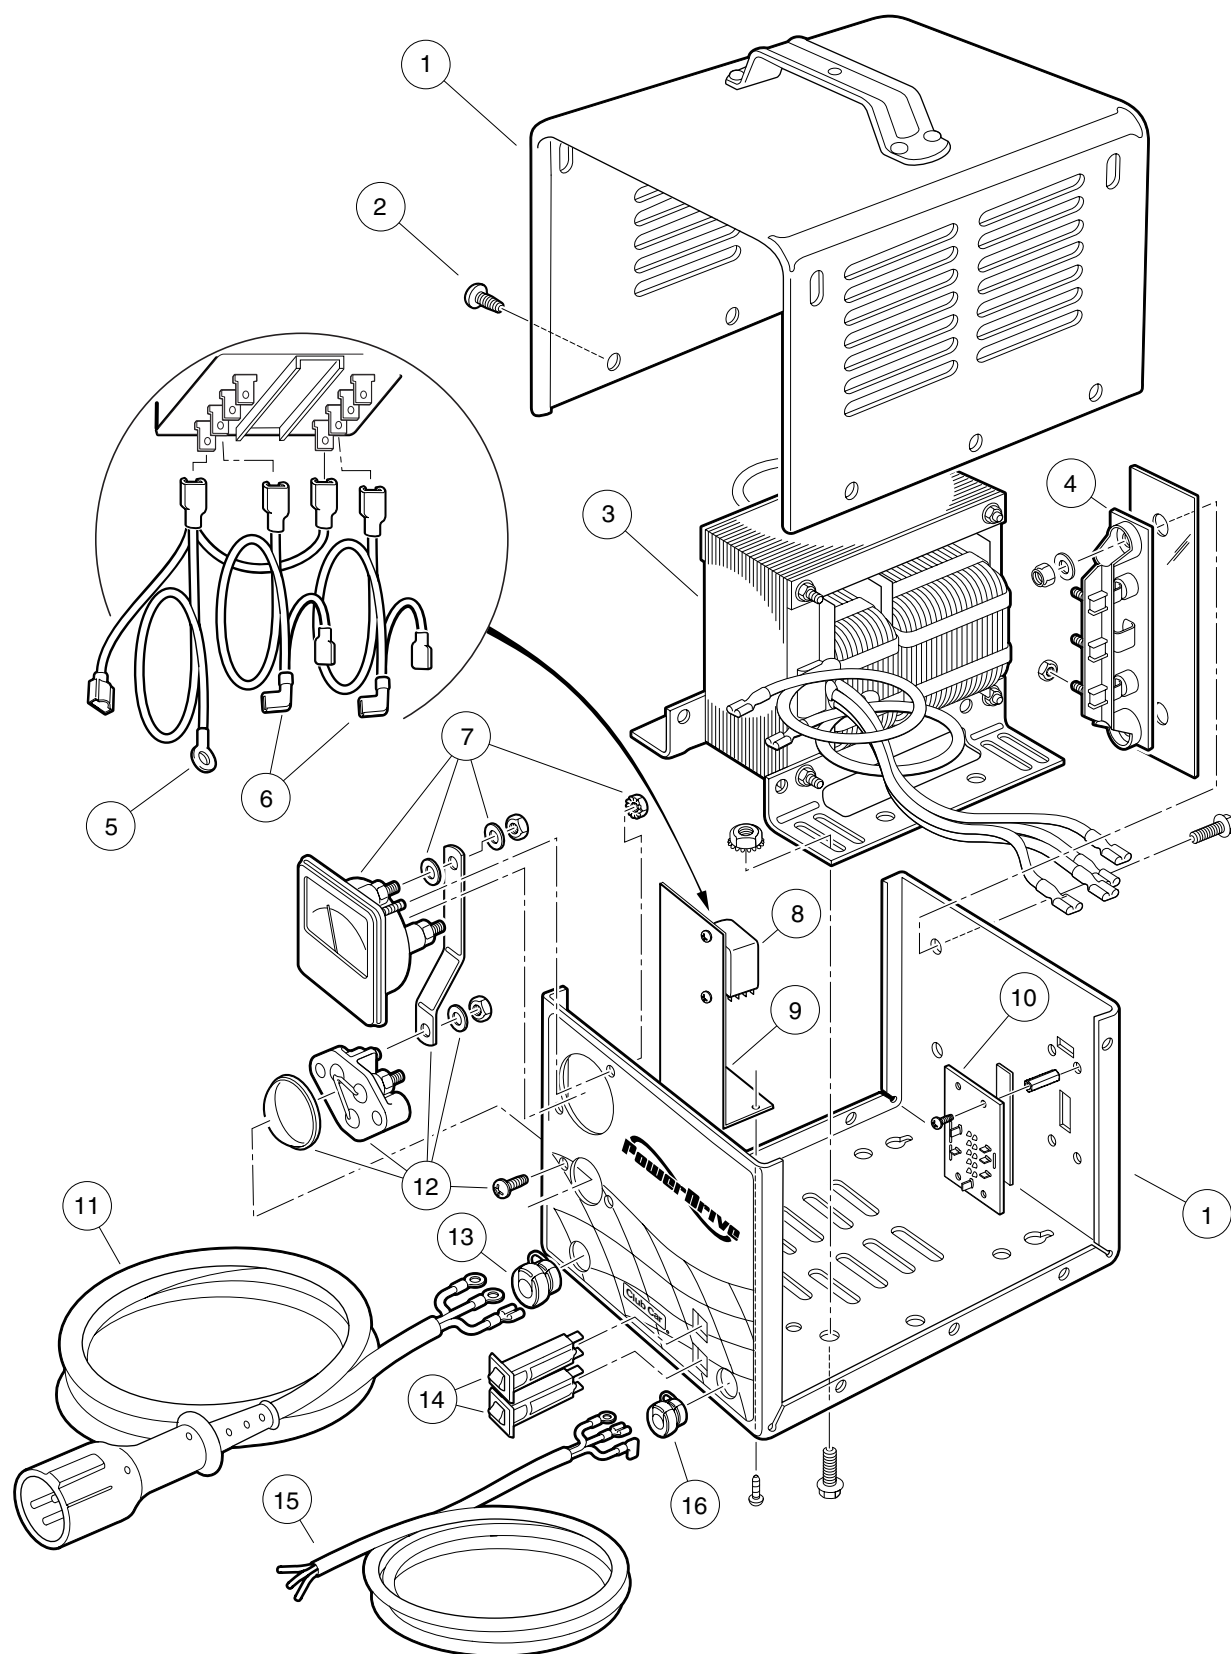


POWERDRIVE CHARGER, EXPORT

ITEM	PART NO.	DESCRIPTION	QTY	15
		1 2 3 4		
	101831503	Charger, Battery, PowerDrive, Export with 4-Position Switch 100 - 200 - 220 - 240 V AC, 48-V DC 50/60-Hz (model number 18780-11) (includes items 1 - 16) 103-inch DC cord with male 3-pin plug, 12-AWG 74-inch AC cord with no plug	1	
	101831504	Charger, Battery, PowerDrive Export with 4-Position Switch 100 - 200 - 220 - 240 V AC, 48-V DC 50/60-Hz (model number 18780-18) (includes items 1 - 16) 144-inch DC cord with male 3-pin plug, 12-AWG 108-inch AC cord with no plug	1	
1	N/A	Assembly, Case	1	
2	7577	Screw, Pan-Head, Self-Tapping, #10-16 x 1/2	10	
3	101838201	Assembly, Transformer	1	
4	<u>1015914</u>	Assembly, Heatsink, with Diodes (includes mounting hardware)	1	
5	101914401	Assembly, AC Voltage Suppressor	1	
6	101838501	Kit, Wire Assembly	1	
7	<u>101828501</u>	Ammeter (includes hardware)	1	
8	<u>101838301</u>	Relay, Power, 48-V DC (includes mounting hardware)	1	
9	<u>101838701</u>	Bracket, Power Relay Mounting	1	
10	101838601	Switch, 4-Position Slide	1	
11	<u>101828901</u>	Cordset, DC, 113-Inch Long with Male 3-Pin Plug, 12-AWG	1	
11	<u>101828902</u>	Cordset, DC, 154-Inch Long with Male 3-Pin Plug, 12-AWG	1	
11	<u>101828903</u>	Cordset, DC, 250-Inch Long with Male 3-Pin Plug, 12-AWG	1	
12	<u>1012101</u>	Assembly, Fuse (includes hardware)	1	
13	<u>1012098</u>	Bushing, Strain Relief, DC Cord, 12-AWG	1	
14	101838401	Breaker, Circuit, 10-Amp	2	
15	<u>101831701</u>	Cordset, AC, 80-Inch Long with Leads (no plug)	1	
15	<u>101831702</u>	Cordset, AC, 116-Inch Long with Leads (no plug)	1	
16	<u>1015917</u>	Bushing, Strain Relief, AC Cord	1	

15

E

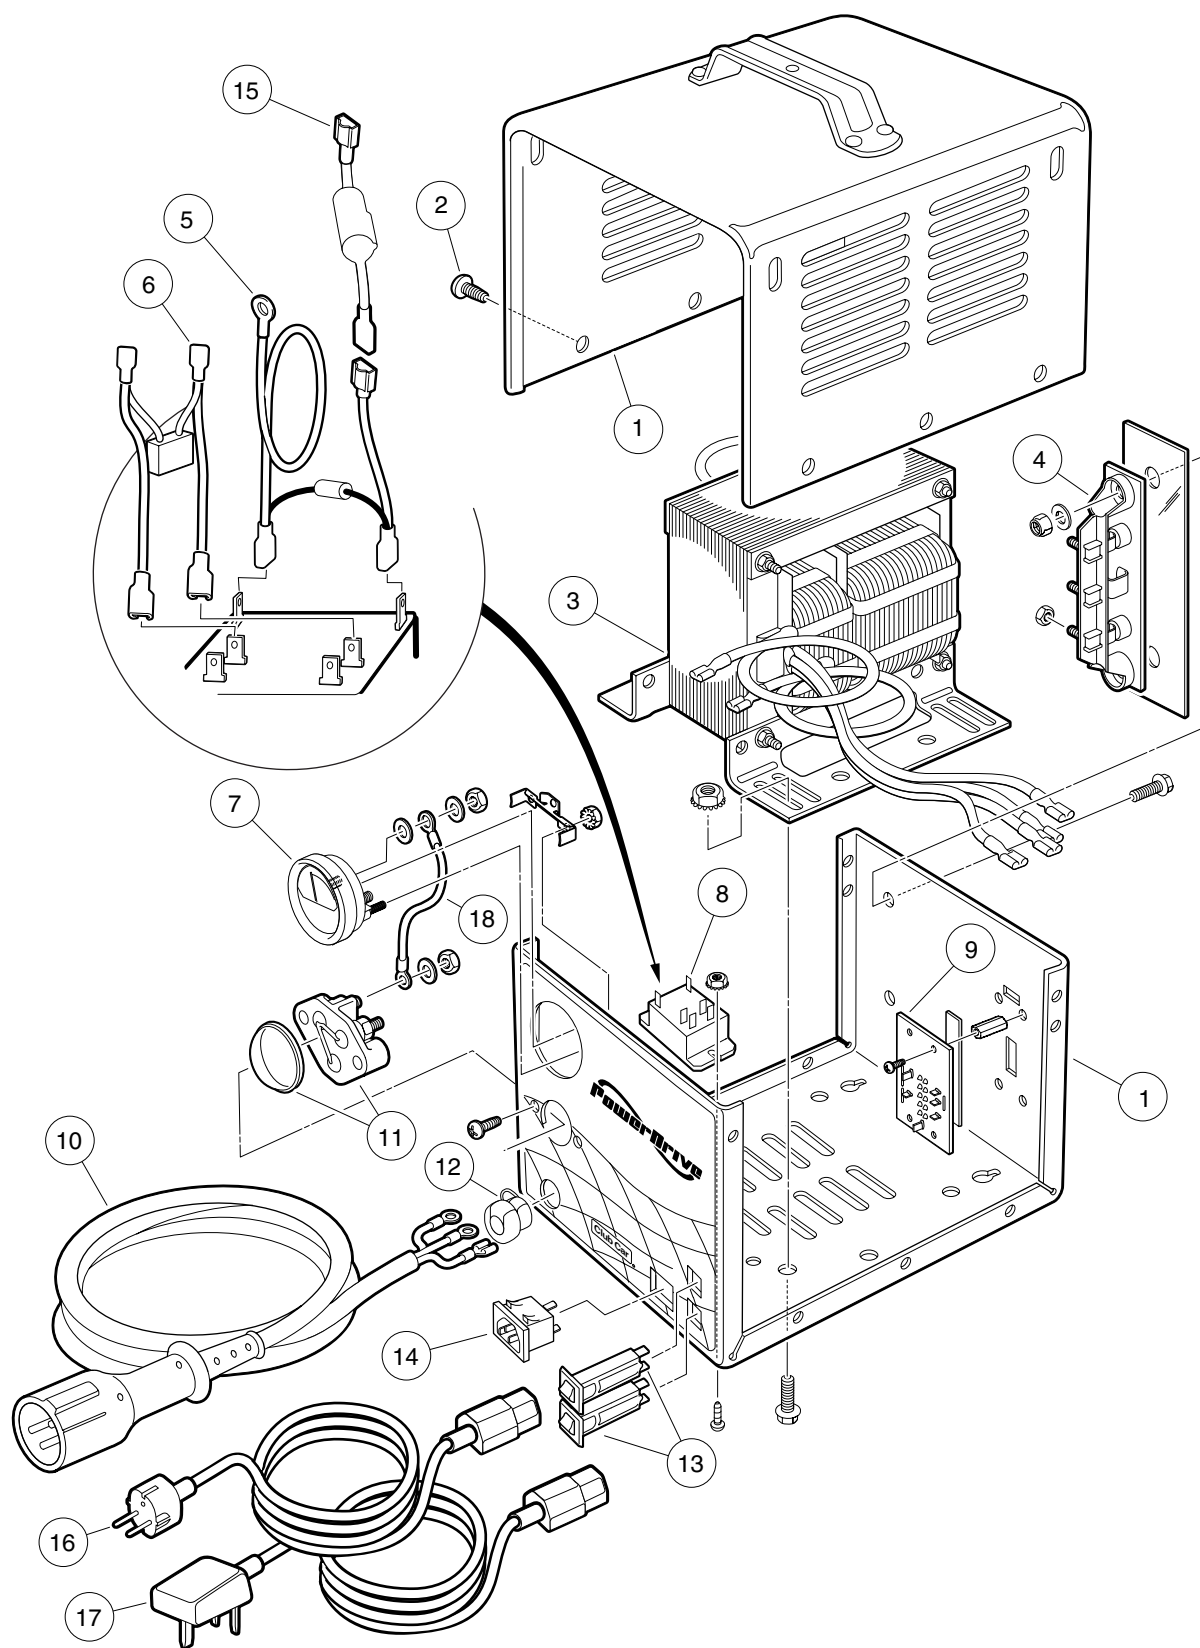

POWERDRIVE CHARGER, EUROPEAN

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
	<u>101956201</u>	Charger, Battery, PowerDrive, European with 4-Position Switch 100 - 200 - 220 - 240 V AC, 48-V DC 50/60-Hz (model number 20300) (includes items 1 - 15) 103-inch (261 cm) DC cord with male 3-pin plug, 12-AWG	1
	<u>101956202</u>	Charger, Battery, PowerDrive European with 4-Position Switch 100 - 200 - 220 - 240 V AC, 48-V DC 50/60-Hz (model number 20310) (includes items 1 - 15) 144-inch (366 cm) DC cord with male 3-pin plug, 12-AWG	1
1	N/A	Assembly, Case	1
2	7577	Screw, Pan-Head, Self-Tapping, #10-16 x 1/2	10
3	****	Assembly, Transformer	1
4	<u>1015914</u>	Assembly, Heatsink, with Diodes (includes mounting hardware)	1
5	****	Assembly, AC Voltage Suppressor	1
6	****	Kit, Wire Assembly	1
7	101976601	Ammeter (includes hardware)	1
8	<u>101987501</u>	Relay, Power, 48-V DC (includes mounting hardware)	1
9	101838601	Switch, 4-Position Slide	1
10	<u>101828901</u>	Cordset, DC, 103-Inch (261 cm) Long with Male 3-Pin Plug, 12-AWG	1
10	<u>101828902</u>	Cordset, DC, 144-Inch (366 cm) Long with Male 3-Pin Plug, 12-AWG	1
10	<u>101828903</u>	Cordset, DC, 250-Inch (635 cm) Long with Male 3-Pin Plug, 12-AWG	1
11	<u>1012101</u>	Assembly, Fuse (includes hardware)	1
12	<u>1012098</u>	Bushing, Strain Relief, DC Cord, 12-AWG	1
13	101838401	Breaker, Circuit, 10-Amp	2
14	101973501	Receptacle, AC Cord	1
15	****	Assembly, Current Limiter	1
16	101958301	Cordset, AC, Continental Europe, 96-Inch (244 cm) Long (with male 2-pin plug)	1
17	<u>101958201</u>	Cordset, AC, U.K., 96-Inch (244 cm) Long (with male 3-pin plug)	1
18	N/A	Wire, Jumper.....	1
	****	Special order item available on request	

15

E

15

E

MAINTENANCE AND SERVICE TOOLS

16


G

E

16


G

E

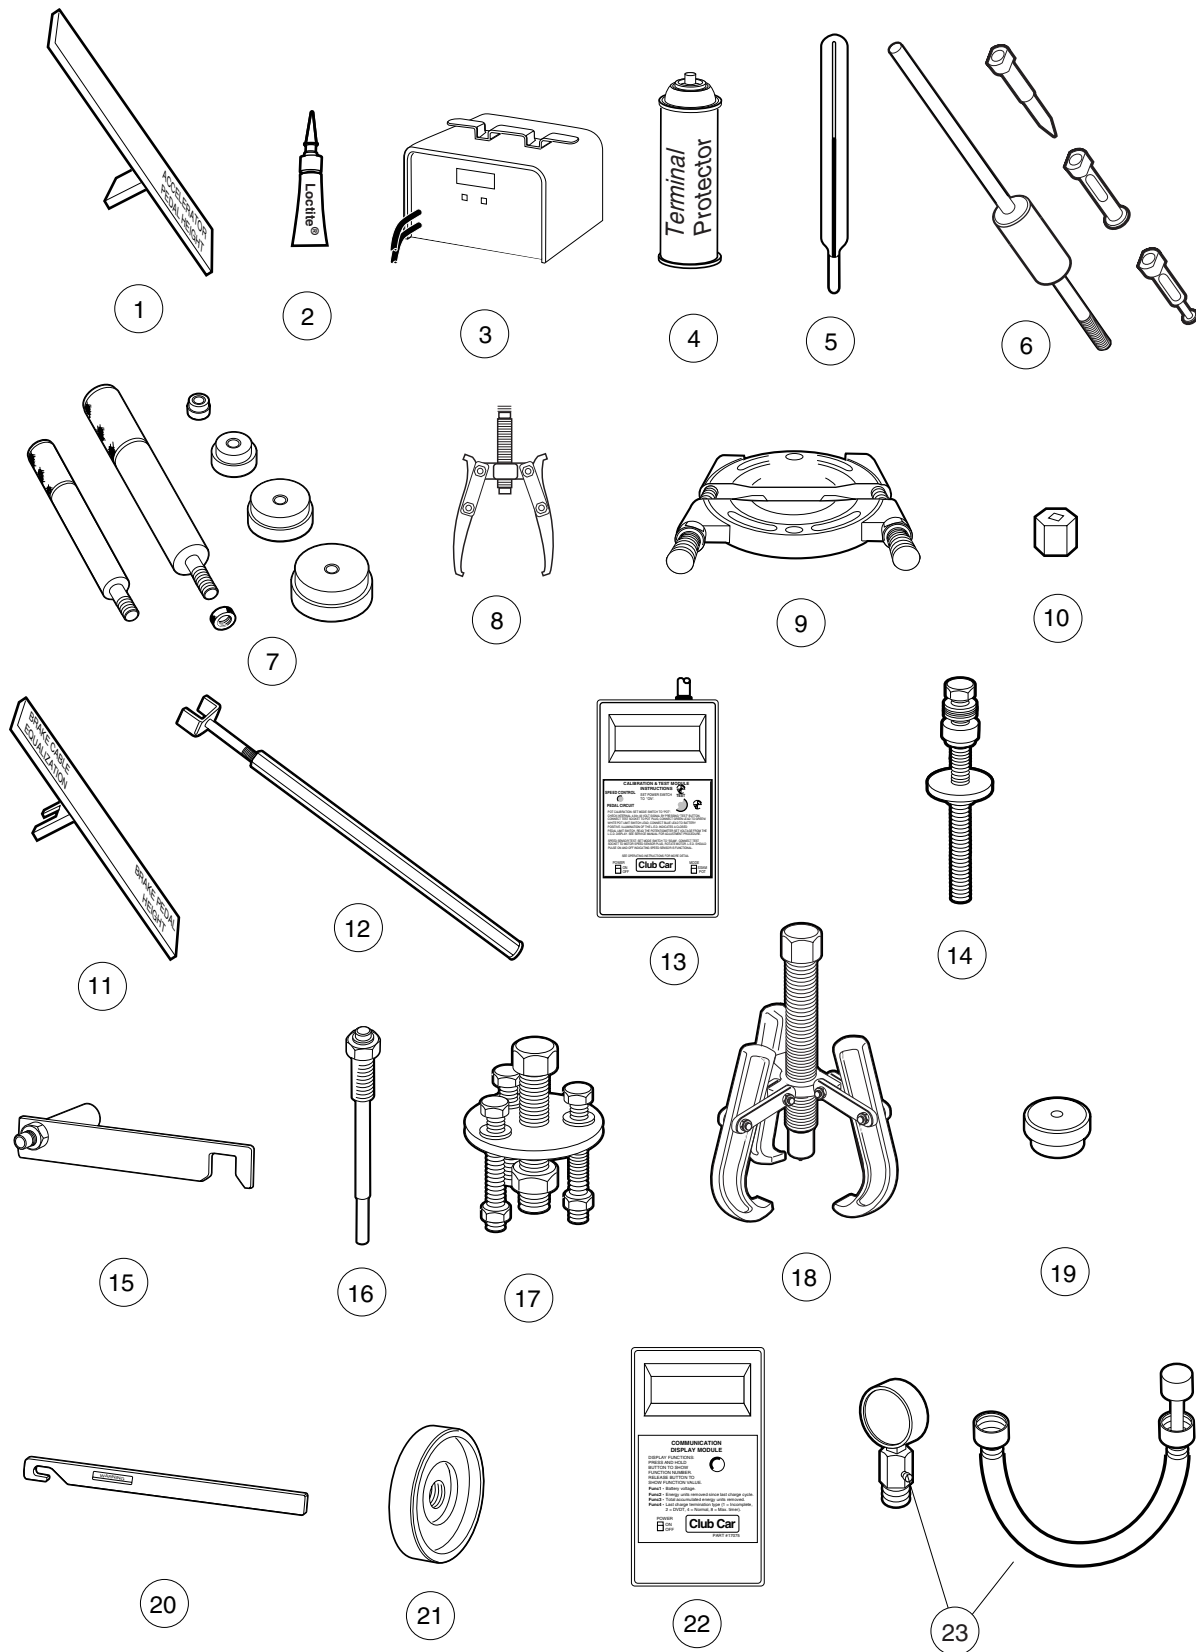


MAINTENANCE AND SERVICE TOOLS


ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC	16 G E
		1 2 3 4 The following tool list includes all tools available from Club Car for maintenance and service procedures for gasoline and/or electric vehicles, both past and present models. Be sure to carefully examine the tool list for applicability to your vehicle before ordering.			
1	<u>101871001</u>	Accelerator Pedal Adjustment Tool	1	1	
2	<u>101813202</u>	Adhesive, Guide Ring, 3-Gram Tube	1	1	
3	<u>101831901</u>	Battery Discharge Machine, 36/48 Volt		1	
4	<u>1014305</u>	Battery Terminal Protector Spray	1	1	
5	<u>1011767</u>	Battery Thermometer		1	
6	<u>1016417</u>	Bearing and Oil Seal Remover Assembly	1	1	
7	<u>1016416</u>	Bearing Driver Set	1	1	
8	<u>1012811</u>	Bearing Puller	1	1	
9	<u>1012812</u>	Bearing Puller Wedge Attachment	1	1	
10	<u>1013582</u>	Brake Adjustment Tool (used only on vehicles with manually adjusted mechanical brakes)	1	1	
	<u>102249901</u>	Brake Pedal Adjustment Tool Kit (used for the Carryall electric industrial truck only) (includes items 11 and 12)		1	
11	****	Brake Pedal Adjustment Tool		1	
12	****	Brake Pedal Tension Tool		1	
13	<u>101887101</u>	Calibration Test Module		1	
14	<u>101808401</u>	Cam Installation Tool	1		
	<u>1014510</u>	Clutch Tool Kit (includes items 15 - 21)	1		
15	<u>1014498</u>	Clutch Alignment Tool (for pre-unitized transaxle vehicles built prior to 1997 model year)	1		
16	<u>1014496</u>	Drive Clutch Puller	1		
17	<u>1014497</u>	Drive Clutch Hub Puller	1		
18	<u>1014508</u>	Driven Clutch Cam Puller	1		
19	<u>1014507</u>	Driven Clutch Puller Plug	1		
20	<u>1015524</u>	Drive Clutch Holder Tool Assembly	1		
21	<u>101809101</u>	Press Weldment	1		
22	<u>101831801</u>	Communication Display Module		1	
23	<u>101641002</u>	Compression Gauge and Adapter	1		
		Please refer to the maintenance and service manual for proper tool application. **** Special order item available upon request			

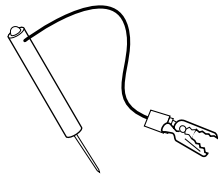


24

 

25

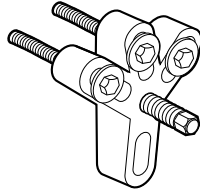


26

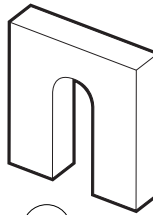


27



 28




29

 


30



31

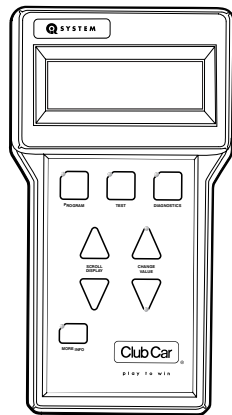


32

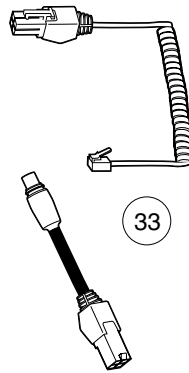

33

 
34




35



36

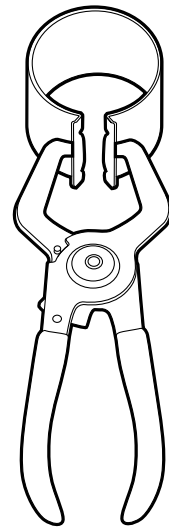

37

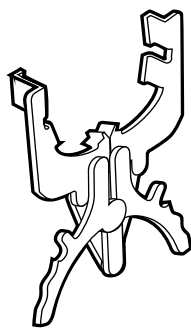

38



39



40



41



42



43



44



45


MAINTENANCE AND SERVICE TOOLS, CONTINUED

ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC	16 G E
		1 2 3 4			
24	1011273	Continuity Tester	1	1	
25	<u>1012151</u>	Dry Moly Lubricant	1	1	
26	<u>1016627</u>	Flywheel Puller Kit	1		
27	<u>1016418</u>	Gear Yoke	1	1	
28	<u>101933101</u>	Governor Shaft Installation Tool	1		
29	102169401	Hydraulic Brake Adjuster (for vehicles equipped with hydraulic brakes)	1		
30	<u>1011478</u>	Hydrometer	1	1	
31	<u>1013593</u>	Internal Retaining Ring Pliers	1	1	
32	102248801	IQ Display Module (IQDM) Kit (for IQ System vehicles only) (includes items 33 and 34)		1	
33	<u>102241501</u>	Cable, IQDM		1	
34	<u>102251501</u>	Adaptor, Cable		1	
35	<u>101928701</u>	Liquid Gasket (transaxle case)	1	1	
36	<u>102243402</u>	Moly-Teflon Lubricant (4-oz. (113-gram) tube)		1	
37	<u>1016414</u>	Piston Ring Compressor Kit (FE290, FE350 and FE400 engines)	1		
38	<u>1016415</u>	Piston Ring Pliers	1		
39	<u>1012549</u>	Retaining Ring Pliers, 45° External	1	1	
40	<u>1012560</u>	Retaining Ring Pliers, 90° Internal	1	1	
41	<u>101823101</u>	Safety First Card (50 per pack)	1	1	
42	<u>1012809</u>	Seal Puller	1	1	
43	<u>102330901</u>	Spanner Wrench (for coil over shock front suspension vehicles)	1		
44	<u>1014264</u>	Steering Column Bearing Press Tool	1	1	
45	<u>1014259</u>	Steering Column Retaining Ring Tool	1	1	
		Please refer to the maintenance and service manual for proper tool application.			


16

G


E

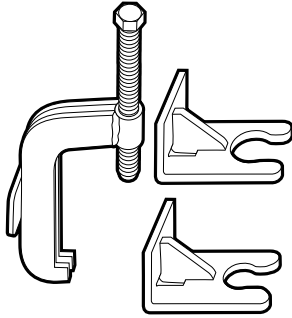

46

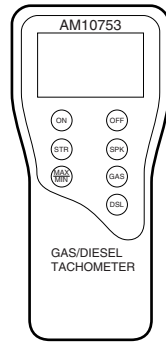


47

 


48




49

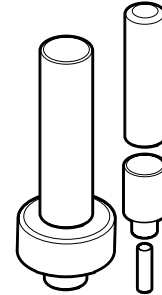


50

 


51

 

52

 


53

 

54




55

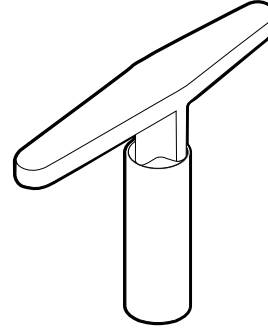


56




57

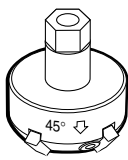


58

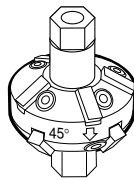


59

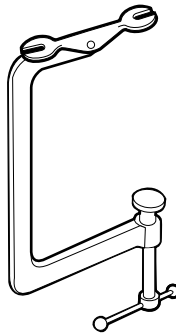

60

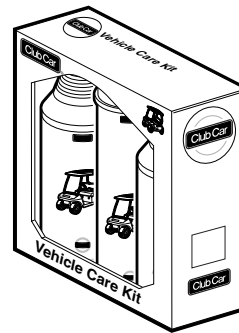

61

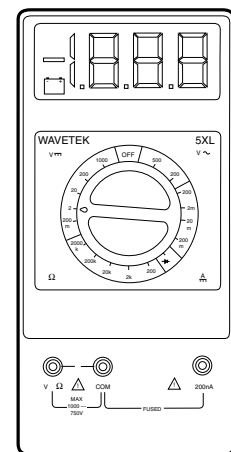

62

MAINTENANCE AND SERVICE TOOLS, CONTINUED

ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC	16 G E
		1 2 3 4			
46	102061201	Steering Wheel Puller Tool	1	1	
47	<u>AM10753</u>	Tachometer	1		
	<u>AM10770</u>	Wire Lead, Gasoline Engine (not shown)	1		
	<u>AM10771</u>	Wire Lead, Diesel Adaptor (not shown)	1		
48	<u>101997201</u>	Paint, Touch-Up – Beige	1	1	
48	<u>101997202</u>	Paint, Touch-Up – White	1	1	
48	<u>101972003</u>	Paint, Touch-Up – Red	1	1	
48	<u>101997204</u>	Paint, Touch-Up – Gray	1	1	
48	<u>101972005</u>	Paint, Touch-Up – Dark Gray	1	1	
48	<u>101972006</u>	Paint, Touch-Up – Royal Blue (Pacific Blue)	1	1	
48	<u>101972007</u>	Paint, Touch-Up – Black	1	1	
48	<u>101997209</u>	Paint, Touch-Up – Dark Green	1	1	
48	<u>101997211</u>	Paint, Touch-Up – Classic Blue (Navy)	1	1	
48	<u>101997212</u>	Paint, Touch-Up – Burgundy	1	1	
49	<u>101709701</u>	Paint, Spray, Wheel Touch-Up – Beige	1	1	
49	<u>101709702</u>	Paint, Spray, Wheel Touch-Up – White	1	1	
49	<u>101709704</u>	Paint, Spray, Wheel Touch-Up – Gray	1	1	
50	<u>1014115</u>	Transmission Tool Kit	1		
51	<u>1014161</u>	Transaxle Pinion Seal Tool	1		
52	<u>1014162</u>	Transaxle Axle Seal Tool	1		
53	<u>1016413</u>	Valve Clearance Adjuster Screw Holder (for FE290 engines only)	1		
54	<u>101641201</u>	Valve Guide Reamer	1		
55	<u>101641202</u>	Arbor	1		
56	<u>1016551</u>	Valve Seat Cutter T-Wrench	1		
57	<u>1016552</u>	Valve Seat Cutter Guide	1		
58	<u>1016553</u>	Valve Seat Cutter, 45° (32 mm diameter) (for FE290 engines only)	1		
59	<u>1016554</u>	Valve Seat Cutter, 45°/30° (35 mm diameter)	1		
60	<u>101641101</u>	Valve Spring Compressor	1		
61	<u>AM10021</u>	Vehicle Care Kit	1	1	
62	<u>1011480</u>	Volt Ohm Meter	1	1	
63	<u>101611003</u>	Tune-Up Kit, All OHV (includes air filter, spark plug, oil filter, fuel filters) (not shown)	1		
		Please refer to the maintenance and service manual for proper tool application.			

16

G

E

INDEX

Part Number and Page

AM10021	16-7	7893	6-7	1011273	16-5
AM10080	11-5	7910	5-9	1011283	13-3
AM10081	11-5	7973	1-3, 1-5, 6-5	1011291	11-7
AM10419	10-5	8056	6-11, 12-19	1011303	4-3, 4-7
AM10724	7-5	8057	6-11, 12-19	1011304	5-9, 5-13
AM10753	16-7	8058	6-11, 12-19	1011382	1-3, 1-5
AM10770	16-7	8067	5-9, 5-13	1011393	5-9, 5-13
AM10771	16-7	8168	8-11	1011394	1-3, 1-5
CCX8506	15-3	8233	1-7, 1-9, 1-11, 1-13, 1-15, 1-17, 1-19, 1-21, 4-9, 6-5, 11-3, 12-3, 12-17	1011402	4-5
183	1-15, 1-17, 1-19, 8-11, 11-3	8248	1-9, 1-15, 1-17, 6-5, 8-3, 12-3	1011411	13-3
320	5-7	8251	1-7, 1-9	1011415	5-15
324	1-19	8450	12-15	1011418	4-5
332	1-7, 1-9, 1-11, 1-13, 1-15, 1-17, 1-19, 1-21, 8-11, 9-3, 12-3, 12-15, 12-17	8455	6-5	101146302	4-3, 4-7
334	4-9, 5-3, 5-5	8626	4-5	1011464	4-3, 4-7
343	1-13	8717	11-3	1011465	4-3, 4-7
357	5-9, 10-3	8745	5-9, 5-13	1011466	4-3, 4-7
451	4-3, 9-3, 12-17, 13-3	8754	4-9, 5-3, 5-5, 5-7, 5-9, 5-15, 6-15	1011467	4-3, 4-7
705	6-15	8755	5-9, 5-15	1011478	16-5
706	5-9	8861	5-7	1011480	16-7
808	10-3	8916	1-19	1011578	5-3, 12-19
1017	12-15	8963	1-19	1011652	1-11
1028	4-5, 12-17	8990	5-5, 12-5	1011694	4-9
1032	4-5	1010005	5-9, 5-13	1011697	1-13, 5-3, 7-15, 8-9, 9-3
1035	5-5, 5-7	1010124	5-7, 5-11	1011700	4-9
1218	12-15	1010138	5-7, 5-11	1011734	4-9
1241	1-3, 1-5, 1-11, 1-15, 1-17, 1-19, 4-5, 4-9, 6-15, 6-17, 12-15	1010142	1-19, 1-21	1011767	16-3
1242	4-5, 6-7, 6-15, 12-15	1010145	5-15	1011779	4-3, 4-5, 4-7
1308	5-7	1010150	5-9, 5-13	1011852	1-19
1606	1-15, 1-17, 8-11	1010177	5-9, 5-13	1011862	1-19
1620	1-3, 1-5	1010219	5-7, 5-11	1011865	1-19
1624	4-9, 5-5	1010237	1-19	1011868	1-19
1631	8-11	1010434	1-5, 1-9	101187702	4-5, 4-9
1703	1-19, 1-21	1010435	1-3, 1-5	1011878	1-19
2402	5-7	1010543	1-11	1011883	1-19
7048	5-9, 5-13	1010577	1-19	1011887	5-9, 5-13
7173	6-15, 6-17, 12-15	1010805	4-5	1011892	5-9, 5-13
7174	5-3, 6-15, 8-9, 9-3, 12-15, 13-3	1010829	4-3, 4-5, 4-7	1011897	1-23
7251	1-3, 1-5	1010850	4-3, 4-7	1011930	5-5, 5-7, 5-11
7310	2-3	1010877	4-5	1011931	12-17
7330	11-7, 14-3	1010878	4-5	1011937	1-19
7335	11-5, 14-3	1010921	1-15, 1-17, 1-19, 4-5	1011964	1-19
7336	14-3	1010927	4-5	1011965	1-19, 8-3
7473	1-3, 1-5, 1-13, 1-15, 1-17, 1-19, 4-5, 4-9, 6-15, 6-17	1010932	4-5	1011988	1-11, 1-19, 8-3
7539	5-7, 5-11	1010933	4-5	1012030	5-9
7540	5-5, 5-7, 5-11	1010934	6-17, 13-3	1012047	1-9
7555	5-5, 5-7	1010954	6-5, 6-7, 11-3	1012098	15-3, 15-5, 15-7
7569	5-15	1010984	2-3, 5-9, 5-13	1012101	15-3, 15-5, 15-7
7577	15-3, 15-5, 15-7	1011014	1-3, 1-5	1012124	8-3
7602	5-5, 5-7	1011017	1-3, 1-5	1012151	16-5
7716	4-5, 4-9	1011019	1-3, 1-5	1012159	1-15, 1-17
7840	5-9	1011084	4-9	1012164	7-15
7847	1-3, 1-5, 1-7, 1-9, 9-3, 12-17, 13-3	1011114	4-3, 4-7	1012177	13-3
		1011137	4-7	1012181	5-15
		1011229	6-9	1012182	5-15
		1011230	1-3, 1-5	1012285	1-11, 6-5, 8-9, 11-3, 12-15, 12-17
				1012295	6-7

INDEX

1012303	5-9, 5-13, 5-15	1013357	1-9	1014078	10-5
1012304	5-15	1013461	8-3	1014080	10-5
1012328	6-17	1013462	8-3	1014089	6-5
1012333	6-5	101347503	1-3	1014115	16-7
1012382	6-3	1013494	1-3, 1-5	1014116	8-3
1012412	1-7, 1-9	1013496	3-5	1014119	6-3
1012431	6-11	1013509	1-15, 1-17	1014125	5-3
1012438	1-19, 8-11	1013531	4-5	1014126	5-3
1012462	1-19	1013582	16-3	1014145	6-5, 6-7
1012467	5-5	1013583	8-3	1014153	4-3, 4-7
1012505	6-9, 12-5	1013587	6-5	1014161	16-7
1012528	9-3, 12-15	1013589	6-5, 6-7	1014162	16-7
1012549	16-5	1013590	6-5	1014189	1-17
1012560	16-5	1013591	6-5	1014193	11-7
1012565	5-3	1013593	16-5	1014198	1-3
1012566	5-3	1013609	6-7	1014201	13-3
1012571	7-15	1013677	3-5	1014207	11-7
1012581	1-7	1013687	8-3	1014213	5-3
1012594	6-5	1013692	8-3	1014214	5-3
1012597	1-11	1013700	8-9	1014216	5-3
1012604	5-3	1013734	9-3, 12-15	1014217	5-3
1012605	5-3	1013746	8-3, 8-7	1014259	16-5
1012649	8-3	1013746'	8-3	1014264	16-5
1012656	1-11	1013759	11-3	1014276	5-9, 5-13
1012657	1-11	1013768	11-7	1014288	5-3, 6-17
1012711	11-3	1013769	11-7	1014289	6-13
1012714	11-5	1013770	11-7	1014304	12-19
1012740	11-5	1013771	11-7	1014305	1-9, 16-3
1012741	11-5	1013772	11-7	1014306	1-11, 1-19, 1-21
1012747	11-5	1013773	11-7	1014374	6-17
1012748	11-5	1013774	11-7	1014375	6-17
1012752	11-3	1013787	11-7	1014392	1-9
1012809	16-5	1013790	11-7	1014413	8-9
1012811	16-3	1013791	11-7	1014435	1-23
1012812	16-3	1013792	11-7	1014437	1-23
1012830	6-15, 9-3	1013794	11-7, 14-3	1014441	1-23
1012896	11-3	1013861	5-3	1014453	10-3
1012981	7-5	1013869	4-5	1014454	10-5
1012987	6-5	1013870	4-5	1014476	12-17
1013001	6-13	1013871	4-9	1014496	16-3
1013003	6-13	1013876	4-5	1014497	16-3
1013005	6-13	1013924	4-3, 4-7, 7-15	1014498	16-3
101301102	6-13	1014007	4-9, 11-3	1014507	16-3
1013032	1-9	1014045	12-17	1014508	16-3
1013035	5-5	1014049	10-3	1014510	16-3
1013042	5-5	1014050	10-3	1014540	12-7
1013044	5-5	1014051	10-3	1014555	5-15
1013051	5-5	1014052	10-3	1014645	1-3, 1-5
1013052	5-5	1014055	10-3	1014654	12-17
1013061	8-3, 11-3, 12-7	1014056	10-3	1014727	6-5
101313401	7-3	1014057	10-3	1014728	12-17
1013135	5-9, 5-13	1014058	10-3	1014771	2-3
1013207	4-3, 5-15	1014059	10-3	1014807	6-5, 6-7
1013312	1-11	1014065	6-5	1014808	6-7
1013343	1-3, 1-5	1014070	10-5	1014902	5-15
1013344	1-3, 1-5	1014072	10-5	1014928	8-3

INDEX

1015032	1-3, 1-5	1016289	10-3	101648102	8-7
1015064	6-5	1016337	11-5	101648203	7-7
1015072	12-19	1016338	11-5	1016483	7-9
1015137	8-3, 8-7	1016341	11-3	1016486	8-5
1015139	8-3	1016342	6-5	1016489	7-9
1015143	8-3	1016346	5-7, 5-11	101649002	8-7
1015188	8-3	1016349	5-7, 5-11	1016494	7-11
101524002	6-15	1016350	5-7, 5-11	1016496	7-11
1015332	6-3, 7-3	1016353	5-7, 5-11	1016497	7-5
1015345	6-7	1016379	1-13	1016499	8-5
1015371	6-7	1016380	6-3	1016501	8-5
1015372	6-7	1016384	5-9, 5-13	1016502	7-7
1015373	6-7	1016385	5-7, 5-11	1016506	7-11
1015405	6-7	1016386	5-9, 5-13	1016507	7-3
1015408	8-9	1016387	5-9, 5-13	1016510	7-11
1015426	8-11	1016389	5-9, 5-13	1016513	11-3
1015453	1-19	101641002	16-3	101651406	2-3
101547601	3-5	101641101	16-7	101651407	2-3
1015524	16-3	101641201	16-7	101651409	2-3
1015525	1-9	101641202	16-7	1016517	7-9
1015583	5-9, 5-13, 5-15	1016413	16-7	1016518	7-9
1015597	5-5, 5-7, 5-9, 5-11, 5-13	1016414	16-5	1016519	7-9
101562701	1-11	1016415	16-5	1016521	7-11
101562702	1-11	1016416	16-3	1016531	7-3
1015649	7-3	1016417	16-3	1016535	7-11
1015707	2-3	1016418	16-5	1016537	7-7
1015720	6-9	101642575	8-5	1016538	7-11
1015737	6-3, 6-7	101642578	8-5	1016539	7-3
1015741	6-7	101642580	8-5	1016541	7-13
1015752	6-7, 8-11, 12-9	101642582	8-5	1016544	7-5, 7-9, 7-11
1015769	6-3	101642585	8-5	1016546	8-9
1015777	6-7	1016429	7-7	1016547	7-3, 7-13, 8-7
1015814	9-3	1016432	7-7, 11-3	1016549	7-9
1015845	8-9	1016436	7-9	1016551	16-7
101584502	8-9	1016437	8-5	1016552	16-7
1015878	6-7	1016438	8-7	1016553	16-7
1015902	1-11	1016440	8-7	1016554	16-7
1015914	15-3, 15-5, 15-7	1016441	8-7	1016557	4-3, 4-7
1015917	15-3, 15-5	1016442	7-9	1016560	7-9
1015920	6-15	1016444	8-7	1016561	7-5
1015932	6-15	1016445	7-5	1016562	7-5, 7-13
1015969	7-3	1016449	7-9	1016563	7-9
1016003	8-3	1016450	7-9	1016564	7-11
1016004	8-3	1016452	7-9	1016566	7-9
1016074	6-15	1016454	7-11	1016569	7-9
101611003	16-7	1016455	7-5	1016570	7-7
1016154	5-3	1016456	7-3, 7-5	1016571	7-13
1016156	5-3	1016457	7-7	1016572	8-7
1016175	12-15	1016458	7-9	1016573	4-3, 4-7
1016183	5-3	1016467	7-7	1016576	7-7
1016201	6-5	1016470	7-13	1016578	7-5
1016202	8-9	1016472	7-11	1016579	7-5
1016214	5-3	1016473	7-7	1016581	7-7
101621601	3-3	1016474	7-9	1016582	8-7
1016219	5-3	1016479	7-9	1016583	7-9
1016269	1-19, 1-21, 5-3	1016480	8-7	1016584	7-11

INDEX

1016585	8-5	101728202	1-11	101745702	7-13
1016586	7-5	101728203	1-11	1017458	7-7
1016587	7-5	101728204	1-11	1017460	7-7
1016588	7-5	1017284	1-15, 1-17	1017461	8-5
101660404	1-3, 1-5	101728701	1-9	1017463	7-5
1016627	16-5	101728702	1-9	1017466	8-7
1016630	6-9	101728704	1-9	1017471	7-13
1016663	5-3	101728708	1-9	1017472	7-11
1016672	11-7	101728709	1-9	1017473	7-9
101668201	12-19	101728712	1-9	1017474	7-3
101672701	6-5	1017289	1-3, 1-5	1017475	7-3
101674702	4-9	101729401	1-15	1017476	7-3
1016751	1-11	101729402	1-15	1017486	7-3
101675501	1-11	1017299	1-15, 1-17	1017487	7-11
101675502	1-11	1017310	1-11	1017490	7-5
101677701	1-11	1017313	5-3	1017500	7-3
101677703	1-11	1017314	5-3	1017501	7-13
1016795	1-21	1017315	5-3	1017502	7-13
1016801	10-3	101731601	1-7	1017503	7-13
1016845	1-21	101731602	1-7	1017504	7-11
1016848	1-19	101731604	1-7	1017507	7-7
1016849	6-9, 12-5	101731608	1-7	1017508	7-11
1016851	6-9, 6-11, 12-5, 12-19	101731609	1-7	1017510	7-13
1016859	6-9, 6-11, 12-5, 12-19	101731612	1-7	1017512	7-13
1016868	1-3, 1-5	1017317	5-3	1017513	7-11
1016875	1-13	1017327	10-5	1017514	7-11
1016876	1-13	1017350	1-21	101751801	7-11
1016877	12-7	101735601	1-21	101751802	7-11
1016883	6-15	101735701	1-19	101751803	7-11
1016904	9-3	101736001	1-21	1017653	6-13
101692502	1-3	101737002	2-3	1017672	1-15, 1-17
1016947	6-5	1017378	4-9	1017686	10-5
1016952	1-3, 1-5, 1-7	1017380	4-9	1017689	9-3
1016967	1-3, 1-5	1017384	1-11	101769302	2-3
1017029	4-5	1017417	1-21	1017695	1-11
101705701	3-3	1017420	1-19	1017696	4-9
1017079	1-13	1017424	4-9	1017705	12-7
1017080	1-3, 1-5	1017434	7-9	101773301	7-13
1017082	8-3, 11-3	1017435	7-9	101773302	7-13
101708301	1-3, 1-5, 1-7	1017442	7-7	101773303	7-13
101709701	16-7	1017443	7-11	101773304	7-13
101709702	16-7	1017444	7-9	101773305	7-13
101709704	16-7	1017445	7-9	101773306	7-13
1017141	1-9	1017446	7-9	101773307	7-13
1017188	10-3, 10-5	1017447	7-11	101773308	7-13
1017211	4-5	1017448	7-5	101773309	7-13
1017226	5-3	101744901	7-13	101773310	7-13
1017231	11-3	101744902	7-13	101773311	7-13
1017234	1-7	1017450	7-13	1017748	1-9
1017259	1-11	101745101	7-13	1017774	1-11
1017262	1-11	101745102	7-13	1017789	1-19
1017266	5-7, 5-11	1017453	7-13	1017832	1-7
1017271	1-15, 1-17	1017454	7-9	1017841	1-13
1017273	5-3	1017455	7-5	101791101	4-3
1017281	1-15, 1-17	1017456	7-7	1017936	1-9
101728201	1-11	101745701	7-13	101796201	4-9

INDEX

101796501	12-7	101832701	7-15	101876501	6-13
101796801	12-7	101832901	7-15	101876901	5-9, 5-13
101797801	12-19	101833001	7-15	101877001	5-9, 5-13
101801001	12-7	101833101	7-15	101877601	6-13
101802101	12-7	101833301	7-15	101877701	6-13
101802201	15-3	101833401	10-5	101878101	6-13
101802202	15-3	101833601	11-3	101878201	4-5
101802203	15-3	101833701	6-13, 6-15	101878302	5-5
101803001	12-19	101833902	10-3	101879001	6-13
101803002	12-19	101834001	10-5	101879401	5-5
1018038	12-15	101834502	6-9, 12-5	101879501	5-5
101804301	8-11	101834601	7-15	101879601	5-5
101806901	1-9	101834801	11-3	101879701	5-5
101808401	16-3	101835601	8-3	101879801	5-5
101809101	16-3	101836201	10-5	101879901	5-5
101811301	8-11	101837001	1-9	101880001	5-5
101811901	8-11	101837101	8-11	101880101	5-5
101812301	8-11	101837301	6-3, 6-15	101880201	5-5
101813001	8-11	101838201	15-5	101880301	5-5
101813202	16-3	101838301	15-5	101880901	1-11
101817401	4-9	101838401	15-5, 15-7	101881101	7-5
101818801	4-9	101838501	15-5	101881701	1-11, 8-11
101819701	15-3	101838601	15-5, 15-7	101884801	7-15
101821501	8-11	101838701	15-5	101884902	2-3
101823101	16-5	101850701	1-11	101886101	11-3
101824401	8-3	101850901	1-11	101887101	16-3
101825101	3-3	101851101	6-9, 12-5	101887601	7-3
101825701	8-11	101855001	12-3	101887903	12-15
101826201	12-5	101855901	7-15	101889401	11-5
101826301	6-9	101856001	12-3	101889901	11-5
101827101	7-15	101856101	12-3	101890001	11-5
101828301	15-3	101856102	6-7	101890101	11-3
101828501	15-3, 15-5	101859401	9-3	101890201	11-3
101828601	15-3	101861901	4-9	101890501	11-3
101828801	15-3	101862001	4-9	101890601	11-3
101828802	15-3	101865301	4-5	101890901	11-7
101828901	15-3, 15-5, 15-7	101869001	4-7	101891001	11-7
101828902	15-3, 15-5, 15-7	101869302	6-13	101891301	11-3
101828903	15-3, 15-5, 15-7	101870501	5-7, 5-11	101891401	11-7
101830601	6-9, 12-5	101870601	5-7, 5-11	101891501	11-7
101830701	6-9, 12-5	101871001	16-3	101891601	11-5
101831101	15-3	101874601	4-5, 4-7	101891901	11-5
101831503	15-5	101874901	6-13	101892001	11-5
101831504	15-5	101875001	6-13	101892201	11-5
101831701	15-5	101875101	6-13	101892301	11-5
101831702	15-5	101875201	6-13	101892401	11-5
101831801	16-3	101875301	6-13	101892501	11-5
101831901	16-3	101875401	6-13	101892601	11-5
101832001	12-7	101875501	6-13	101892701	11-7
101832201	8-9	101875601	6-13	101892901	11-3
101832202	8-9	101875701	6-13	101893201	11-5
101832301	8-9	101875802	6-13	101893801	11-3
101832302	8-9	101876001	6-13	101893901	11-5
101832402	8-9	101876202	6-13	101894901	12-7
101832501	8-9	101876301	6-13	101895101	13-3
101832601	7-15	101876402	6-13	101895401	14-3

101895501	14-3	101924301	12-15	101973401	8-7
101895601	14-3	101925701	8-11	101973501	15-7
101895701	14-3	101925801	13-3	101975101	5-15
101895801	14-3	101926802	8-11	101975201	5-15
101895901	14-3	101926901	11-3	101976001	14-3
101896001	14-3	101927101	11-3	101976601	15-7
101896501	6-13	101927201	11-3	101979101	6-5
101896901	8-3	101927301	11-3	101980801	11-5
101897001	14-3	101927501	11-5	101980901	11-5
101897201	14-3	101927601	11-5	101981001	11-5
101897401	14-3	101927701	11-5	101981301	12-11, 12-13
101897601	14-3	101927901	11-5	101981501	12-11
101897901	14-3	101928001	11-5	101984801	5-3
101898001	6-17	101928101	11-5	101987301	1-19
101903101	5-9, 5-13	101928301	11-7	101987501	15-7
101903501	8-9	101928601	11-3	101987701	8-3
101903601	14-3	101928701	11-3, 14-3, 16-5	101988301	12-11, 12-13
101903701	14-3	101929801	10-3	101988401	12-11, 12-13
101904101	1-9	101932601	12-15	101988601	12-11, 12-13
101905901	8-5, 8-7	101933101	16-5	101988701	12-11, 12-13
101906201	14-3	101933701	8-11	101988801	12-11, 12-13
101906901	14-3	101935301	5-7, 5-11	101988901	12-11, 12-13
101908101	12-3	101935501	12-5	101990202	6-3
101908401	12-3	101936801	12-9	101990701	6-9
101908601	3-5	101939901	6-13	101990801	4-5
101908701	12-15	101946201	1-11	101991101	6-9
101909201	7-5	101946401	1-11	101992602	6-7
101909301	7-5	101947601	7-11	101997101	12-17
101909401	7-5	101953001	4-5	101997201	16-7
101909501	7-5	101953101	4-5	101997202	16-7
101909909	12-15	101953103	4-5	101997204	16-7
101910401	1-11, 1-21	101953802	7-3	101997209	16-7
101910501	11-7	101954301	1-11	101997211	16-7
101911701	12-15	101955001	5-7, 5-11	101997212	16-7
101914401	15-3, 15-5	101955301	8-3	102002801	12-11, 12-13, 12-19
101915201	3-5	101956201	15-7	102002901	12-11, 12-13, 12-19
101916001	7-13	101956202	15-7	102003201	8-3
101916101	7-3	101958201	15-7	102004001	5-13
101916201	7-5	101958301	15-7	102026001	4-9
101916301	7-5	101959901	3-3	102048501	8-3
101916501	10-3	101960501	3-5	102061201	16-7
101916701	6-15, 10-3	101960601	3-3	102061901	13-3
101917601	8-11	101964201	12-19	102062101	13-3
101918402	2-3	101964202	12-19	102063301	13-3
101920101	12-9, 13-3	101965001	1-3, 1-5	102063501	13-3
101921501	8-11	101966901	4-9	102063601	13-3
101922101	14-3	101971301	8-11	102063701	13-3
101922201	14-3	101972003	16-7	102064301	13-3
101922302	7-13	101972005	16-7	102064401	13-3
101922501	12-3	101972006	16-7	102064501	13-3
101922601	6-5, 11-3	101972007	16-7	102065201	12-17
101923001	14-3	101972101	14-3	102101001	12-9
101923201	14-3	101972201	14-3	102101101	12-9
101923501	14-3	101972401	14-3	102165701	6-3
101923601	14-3	101972801	8-11	102166901	4-5
101923701	14-3	101973101	8-5	102169401	16-5
101923901	14-3	101973301	8-5	102176401	13-3

INDEX

102193401 12-11, 12-13
 102200801 13-3
 102225101 8-3
 102227101 8-3
 102227501 8-3
 102231101 6-3
 102232901 7-3
 102237301 13-3
 102237302 13-3
 102241501 16-5
 102242101 10-5
 102243402 16-5
 102248801 16-5
 102249901 16-3
 102251501 16-5
 102259001 1-3, 1-5
 102278001 5-3
 102278801 1-5
 102292801 4-3, 4-5, 4-7
 102302201 13-3
 102302301 13-3
 102304801 7-9, 7-11
 102310701 1-3
 102311802 2-3
 102311803 2-3
 102323101 4-5
 102323201 4-5
 102330901 16-5
 102336001 8-9
 102336101 8-9
 102355301 6-17
 102357901 1-19
 102358001 1-21
 102358002 1-21
 102358101 1-19
 102358301 1-21
 102358401 1-21
 102358402 1-21
 102358501 1-19
 102358601 1-19
 102358701 1-11
 102359001 1-17
 102359101 1-17
 102359301 1-17
 102360001 1-5
 102361401 1-5
 102362401 1-17
 102363301 1-5
 102363901 1-5
 102363902 1-5
 102363903 1-5
 102363904 1-5
 102363905 1-5
 102363906 1-5
 102364002 2-3
 102365401 1-5

102430901 7-13
 102431001 7-11

A

ac voltage suppressor 15-3, 15-5, 15-7
 accelerator pedal 4-9
 accelerator pedal adjustment tool 16-3
 accelerator pedal return spring cup 4-9
 accelerator pivot rod 4-9
 accelerator rod 4-9
 access door 1-9
 A-connector (starter/generator) 6-13
 adapter, cable (IQDM) 16-5
 adhesive, guide ring 16-3
 adjuster, hydraulic brake 16-5
 air box 8-11
 air duct 8-11
 air filter 8-11
 ammeter 15-3, 15-5, 15-7
 anchor body (brake) 4-3, 4-7
 anchor piston 4-3, 4-7
 A-plate strap 5-7, 5-11
 arbor 16-7
 arm
 brake lever 4-3, 4-7
 governor lever 11-3
 pivot 11-3
 rocker 7-9
 armature 6-13, 13-3
 armrest 1-11
 armrest, wide 1-11
 ashtray 1-3, 1-5
 assembly
 3-pin plug 13-3
 48-volt motor 13-3
 ac voltage suppressor 15-3, 15-5, 15-7
 accelerator rod 4-9
 air box 8-11
 air box top 8-11
 armature 6-13
 axle 11-7, 14-3
 axle tube 11-7, 14-3
 bag rack 1-15, 1-17
 bearing (steering column) 5-3
 bolt (float chamber) 8-5
 canopy 1-21
 carburetor 8-5, 8-7
 charger case 15-3, 15-5, 15-7
 connecting rod 7-13
 current limiter 15-7
 cylinder head 7-9
 delta A-plate 5-7
 delta a-plate 5-11
 delta shock and gear support 5-7, 5-11
 drive clutch 10-3
 drive clutch hub 10-3

driven clutch 10-5
 eccentric 5-9
 eccentric (front suspension adjustment) 5-13
 fixed face (drive clutch) 10-3
 fixed face (driven clutch) 10-5
 float (carburetor) 8-5
 float chamber 8-5
 fuel pump wire 6-3
 fuel strap 8-3
 fuel tank vent 8-3
 fuse, 48-volt 12-7
 governor 11-5
 heatsink 15-3, 15-5, 15-7
 hub 5-9, 5-13
 idle screw 8-5
 input gear 11-5
 intermediate gear 14-3
 moveable face (drive clutch) 10-3
 moveable face (driven clutch) 10-5
 pilot air screw 8-5
 plug cap 7-5
 resistor coil 12-17
 screw (float chamber) 8-5
 screw and washer (reverse buzzer) 12-5
 seat back 1-11
 seat bottom 1-11
 spindle 5-9
 stator shell 13-3
 steering column 5-3
 transformer 15-3, 15-5, 15-7
 wheel and tire 2-3
 windshield frame 1-19
 wire 6-3, 7-3, 12-11, 12-13, 15-3, 15-5, 15-7
 wire harness 6-3
 axle 11-7, 14-3
 axle tube 11-7, 14-3

B

back, seat 1-11
 backing plate (brake) 4-3, 4-7
 backstop, putter tube 1-17
 bag rack 1-15, 1-17
 bag rest mat 1-9
 bag strap 1-15, 1-17
 ball bearing, output shaft 6-13
 ball joint 5-7, 5-11
 ball joint, inner 5-5
 ball joint, left-hand thread 5-5, 5-11
 ball stud (accelerator pedal) 4-9
 ball stud (shifter lever) 11-3
 ball, steel (shift fork retainer) 11-5
 ball, steel, pressure relief 7-7
 band, rpm limiter mount 7-5

INDEX

bar, drive 12-9
 bar, splice 1-21
 barb, vent 8-3
 base, forward/reverse shifter 6-5
 battery charger, PowerDrive 15-3, 15-5, 15-7
 battery clamp 6-17
 battery discharge machine 16-3
 battery hold-down 12-19
 battery insulator 1-9
 battery terminal protector spray 16-3
 battery thermometer 16-3
 battery warning light 12-5
 battery, 12-volt 6-17
 battery, 8-volt 12-19
 bearing
 ball (input shaft) 11-5
 ball (motor) 13-3
 ball, output shaft 6-13
 counterbalance weight 7-13
 crankshaft 7-11
 differential 14-3
 idler (drive clutch) 10-3
 inner axle tube 11-7
 input gear 14-3
 intermediate gear 14-3
 lower pinion 5-5
 needle 11-5
 outer axle tube 11-7
 pivot support 4-9
 steering column 5-3
 thrust 5-9, 5-13
 upper pinion 5-5
 bearing and oil seal remover 16-3
 bearing driver set 16-3
 bearing puller 16-3
 bearing puller wedge 16-3
 bearing retainer 13-3
 bearing retainer (starter/generator) 6-13
 bell crank and shaft 6-7
 belt, drive 10-3, 10-5
 belt, starter/generator 6-15, 10-3
 bezel, choke cable 8-11
 bezel, receptacle 12-7
 block
 fuse 6-7
 board, resistor mounting 12-17
 body
 center 1-7
 front 1-3, 1-5
 rear 1-9
 body hinge plate 1-9
 body kick plate 1-9
 bolt, brake adjustment 4-3, 4-7
 bolt, brake cluster mounting 4-3
 bolt, U- 5-15

boot
 dust 5-5
 rubber 8-3
 steering column 5-3
 tow/run switch 12-3
 box, electrical component 6-7
 bracket
 accelerator support 8-9
 adjusting (starter/generator) 6-15
 brake cable guide 5-7, 5-11
 fuel gauge/hour meter 6-9
 fuel pump 8-3
 governor cable engine 8-9
 mounting (starter/generator) 6-15
 muffler mounting 9-3
 oil filter 7-7
 oil level switch 7-11
 power relay mounting 15-5
 retaining (air duct) 8-11
 rpm limiter 7-5
 seat support 1-11
 snubber 7-15
 steering column mounting 5-3
 support 8-9
 throttle 8-7
 tow/run switch 12-3
 transmission cable support 6-5, 11-3
 brake actuator 4-3, 4-7
 brake adjustment bolt 4-3, 4-7
 brake adjustment tool 16-3
 brake cable 4-3, 4-5, 4-7
 brake cable clamp 5-7, 5-11
 brake cable guide bracket 5-7, 5-11
 brake cable hanger 4-3, 5-15
 brake cluster 4-3, 4-7
 brake cluster mounting bolt 4-3
 brake drum 4-3, 4-7
 brake dust cover 4-3, 4-7
 brake lever arm 4-3, 4-7
 brake pedal 4-5
 brake pedal adjustment tool 16-3
 brake pedal mounting block 4-5
 brake pedal tension tool 16-3
 brake shoe 4-3, 4-7
 brake spring 4-3, 4-7
 breaker, circuit, 10-amp 15-5, 15-7
 breaker, circuit, 15-amp 15-3
 breather (transaxle case) 11-3, 14-3
 bronze bushing 5-13, 6-5, 6-7
 bronze spindle bushing 5-13
 brush 6-13, 13-3
 brush connector 6-13
 brush holder 6-13
 brush inspection port cover 6-13
 brush rigging 13-3
 brush spring 6-13, 13-3

buckle, bag strap 1-15, 1-17
 bumper
 front 1-3, 1-5
 motor 13-3
 rear 1-13
 return spring 4-9
 rubber 4-5
 seat 1-11
 bushing
 axle 11-7
 bronze 5-13, 6-5, 6-7
 bronze spindle 5-9, 5-13
 insulator 13-3
 steel 5-9, 5-13, 5-15
 strain relief 15-3, 15-5, 15-7
 urethane 5-7, 5-9, 5-11, 5-13, 5-15
 buzzer, reverse 6-11, 12-5, 12-19

C

cable
 accelerator 8-9
 accelerator, snap-in 8-9
 brake 4-3, 4-5, 4-7
 choke 8-11
 governor 8-9
 governor, snap-in 8-9
 IQDM 16-5
 transmission 6-5
 calibration test module 16-3
 cam
 driven clutch 10-5
 electrical box 6-7
 neutral lock-out 6-5
 cam installation tool 16-3
 camshaft 7-11
 canopy 1-21
 canopy handle 1-19
 canopy hardware 1-19
 canopy trim plate 1-19
 cap
 adjustment bolt 4-3, 4-7
 battery 12-19
 dust 13-3
 EPDM 7-3
 fuel tank 8-3
 key switch 6-9, 12-5
 seat back 1-11
 carburetor 8-5, 8-7
 carburetor insulator 8-7
 card, safety first 16-5
 case
 charger 15-3, 15-5, 15-7
 forward/reverse switch 12-3
 gear carrier 11-7
 rocker 7-9
 center body 1-7

INDEX

channel, windshield 1-23
charger case 15-3, 15-5, 15-7
charger, PowerDrive battery 15-3, 15-5, 15-7
choke cable 8-11
choke lever 8-11
choke valve 8-11
circuit breaker, 10-amp 15-5, 15-7
circuit breaker, 15-amp 15-3
clamp
 battery 6-17
 brake cable 5-7, 5-11
 cable retaining 8-9
 forward/reverse shifter 6-5
 hose 7-3, 8-3, 8-7
 hose (air intake) 8-11
 muffler 9-3
 oil sending unit 7-11
 plastic (fuel line) 8-3
 wire 7-5
clamp screw 13-3
clevis, upper delta 5-9, 5-13
clip
 body keeper 1-9
 motor axle 13-3
 scorecard 5-3
cluster, brake 4-3, 4-7
clutch alignment tool 16-3
clutch tool kit 16-3
clutch, drive 10-3
clutch, driven 10-5
coil
 field 6-13
 ignition 7-5
 resistor 12-17
collet 7-9
column, steering 5-3
communication display module 16-3
commutator end bell 6-13
component mounting plate 12-15
compression gauge 16-3
compressor, piston ring 16-5
compressor, valve spring 16-7
computer, onboard 12-15
connecting rod 7-13
connector, oil sending unit 7-11
continuity tester 16-5
controller 12-15
cord, dc (charger) 15-3, 15-5, 15-7
cordset, ac 15-3, 15-5, 15-7
counterbalance guide shaft 7-13
counterbalance weight 7-13
cover
 brake dust 4-3, 4-7
 brush inspection port 6-13
 crankcase 7-11

dust 5-9, 5-13
electrical component box 6-7
gear case 11-7
pump 7-7
screw head 1-3, 1-5
seat back 1-11
seat bottom 1-11
steering column 5-3
vinyl rack 1-15, 1-17
crankcase 7-13
crankcase cover 7-11
crankshaft 7-13
crankshaft bearing 7-11
crankshaft seal 7-11
cup, accelerator pedal return spring 4-9
cupholder insert 1-5
current limiter 15-7
cushion, shock absorber 1-19, 1-21
cutter, valve seat 16-7
cylinder head 7-9
cylinder head shroud 7-3

D

damper 7-5
dash panel, center 1-3, 1-5
dash, driver side 1-3, 1-5
dash, passenger side 1-3, 1-5
dc cord (charger) 15-3, 15-5, 15-7
decal
 battery danger/poison 3-5
 driver/passenger warning 3-3
 frame ground warning 3-5
 gasoline warning 3-5
 key switch 3-3
 motor braking 3-3
 operating instructions 3-3
 operator warning (ashtray) 1-3, 1-5
 passenger warning 3-3
 resistor warning 3-5
 rotating parts and hot manifold 3-5
 tow/run switch warning 3-5
delta A-plate 5-7
delta a-plate 5-11
delta shock and gear support 5-7, 5-11
delta sleeve 5-7
differential bearing 14-3
differential gear 11-7, 14-3
differential gear case 11-7
differential housing 14-3
differential idler gear 11-7, 14-3
differential pin 11-7, 14-3
dipstick 7-3
divider, putter tube 1-15
door, access 1-9
double lip seal 5-9
dowel pin 11-7

drag link, rack and pinion 5-5
drain plug 7-7, 11-3
drink holder 1-3, 1-5, 1-7
drive bar 12-9
drive belt 10-3, 10-5
drive clutch 10-3
drive clutch holder tool 16-3
drive clutch hub puller 16-3
drive clutch puller 16-3
drive hub 10-3
driven clutch 10-5
driven clutch cam puller 16-3
driven clutch puller plug 16-3
drum, brake 4-3, 4-7
dry moly lubricant 16-5
duct, air 8-11
dust boot 5-5
dust cap 13-3
dust cover 5-9, 5-13
dust seal 5-7, 5-11

E

8-volt battery 12-19
eccentric 5-9
eccentric (front suspension adjustment) 5-13
e-clip (air box top) 8-11
electrical component box 6-7
emblem, IR golf car 1-3, 1-5
end bell, commutator 6-13
end bell, output shaft 6-13
end shield 13-3
engine valve spring 7-9
engine, fe350 ohv gasoline 7-3
equalizer and pivot limiter 4-5
equalizer rod 4-5
equalizer spacer 4-5
exhaust 9-3
exhaust valve 7-9

F

48-volt motor, 3.10-hp 13-3
48-volt solenoid 12-15
fan housing 7-3
fan shroud 7-3
fan, flywheel 7-5
fastener, plastic barrel 1-5, 1-7
fe350 ohv gasoline engine 7-3
fender extrusion 1-5
fender, inner 1-9
field coil (starter/generator) 6-13
fill plug 14-3
filter
 air 8-11
 fuel 8-3
 oil 7-7

INDEX

oil pump 7-7
fitting, grease 5-9, 5-13
fitting, thread-forming grease 5-5, 5-7, 5-11
fixed face (drive clutch) 10-3
fixed face (driven clutch) 10-5
float (carburetor) 8-5
float chamber 8-5
floor mat 1-3, 1-5
flywheel 7-5
flywheel fan 7-5
flywheel puller 16-5
fork, shift 11-5
forward/reverse bell crank 6-5
forward/reverse cam spring 6-5
forward/reverse handle 6-5
forward/reverse shifter 6-5
forward/reverse switch 12-3
frame, windshield 1-19
front body 1-3, 1-5
front bumper 1-3, 1-5
front spring retainer plate 5-9
f-terminal insulator 6-13
fuel filter 8-3
fuel gauge/hour meter 6-9
fuel line 8-3
fuel pickup tube valve 8-3
fuel pump wire assembly 6-3
fuel pump, electric 8-3
fuel strap 8-3
fuel tank 8-3
fuel tank vent 8-3
fuse
 10-amp 6-7
 3/8-amp 12-7
 48-volt 12-7
 5-amp 6-3
 battery charger 15-3, 15-5, 15-7
 block 6-7

G

gasket
 carburetor insulator 8-7
 crankcase cover 7-11
 drain plug 7-7
 exhaust 9-3
 float chamber 8-5
 head 7-9
 insulator 8-7
 intake pipe 8-7
 liquid 11-3, 14-3, 16-5
 oil pump 7-7
 plug 14-3
 rocker case 7-9
 seat 1-11
 sending unit 8-3
 throttle bracket 8-7

gasket kit 7-9, 7-11
gauge, compression 16-3
gauge, fuel 6-9
gear
 cluster idler 11-5
 differential 11-7, 14-3
 differential idler 11-7, 14-3
 helical (crankshaft) 7-13
 input 11-5
 output 11-7, 14-3
 spur (crankshaft) 7-13
 spur (transaxle) 11-5
gear case 11-3, 14-3
gear yoke 16-5
governor 11-5
governor cable 8-9
governor lever arm 11-3
governor shaft installation tool 16-5
grease fitting 5-5, 5-9, 5-11, 5-13
grip, pencil 5-3
grommet (ignition coil) 7-5
grommet, insulation 8-3
guide
 steering rack 5-5
 transaxle 11-5
 valve 7-9
 valve seat cutter 16-7
guide ring adhesive 16-3

H

hall effect sensor 13-3
handle, canopy 1-19
handle, forward/reverse 6-5
hanger, brake cable 4-3, 5-15
hardware, terminal (starter/generator) 6-13
harness, wire 12-11, 12-13
head gasket 7-9
heat shield 1-9
heatsink 15-3, 15-5, 15-7
hinge plate, body 1-9
hold-down, battery 12-19
hook, bag 1-17
hose clamp 7-3, 8-3, 8-7
hose clamp (air intake) 8-11
hose, intake 8-11
hour meter 6-9, 12-7
housing
 differential 14-3
 fan 7-3
 female 3-wire 13-3
 field coil (starter/generator) 6-13
hub 5-9
 drive clutch 10-3
 synchronizer clutch 11-5
 wheel assembly 5-13
hub bearing 5-9

hydraulic brake adjuster 16-5
hydraulic lifter 7-11
hydrometer 16-5

I

idle screw 8-5
ignition coil 7-5
inner fender 1-9
input gear bearing 14-3
input shaft 14-3
insert cupholder 1-5
insert, synchronizer 11-5
insulation grommet 8-3
insulator
 battery 1-9
 carburetor 8-7
 f-terminal 6-13
intake hose 8-11
intake pipe 8-7
intake seal (air box) 8-11
intake valve 7-9
intermediate gear 14-3
internal retaining ring pliers 16-5
IQ display module (IQDM) 16-5
IR golf car emblem 1-3, 1-5

J

jet, main 8-5
jet, pilot 8-5
joint
 ball 5-7, 5-11, 6-5
 compound steering 5-3
 inner ball 5-5
 left-hand thread ball 5-5, 5-11
 spring-loaded ball 4-9

K

key
 driven clutch 10-5
 flywheel 7-5
 square 10-5
 transmission shaft 11-5
 vehicle 12-5
 vehicle (pair) 6-9
 woodruff 6-13, 11-3
key (crankshaft) 7-13
key switch 6-9, 12-5
kick plate, body 1-9
kingpin 5-9
kingpin wave washer 5-9, 5-13
kingpin, front suspension 5-13
kit
 2-pin plug 12-9
 3-pin plug 12-9, 13-3
 6-pin receptacle 12-15

INDEX

accelerator pivot rod 4-9
anchor body (brake) 4-3, 4-7
armrest, wide 1-11
ashtray 1-3, 1-5
brake actuator 4-3
brake cable 4-3, 4-7
brake pedal adjustment tool 16-3
canopy hardware 1-19
differential gear case 11-7
drink holder 1-3, 1-5, 1-7
drive clutch button 10-3
drive clutch weight 10-3
driven clutch button 10-5
front bumper 1-3, 1-5
fuel tank 8-3
fuse and receptacle 12-7
gasket (engine) 7-9, 7-11
IQ display module (IQDM) 16-5
pulley nut and screw 6-13
rear bumper 1-13
reverse buzzer 6-9, 6-11, 12-5, 12-19
shock absorber cushion 5-15
shoe retainer 4-3, 4-7
snap washer 1-3, 1-5
speed sensor magnet 13-3
steering column rebuild 5-3
tune-up 16-7
windshield 1-23

L

latch
 park brake 4-5, 4-9
 wire (air box) 8-11
lead wire, rpm limiter 7-5
leaf spring, rear 5-15
lever
 choke 8-11
 shifter 11-3
 transmission shifter 11-3
lifter, hydraulic 7-11
light, battery warning 12-5
light, low oil warning 6-9
limit switch 6-5, 6-7
limiter, rpm 7-5
line, fuel 8-3
line, vent (fuel) 8-3, 8-7
link, rack and pinion drag 5-5
liquid gasket 11-3, 14-3, 16-5
lower pinion bearing 5-5
lubricant, dry moly 16-5
lubricant, moly-teflon 16-5
lug nut 2-3, 5-13
lug stud 5-9, 5-13, 11-7, 14-3

M

magnet, speed sensor 13-3
magnetic plug 14-3
mat, bag rest 1-9
mat, floor 1-3, 1-5
MCOR (motor controller output regulator) 12-9
meter, hour 6-9, 12-7
meter, volt ohm 16-7
module, calibration test 16-3
module, communication display 16-3
moly-teflon lubricant 16-5
motor bumper 13-3
motor, 48-volt 13-3
mount, sandwich (fuel pump) 8-3
mounting bracket (starter/generator) 6-15
mounting bracket, steering column 5-3
mounting plate (engine) 7-15
mounting plate (rear bumper) 1-13
mounting plate, component 12-15
moveable face (drive clutch) 10-3
moveable face (driven clutch) 10-5
muffler clamp 9-3
muffler mounting bracket 9-3

N

nameplate 1-3
neutral lock-out cam 6-5
nozzle, main 8-5
nut, key switch 6-9, 12-5
nut, lug 2-3, 5-13

O

oil filler tube 7-3
oil filter 7-7
oil filter screen 7-11
oil level sensor 7-11
oil pump and rotor 7-7
oil seal
 axle shaft 14-3
 crankcase 7-13
 governor pivot 11-3
 input shaft 14-3
 shifter shaft 11-3
oil warning light, low 6-9
onboard computer 12-15
o-ring
 choke valve 8-11
 counterbalance guide shaft 7-13
 oil filter 7-7
 oil sending connector 7-11
 rocker case hardware 7-9
output gear 14-3

P

package, brush 6-13, 13-3
package, hub bearing 5-9, 5-13
pad
 accelerator 4-9
 brake pedal 4-5
 frame mounting (canopy) 1-19
 park brake 4-5
 spring 5-15
paint, touch-up 16-7
paint, wheel touch-up 16-7
panel, center dash 1-3, 1-5
park brake latch 4-5, 4-9
park brake pedal 4-5
park brake ratchet 4-9
pedal
 accelerator 4-9
 brake 4-5
 park brake 4-5
pencil grip 5-3
pilot air screw 8-5
pilot jet 8-5
pin
 crankcase cover locating 7-11
 differential 11-7, 14-3
 dowel 11-7
 equalizer pivot 4-5
 governor cable clevis 8-9
 head locating 7-9
 piston 7-13
 roll (shifter lever) 11-3
pinion, steering 5-5
pipe, intake 8-7
piston (crankcase) 7-13
piston ring compressor 16-5
piston ring pliers 16-5
piston ring set 7-13
piston, anchor 4-3, 4-7
pivot arm 11-3
pivot support bearing 4-9
plate
 backing (brake) 4-3, 4-7
 body hinge 1-9
 body kick 1-9
 canopy trim 1-19
 component mounting 12-15
 drink holder mounting 1-7
 flywheel fan 7-5
 front spring retainer 5-9, 5-13
 mounting 1-13
 mounting (engine) 7-15
 oil filter screen 7-11
 oil pump 7-7
 oil valve 7-9
 receptacle backing 12-7

INDEX

retaining 13-3
 scorecard 5-3
 seat hinge 1-7, 1-11
 spring mounting 5-7, 5-11
 thrust 11-5, 11-7
 thrust (idler gear) 14-3
 pliers
 internal retaining ring 16-5
 piston ring 16-5
 retaining ring 16-5
 plug
 2-pin 12-9
 3-pin 12-9, 13-3
 drain 7-7, 11-3
 drive clutch 10-3
 driven clutch puller 16-3
 fill 14-3
 filter bracket 7-7
 magnetic 14-3
 oil sending unit 7-11
 spark (ohv) 7-5
 tube finishing 1-15, 1-17
 plug cap 7-5
 plug gasket 14-3
 pole set (starter/generator) 6-13
 power relay 15-3, 15-5, 15-7
 PowerDrive battery charger 15-3, 15-5, 15-7
 press weldment 16-3
 pressure relief ball 7-7
 protector spray, battery terminal 16-3
 puller
 bearing 16-3
 drive clutch 16-3
 drive clutch hub 16-3
 driven clutch cam 16-3
 flywheel 16-5
 seal 16-5
 pulley (starter/generator) 6-13
 pulley nut and screw (starter/generator) 6-13
 pump and rotor, oil 7-7
 pump cover 7-7
 pump, electric fuel 8-3
 push rod 7-9
 putter tube 1-15

R

rack and pinion drag link 5-5
 rack, bag 1-15, 1-17
 rack, steering 5-5
 ratchet, park brake 4-9
 reamer, valve guide 16-7
 rear body 1-9
 rear bumper 1-13
 rear leaf spring 5-15

rear spring shackle 5-15
 rear window 1-21
 receptacle
 6-pin 12-15
 AC cord 15-7
 receptacle (fuse) 12-7
 receptacle backing plate 12-7
 receptacle bezel 12-7
 regulator, motor controller output (MCOR) 12-9
 relay, 48-vdc power 15-3, 15-5, 15-7
 remover, bearing and oil seal 16-3
 resistor coil 12-17
 resistor mounting board 12-17
 resistor shield 12-17
 retainer
 bearing 13-3
 bearing (starter/generator) 6-13
 shock absorber cushion 5-15
 spring 4-9
 valve spring 7-9
 retaining plate 13-3
 retaining ring (drive clutch) 10-3
 retaining ring (steering column) 5-3
 retaining ring pliers 16-5
 retaining screw 13-3
 return spring bumper 4-9
 reverse buzzer 6-9, 6-11, 12-5, 12-19
 rigging, brush 13-3
 rim, tire 2-3
 ring
 C-type stop 5-5
 retaining 10-5
 retaining (drive clutch) 10-3
 retaining (steering column) 5-3
 retaining (steering gear box) 5-5
 snap 5-5, 7-13
 snap (shifter shaft) 11-3
 spiral back-up 10-3
 synchronizer 11-5
 ring set, piston 7-13
 rivet, blind 1-3, 1-5
 rocker arm 7-9
 rocker case 7-9
 rocker shaft 7-9
 rod
 accelerator 4-9
 accelerator pivot 4-9
 battery hold-down 12-19
 connecting 7-13
 equalizer 4-5
 push 7-9
 shift 11-5
 tie 5-7, 5-11
 rod and pawl 4-5
 rpm limiter 7-5

rpm limiter bracket 7-5
 rpm limiter mount band 7-5
 rpm limiter, lead wire 7-5
 rubber boot 8-3

S

6-pin receptacle 12-15
 safety first card 16-5
 sandwich mount (fuel pump) 8-3
 scorecard clip 5-3
 scorecard plate 5-3
 screen, oil filter 7-11
 screw
 bearing retainer 13-3
 brush holder 13-3
 clamp 13-3
 countersunk head 1-19
 idle 8-5
 pilot air 8-5
 pole piece (starter/generator) 6-13
 retaining 13-3
 valve clearance adjuster 16-7
 seal
 crankshaft 7-11
 double lip 5-9, 5-13
 dust 5-7, 5-11
 dust (steering gear box) 5-5
 dust, steering pinion 5-5
 intake (air box) 8-11
 oil (axle shaft) 11-7
 oil (crankcase) 7-13
 oil (governor pivot) 11-3
 oil (shifter shaft) 11-3
 oil, axle shaft 14-3
 oil, input shaft 11-5, 14-3
 valve 7-9
 seal puller 16-5
 seat
 bearing 5-3
 spring 7-9
 valve 7-7
 seat back 1-11
 seat bottom 1-11
 seat bumper 1-11
 seat gasket 1-11
 seatback spacer 1-11
 sending unit 8-3
 sensor, hall effect 13-3
 sensor, oil level 7-11
 set, pole 6-13
 shackle, rear spring 5-15
 shaft
 counterbalance guide 7-13
 input 11-5, 14-3
 rocker 7-9
 shifter 11-3

INDEX

steering column 5-3

shield

- end 13-3
- heat 1-9
- resistor 12-17

shift fork 11-5

shift rod 11-5

shifter lever 11-3

shifter shaft 11-3

shifter, forward/reverse 6-5

shock absorber cushion 5-15

shock absorber, front 5-7, 5-11

shock absorber, rear 5-15

shoe bake 4-7

shoe retainer 4-3, 4-7

shoe, brake 4-3

shroud

- cylinder 7-3
- cylinder head 7-3
- fan 7-3

sleeve

- delta 5-7
- delta a-plate 5-11
- park brake rod 4-5
- synchronizer 11-5
- transaxle 11-5

slide switch, 4-position 15-5, 15-7

snap ring 5-5, 7-13

snubber 7-15

snubber bracket 7-15

solenoid, 12-volt 6-7

solenoid, 48-volt 12-15

spacer

- accelerator pivot rod 4-9
- battery terminal bolt 6-17
- body 1-11
- crankshaft 7-13
- engine 7-3
- equalizer 4-5
- fixed face shaft 10-3
- park brake 4-5
- seatback 1-11
- steel 1-13

spanner wrench 16-5

spark plug (ohv) 7-5

speed sensor magnet 13-3

spindle 5-9

spindle, front suspension 5-13

splice bar 1-21

spray, battery terminal protector 16-3

spring

- accelerator pedal retainer 4-9
- brake 4-3, 4-7
- brake return 4-5
- brush 6-13, 13-3
- compression 5-3

drive clutch 10-3

engine valve 7-9

forward/reverse cam 6-5

oil pressure relief 7-7

park brake torsion 4-5

rear leaf 5-15

retainer 10-3

return 4-9

return (air box) 8-11

shift fork 11-5

synchronizer 11-5

tapered compression 5-3

tapered leaf 5-9, 5-13

throttle return 8-7

yoke 5-5

spring mounting plate 5-7, 5-11

spring seat 7-9

stand-off, resistor coil 12-17

starter/generator 6-13, 6-15

stator shell 13-3

steel bushing 5-9, 5-13, 5-15

steering column 5-3

steering column bearing press tool 16-5

steering column mounting bracket 5-3

steering column retaining ring tool 16-5

steering column shaft 5-3

steering gear box 5-5

steering wheel 5-3

steering wheel puller tool 16-7

stem, valve 2-3

stiffener, flywheel side 7-15

stiffener, pto side 7-15

strain relief bushing 15-3, 15-5, 15-7

strap

- A-plate 5-7, 5-11
- bag 1-15, 1-17
- fuel 8-3

stud

- ball 4-9, 6-5, 6-7
- ball (shifter lever) 11-3
- engine mounting 7-15
- lug 5-9, 5-13, 11-7, 14-3

support

- accelerator pivot rod 4-9
- bag rack 1-15, 1-17
- front body 1-9
- rear canopy 1-19

switch

- 4-position slide 15-5, 15-7
- forward/reverse 12-3
- key 6-9, 12-5
- limit 6-5, 6-7
- tow/run 12-3

synchronizer clutch hub 11-5

synchronizer ring 11-5

system, exhaust 9-3

T

12-volt battery 6-17

12-volt solenoid 6-7

2-pin plug 12-9

3-pin plug 12-9, 13-3

3/8 amp fuse 12-7

tachometer 16-7

tapered compression spring 5-3

tapered leaf spring 5-9

terminal hardware (starter/generator) 6-13

tester, continuity 16-5

thermometer, battery 16-3

throttle bracket 8-7

throttle return spring 8-7

thrust bearing 5-9

thrust plate (idler gear) 14-3

tie rod 5-7, 5-11

tie, wire 5-5, 8-11, 12-5

tire 2-3

t-nut, slab base 1-3, 1-5

tool

- accelerator pedal adjustment 16-3
- brake adjustment 16-3
- brake pedal adjustment 16-3
- brake pedal tension 16-3
- cam installation 16-3
- clutch alignment 16-3
- drive clutch holder 16-3
- governor shaft installation 16-5
- steering column bearing press 16-5
- steering column retaining ring 16-5
- steering wheel puller 16-7
- transaxle axle seal 16-7
- transaxle pinion seal 16-7
- transmission 16-7

tool kit, clutch 16-3

top, air box 8-11

touch-up paint 16-7

touch-up paint, wheel 16-7

tow/run switch 12-3

transaxle 14-3

transaxle axle seal tool 16-7

transaxle pinion seal tool 16-7

transaxle, unitized 11-3

transformer 15-3, 15-5, 15-7

transmission tool 16-7

trim, front body 1-3, 1-5

trim, side bumper guard 1-3

tube

- axle 11-7
- crankcase vent 8-7
- oil filler 7-3

tube, putter 1-17

tune-up kit 16-7

INDEX

U

U-bolt 5-15
unit, sending 8-3
unitized transaxle 11-3
upper pinion bearing 5-5
urethane bushing 5-7, 5-9, 5-11, 5-13, 5-15

V

valve
choke 8-11
exhaust 7-9
fuel pickup tube 8-3
intake 7-9
oil 7-9
stem 2-3
valve clearance adjuster screw 16-7
valve guide reamer 16-7
valve seal 7-9
valve seat 7-7
valve seat cutter 16-7
valve seat cutter guide 16-7
valve seat t-wrench 16-7
valve spring compressor 16-7
valve spring retainer 7-9
vehicle care kit 16-7
vent barb 8-3
vent line (fuel) 8-3
vent, fuel tank 8-3
volt ohm meter 16-7
voltage regulator 6-7

W

warning light, battery 12-5
warning light, low oil 6-9
washer
key switch 6-9, 12-5
kingpin wave 5-9, 5-13
mounting 10-5
nylon flat 6-5
snap 1-3, 1-5
spring 11-5
thrust (transaxle) 11-5
wave 6-5
wedge (steering column) 5-3
wedge, bearing puller 16-3
weight, counterbalance 7-13
weight, drive clutch 10-3
weldment
armrest 1-11
bag rack 1-15
press 16-3
putter tube 1-15
wheel 2-3
wheel rim 2-3
wheel, steering 5-3

window, rear 1-21
windshield 1-23
windshield channel 1-23
windshield frame 1-19
wire assembly
battery 12-19
charger 15-3, 15-5, 15-7
ground 7-3
hour meter 12-7
jumper, voltage meter-fuse 15-7
lead, rpm limiter 7-5
power 6-3, 12-11, 12-13
receptacle 12-7
reverse buzzer 6-11
starter/generator 6-15
wire clamp 7-5
wire harness 6-3, 12-11, 12-13
wire harness (motor speed sensor) 12-11, 12-13
wire lead, diesel adaptor 16-7
wire lead, gasoline engine 16-7
wire tie 5-5, 8-11, 12-5
woodruff key 6-13, 11-3
wrench, spanner 16-5

Y

yoke spring 5-5
yoke, gear 16-5

Your Comments Are Appreciated

Please select your category:

- | | |
|--|---|
| ☐ Distributor/Dealer | ☐ Technician |
| ☐ Individual Owner | ☐ Golf Course Superintendent |
| ☐ Club Car Associate/Representative | ☐ Other: _____ |

In order to help us better serve you, please rate this publication in the following categories:

	Poor	Fair	Average	Good	Excellent
1. Ease of Understanding	☐	☐	☐	☐	☐
2. Ease of Finding Information	☐	☐	☐	☐	☐
3. Clarity of Illustrations	☐	☐	☐	☐	☐
4. Index Usability	☐	☐	☐	☐	☐

Comments/Suggestions

Please fax a copy of this page to (706) 228-2662.

Thank You!

Club Car Technical Publication Department



Golf Cars

Club Car, Inc.
P.O. Box 204658
Augusta, GA 30917-4658
USA

Web	www.clubcar.com
Phone	1.706.863.3000
	1.800.ClubCar
Int'l	+1 706.863.3000
Fax	1.706.863.5808