




2013 Villager 6 and 8 Illustrated Parts List

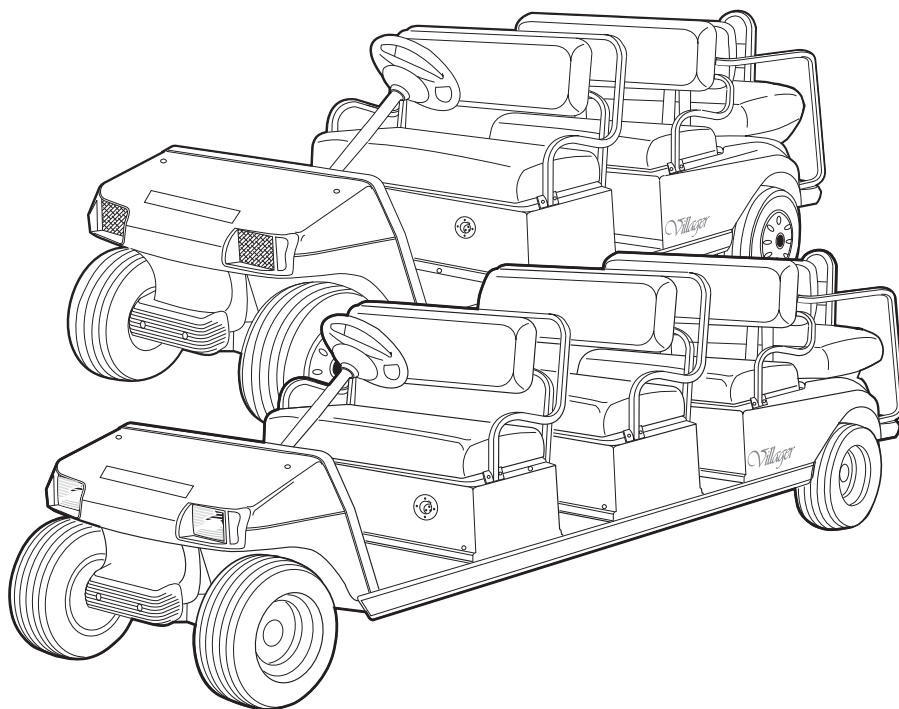

Gasoline and Electric Vehicles

Manual Number 103997605
Edition Code _A

USING THE ILLUSTRATED PARTS LIST

WARNING

- **This manual is to be used only for identification and ordering of service parts. Be sure to read and use the maintenance and service manual before attempting any vehicle repairs.**

This manual covers all Villager 6 and 8 vehicles built during the 2013 model year.

The manual is divided into sections. Note that there are two or three flags on the outside edge of each page. The first flag contains the section number of which that page is a part. The other flag (or flags) contains the letter G or E, signifying that the page pertains to the electric or gasoline vehicles only.

Use the Table of Contents to find the sections and pages that contain the parts and assemblies you seek. The Table of Contents lists section numbers, and under them, the individual page titles and numbers to be found in that section. The index can be used to find specific parts and assemblies. The index is divided into numerical and alphabetical listings with the page numbers in italic text.

There is a two-page spread for each individual page title in the Table of Contents. On the left-hand page is an illustration showing the parts in their relative positions; the parts are each tagged with an item number in a balloon. The right-hand page is the parts list page, and gives the page title at the top, then the item numbers (corresponding to the numbers on the illustration), part descriptions, and quantity of parts used.

Note that a part description may be indented. This indentation corresponds to a parts assembly level indicated by the numbers 1, 2, 3, and 4 at the top left corner of the parts description area of the parts list page. A part that is indented to *level 2* is a component of the *level 1* part (assembly) that it is listed under. A *level 3* part is a component of the *level 2* part that it is listed under, and a *level 4* part is a component of the *level 3* part preceding it. In each case, the part quantity given for a level 2, 3, or 4 part is *the quantity used per next higher level assembly of which it is a component*. A part that is not indented is a *level 1* part. This means that the quantity given is the quantity used per the portion of the vehicle illustrated on that particular spread.



P. O. Box 204658
Augusta, Georgia 30917-4658 USA
Telephone 706-863-3000
Service Parts Fax 706-855-7413
www.clubcar.com

HOW TO ORDER PARTS

Replacement parts and accessories can be obtained from our network of authorized dealers and distributors. You can obtain the name and phone number of your closest authorized Club Car dealer or distributor by visiting our web site at www.clubcardealer.com, by calling our toll-free Service Parts and Technical Assistance hotline at (800) 872-2246 or (706) 863-3000, extension 3887, or by scanning this Quick Response (QR) code to be taken to the Club Car dealer locator. **Refer to Figure 1.** Download a QR code reader such as RedLaser or Barcode Scanner to your cell phone or tablet.



Figure 1 Dealer Locator QR Code

CUSTOMER SATISFACTION SURVEY

Let your voice be heard!

Please take time to participate in the Technical Publications satisfaction survey. Obtaining feedback from our customers is important to the department's continuous improvement process. The online survey takes less than five minutes and responses will help the department to examine current performance as well as identify areas for future improvement.

Our top priority is to provide timely, accurate, and user friendly manuals.

The online satisfaction survey can be found at: <http://bit.ly/1w9uFMh>



Figure 2 Survey QR Code

NOTE: *This illustrated parts list represents the most current information at the time of publication. Club Car, LLC is continually working to further improve its vehicles and other products. These improvements may affect the parts used to service the vehicle. Any modification and/or significant change in specifications will be forwarded to all Club Car and Carryall distributors/dealers and will, when applicable, appear in future editions of this illustrated parts list.*

Club Car, LLC reserves the right to change specifications and designs at any time without notice and without the obligation of making changes to units previously sold.

Copyright © 2012 Club Car, LLC
Club Car and ArmorFlex
are registered trademarks of Club Car, LLC.
This manual effective August 1, 2012.

CONTENTS

SECTION 1 – BODY AND TRIM

Front Body and Trim – Turf, Utility, & Transportation	1-3
Brush Guard Kit – DS, Utility, & Villager	1-5
Splash Guard – Gasoline Vehicles Only	1-7
Dash Pockets and Floormat – To Late-2013 Model Year	1-9
Dash Pockets and Floormat – From Late-2013 Model Year	1-11
Floormat, Rear – Villager & Transportation Vehicles – To Late-2013 Model Year	1-13
Floormat, Rear – Villager & Transportation Vehicles – From Late-2013 Model Year	1-15
Beverage Holder – Dual	1-17
Mirror, Rear-View – without Cab	1-19
Grommets, Chassis	1-21
Front and Center Seat Bottoms	1-23
Seat Back Assembly	1-25
Armrests, Front – Villager 6 & 8 Vehicles	1-27
Windshield, Non-Hinged	1-29
Windshield, Hinged	1-31
Center Body – Villager 6 Gasoline Vehicle	1-33
Center Body – Villager 6 IQ Plus Vehicle	1-35
Center Bodies – Villager 8 Gasoline Vehicle	1-37
Center Bodies – Villager 8 IQ Plus Vehicle	1-39
Rear, Forward-Facing Seat Bottom	1-41
Armrests, Rear, Forward-Facing – Villager 6 & 8 Vehicles	1-43
Rear Body and Fender – Villager 6 & 8	1-45
Heat Shield, Transporter, Vill 6 & 8, XRT800/850 Rear Body – Gas	1-47
Battery Insulator, Transporter, Vill 6 & 8, XRT850 Rear Body – Electric	1-49
Rear Access Door	1-51
Rear-Facing Seat Bottom – Villager Vehicles	1-53
Rear Footrest, Armrests and Handrails – DS Villager 4, Villager 6 and 8	1-55
Canopy Kit, White – Vill. 6 with Rear-Facing Seats	1-57
Canopy Kit, Beige – Vill. 6 with Rear-Facing Seats	1-59
Canopy Kit, White – Vill. 6 with Flat Bed	1-61
Canopy Kit, Beige – Vill. 6 with Flat Bed	1-63
Canopy Kit, White – Vill. 8 with Rear-Facing Seats	1-65
Canopy Kit, Beige – Vill. 8 with Rear-Facing Seats	1-67
Canopy Kit, White – Vill. 8 with Flat Bed	1-69
Canopy Kit, Beige – Vill. 8 with Flat Bed	1-71

SECTION 2 – WHEELS AND TIRES

Wheels (Silver) and Tires	2-3
---------------------------------	-----

CONTENTS

Wheel Covers	2-5
--------------------	-----

SECTION 3 – DECALS

Decals – Villager 6 Gas and IQ Plus	3-3
Decals – Villager 6 IQ Plus Vehicle Only	3-5
Decals – Villager 6 Gasoline Vehicle Only	3-7
Decals – Villager 8 Gas and IQ Plus	3-9
Decals – Villager 8 IQ Plus Vehicle Only	3-11
Decals – Villager 8 Gasoline Vehicle Only	3-13
Badging Decals – Villager	3-15
IQ Plus Logo Decal – IQ Plus Vehicles Only	3-17

SECTION 4 – LIGHTS, CONTROLS, AND INDICATORS

Headlights	4-3
Lighting System Components – Transportation Gasoline Vehicles	4-5
Lighting System Components – CA 6 and Vill. 6 Elec. with IQ Plus Charger	4-7
Lighting System Components – Villager 8 Elec. with IQ Plus Charger	4-9
Turn Signal Kit – DS and Utility Gasoline and Electric Vehicles	4-11
Turn Signal (with Horn Button) Kit – DS and Utility Gas and Electric Vehicles	4-13
Instrument Panel and Electrical Components – CA6/Vill 6 & 8 Gas	4-15
Instrument Panel with Electrical Components – CA6/Vill 6/8 Elec. w/Lester Charger	4-17
Keys and Keyswitches, SmartKey Kit – Electric Vehicle	4-19
Keys and Keyswitches, Uncommon – Gas Vehicle	4-21
DC Converter (Isolated) – Electric Vehicle	4-23
DC Converter (Isolated) – CE Electric Vehicle	4-25
Voltage Limiter – Gasoline Vehicle	4-27
Strobe Light, Roof-Mounted	4-29
Horn with Column-Mounted Button	4-31
Hour Meter – IQ System and IQ Plus Electric Vehicles	4-33
Rear Reverse Buzzer	4-35
Tail Lights	4-37

SECTION 5 – BRAKES, PEDALS, AND CABLES

Brake Pedal Assembly	5-3
Accelerator Pedal Assembly – Electric Vehicles	5-5
Accelerator Pedal Assembly – Gasoline Vehicles	5-7
Accelerator Rod – Turf/CA 6 & Villager 6 Gas Vehicles	5-9
Accelerator Rod – Villager 8 Gas Vehicles	5-11
Front Brake Assembly – Vehicles with Four-Wheel Brakes	5-13

CONTENTS

Front Brake Cables and Equalizer – Vehicles with Four-Wheel Brakes	5-15
Rear Brake Cables and Equalizer – Turf/Carryall 6 & Villager 6	5-17
Rear Brake Cables and Equalizer – Villager 8	5-19
Rear Brake Assembly, Manually-Adjusted – Vehicles with 4-Wheel Brakes	5-21

SECTION 6 – STEERING AND SUSPENSIONS

Steering Gear Assembly (Wanda) – Maint.-Free Ball Joint	6-3
Steering Column – Utility	6-5
Intermediate Steering Shaft (Wanda) – Turf/CA/Villager	6-7
Steering Wheel	6-9
Steering Wheel with Clip	6-11
Front Spindles and Hubs – Vehicles with Four-Wheel Brakes and Maintenance-Free Ball Joints	6-13
Front Suspension, Upper – Villager 6 and 8 with Maintenance-Free Ball Joints	6-15
Front Suspension, Lower – Villager 6 with Maintenance-Free Ball Joints	6-17
Front Suspension, Lower – Villager 8 with Maintenance-Free Ball Joints	6-19
Rear Suspension – Turf/CA 2, 2 Plus, 6, and Villager Gasoline	6-21
Rear Suspension – Turf/CA 2, 6, and Villager IQ Plus Electric	6-23
Stabilizer Bar – Turf/CA 2, 2 Plus, 6, and Villager Gas	6-25

SECTION 7 – ELECTRICAL SYSTEM – CARBURETED GASOLINE VEHICLES

Wiring – Carryall 6 and Villager 6 Gas with AMD Starter Gen	7-3
Wiring – Villager 8 Gas with AMD Starter Gen	7-5
Starter/Generator Assembly (Key-Start), Model 114-04-4001A	7-7
Starter/Generator Mounting – 114-0x-400xx Models	7-9
Operation and Maintenance Switch	7-11
Electrical Component Box – Carryall 6 and Villager 6/8	7-13
Battery – Gasoline Utility Vehicles	7-15

SECTION 8 – ENGINE (S27) W/O ACR, 50-STATE

Tune-Up Kit – Kawasaki FE350	8-3
FE350 Engine (S27) w/o ACR, Shrouds, and Brackets; 50-State	8-5
FE350 Engine (S27) – Ignition Components and Flywheel	8-7
FE350 Engine (S27) – Oil Circulation	8-9
FE350 Engine (S27) – Cylinder Head	8-11
FE350 Engine (S27) – Crankcase, Camshaft, and Oil Sensor	8-13
FE350 Engine (S27) – Crankcase and Crankshaft	8-15
FE350 Engine (S27) – Mounting	8-17

CONTENTS

SECTION 9 – FUEL, INTAKE, AND GOVERNOR SYSTEM

Fuel System and Tank without Sending Unit	9-3
Fuel System and Tank with Sending Unit	9-5
Carbon Canister	9-7
Carburetor Assembly – FE350 S27	9-9
Carburetor Mounting, Utility, FE350 S27	9-11
Governor and Accelerator Cables	9-13
Air Intake Duct and Choke Cable – Villager 6	9-15
Air Intake Duct and Choke Cable – Villager 8	9-17
Air Filter and Intake Hose	9-19

SECTION 10 – EXHAUST SYSTEM

Exhaust System – FE350 (All)	10-3
------------------------------------	------

SECTION 11 – DRIVE BELT AND CLUTCHES – CARBURETED GASOLINE VEHICLES

Drive Belt	11-3
Drive Clutch – Carryall 2 Plus and Villager 6/8	11-5
Driven Clutch	11-7

SECTION 12 – UNITIZED TRANSAXLE – CARBURETED GASOLINE VEHICLES

Forward/Reverse Shifter	12-3
Shifter Cable – Turf/CA 6 and Villager 6	12-5
Shifter Cable – Villager 8	12-7
Kawasaki Transaxle – Gear Cases and Brackets	12-9
Kawasaki Transaxle – F&R Transmission and Gear Reduction	12-11
Kawasaki Transaxle – Differential and Axles	12-13
Graziano Transaxle – Gear Cases and Levers	12-15
Graziano Transaxle – F&R Transmission and Gear Reduction	12-17
Graziano Transaxle – Differential and Axles	12-19
Differential Guard – Gasoline Vehicle	12-21

SECTION 13 – ELECTRICAL SYSTEM, ELECTRIC VEHICLES

Motor Controller Output Regulator (MCOR)	13-3
Wiring – Villager 6 IQ Plus Electric	13-5
Wiring – Villager 8 IQ Plus Electric	13-7
Battery Charger Receptacle	13-9
Tow/Run Switch – IQ Plus Vehicles	13-11
Batteries, 6-Volt, Standard Duty, Trojan	13-13

CONTENTS

Batteries, 6-Volt, Heavy Duty, Trojan	13-15
Single Point Watering System (SPWS)	13-17
Computer, Controller, and Solenoid – for Trojan Batteries	13-19
Ferrite Beads, CE	13-21

SECTION 14 – MOTOR (MODEL DA5-4006) – IQ PLUS

Motor (Model DA5-4006) – IQ Plus	14-3
--	------

SECTION 15 – TRANSAXLE – ELECTRIC VEHICLES

Transaxle – Electric Vehicles	15-3
Differential Guard – Electric Vehicles	15-5

SECTION 16 – BATTERY CHARGERS

IQ Plus Battery Charger (Models 25730-11,-18,-19), Domestic	16-3
IQ Plus Battery Charger (Models 25880-11 and -18), International	16-5
Onboard IQ Plus Battery Charger (Model 25260-50), Domestic	16-7
Onboard IQ Plus Battery Charger (Model 25660-50), International	16-9
Onboard IQ Plus Charger and Cord Reel Mounting	16-11

SECTION 17 – MAINTENANCE AND SERVICE TOOLS

Maintenance and Service Tools	17-3
Maintenance and Service Tools, Continued	17-5
Maintenance and Service Tools, Continued	17-7
Maintenance and Service Tools, Continued	17-9
Maintenance and Service Tools, Continued	17-11


SECTION i – INDEX

BODY AND TRIM

1

G

E

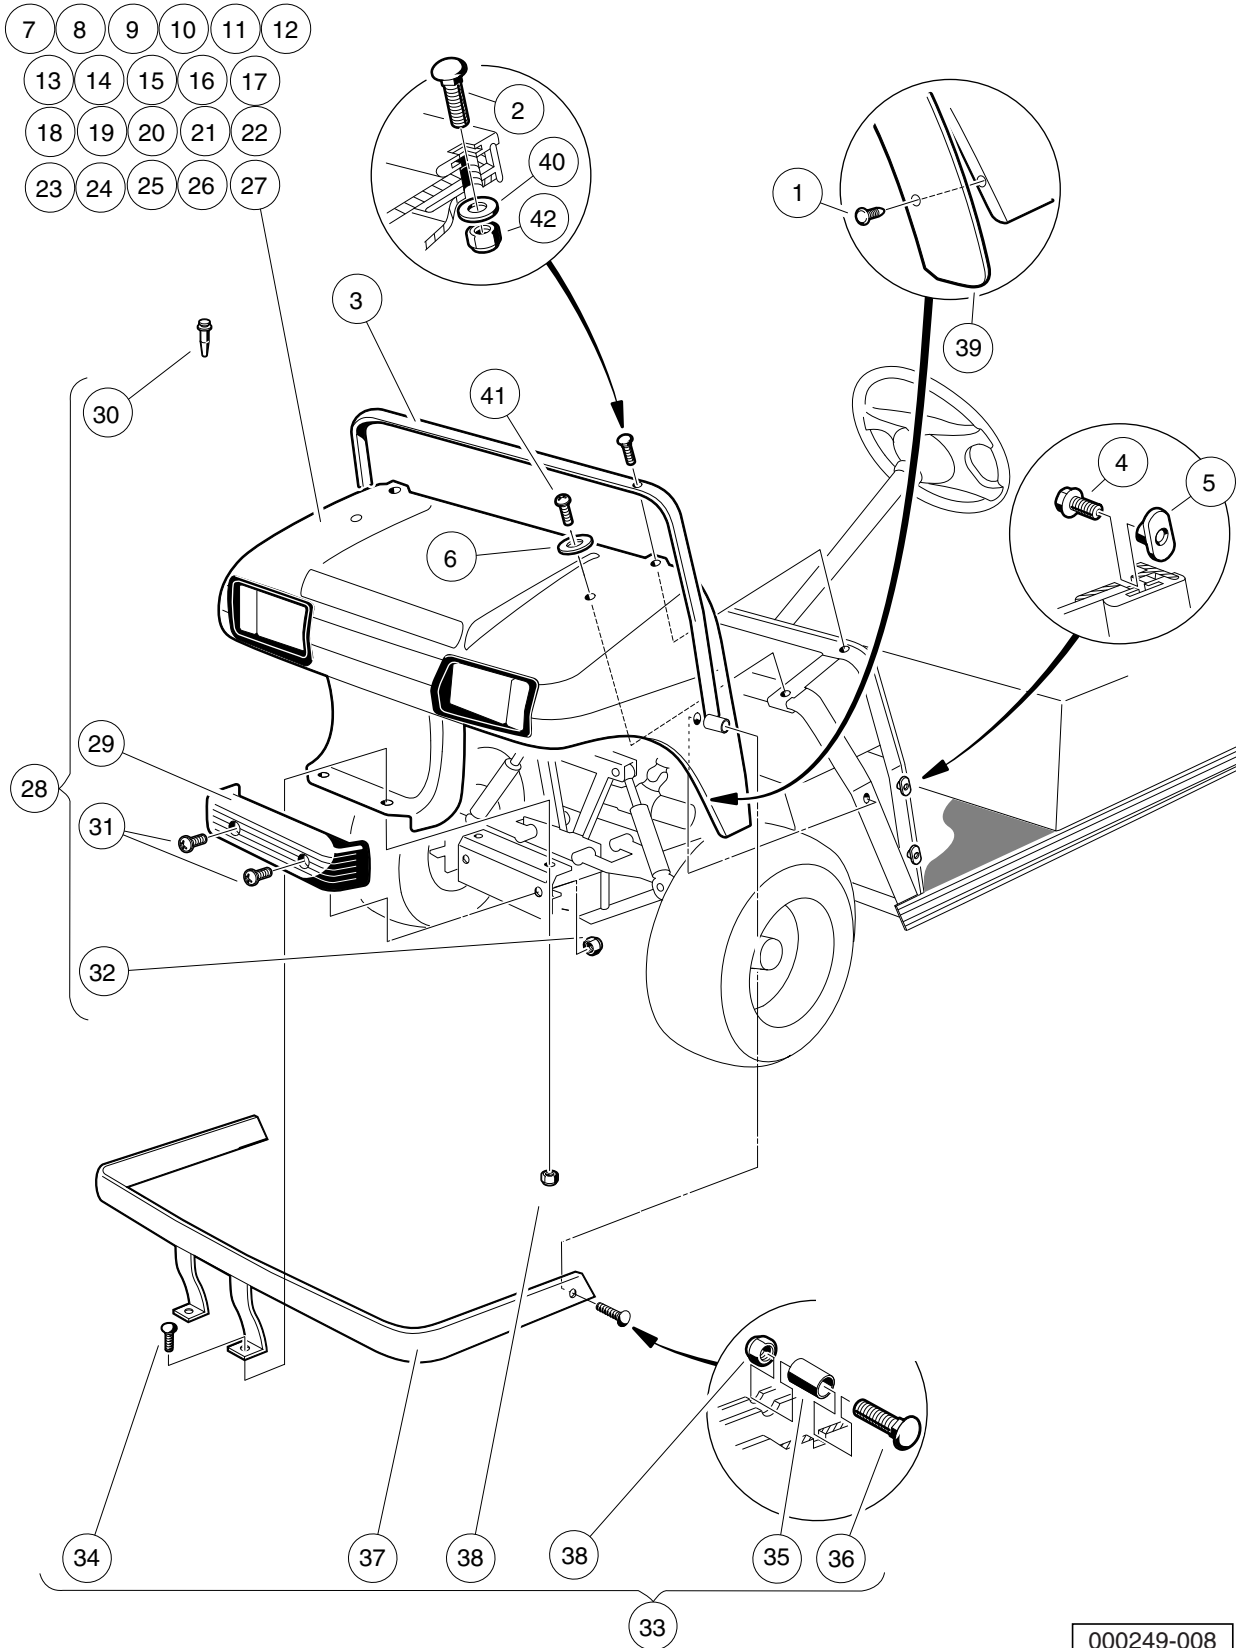1**G****E**

000249-008

FRONT BODY AND TRIM – TURF, UTILITY, & TRANSPORTATION


ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1010434</u>	Barrel - Plastic	12
2	<u>1010435</u>	Bolt, Carriage, 5/16-18 X 1.00	2
3	<u>1011014</u>	Trim, Cowl	1
4	<u>1011017</u>	Screw, #8-32 X 0.375	6
5	<u>1011394</u>	T-Nut Package (Set of 4)	1
6	<u>1015075</u>	Washer, 5/16 Flat Type A	2
7	<u>101692501</u>	Cowl, TPO, Beige	1
8	<u>101692502</u>	Cowl, TPO, White	1
9	<u>101692504</u>	Cowl, Tpo -gray	1
10	<u>101692506</u>	Cowl, TPO, Red	1
11	<u>101692509</u>	Cowl, TPO, Pacific Blue (Royal Blue)	1
12	<u>101692510</u>	Cowl, TPO, Dark Green	1
13	<u>101692511</u>	Cowl, TPO, Black	1
14	<u>101692512</u>	Cowl, TPO, Classic Blue (Navy)	1
15	<u>101692513</u>	Cowl, TPO, Burgundy	1
16	<u>101692514</u>	Cowl, TPO, Dark Gray	1
17	<u>101692515</u>	Cowl, TPO, Safety Yellow	1
18	<u>101693901</u>	Cowl with Headlight Opening, TPO, Beige	1
19	<u>101693902</u>	Cowl with Headlight Opening, TPO, White	1
20	<u>101693904</u>	Cowl with Headlight Opening, TPO, Gray	1
21	<u>101693906</u>	Cowl with Headlight Opening, TPO, Red	1
22	<u>101693909</u>	Cowl with Headlight Opening, TPO, Dark Green	1
23	<u>101693910</u>	Cowl with Headlight Opening, TPO, Black	1
24	<u>101693911</u>	Cowl with Headlight Opening, TPO, Classic Blue (Navy)	1
25	<u>101693912</u>	Cowl with Headlight Opening, TPO, Burgundy	1
26	<u>101693913</u>	Cowl with Headlight Opening, TPO, Dark Gray	1
27	<u>101693914</u>	Cowl with Headlight Opening, TPO, Safety Yellow	1
28	<u>1017080</u>	Kit, Front Bumper (includes items 29 through 32)	1
29	<u>1016868</u>	Front Bumper	1
30	<u>1016967</u>	Blind Rivet, Push Type	2
31	<u>7251</u>	Screw, 5/16-18 x 1.0 Truss-Head	2
32	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	2
33	<u>101734802</u>	Kit, Heavy-Duty Bumper (includes items 34 through 38)	1
34	<u>1010435</u>	Bolt, Carriage, 5/16-18 X 1.00	2
35	<u>1010546</u>	Spacer	2
36	<u>1015405</u>	Bolt, Carriage, 5/16-18 X 2.0	2
37	N/A	Weldment, Heavy Duty Bumper	1
38	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	4
39	<u>101870401</u>	Fender Extrusion	2
40	<u>1241</u>	Washer, 5/16 Type A Flat	2
41	<u>7251</u>	Screw, 5/16-18 x 1.0 Truss-Head	2
42	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	2

1
G
E

1

G

E

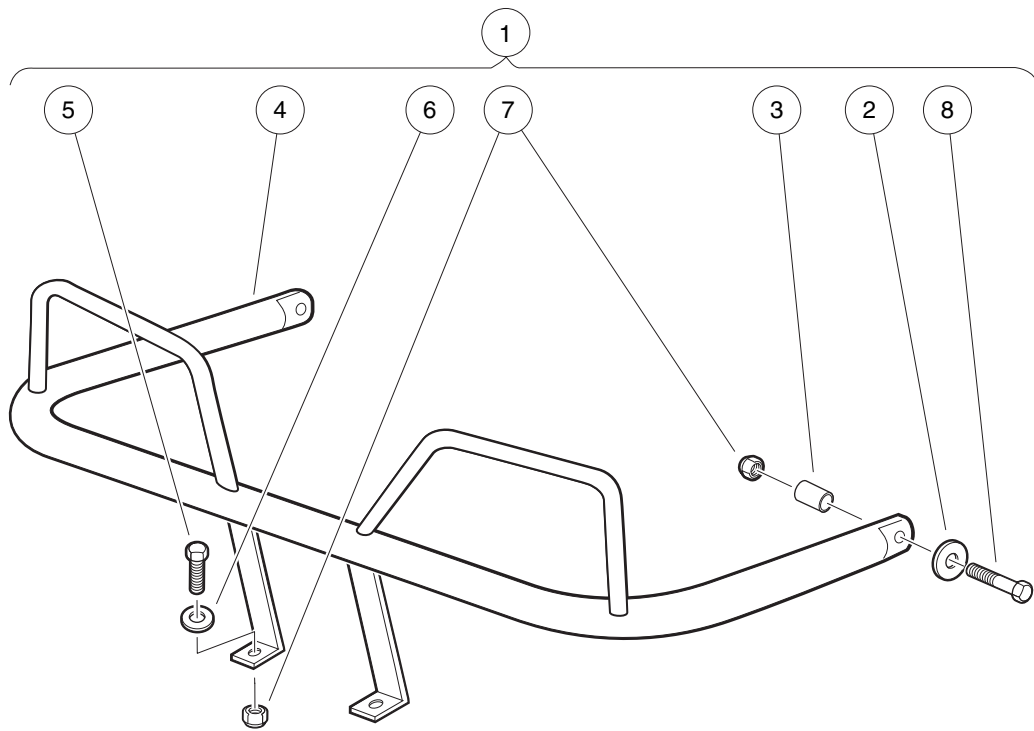

001238-001


BRUSH GUARD KIT – DS, UTILITY, & VILLAGER

ITEM	PART NO.	DESCRIPTION	QTY	1 G E
		1 2 3 4		
1	SVP143902	Kit, Brush Guard, Heavy-Duty, DS/Utility/Villager (includes items 2 through 8)	1	
2	<u>1011578</u>	Washer, 5/16 Type B Flat	2	
3	<u>1015608</u>	Tube Spacer, Hydraulic Cylinder	2	
4	103895401	Weldment, Brush Guard, Hd	1	
5	1218	Screw, 5/16-18 X 1.25 Hex-Head Cap	2	
6	<u>1241</u>	Washer, 5/16 Type A Flat	2	
7	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	4	
8	<u>8935</u>	Screw, 5/16-18 X 2.25 Hex-Head Cap	2	

1

G

E

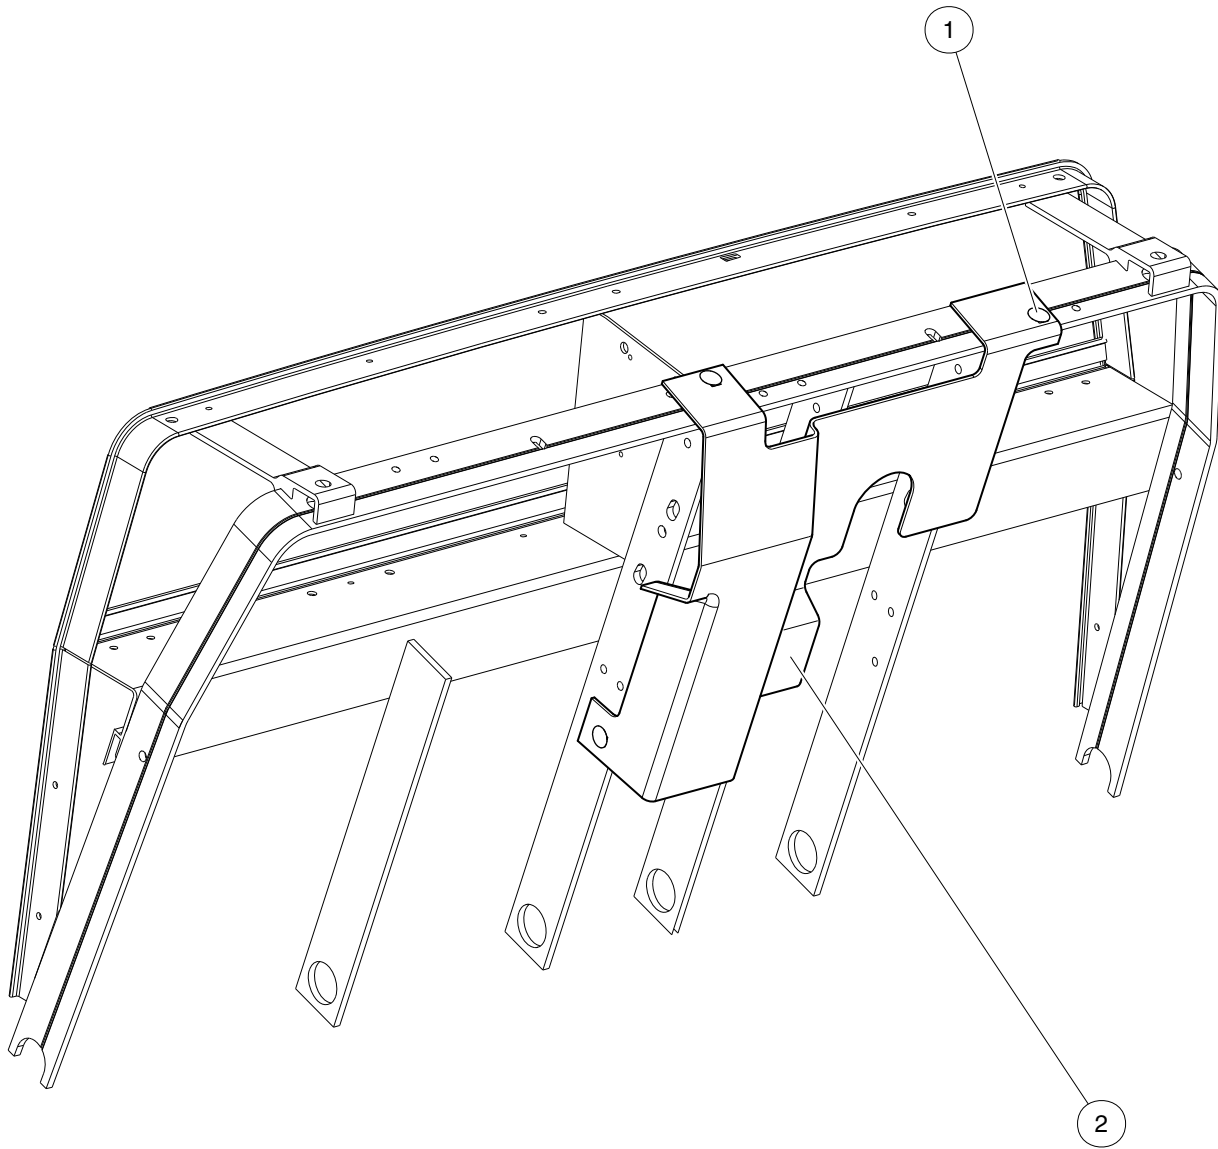

000593-002


SPLASH GUARD – GASOLINE VEHICLES ONLY

ITEM	PART NO.	DESCRIPTION	QTY	1 G E
1	<u>1010434</u>	1 2 3 4 Barrel - Plastic	3	
2	<u>103174401</u>	Splash Guard	1	

1

G

E

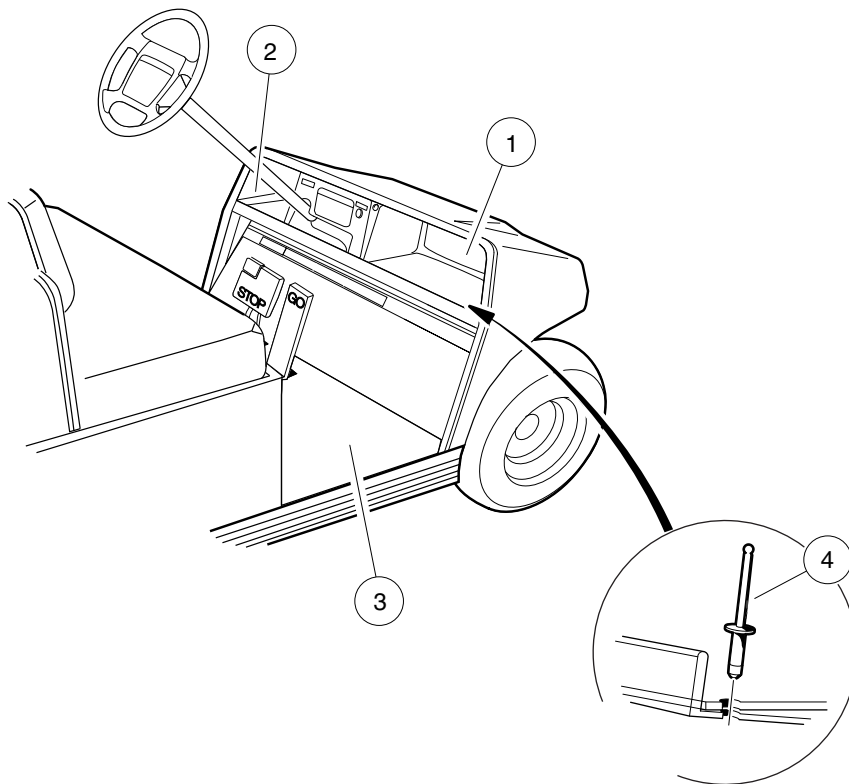

000252-002


1
G
E

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1013343</u>	Dash Component, Passenger-Side, Black	1
2	1013344	Dash Component, Driver-Side	1
3	<u>101503202</u>	Floormat	1
4	<u>7973</u>	Rivet, 3/16 X .400 Blind	5

1

G

E

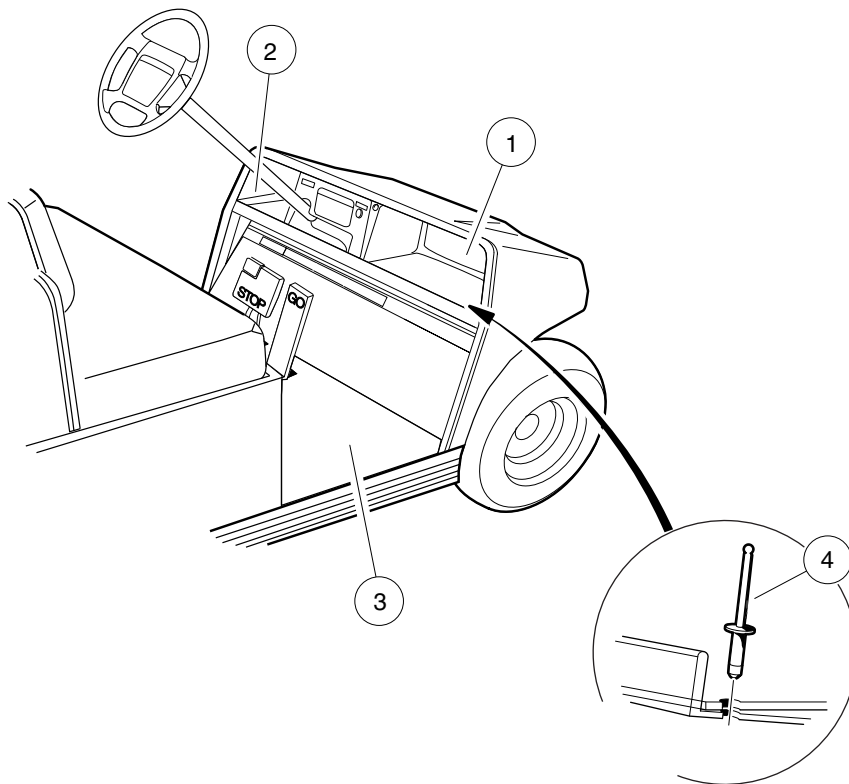

000252-002

DASH POCKETS AND FLOORMAT – FROM LATE-2013 MODEL YEAR

ITEM	PART NO.	DESCRIPTION	QTY	1 G E
		1 2 3 4		
1	<u>1013343</u>	Dash Component, Passenger-Side, Black	1	
2	1013344	Dash Component, Driver-Side	1	
3	103939201	Floor Mat, Ds/utl, Std	1	
4	<u>7973</u>	Rivet, 3/16 X .400 Blind	5	

1

G

E



1

001281-001

FLOORMAT, REAR – VILLAGER & TRANSPORTATION VEHICLES – TO LATE-2013 MODEL YEAR

ITEM	PART NO.	DESCRIPTION	QTY	1 G E
1	<u>1017289</u>	1 2 3 4 Floormat, Rear, Limo/Villager/Transporter	A/R	

1

G

E



1

001281-001


FLOORMAT, REAR – VILLAGER & TRANSPORTATION VEHICLES – FROM LATE-2013 MODEL YEAR

ITEM	PART NO.	DESCRIPTION	QTY	1 G E
1	103952201	1 2 3 4 Floor Mat, Ds/utl, Rear, Limo	A/R	

1

G

E

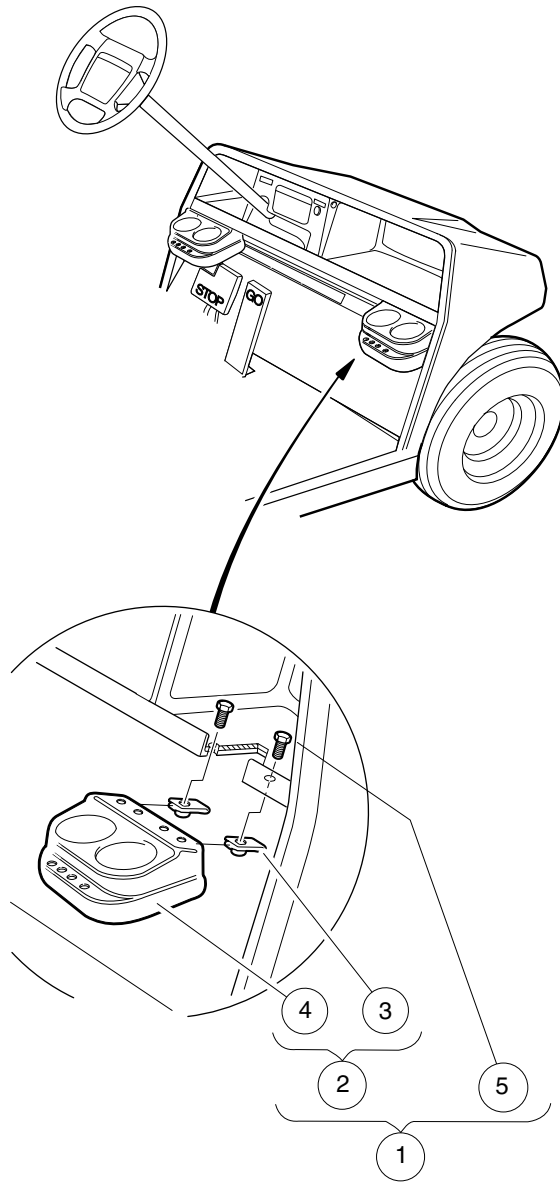

000253-002


BEVERAGE HOLDER – DUAL

ITEM	PART NO.	DESCRIPTION	QTY	1	G	E
		1 2 3 4				
1	<u>101708301</u>	Drink Holder Kit (includes items 2 through 5)	2			
2	<u>1016811</u>	Holder, Dual Cup (includes items 3 and 4)	1			
3	1016952	U-Nut, 1/4-20	2			
4	N/A	Cup Holder, Dual	1			
5	<u>7847</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	2			

1

G

E

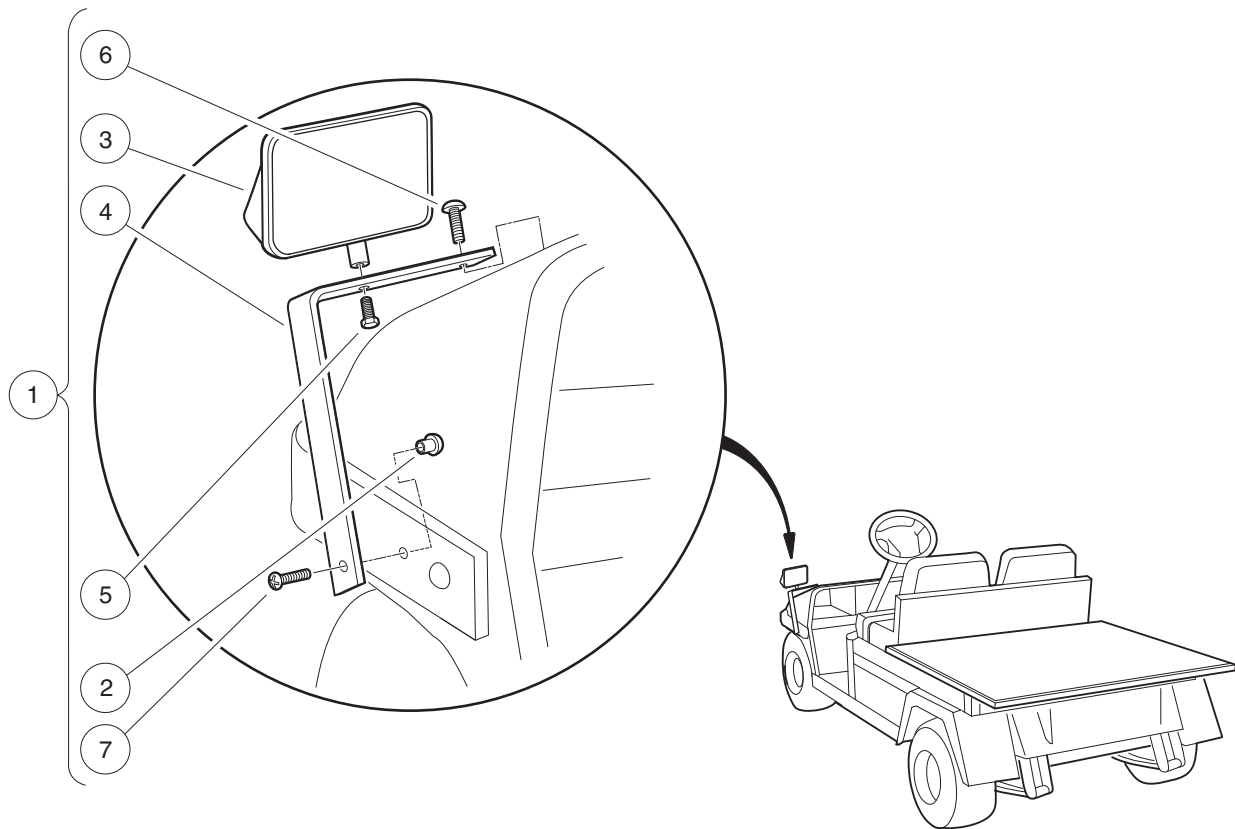

001211-001


MIRROR, REAR-VIEW – WITHOUT CAB

ITEM	PART NO.	DESCRIPTION	QTY	1 G E
		1 2 3 4		
1	<u>1013846</u>	Kit, Rear Mirror, West Coast (includes items 2 through 7)	1	
2	<u>1011878</u>	T-nut, 1/4-20 X .310 Capped	1	
3	<u>1013824</u>	Rear View Mirror	1	
4	<u>1013825</u>	Mirror Mounting Bracket	1	
5	<u>7173</u>	Screw, 5/16-18 X 0.75, Hex-Head Cap	1	
6	<u>7251</u>	Screw, 5/16-18 x 1.0 Truss-Head	1	
7	<u>8248</u>	Screw, 1/4-20 X 0.75, Truss-Head Machine	1	
Note: To install this kit, vehicle must be equipped with a heavy-duty front bumper.				

1

G

E

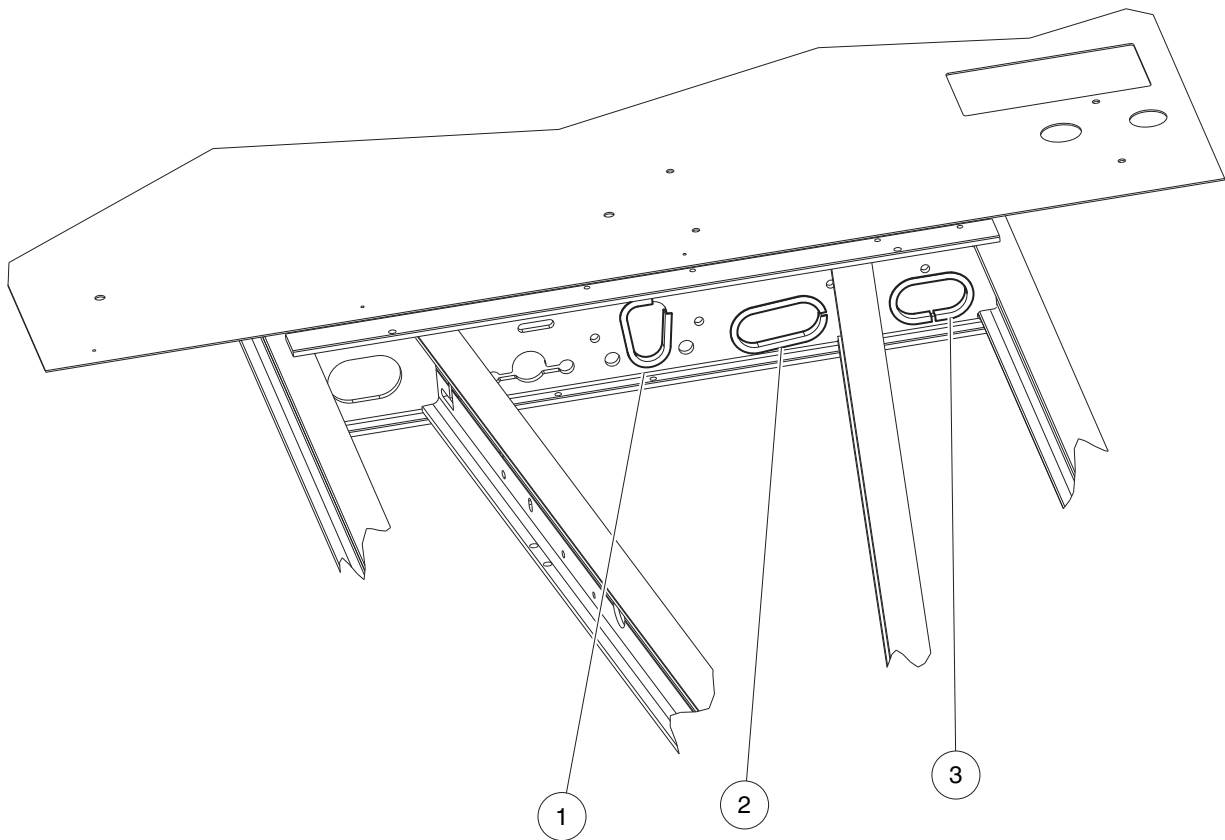

001221-001

GROMMETS, CHASSIS


ITEM	PART NO.	DESCRIPTION	QTY	1
1	<u>101806001</u>	1 2 3 4 I-beam Grommet - 5.5	A/R	G
2	<u>101806002</u>	I-beam Grommet - 7.5	A/R	E
3	<u>101806005</u>	I-beam Grommet - 6.75	A/R	

1


G

E

VILLAGER 8

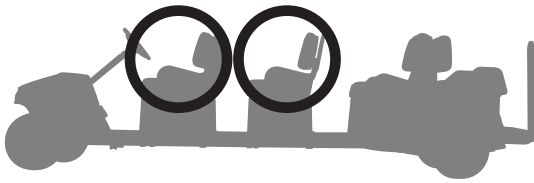

VILLAGER 6

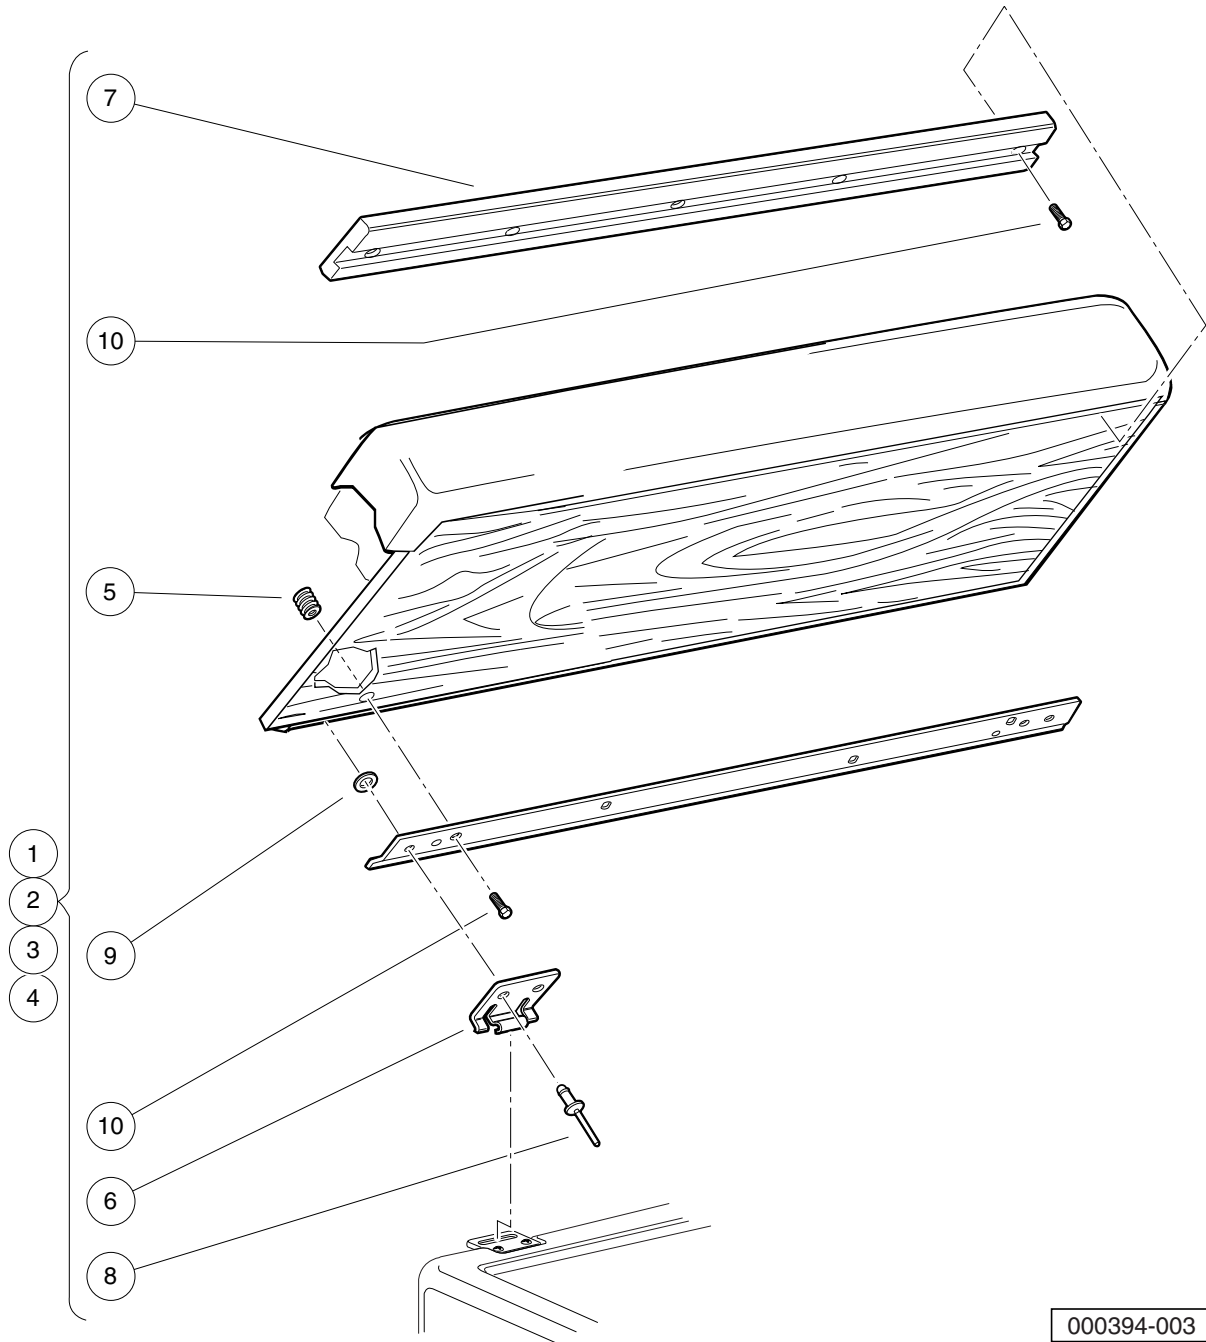

000394-003





FRONT AND CENTER SEAT BOTTOMS

ITEM	PART NO.	DESCRIPTION	QTY	1 G E
		1 2 3 4		
1	<u>101728201</u>	Seat Bottom Assembly, Front, White	1	
2	<u>101728203</u>	Seat Bottom Assembly, Front, Beige	1	
3	<u>101728210</u>	Seat Bottom Assembly, Front, Black	1	
4	<u>101728213</u>	Seat Bottom Assembly, Rear, Gray (includes items 5 through 10)	1	
5	1010543	Insert - Wood	8	
6	<u>1011652</u>	Hinge Plate	2	
7	<u>1013312</u>	Bumper, Seat, Long	1	
8	<u>101880901</u>	Rivet, 3/16, Stainless-Steel, Pop	4	
9	<u>101881701</u>	Washer, #8 Stainless-Steel Flat	4	
10	<u>101954301</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	8	

1

G

E

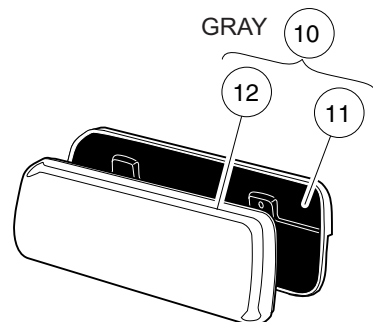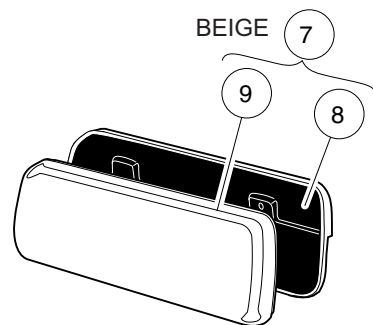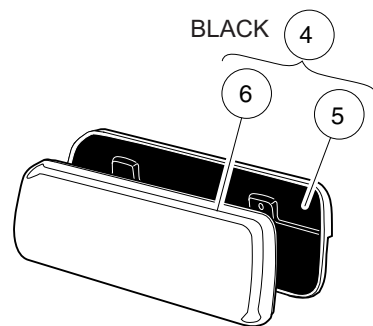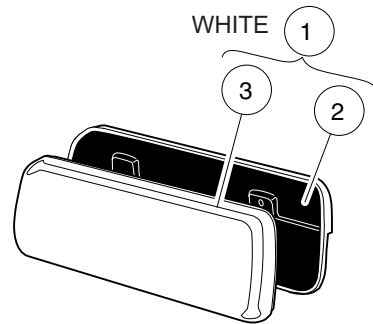

000608-001

SEAT BACK ASSEMBLY


ITEM	PART NO.	DESCRIPTION	QTY	1	G	E
		1 2 3 4				
1	<u>101677701</u>	Seat Back Assembly, White (includes items 2 and 3)	1			
2	1016751	Cap, Seat Back	1			
3	<u>101675512</u>	Vinyl Seat Back, White	1			
4	<u>101677702</u>	Seat Back Assembly, Black (includes items 5 and 6)	1			
5	1016751	Cap, Seat Back	1			
6	<u>101675514</u>	Vinyl Seat Back, Black	1			
7	<u>101677703</u>	Seat Back Assembly, Beige (includes items 8 and 9)	1			
8	1016751	Cap, Seat Back	1			
9	<u>101675511</u>	Vinyl Seat Back, Beige	1			
10	<u>101677705</u>	Seat Back Assembly, Gray (includes items 11 and 12)	1			
11	1016751	Cap, Seat Back	1			
12	<u>101675515</u>	Vinyl Seat Back-nstd Svc	1			

1


G

E

VILLAGER 8

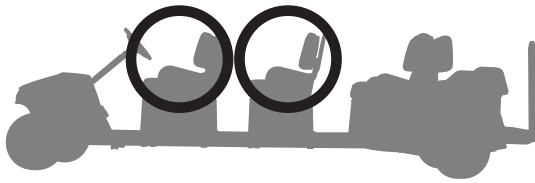

VILLAGER 6

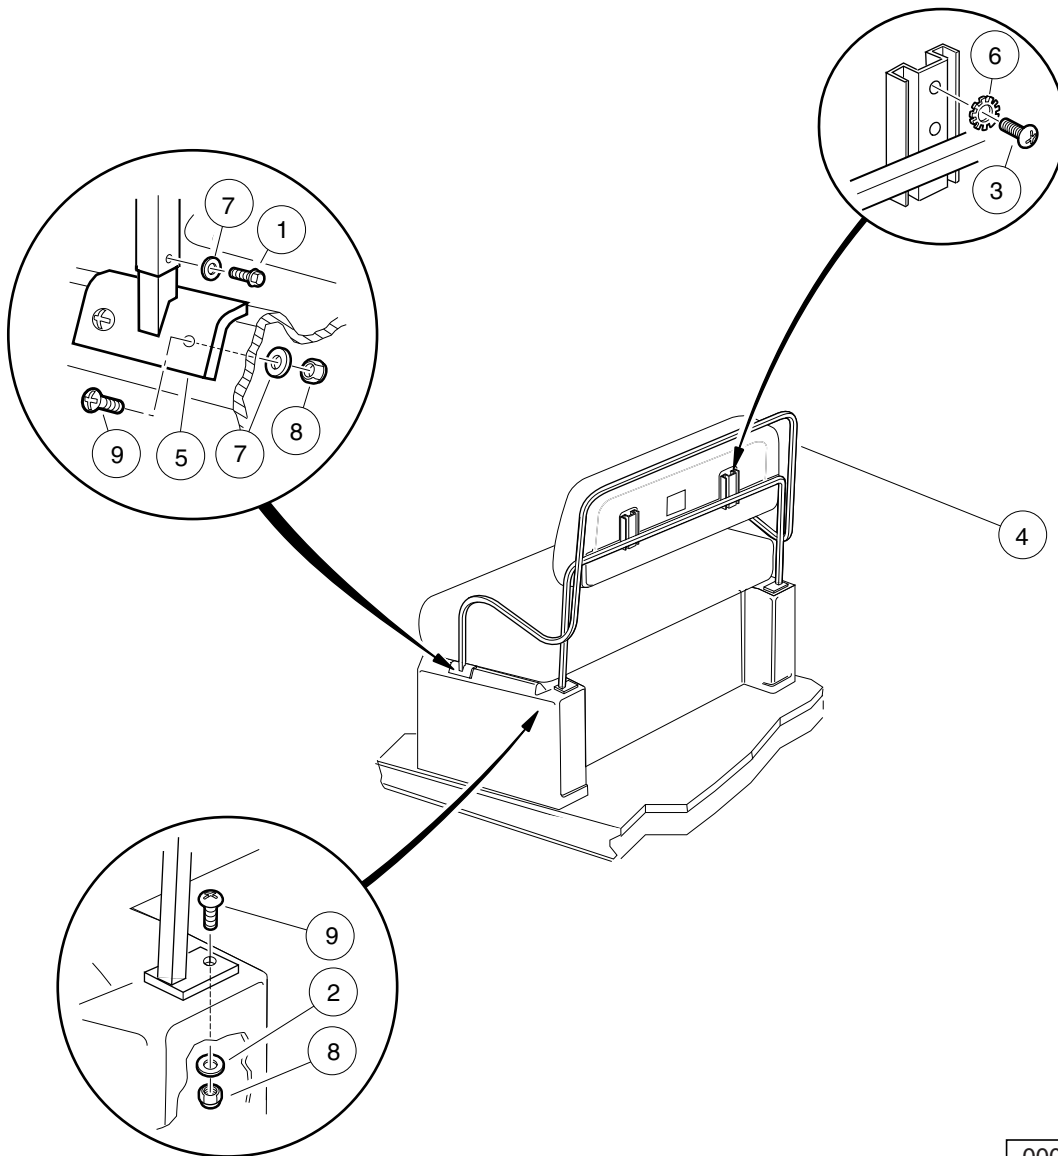

000396-003


ARMRESTS, FRONT – VILLAGER 6 & 8 VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY	1 G E
		1 2 3 4		
1	<u>1012285</u>	Screw, 1/4 X 0.625 Hex-Head	4	
2	<u>1014306</u>	Washer, 1/4" Type B Flat	2	
3	<u>1015902</u>	Screw, 1/4-20 X 1.25 Truss-Head	4	
4	<u>1017259</u>	Armrest Weld Asm Front	1	
5	<u>1017310</u>	Armrest Mounting Weldment	2	
6	<u>101946201</u>	Washer, Lock, 0.250 External-Tooth	4	
7	<u>332</u>	Washer, 1/4 Type A Narrow Flat	6	
8	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	6	
9	<u>8251</u>	Screw, 1/4-20 X 1.0 Truss-Head Machine	6	

1

G

E

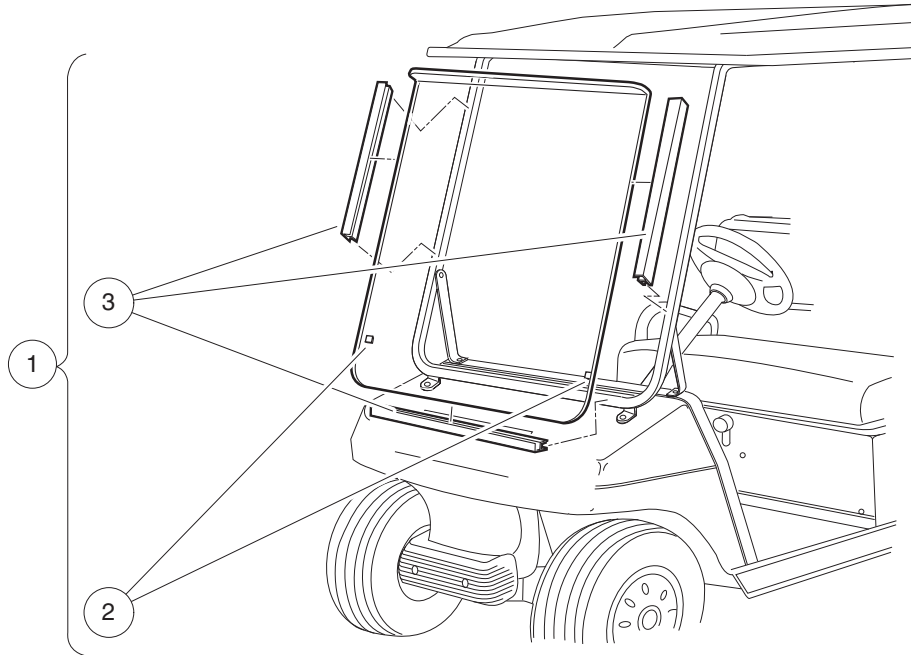

001204-001

WINDSHIELD, NON-HINGED

ITEM	PART NO.	DESCRIPTION	QTY
1	1014435	Windshield Tinted One-Piece (includes items 2 and 3)	1
2	<u>1011897</u>	Bumper, Protective	2
3	<u>101444101</u>	21" Plastic Extrusion	3

1


G

E

1

G

E

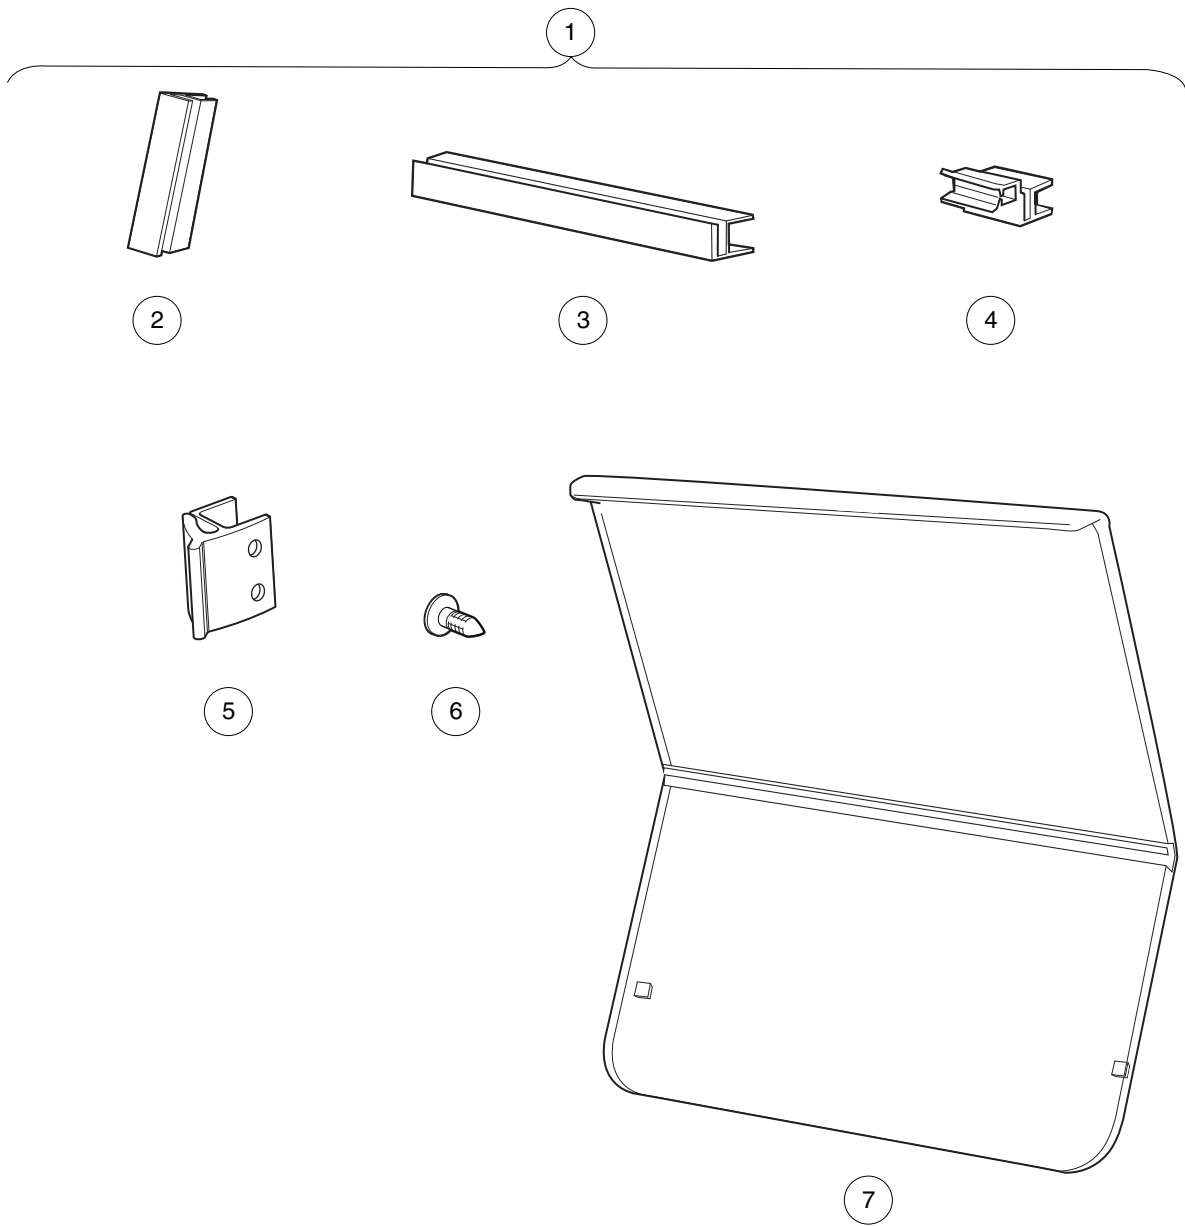

001257-001


WINDSHIELD, HINGED

ITEM	PART NO.	DESCRIPTION	QTY	1	G	E
		1 2 3 4				
1	103888301	Kit, Hinged Windshield, Utility (includes items 2 through 7)	1			
2	<u>102005701</u>	5" Plastic Extrusion	4			
3	<u>102163001</u>	Windshield Channel	1			
4	<u>102163101</u>	Channel with Receiver Clip	2			
5	<u>103677101</u>	W/s, Rubber, Clip Retainer	2			
6	<u>103754901</u>	Fastener, Barrel - .610 X .25	8			
7	103888101	Hinged Windshield, Utility	1			

1

G

E

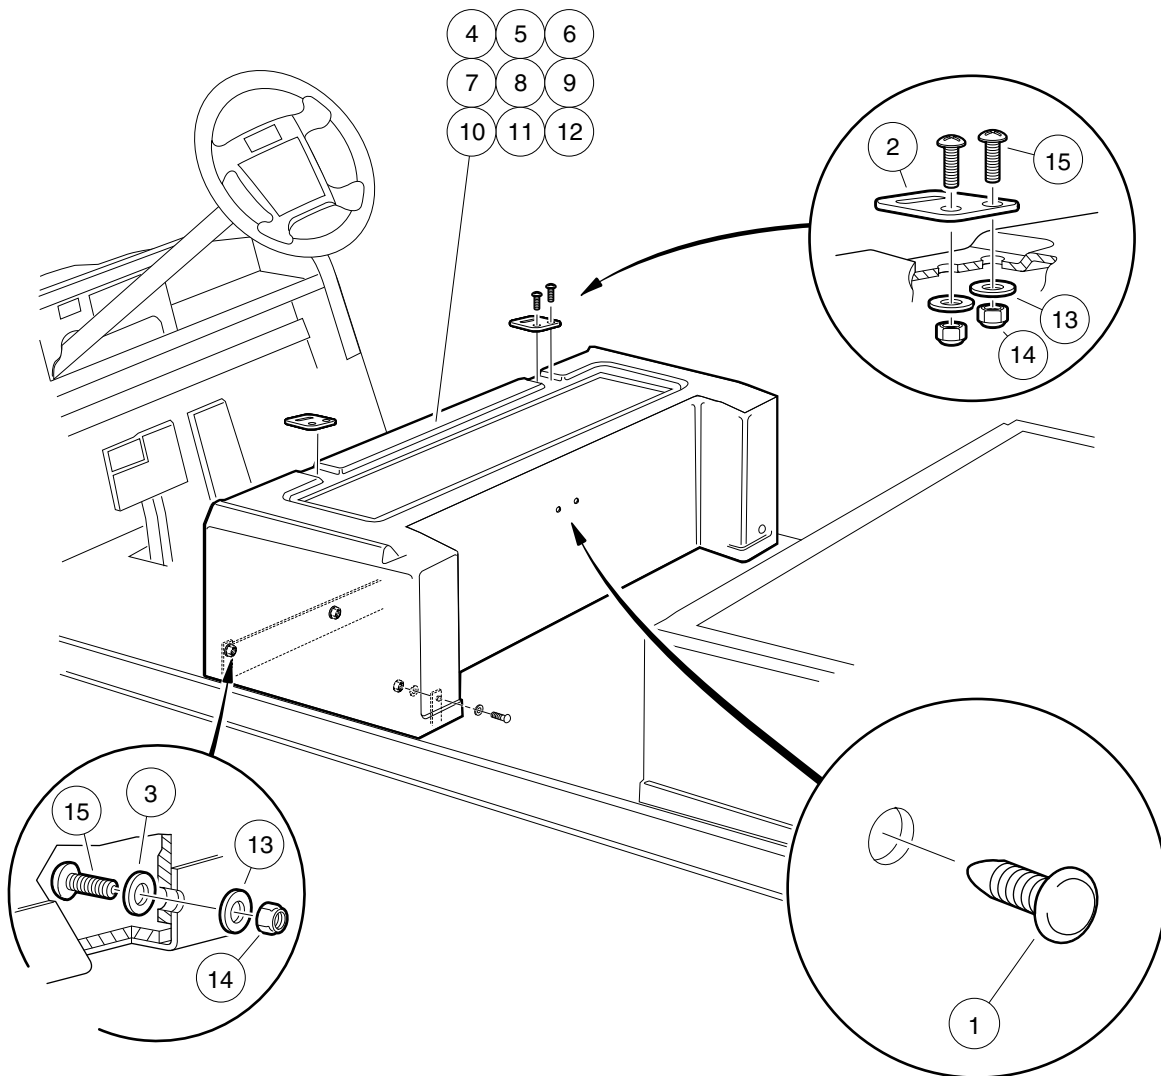

000389-004


CENTER BODY – VILLAGER 6 GASOLINE VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY	1	G	E
		1 2 3 4				
1	<u>1010434</u>	Barrel - Plastic	2			
2	<u>1012412</u>	Body, Hinge Plate	2			
3	<u>1012581</u>	Washer, 0.609-inch OD, Nylon Cup	6			
4	<u>103274101</u>	Body, Center, Gas, Beige	1			
5	<u>103274102</u>	Body, Center, Gas, Wht	1			
6	<u>103274104</u>	Body, Center, Gas, Gray	1			
7	<u>103274106</u>	Body, Center, Gas, Red	1			
8	<u>103274108</u>	Body, Center, Gas, Pacific Bl	1			
9	<u>103274109</u>	Body, Center, Gas, Dk Green	1			
10	<u>103274110</u>	Body, Center, Gas, Black	1			
11	<u>103274111</u>	Body, Center, Gas, C/blu	1			
12	<u>103274112</u>	Body, Center, Gas, Burgundy	1			
13	<u>332</u>	Washer, 1/4 Type A Narrow Flat	10			
14	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	10			
15	<u>8251</u>	Screw, 1/4-20 X 1.0 Truss-Head Machine	10			

1

G

E

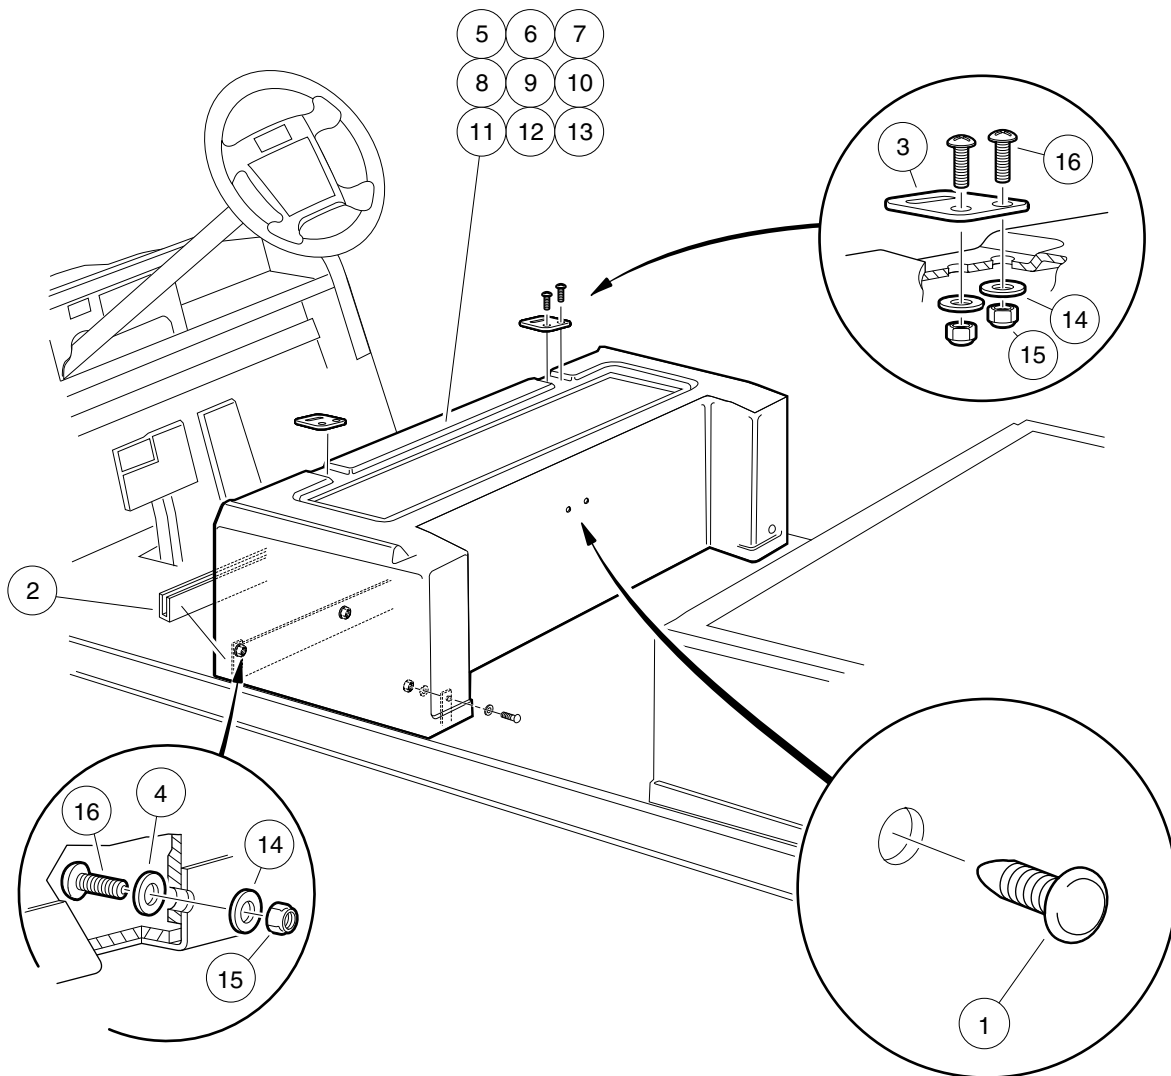

000389-005


CENTER BODY – VILLAGER 6 IQ PLUS VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY	1 G E
		1 2 3 4		
1	<u>1010434</u>	Barrel - Plastic	2	
2	<u>1010993</u>	Body Kick Plate	1	
3	<u>1012412</u>	Body, Hinge Plate	2	
4	<u>1012581</u>	Washer, 0.609-inch OD, Nylon Cup	4	
5	<u>103274001</u>	Body, Center, Elec, Beige	1	
6	<u>103274002</u>	Body, Center, Elec, Wht	1	
7	<u>103274004</u>	Body, Center, Elec, Gray	1	
8	<u>103274006</u>	Body, Center, Elec, Red	1	
9	<u>103274008</u>	Body, Center, Elec, Pacific Bl	1	
10	<u>103274009</u>	Body, Center, Elec, Dk Green	1	
11	<u>103274010</u>	Body, Center, Elec, Black	1	
12	<u>103274011</u>	Body, Center, Elec, C/blu	1	
13	<u>103274012</u>	Body, Center, Elec, Burgundy	1	
14	<u>332</u>	Washer, 1/4 Type A Narrow Flat	8	
15	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	8	
16	<u>8251</u>	Screw, 1/4-20 X 1.0 Truss-Head Machine	8	

1

G

E

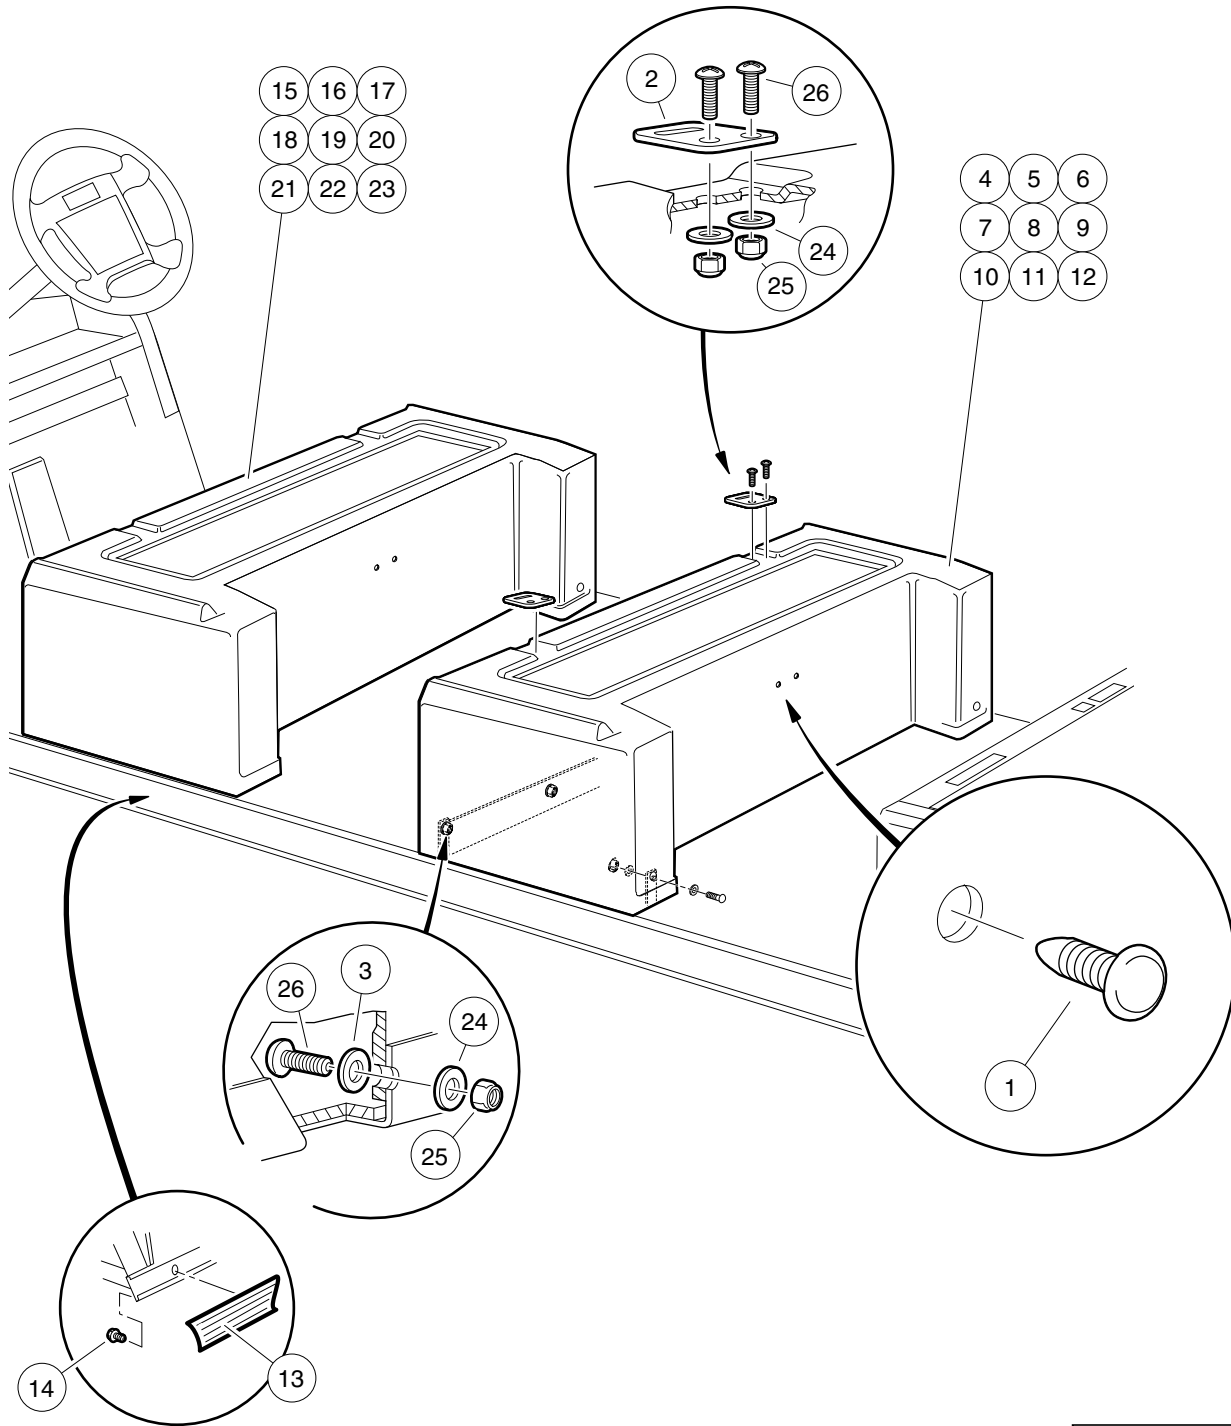

000390-003


CENTER BODIES – VILLAGER 8 GASOLINE VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY	1	G	E
		1 2 3 4				
1	<u>1010434</u>	Barrel - Plastic	2			
2	<u>1012412</u>	Body, Hinge Plate	2			
3	<u>1012581</u>	Washer, 0.609-inch OD, Nylon Cup	6			
4	<u>101788201</u>	Body, Beige, Center	1			
5	<u>101788202</u>	Body, White, Center	1			
6	<u>101788204</u>	Body, Gray, Center	1			
7	<u>101788206</u>	Body, Red, Center	1			
8	<u>101788208</u>	Body, Pacific Blue, Center	1			
9	<u>101788209</u>	Body, Dark Green, Center	1			
10	<u>101788210</u>	Body, Black, Center	1			
11	<u>101788211</u>	Body, Classic Blue, Center	1			
12	<u>101788212</u>	Body, Burgundy, Center	1			
13	<u>101791901</u>	Bumper Guard Vinyl Trim	2			
14	<u>102310701</u>	Screw, #8-18 x 0.375, Hex-Head Washer	8			
15	<u>103274101</u>	Body, Center, Gas, Beige	1			
16	<u>103274102</u>	Body, Center, Gas, Wht	1			
17	<u>103274104</u>	Body, Center, Gas, Gray	1			
18	<u>103274106</u>	Body, Center, Gas, Red	1			
19	<u>103274108</u>	Body, Center, Gas, Pacific Bl	1			
20	<u>103274109</u>	Body, Center, Gas, Dk Green	1			
21	<u>103274110</u>	Body, Center, Gas, Black	1			
22	<u>103274111</u>	Body, Center, Gas, C/blu	1			
23	<u>103274112</u>	Body, Center, Gas, Burgundy	1			
24	<u>332</u>	Washer, 1/4 Type A Narrow Flat	10			
25	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	10			
26	<u>8251</u>	Screw, 1/4-20 X 1.0 Truss-Head Machine	10			

1

G


E

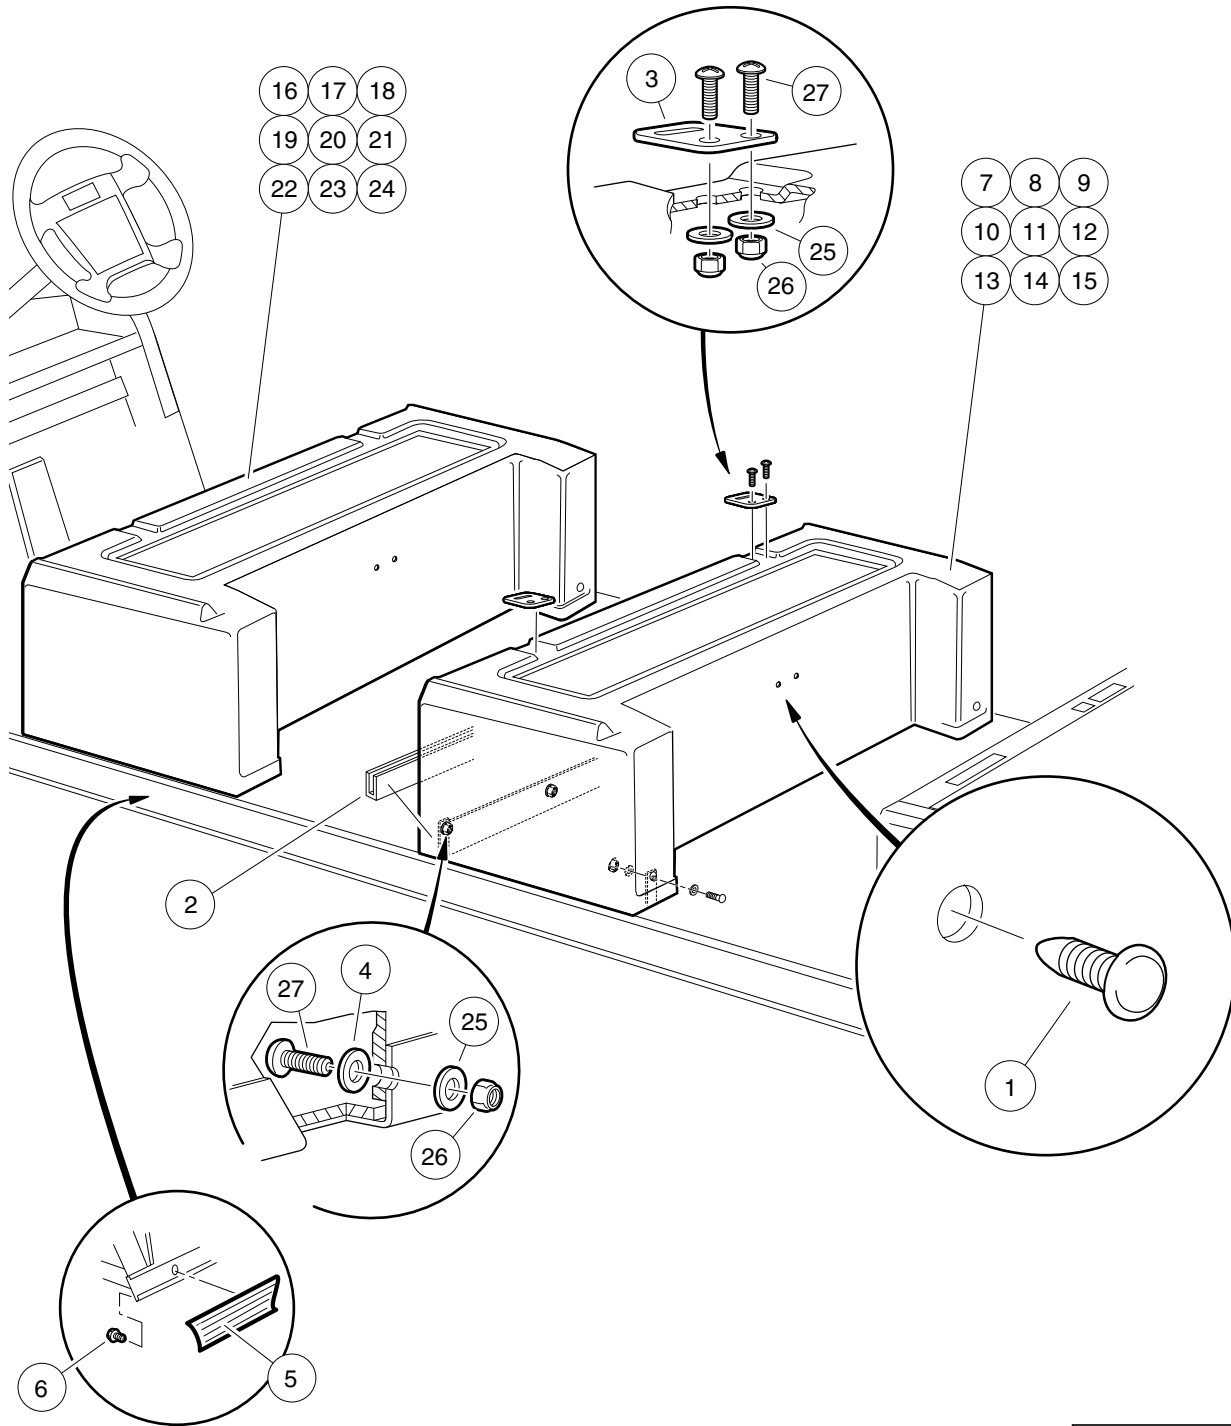

000390-004

CENTER BODIES – VILLAGER 8 IQ PLUS VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY	1 G E
		1 2 3 4		
1	<u>1010434</u>	Barrel - Plastic	2	
2	<u>1010993</u>	Body Kick Plate	2	
3	<u>1012412</u>	Body, Hinge Plate	2	
4	<u>1012581</u>	Washer, 0.609-inch OD, Nylon Cup	4	
5	<u>101791901</u>	Bumper Guard Vinyl Trim	2	
6	<u>102310701</u>	Screw, #8-18 x 0.375, Hex-Head Washer	8	
7	<u>102945501</u>	Body, Beige, Center	1	
8	<u>102945502</u>	Body, White, Center	1	
9	<u>102945504</u>	Body, Gray, Center	1	
10	<u>102945506</u>	Body, Red, Center	1	
11	<u>102945508</u>	Body, Pacific Blue, Center	1	
12	<u>102945509</u>	Body, Dark Green, Center	1	
13	<u>102945510</u>	Body, Black, Center	1	
14	<u>102945511</u>	Body, Classic Blue, Center	1	
15	<u>102945512</u>	Body, Burgundy, Center	1	
16	<u>103274001</u>	Body, Center, Elec, Beige	1	
17	<u>103274002</u>	Body, Center, Elec, Wht	1	
18	<u>103274004</u>	Body, Center, Elec, Gray	1	
19	<u>103274006</u>	Body, Center, Elec, Red	1	
20	<u>103274008</u>	Body, Center, Elec, Pacific Bl	1	
21	<u>103274009</u>	Body, Center, Elec, Dk Green	1	
22	<u>103274010</u>	Body, Center, Elec, Black	1	
23	<u>103274011</u>	Body, Center, Elec, C/blu	1	
24	<u>103274012</u>	Body, Center, Elec, Burgundy	1	
25	<u>332</u>	Washer, 1/4 Type A Narrow Flat	8	
26	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	8	
27	<u>8251</u>	Screw, 1/4-20 X 1.0 Truss-Head Machine	8	

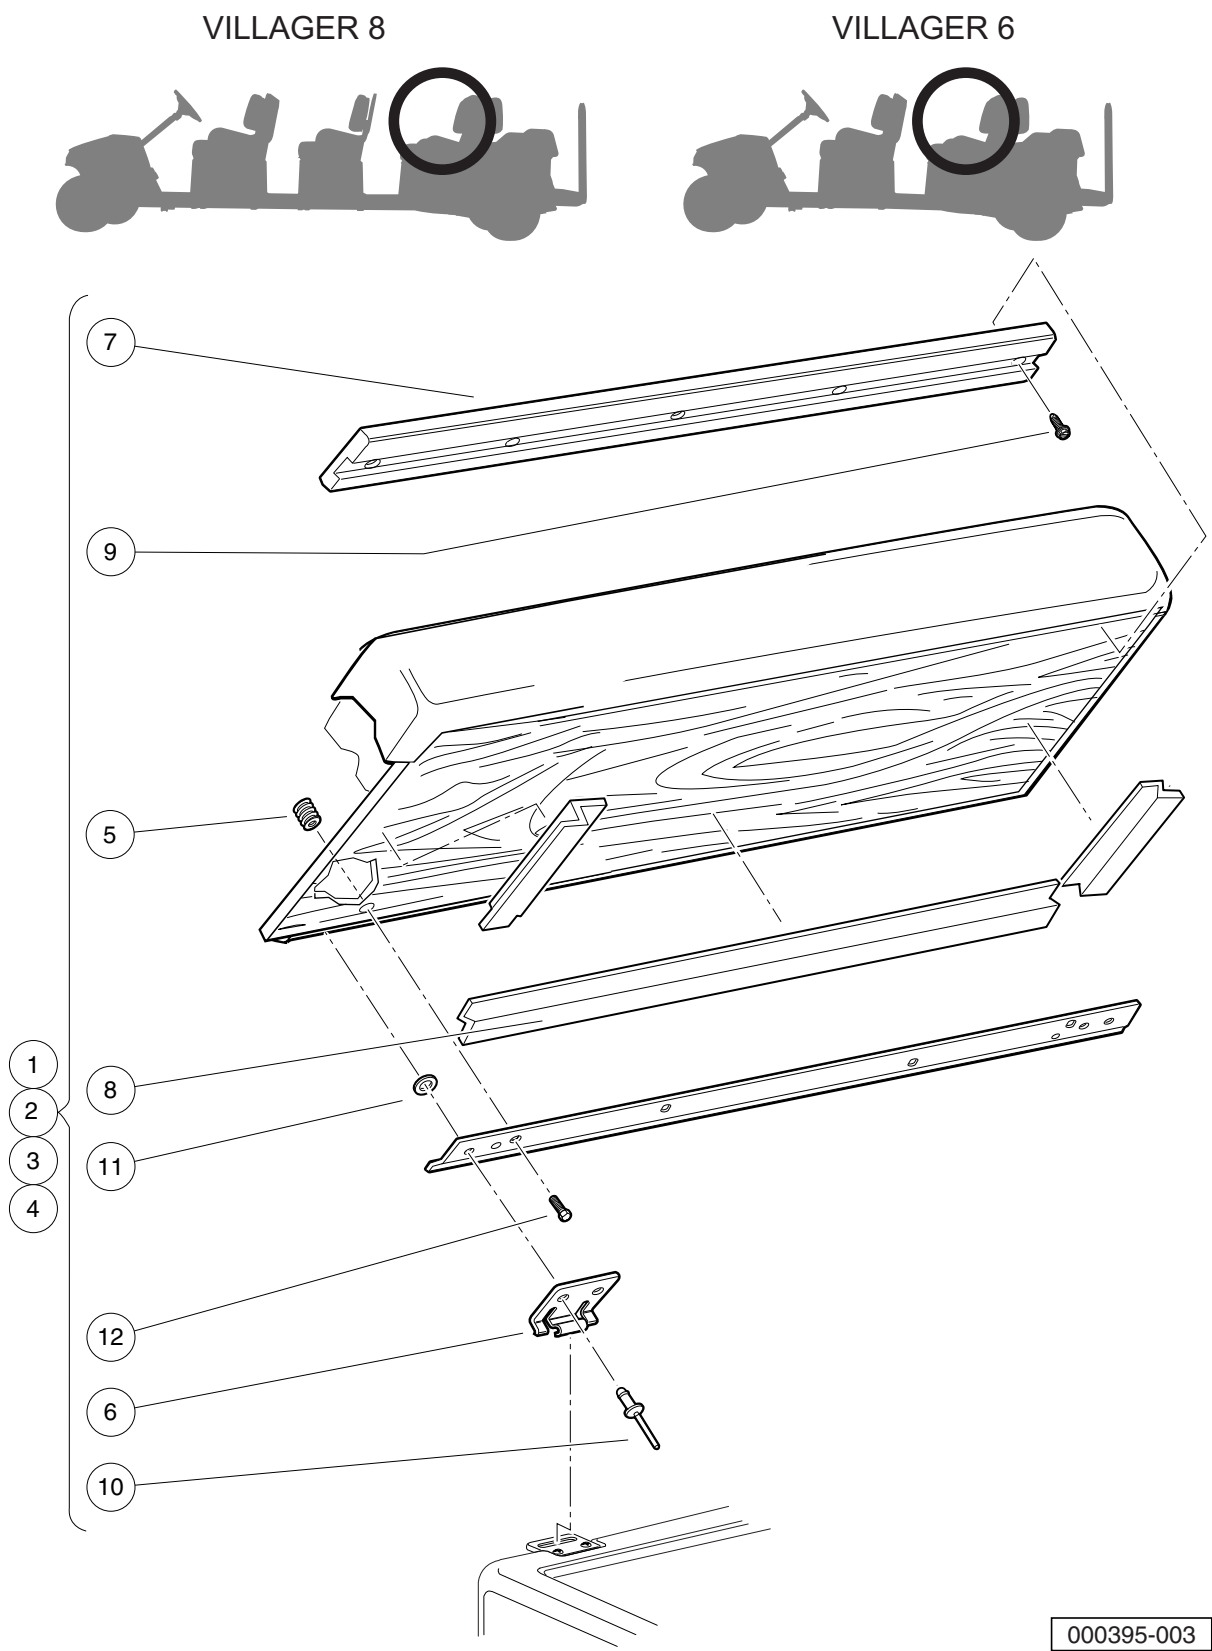

REAR, FORWARD-FACING SEAT BOTTOM

ITEM	PART NO.	DESCRIPTION	QTY	1 G E
		1 2 3 4		
1	<u>101728202</u>	Seat Bottom Assembly, Rear, White	1	
2	<u>101728204</u>	Seat Bottom Assembly, Rear, Beige	1	
3	<u>101728211</u>	Seat Bottom Assembly, Rear, Black	1	
4	<u>101728214</u>	Seat Bottom Assembly, Rear, Gray (includes items 5 through 12)	1	
5	<u>1010543</u>	Insert - Wood	8	
6	<u>1011652</u>	Hinge Plate	2	
7	<u>1012597</u>	Seat Bumper	1	
8	<u>1012657</u>	Seat Gasket, Long	1	
9	<u>1017384</u>	Screw, #12 X .50 Hex, Washer-Head	5	
10	<u>101880901</u>	Rivet, 3/16, Stainless-Steel, Pop	4	
11	<u>101881701</u>	Washer, #8 Stainless-Steel Flat	4	
12	<u>101954301</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	8	

1


G

E

VILLAGER 8




VILLAGER 6

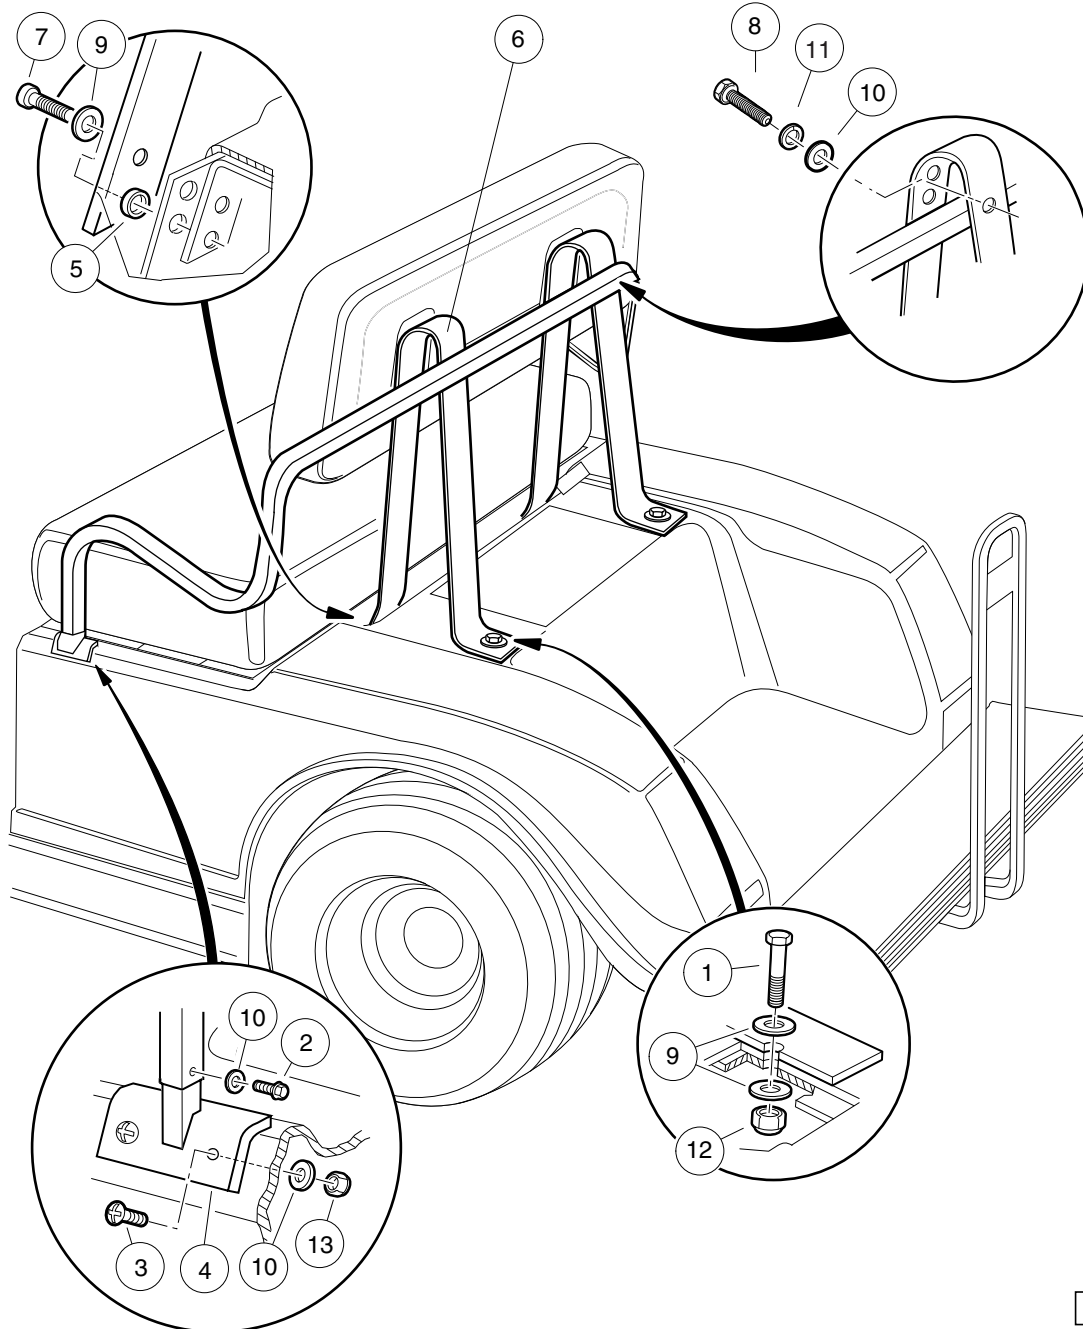

000397-002

ARMRESTS, REAR, FORWARD-FACING – VILLAGER 6 & 8 VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY	1 G E
		1 2 3 4		
1	<u>1010577</u>	Bolt, Hex-Head, 5/16-18 X 1.50	2	
2	<u>1012285</u>	Screw, 1/4 X 0.625 Hex-Head	10	
3	<u>1015902</u>	Screw, 1/4-20 X 1.25 Truss-Head	4	
4	<u>1017310</u>	Armrest Mounting Weldment	2	
5	<u>1017774</u>	Body Spacer	4	
6	<u>101799201</u>	Armrest Weldment Rear	1	
7	<u>101910401</u>	Screw, 5/16-18 X 1.25 Thrd Frm	4	
8	<u>101954301</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	8	
9	<u>1241</u>	Washer, 5/16 Type A Flat	6	
10	<u>332</u>	Washer, 1/4 Type A Narrow Flat	14	
11	<u>451</u>	Lockwasher, 1/4 Split	8	
12	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	2	
13	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	4	

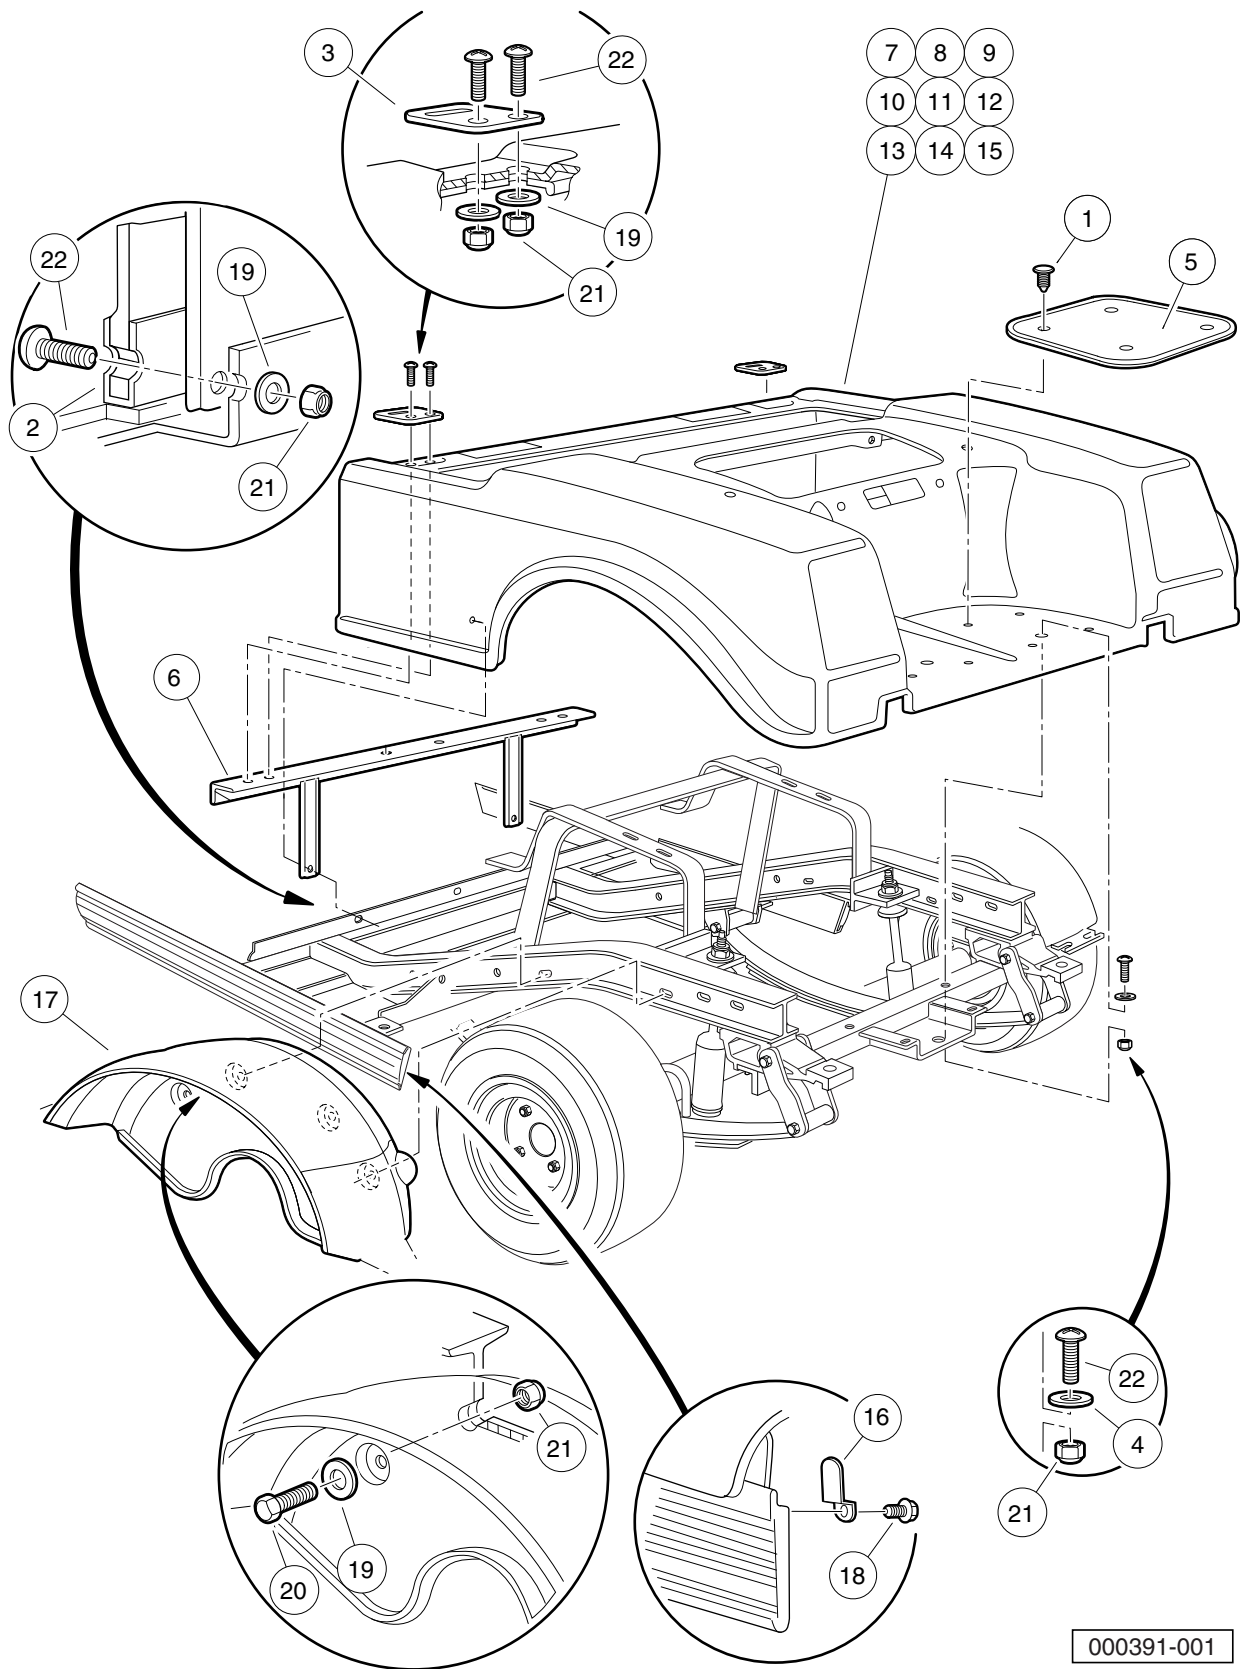

000391-001



REAR BODY AND FENDER – VILLAGER 6 & 8

ITEM	PART NO.	DESCRIPTION	QTY	1 G E
		1 2 3 4		
1	<u>1010434</u>	Barrel - Plastic	8	
2	<u>1010993</u>	Body Kick Plate	1	
3	<u>1012412</u>	Body, Hinge Plate	2	
4	<u>1014306</u>	Washer, 1/4" Type B Flat	2	
5	<u>1014392</u>	Bag Rest Mat	2	
6	<u>1017141</u>	Body Support Weldment	1	
7	<u>101728701</u>	Body, Beige, TPO, Rear	1	
8	<u>101728702</u>	Body, White, TPO, Rear	1	
9	<u>101728704</u>	Body, Gray, TPO, Rear	1	
10	<u>101728706</u>	Body, Red, TPO, Rear	1	
11	<u>101728708</u>	Body, Royal Blue, TPO, Rear	1	
12	<u>101728709</u>	Body, Dark Green, TPO, Rear	1	
13	<u>101728710</u>	Body, Black, TPO, Rear	1	
14	<u>101728711</u>	Body, Classic Blue, TPO, Rear	1	
15	<u>101728712</u>	Body, Burgundy, TPO, Rear	1	
16	<u>1017748</u>	Body Keeper Clip	2	
17	<u>1017936</u>	Fender, Inner	2	
18	<u>102310701</u>	Screw, #8-18 x 0.375, Hex-Head Washer	2	
19	<u>332</u>	Washer, 1/4 Type A Narrow Flat	10	
20	<u>7847</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	4	
21	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	12	
22	<u>8251</u>	Screw, 1/4-20 X 1.0 Truss-Head Machine	8	

1

G

E

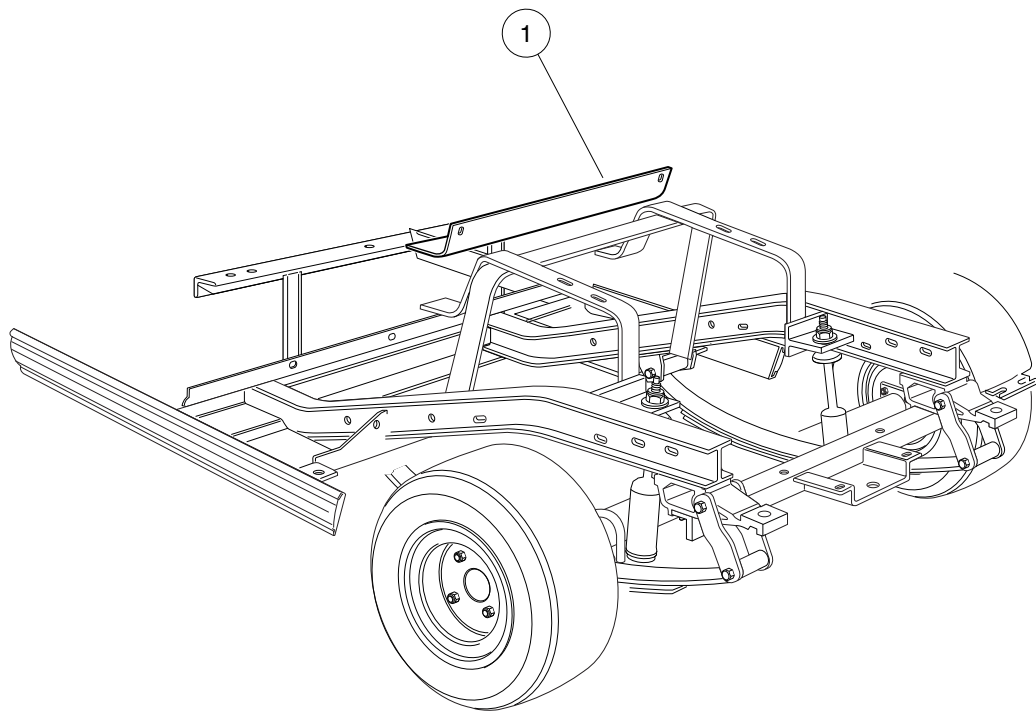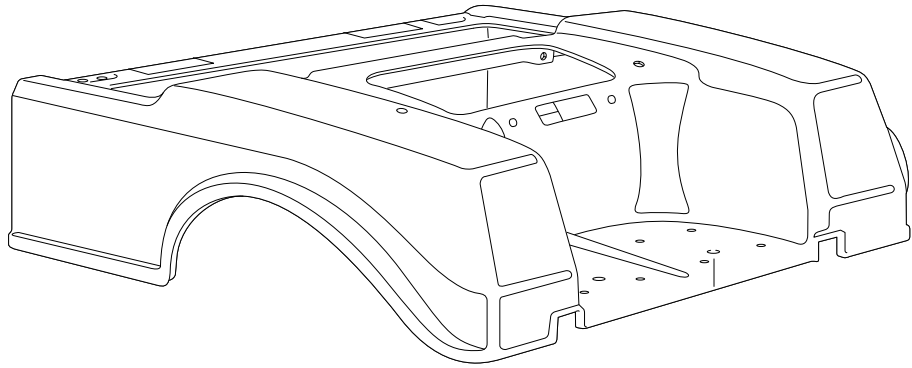

000392-001


HEAT SHIELD, TRANSPORTER, VILL 6 & 8, XRT800/850 REAR BODY – GAS

ITEM	PART NO.	DESCRIPTION	QTY	1 G E
1	<u>101806901</u>	1 2 3 4 Shield, Heat	1	

1

G

E

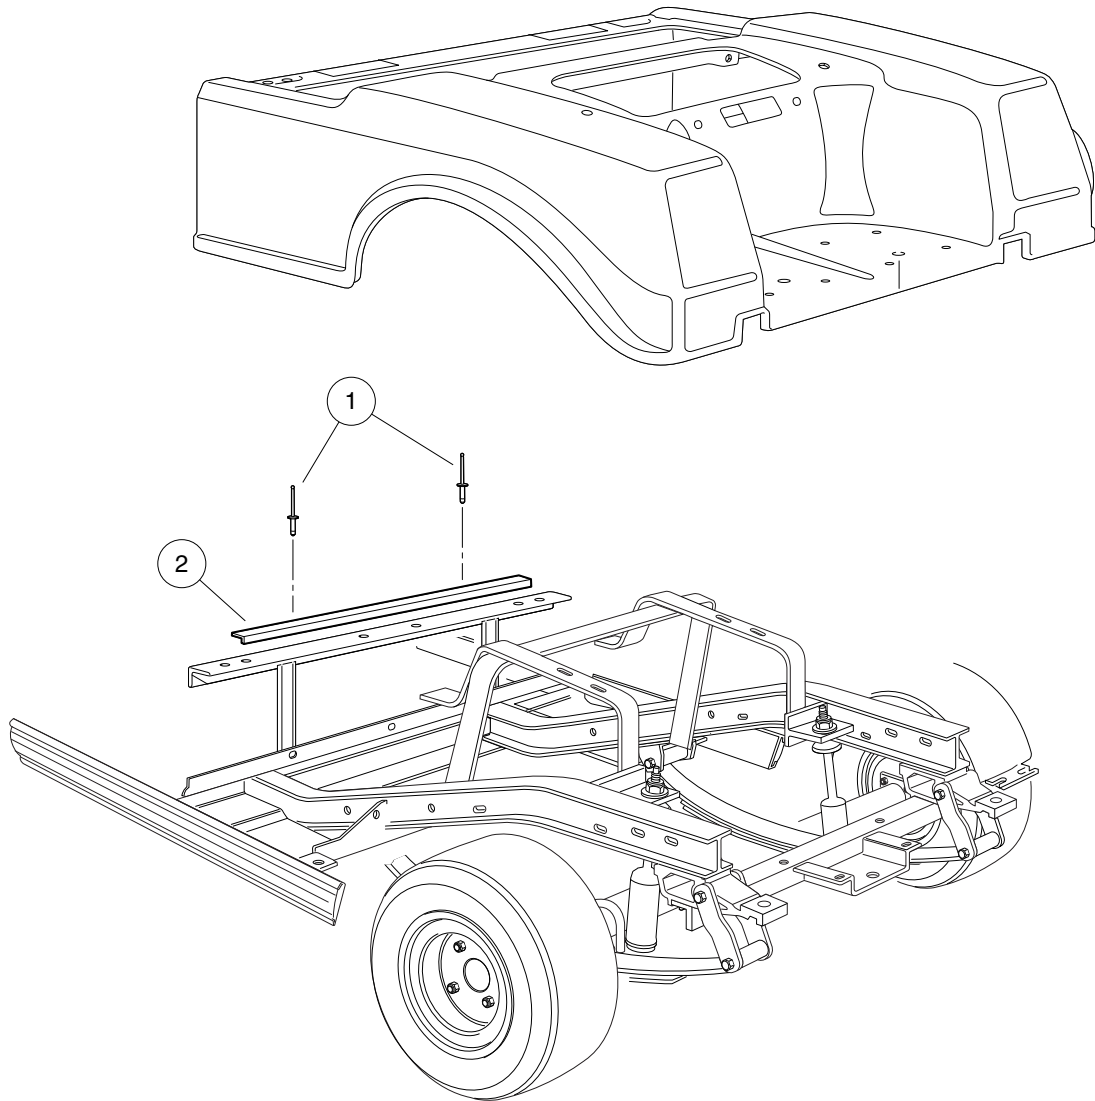

000393-001


BATTERY INSULATOR, TRANSPORTER, VILL 6 & 8, XRT850 REAR BODY – ELECTRIC

ITEM	PART NO.	DESCRIPTION	QTY	1 G E
1	<u>1013357</u>	1 2 3 4 Rivet, 5/32 Aluminum Pop	2	
2	<u>101837001</u>	Battery Insulator	1	

1

G


E

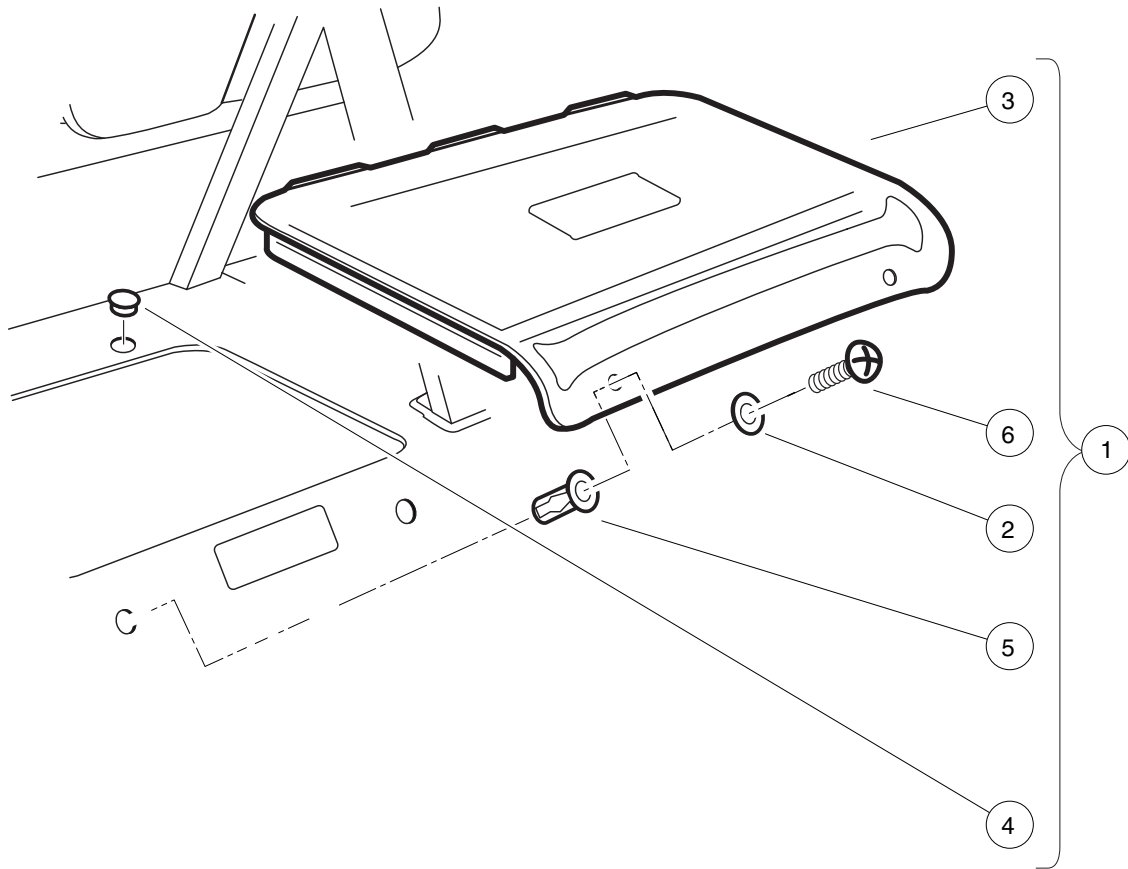

000783-002


REAR ACCESS DOOR

ITEM	PART NO.	DESCRIPTION	QTY	1
		1 2 3 4		G
1	<u>1013218</u>	Kit, Access Door Black (includes items 2 through 6)	1	E
2	<u>1012581</u>	Washer, 0.609-inch OD, Nylon Cup	2	
3	<u>1013032</u>	Molded Access Door Black	1	
4	<u>1013216</u>	Plug, Button	2	
5	<u>1015525</u>	Nut, 1/4-20 Blind	2	
6	<u>8251</u>	Screw, 1/4-20 X 1.0 Truss-Head Machine	2	

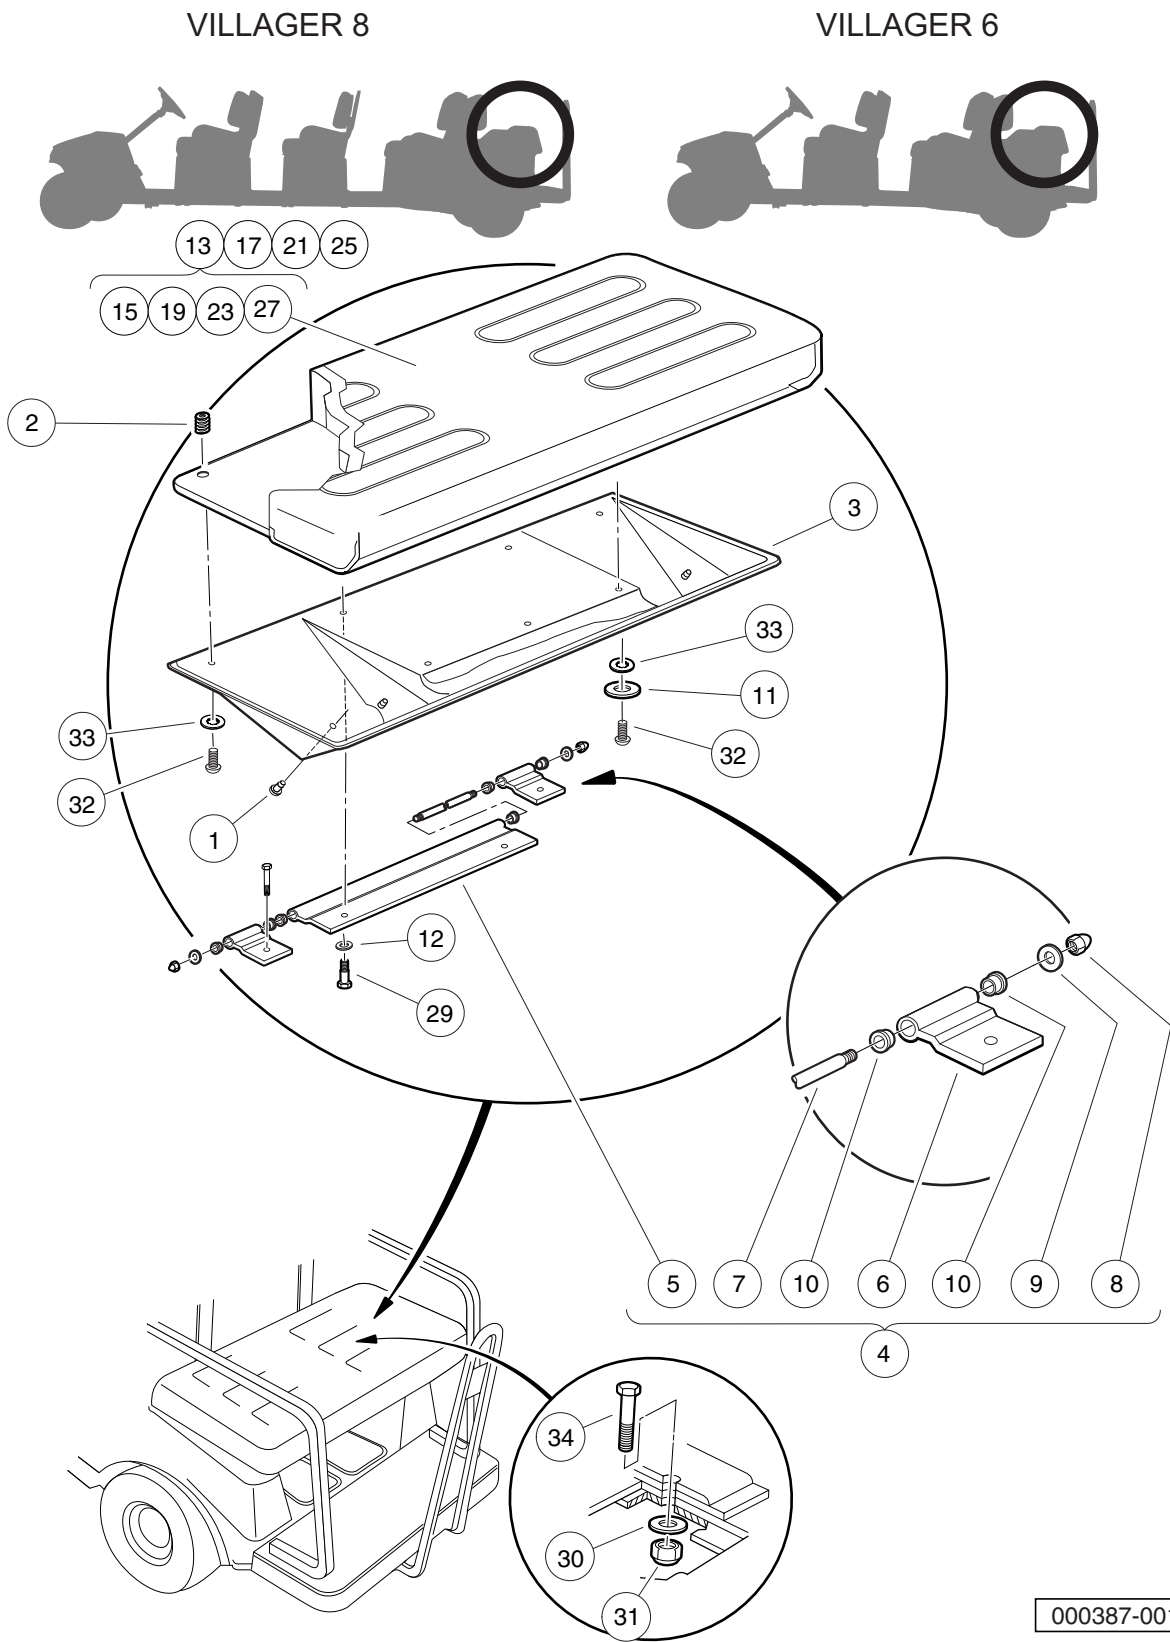


REAR-FACING SEAT BOTTOM – VILLAGER VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY	1 G E
		1 2 3 4		
1	<u>1010436</u>	Bumper, Rubber	4	
2	<u>1010543</u>	Insert - Wood	7	
3	<u>1011210</u>	Seat Support 4-Passenger	1	
4	<u>1011219</u>	Hinge Assembly 4 Passenger (includes items 5 through 10)	1	
5	<u>1011220</u>	Hinge Long 4 Passenger	1	
6	<u>1011221</u>	Hinge Short 4 Passenger	2	
7	<u>1011222</u>	Pin, Hinge, Long, 4-Pass	1	
8	<u>1015091</u>	Nut, 1/4-20 Stainless-Steel Center-Lock Cap	2	
9	<u>332</u>	Washer, 1/4 Type A Narrow Flat	2	
10	<u>8028</u>	Rotor Stop, FNR	6	
11	<u>1011578</u>	Washer, 5/16 Type B Flat	3	
12	<u>1014007</u>	Washer, 1/4, Flat	2	
13	<u>101564804</u>	Seat Bottom Assembly, Buff (includes items 14 through 16)	1	
14	N/A	Foam, Seat	1	
15	<u>101562711</u>	Vinyl Cover, Seat Bottom, Buff	1	
16	N/A	Plywood Assy	1	
17	<u>101564805</u>	Seat Bottom Assembly, White (includes items 18 through 20)	1	
18	N/A	Foam, Seat	1	
19	<u>101562712</u>	Vinyl Cover, Seat Bottom, White	1	
20	N/A	Plywood Assy	1	
21	<u>101564807</u>	Seat Bottom Assembly, Gray (includes items 22 through 24)	1	
22	N/A	Foam, Seat	1	
23	<u>101562715</u>	Vinyl Cover, Seat Bottom, Gray	1	
24	N/A	Plywood Assy	1	
25	<u>101564808</u>	Seat Bottom Assembly, Black (includes items 26 through 28)	1	
26	N/A	Foam, Seat	1	
27	<u>101562714</u>	Vinyl Cover, Seat Bottom, Black	1	
28	N/A	Plywood Assy	1	
29	<u>1016916</u>	Screw, 1/4-20 X 1.50 Hex-Head Cap	2	
30	<u>1241</u>	Washer, 5/16 Type A Flat	2	
31	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	2	
32	<u>8251</u>	Screw, 1/4-20 X 1.0 Truss-Head Machine	5	
33	<u>8304</u>	Lockwasher, 1/4 Type A Int.tth	5	
34	<u>8963</u>	Screw, 5/16-18 X 1.75 Hex-Head Cap	2	
Note: Sub-components contained in items 17, 21, and 25 are the same as those shown for item 13, except for the vinyl seat covers.				

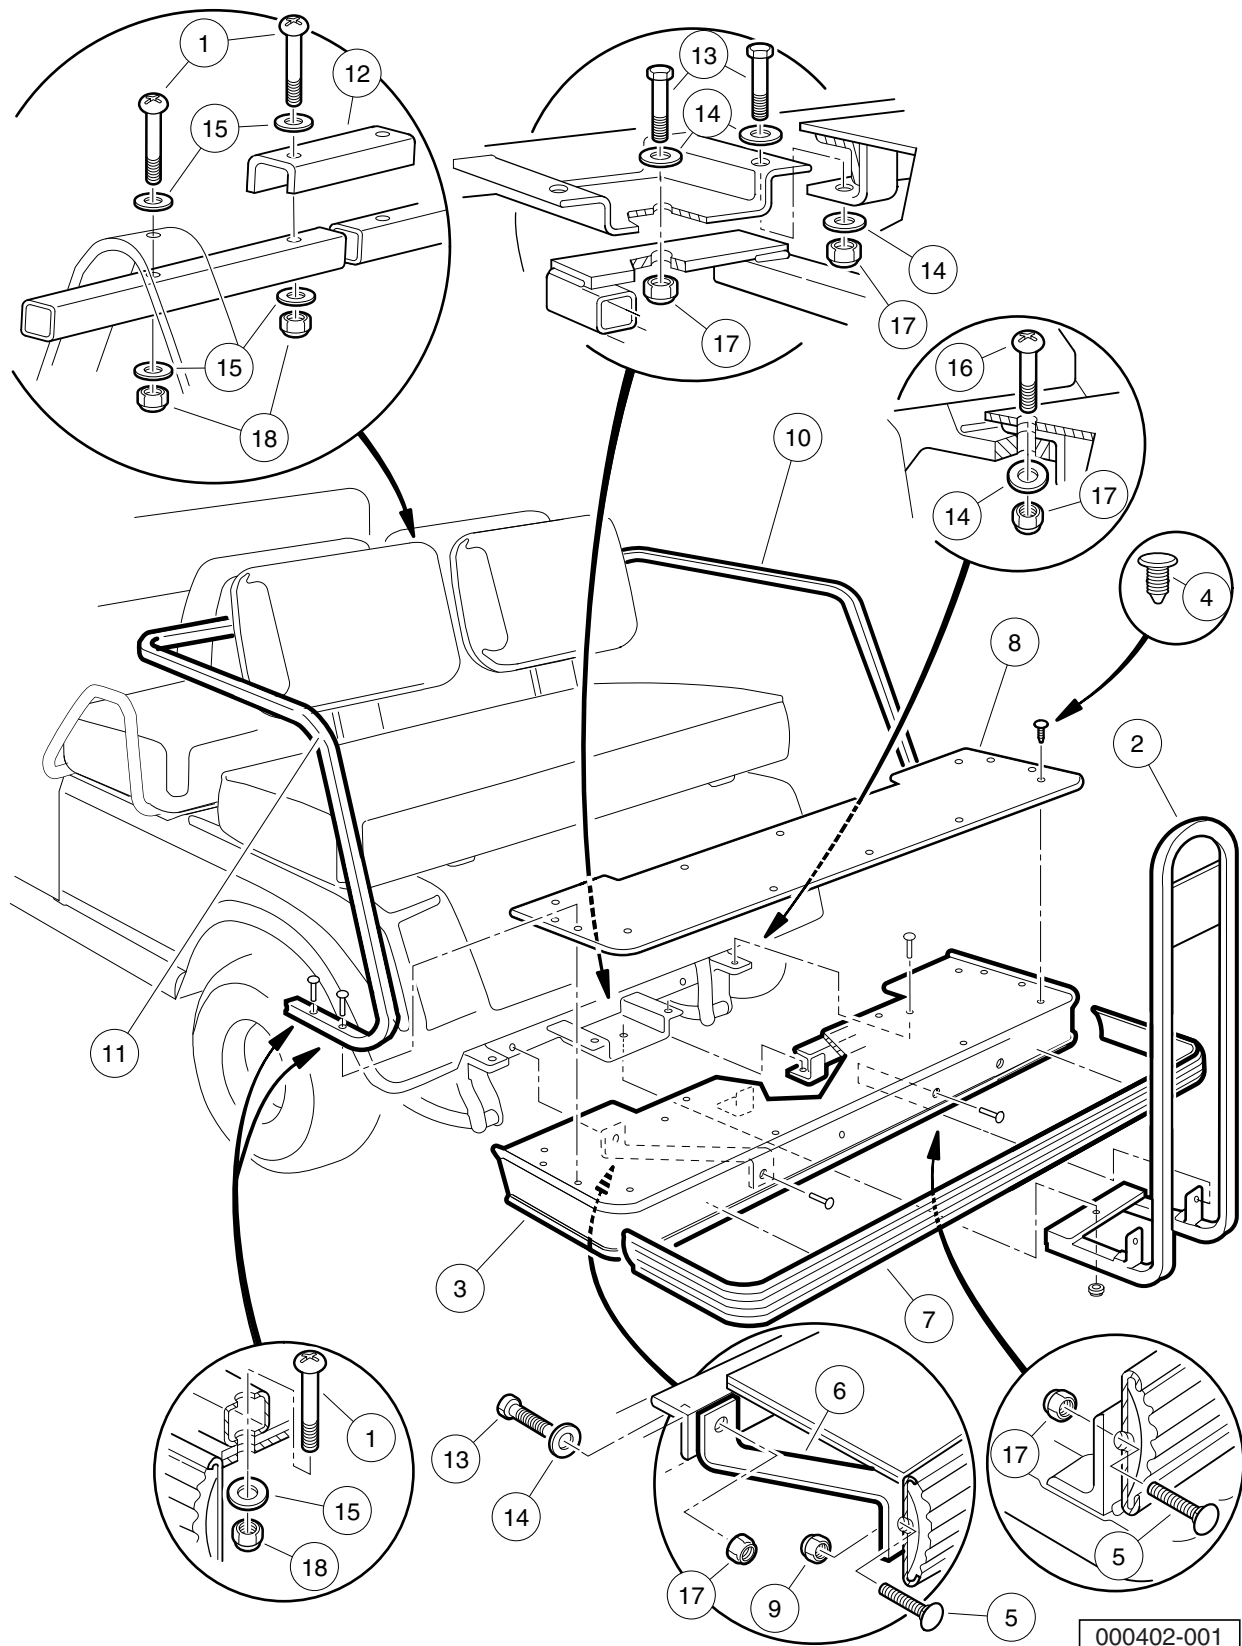1**G****E**

REAR FOOTREST, ARMRESTS AND HANDRAILS – DS VILLAGER 4, VILLAGER 6 AND 8

ITEM	PART NO.	DESCRIPTION	QTY	1 G E
		1 2 3 4		
1	<u>1011988</u>	Screw, 1/4-20 X 2.00 Phillips Truss-Head	8	
2	<u>1016842</u>	Rear Seat Handrail Weldment	1	
3	<u>101841101</u>	Rear Foot Rest Asm (includes items 4 through 9)	1	
4	<u>1010434</u>	Barrel - Plastic	8	
5	<u>1010435</u>	Bolt, Carriage, 5/16-18 X 1.00	4	
6	<u>1016668</u>	Connecting Bar	2	
7	<u>1016835</u>	Bumper, Side Trim	1	
8	<u>101840901</u>	Foot Rest Mat	1	
9	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	2	
10	<u>101841201</u>	Armrest, Seat, Rear, Right-Hand	1	
11	<u>101841202</u>	Armrest, Seat, Rear, Left-Hand	1	
12	<u>101841301</u>	Armrest Bracket	1	
13	<u>1218</u>	Screw, 5/16-18 X 1.25 Hex-Head Cap	5	
14	<u>1241</u>	Washer, 5/16 Type A Flat	9	
15	<u>332</u>	Washer, 1/4 Type A Narrow Flat	8	
16	<u>7410</u>	Screw, 5/16-18 X 1.25 Truss Hd	2	
17	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	9	
18	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	8	

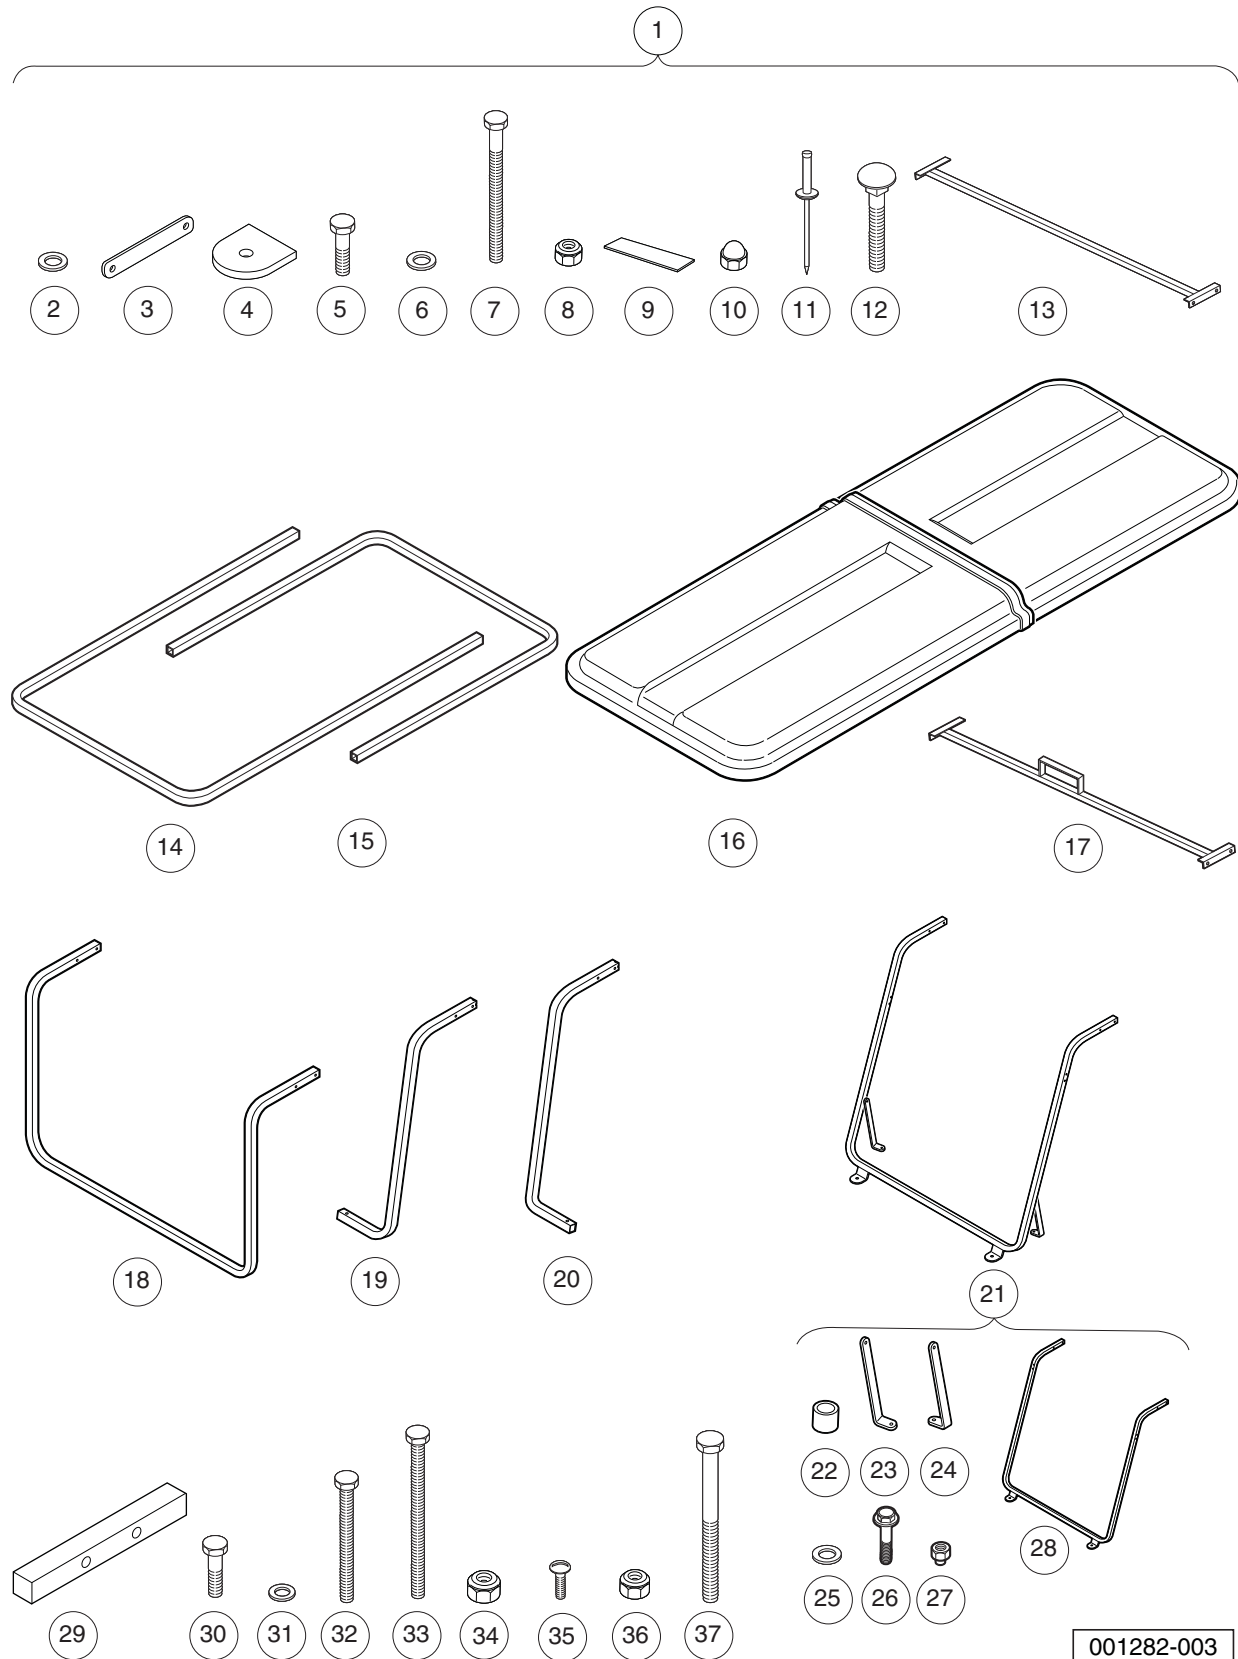1**G****E**

001282-003


CANOPY KIT, WHITE – VILL. 6 WITH REAR-FACING SEATS

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101816701</u>	Canopy Top Wht Vill W/rear St (includes items 2 through 37)	1
2	<u>1011697</u>	Washer, 5/16 Flat	2
3	<u>1011852</u>	Plate, Canopy Trim	10
4	<u>1011883</u>	Pad, Windshield Frame Mounting	2
5	<u>1011937</u>	Bolt, 5/16-18 X 1.25 Hex Head	2
6	<u>1011964</u>	Washer, 1/4 Flat	14
7	<u>1012159</u>	Bolt, 1/4-20 X 2.75 Hex-Head	8
8	<u>1013061</u>	Locknut, #10-32 Nylon Insert	8
9	<u>1014471</u>	Tape, Vinyl Foam 1/8" x 3/4"	20
10	<u>1015091</u>	Nut, 1/4-20 Stainless-Steel Center-Lock Cap	4
11	<u>1015392</u>	Rivet, 3/16 Pop	8
12	<u>1015405</u>	Bolt, Carriage, 5/16-18 X 2.0	2
13	<u>1016781</u>	Hanger Weldment	1
14	<u>1016793</u>	Top Front Support	1
15	<u>1016794</u>	Top Rear Support	1
16	<u>101679902</u>	Canopy Front & Rear White	1
17	<u>1017185</u>	Hanger Weldment Front	1
18	<u>101815301</u>	Brace, Rear Canopy	1
19	<u>101815401</u>	Canopy Side Brace Lh	1
20	<u>101815402</u>	Canopy Side Brace Rh	1
21	<u>103789601</u>	W/s Fr / Knee Br, Aluminum (includes items 22 through 28)	1
22	<u>1010237</u>	Bushing	2
23	<u>1011862</u>	Brace, Right-Hand Canopy Mount Knee	1
24	<u>1011865</u>	Brace, Left-Hand Canopy Mount Knee	1
25	<u>1011964</u>	Washer, 1/4 Flat	2
26	<u>102076701</u>	Screw, 1/4-20 X 1.75 Hex Sems	2
27	<u>102242401</u>	Nut - Nylon Insert W/cap	2
28	<u>103787401</u>	Asm, Windshield Frame, Alum	1
29	<u>103954301</u>	Splice Bar 10.5"	2
30	<u>1218</u>	Screw, 5/16-18 X 1.25 Hex-Head Cap	2
31	<u>183</u>	Washer, #10, Type A, Flat	16
32	<u>324</u>	Screw, 1/4-20 X 2.50 Hx Hd Cap	4
33	<u>343</u>	Screw, 1/4-20 X 3.00 Hx Hd Cap	4
34	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	2
35	<u>8104</u>	Screw, #10-32 X .75 Rd Hd Mach	8
36	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	12
37	<u>8915</u>	Screw, 5/16-18 X 3.0 Hx Hd Cap	2

1

G

E

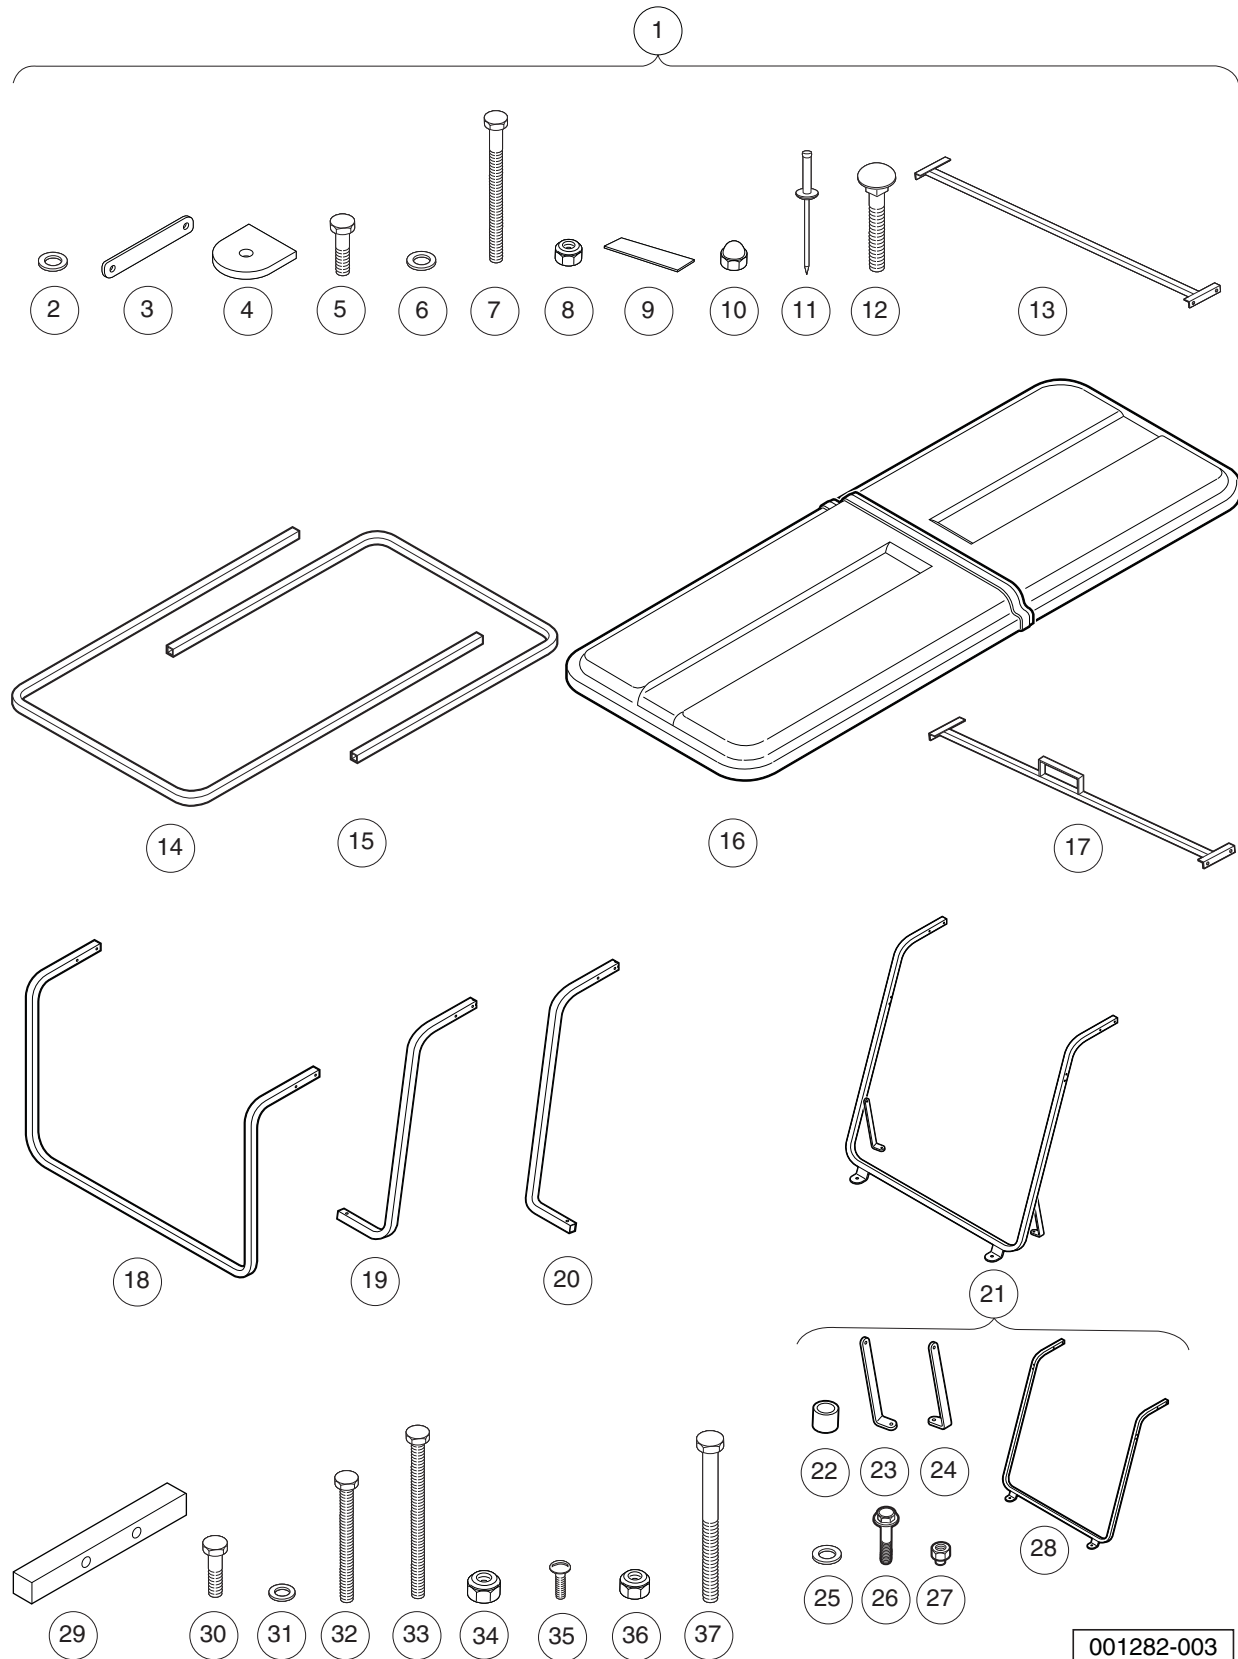1**G****E**

001282-003

CANOPY KIT, BEIGE – VILL. 6 WITH REAR-FACING SEATS

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101816702</u>	Canopy Beige Vill W/rear St (includes items 2 through 37)	1
2	<u>1011697</u>	Washer, 5/16 Flat	2
3	<u>1011852</u>	Plate, Canopy Trim	10
4	<u>1011883</u>	Pad, Windshield Frame Mounting	2
5	<u>1011937</u>	Bolt, 5/16-18 X 1.25 Hex Head	2
6	<u>1011964</u>	Washer, 1/4 Flat	14
7	<u>1012159</u>	Bolt, 1/4-20 X 2.75 Hex-Head	8
8	<u>1013061</u>	Locknut, #10-32 Nylon Insert	8
9	<u>1014471</u>	Tape, Vinyl Foam 1/8" x 3/4"	20
10	<u>1015091</u>	Nut, 1/4-20 Stainless-Steel Center-Lock Cap	4
11	<u>1015392</u>	Rivet, 3/16 Pop	8
12	<u>1015405</u>	Bolt, Carriage, 5/16-18 X 2.0	2
13	<u>1016781</u>	Hanger Weldment	1
14	<u>1016793</u>	Top Front Support	1
15	<u>1016794</u>	Top Rear Support	1
16	<u>101679901</u>	Canopy Front & Rear Beige	1
17	<u>1017185</u>	Hanger Weldment Front	1
18	<u>101815301</u>	Brace, Rear Canopy	1
19	<u>101815401</u>	Canopy Side Brace Lh	1
20	<u>101815402</u>	Canopy Side Brace Rh	1
21	<u>103789601</u>	W/s Fr / Knee Br, Aluminum (includes items 22 through 28)	1
22	<u>1010237</u>	Bushing	2
23	<u>1011862</u>	Brace, Right-Hand Canopy Mount Knee	1
24	<u>1011865</u>	Brace, Left-Hand Canopy Mount Knee	1
25	<u>1011964</u>	Washer, 1/4 Flat	2
26	<u>102076701</u>	Screw, 1/4-20 X 1.75 Hex Sems	2
27	<u>102242401</u>	Nut - Nylon Insert W/cap	2
28	<u>103787401</u>	Asm, Windshield Frame, Alum	1
29	<u>103954301</u>	Splice Bar 10.5"	2
30	<u>1218</u>	Screw, 5/16-18 X 1.25 Hex-Head Cap	2
31	<u>183</u>	Washer, #10, Type A, Flat	16
32	<u>324</u>	Screw, 1/4-20 X 2.50 Hx Hd Cap	4
33	<u>343</u>	Screw, 1/4-20 X 3.00 Hx Hd Cap	4
34	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	2
35	<u>8104</u>	Screw, #10-32 X .75 Rd Hd Mach	8
36	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	12
37	<u>8915</u>	Screw, 5/16-18 X 3.0 Hx Hd Cap	2

1


G

E

1

G

E

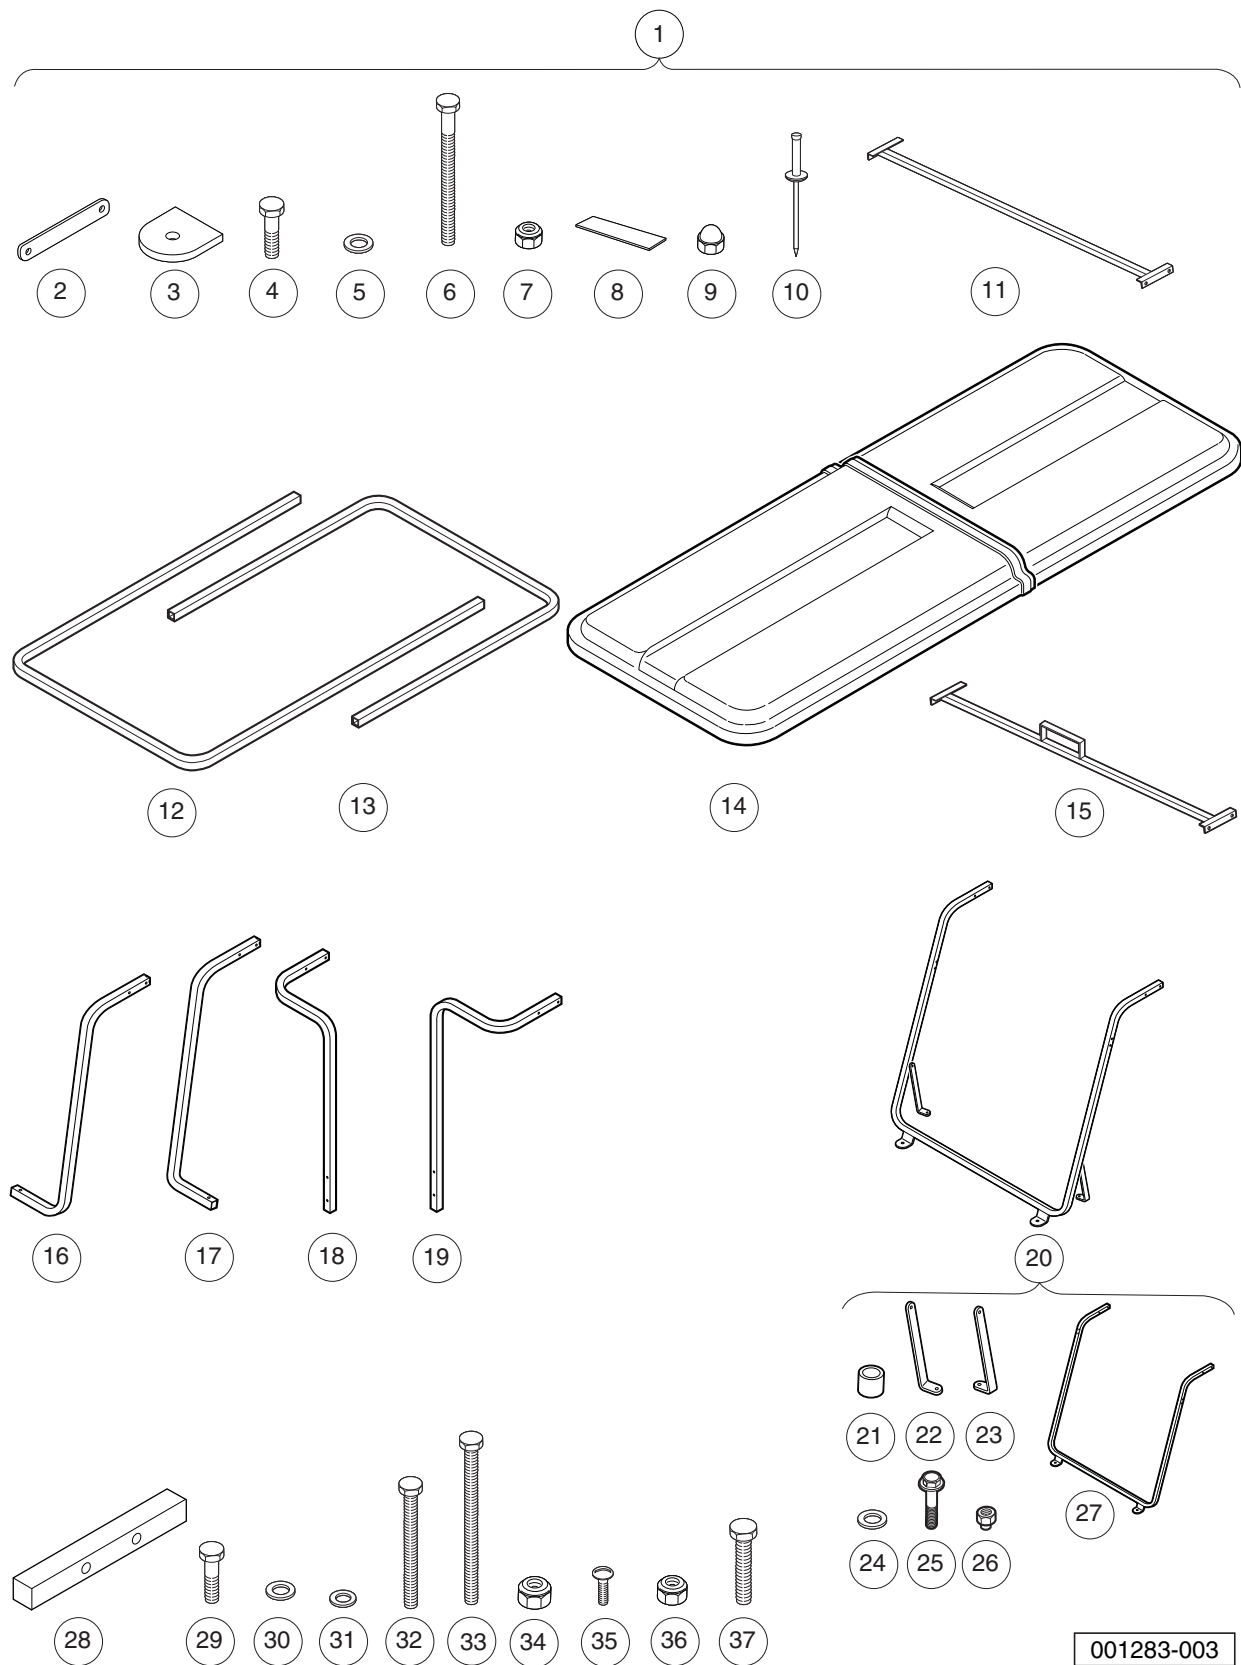

001283-003


CANOPY KIT, WHITE – VILL. 6 WITH FLAT BED

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101838001</u>	Canopy Top Wht Vill W/cargo Bd (includes items 2 through 37)	1
2	<u>1011852</u>	Plate, Canopy Trim	10
3	<u>1011883</u>	Pad, Windshield Frame Mounting	2
4	<u>1011937</u>	Bolt, 5/16-18 X 1.25 Hex Head	2
5	<u>1011964</u>	Washer, 1/4 Flat	14
6	<u>1012159</u>	Bolt, 1/4-20 X 2.75 Hex-Head	8
7	<u>1013061</u>	Locknut, #10-32 Nylon Insert	8
8	<u>1014471</u>	Tape, Vinyl Foam 1/8" x 3/4"	20
9	<u>1015091</u>	Nut, 1/4-20 Stainless-Steel Center-Lock Cap	4
10	<u>1015392</u>	Rivet, 3/16 Pop	8
11	<u>1016781</u>	Hanger Weldment	1
12	<u>1016793</u>	Top Front Support	1
13	<u>1016794</u>	Top Rear Support	1
14	<u>101679902</u>	Canopy Front & Rear White	1
15	<u>1017185</u>	Hanger Weldment Front	1
16	<u>101815401</u>	Canopy Side Brace Lh	1
17	<u>101815402</u>	Canopy Side Brace Rh	1
18	<u>101837801</u>	Rear Canopy Brace Rh	1
19	<u>101837802</u>	Rear Canopy Brace Lh	1
20	<u>103789601</u>	W/s Fr / Knee Br, Aluminum (includes items 21 through 27)	1
21	<u>1010237</u>	Bushing	2
22	<u>1011862</u>	Brace, Right-Hand Canopy Mount Knee	1
23	<u>1011865</u>	Brace, Left-Hand Canopy Mount Knee	1
24	<u>1011964</u>	Washer, 1/4 Flat	2
25	<u>102076701</u>	Screw, 1/4-20 X 1.75 Hex Sems	2
26	<u>102242401</u>	Nut - Nylon Insert W/cap	2
27	<u>103787401</u>	Asm, Windshield Frame, Alum	1
28	<u>103954301</u>	Splice Bar 10.5"	2
29	<u>1218</u>	Screw, 5/16-18 X 1.25 Hex-Head Cap	2
30	<u>1241</u>	Washer, 5/16 Type A Flat	4
31	<u>183</u>	Washer, #10, Type A, Flat	16
32	<u>324</u>	Screw, 1/4-20 X 2.50 Hx Hd Cap	4
33	<u>343</u>	Screw, 1/4-20 X 3.00 Hx Hd Cap	4
34	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	4
35	<u>8104</u>	Screw, #10-32 X .75 Rd Hd Mach	8
36	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	12
37	<u>8963</u>	Screw, 5/16-18 X 1.75 Hex-Head Cap	4

1

G

E

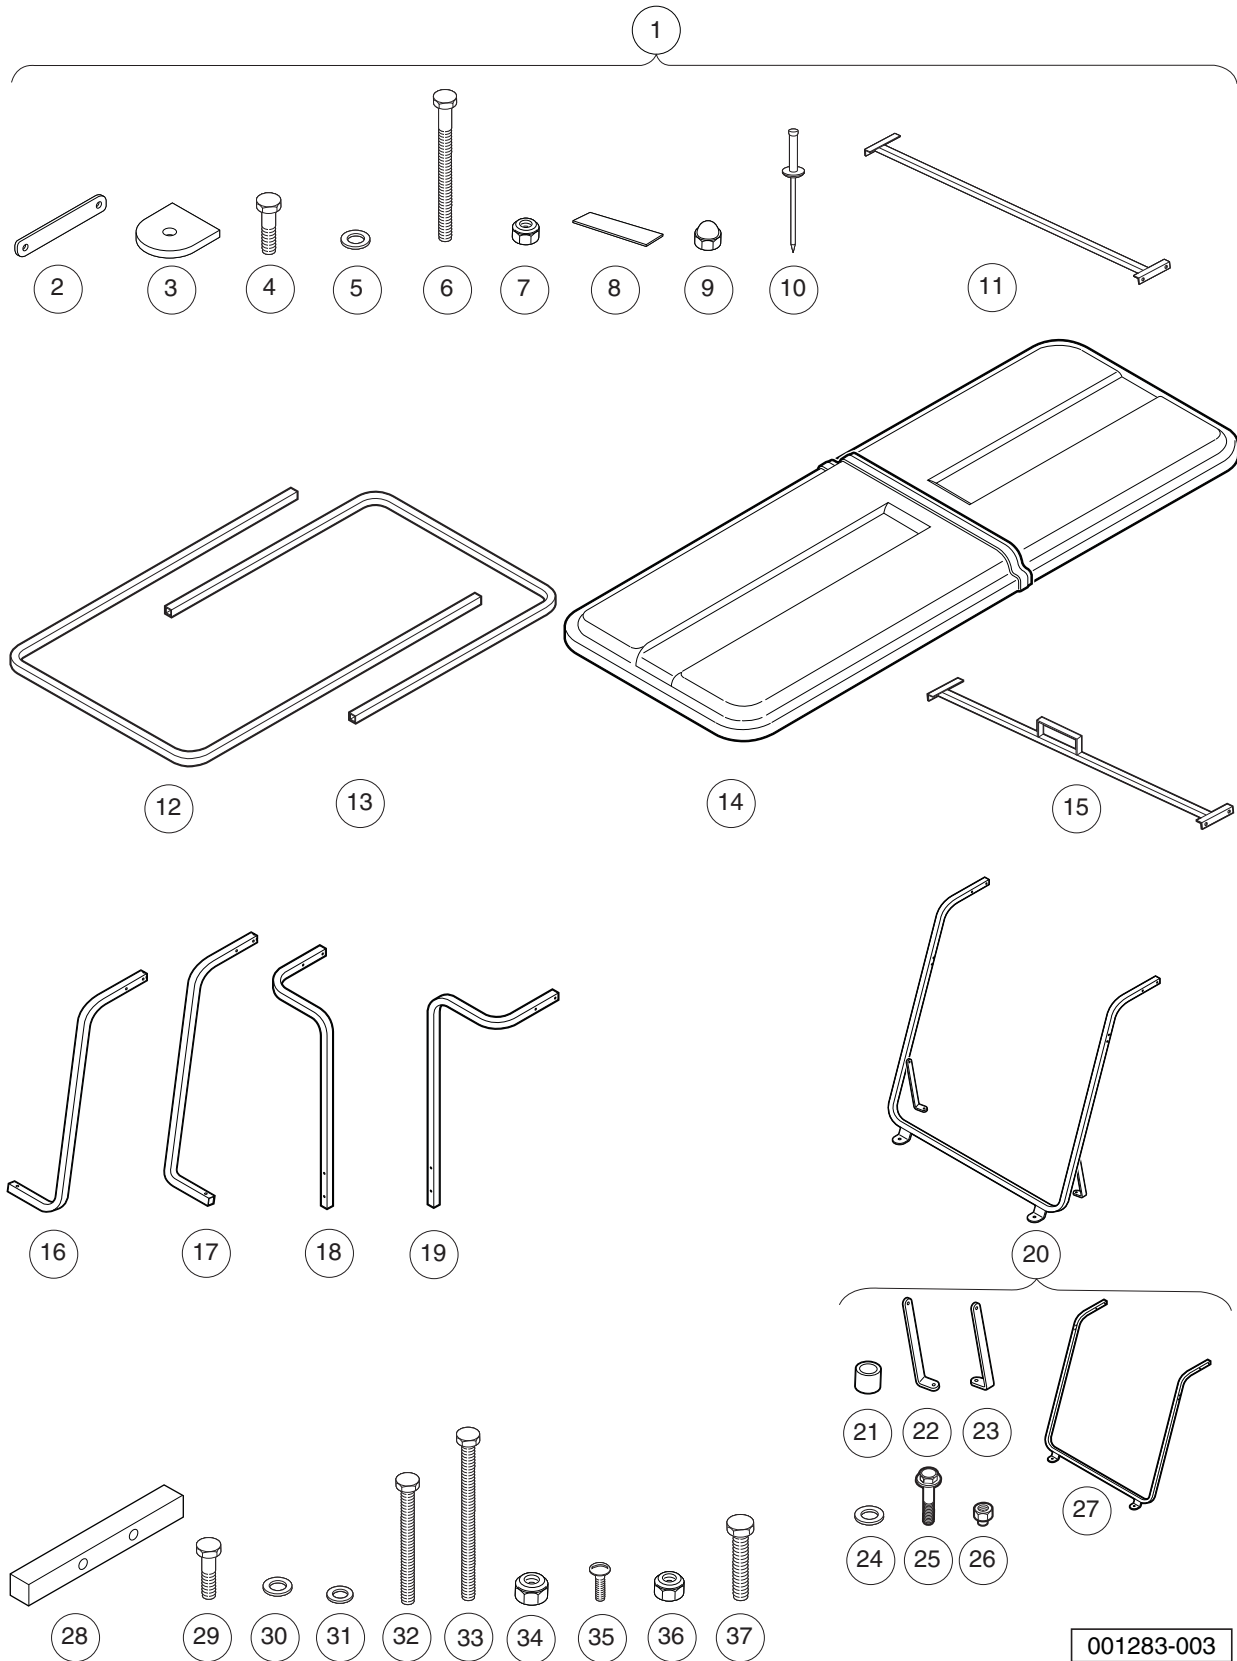1**G****E**

CANOPY KIT, BEIGE – VILL. 6 WITH FLAT BED



ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101838002</u>	Canopy Beige Vill W/cargo Bd (includes items 2 through 37)	1
2	<u>1011852</u>	Plate, Canopy Trim	10
3	<u>1011883</u>	Pad, Windshield Frame Mounting	2
4	<u>1011937</u>	Bolt, 5/16-18 X 1.25 Hex Head	2
5	<u>1011964</u>	Washer, 1/4 Flat	14
6	<u>1012159</u>	Bolt, 1/4-20 X 2.75 Hex-Head	8
7	<u>1013061</u>	Locknut, #10-32 Nylon Insert	8
8	<u>1014471</u>	Tape, Vinyl Foam 1/8" x 3/4"	20
9	<u>1015091</u>	Nut, 1/4-20 Stainless-Steel Center-Lock Cap	4
10	<u>1015392</u>	Rivet, 3/16 Pop	8
11	<u>1016781</u>	Hanger Weldment	1
12	<u>1016793</u>	Top Front Support	1
13	<u>1016794</u>	Top Rear Support	1
14	<u>101679901</u>	Canopy Front & Rear Beige	1
15	<u>1017185</u>	Hanger Weldment Front	1
16	<u>101815401</u>	Canopy Side Brace Lh	1
17	<u>101815402</u>	Canopy Side Brace Rh	1
18	<u>101837801</u>	Rear Canopy Brace Rh	1
19	<u>101837802</u>	Rear Canopy Brace Lh	1
20	<u>103789601</u>	W/s Fr / Knee Br, Aluminum (includes items 21 through 27)	1
21	<u>1010237</u>	Bushing	2
22	<u>1011862</u>	Brace, Right-Hand Canopy Mount Knee	1
23	<u>1011865</u>	Brace, Left-Hand Canopy Mount Knee	1
24	<u>1011964</u>	Washer, 1/4 Flat	2
25	<u>102076701</u>	Screw, 1/4-20 X 1.75 Hex Sems	2
26	<u>102242401</u>	Nut - Nylon Insert W/cap	2
27	<u>103787401</u>	Asm, Windshield Frame, Alum	1
28	<u>103954301</u>	Splice Bar 10.5"	2
29	<u>1218</u>	Screw, 5/16-18 X 1.25 Hex-Head Cap	2
30	<u>1241</u>	Washer, 5/16 Type A Flat	4
31	<u>183</u>	Washer, #10, Type A, Flat	16
32	<u>324</u>	Screw, 1/4-20 X 2.50 Hx Hd Cap	4
33	<u>343</u>	Screw, 1/4-20 X 3.00 Hx Hd Cap	4
34	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	4
35	<u>8104</u>	Screw, #10-32 X .75 Rd Hd Mach	8
36	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	12
37	<u>8963</u>	Screw, 5/16-18 X 1.75 Hex-Head Cap	4

1
G
E

1

G

E

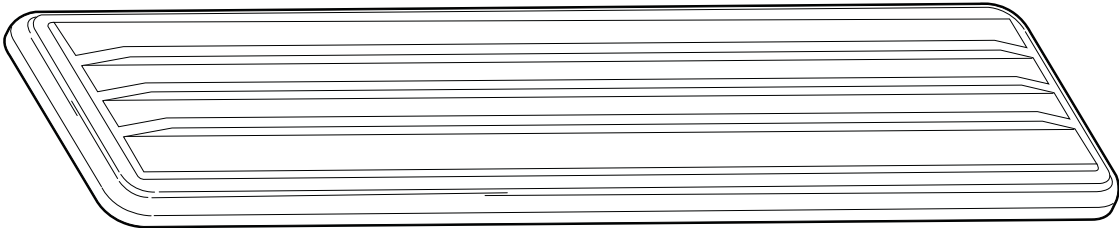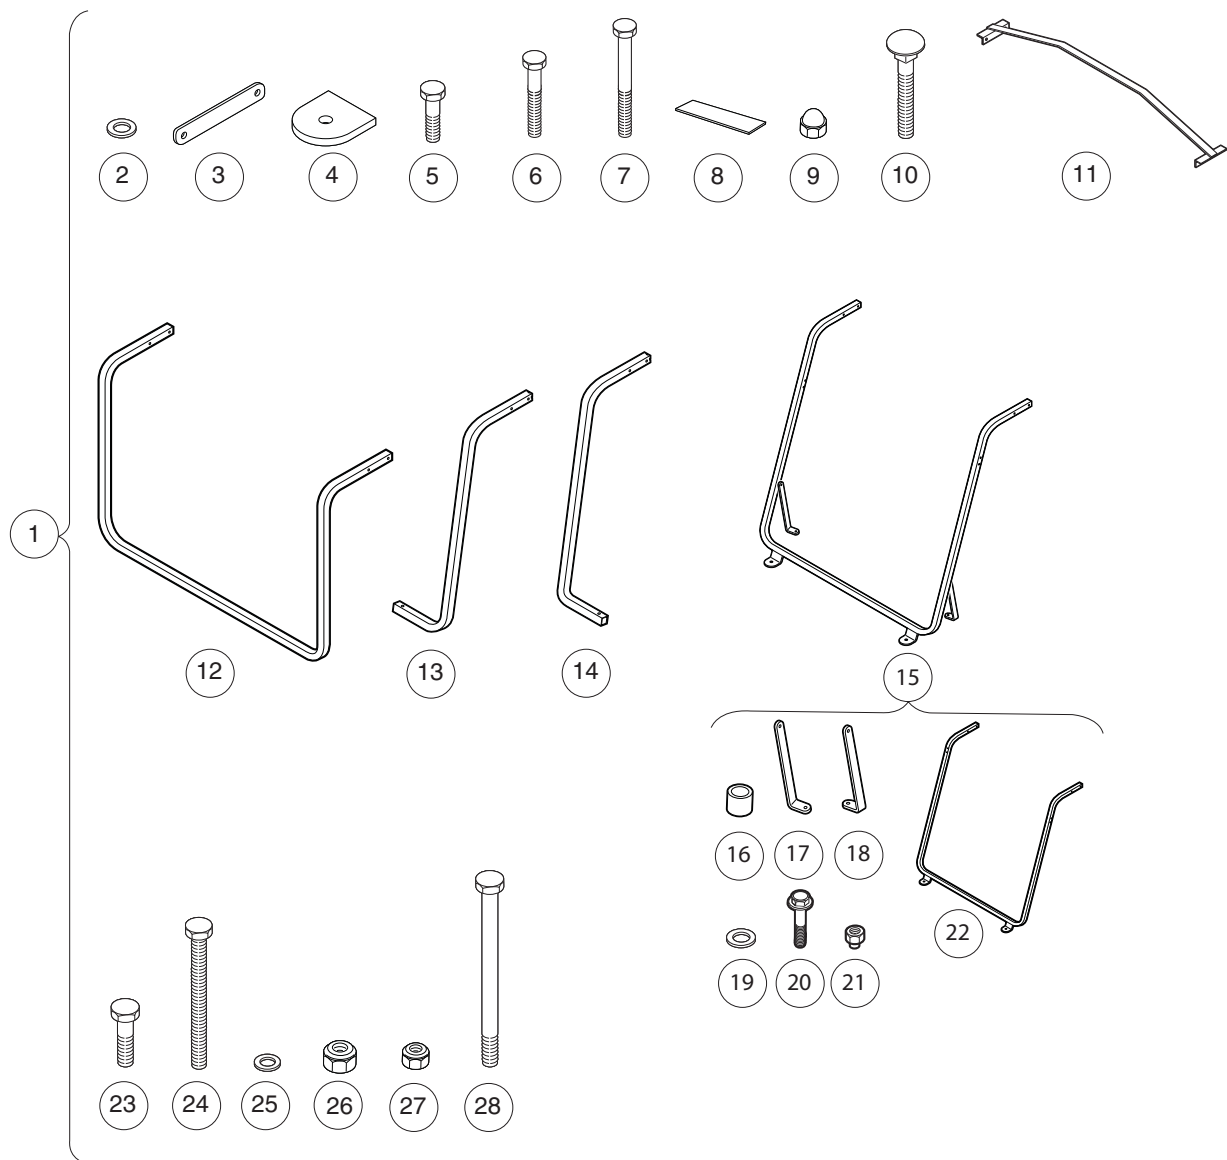


29

001284-003

CANOPY KIT, WHITE – VILL. 8 WITH REAR-FACING SEATS



ITEM	PART NO.	DESCRIPTION	QTY	1 G E
		1 2 3 4		
1	<u>101805801</u>	Canopy Hardware Kit (includes items 2 through 28)	1	
2	<u>1011697</u>	Washer, 5/16 Flat	2	
3	<u>1011852</u>	Plate, Canopy Trim	4	
4	<u>1011883</u>	Pad, Windshield Frame Mounting	2	
5	<u>1011937</u>	Bolt, 5/16-18 X 1.25 Hex Head	2	
6	<u>1013509</u>	Screw, 1/4-20 X 1.75 Hx Hd Cap	4	
7	<u>1014201</u>	Screw, 1/4-20 X 2.25 Hex Cap	16	
8	<u>1014471</u>	Tape, Vinyl Foam 1/8" x 3/4"	20	
9	<u>1015091</u>	Nut, 1/4-20 Stainless-Steel Center-Lock Cap	8	
10	<u>1015405</u>	Bolt, Carriage, 5/16-18 X 2.0	2	
11	<u>101800201</u>	Canopy Top Brace Weldment	2	
12	<u>101805601</u>	Rear Brace XI Canopy	1	
13	<u>101815401</u>	Canopy Side Brace Lh	2	
14	<u>101815402</u>	Canopy Side Brace Rh	2	
15	<u>103789601</u>	W/s Fr / Knee Br, Aluminum (includes items 16 through 22)	1	
16	<u>1010237</u>	Bushing	2	
17	<u>1011862</u>	Brace, Right-Hand Canopy Mount Knee	1	
18	<u>1011865</u>	Brace, Left-Hand Canopy Mount Knee	1	
19	<u>1011964</u>	Washer, 1/4 Flat	2	
20	<u>102076701</u>	Screw, 1/4-20 X 1.75 Hex Sems	2	
21	<u>102242401</u>	Nut - Nylon Insert W/cap	2	
22	<u>103787401</u>	Asm, Windshield Frame, Alum	1	
23	<u>1218</u>	Screw, 5/16-18 X 1.25 Hex-Head Cap	2	
24	<u>324</u>	Screw, 1/4-20 X 2.50 Hx Hd Cap	12	
25	<u>332</u>	Washer, 1/4 Type A Narrow Flat	56	
26	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	2	
27	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	24	
28	<u>8915</u>	Screw, 5/16-18 X 3.0 Hx Hd Cap	2	
29	<u>101835501</u>	XI Canopy - White	1	

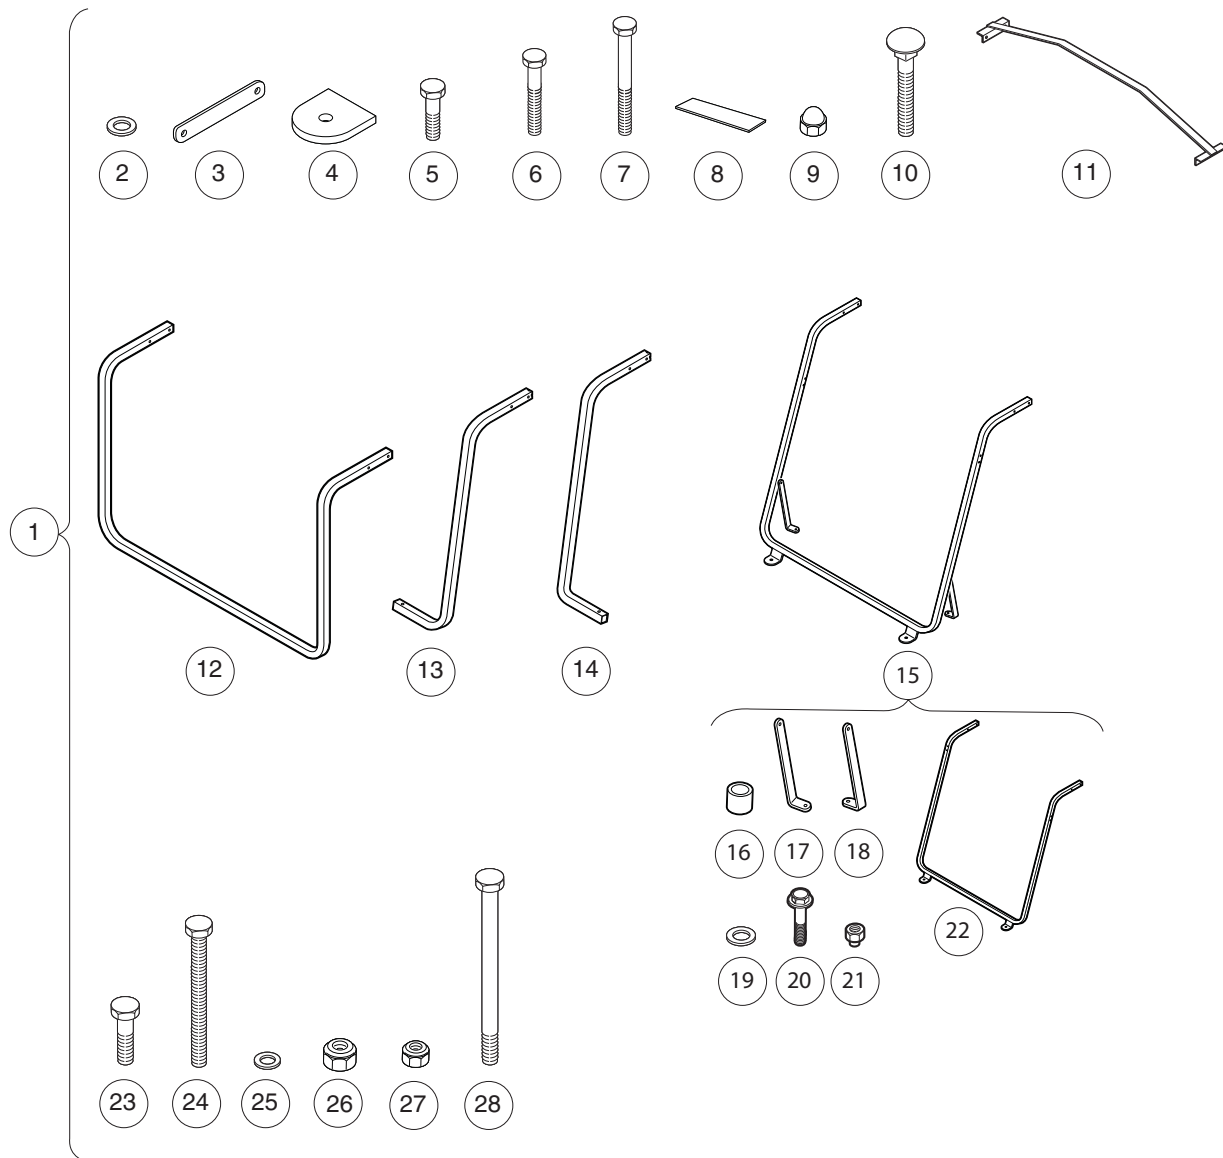1**G****E**

001284-003

CANOPY KIT, BEIGE – VILL. 8 WITH REAR-FACING SEATS



ITEM	PART NO.	DESCRIPTION	QTY	1 G E
		1 2 3 4		
1	<u>101805801</u>	Canopy Hardware Kit (includes items 2 through 28)	1	
2	<u>1011697</u>	Washer, 5/16 Flat	2	
3	<u>1011852</u>	Plate, Canopy Trim	4	
4	<u>1011883</u>	Pad, Windshield Frame Mounting	2	
5	<u>1011937</u>	Bolt, 5/16-18 X 1.25 Hex Head	2	
6	<u>1013509</u>	Screw, 1/4-20 X 1.75 Hx Hd Cap	4	
7	<u>1014201</u>	Screw, 1/4-20 X 2.25 Hex Cap	16	
8	<u>1014471</u>	Tape, Vinyl Foam 1/8" x 3/4"	20	
9	<u>1015091</u>	Nut, 1/4-20 Stainless-Steel Center-Lock Cap	8	
10	<u>1015405</u>	Bolt, Carriage, 5/16-18 X 2.0	2	
11	<u>101800201</u>	Canopy Top Brace Weldment	2	
12	<u>101805601</u>	Rear Brace XI Canopy	1	
13	<u>101815401</u>	Canopy Side Brace Lh	2	
14	<u>101815402</u>	Canopy Side Brace Rh	2	
15	<u>103789601</u>	W/s Fr / Knee Br, Aluminum (includes items 16 through 22)	1	
16	<u>1010237</u>	Bushing	2	
17	<u>1011862</u>	Brace, Right-Hand Canopy Mount Knee	1	
18	<u>1011865</u>	Brace, Left-Hand Canopy Mount Knee	1	
19	<u>1011964</u>	Washer, 1/4 Flat	2	
20	<u>102076701</u>	Screw, 1/4-20 X 1.75 Hex Sems	2	
21	<u>102242401</u>	Nut - Nylon Insert W/cap	2	
22	<u>103787401</u>	Asm, Windshield Frame, Alum	1	
23	<u>1218</u>	Screw, 5/16-18 X 1.25 Hex-Head Cap	2	
24	<u>324</u>	Screw, 1/4-20 X 2.50 Hx Hd Cap	12	
25	<u>332</u>	Washer, 1/4 Type A Narrow Flat	56	
26	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	2	
27	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	24	
28	<u>8915</u>	Screw, 5/16-18 X 3.0 Hx Hd Cap	2	
29	<u>101835502</u>	XI Canopy - Beige	1	

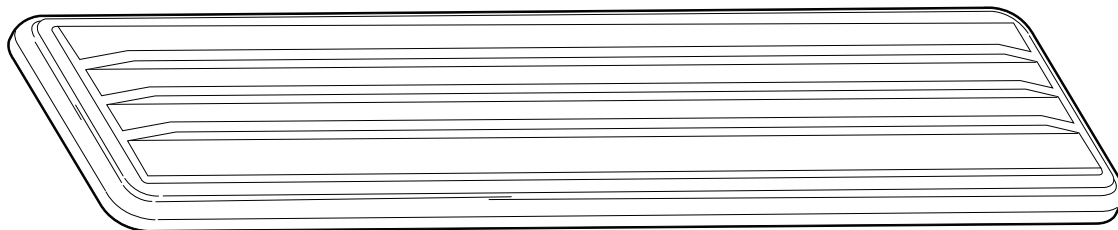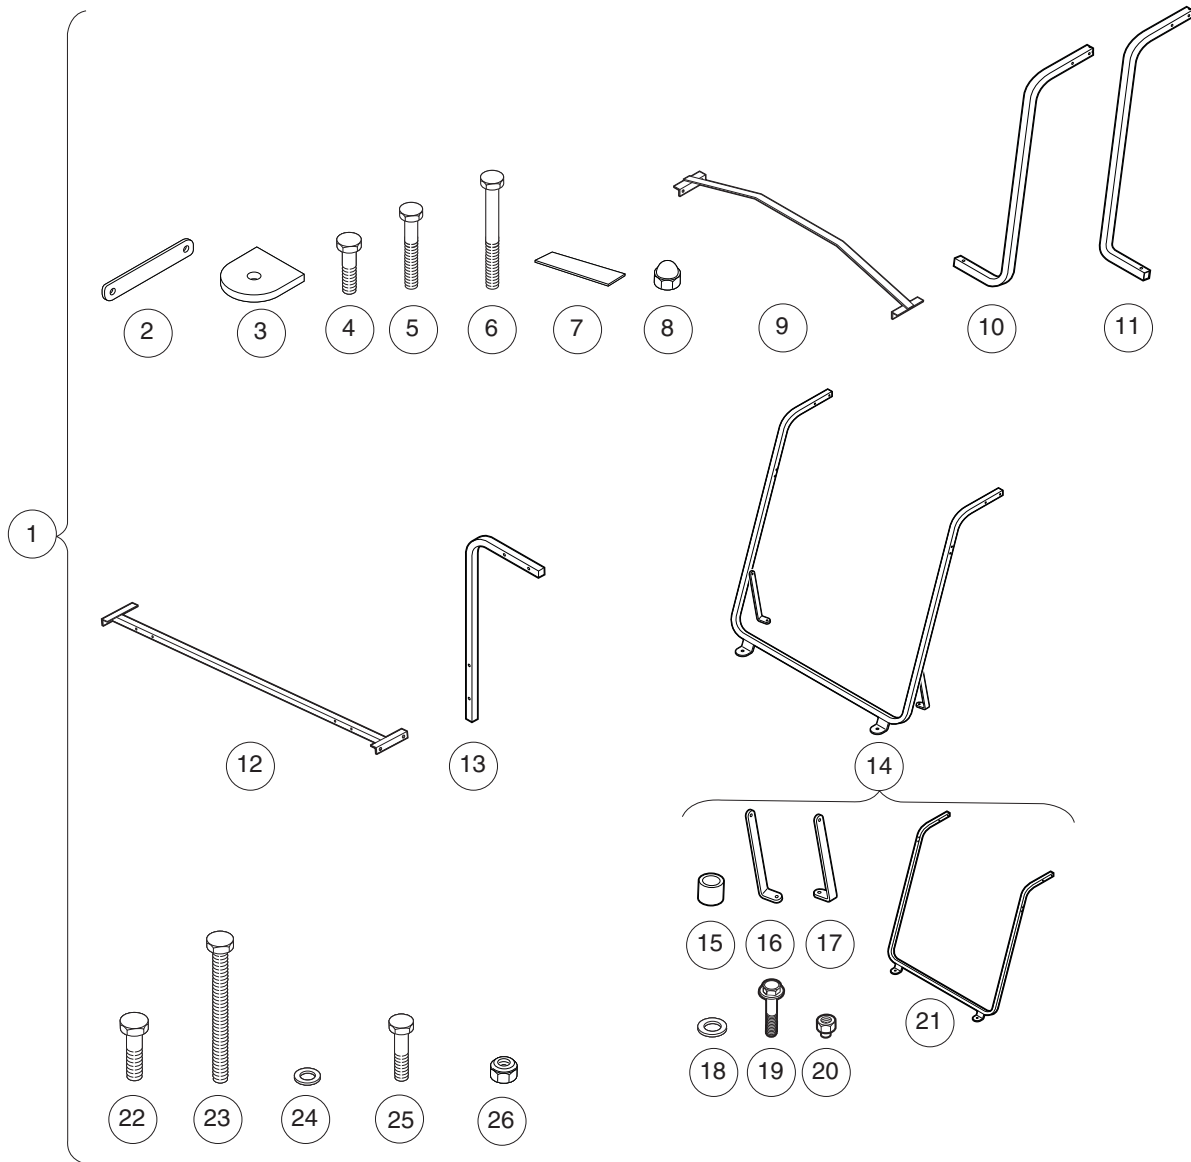1**G****E****27**

001285-003

CANOPY KIT, WHITE – VILL. 8 WITH FLAT BED

ITEM	PART NO.	DESCRIPTION	QTY	1 G E
		1 2 3 4		
1	<u>101835001</u>	Kit, Rv XI Canopy Hardware (includes items 2 through 26)	1	
2	<u>1011852</u>	Plate, Canopy Trim	4	
3	<u>1011883</u>	Pad, Windshield Frame Mounting	2	
4	<u>1011937</u>	Bolt, 5/16-18 X 1.25 Hex Head	2	
5	<u>1013509</u>	Screw, 1/4-20 X 1.75 Hx Hd Cap	4	
6	<u>1014201</u>	Screw, 1/4-20 X 2.25 Hex Cap	8	
7	<u>1014471</u>	Tape, Vinyl Foam 1/8" x 3/4"	20	
8	<u>1015091</u>	Nut, 1/4-20 Stainless-Steel Center-Lock Cap	8	
9	<u>101800201</u>	Canopy Top Brace Weldment	2	
10	<u>101805501</u>	Side Brace XI Canopy L.h.	2	
11	<u>101805502</u>	Side Brace XI Canopy R.h.	2	
12	<u>101835101</u>	Rear Cross Brace XI Canopy	1	
13	<u>101835401</u>	Rear Brace XI Canopy	2	
14	<u>103789601</u>	W/s Fr / Knee Br, Aluminum (includes items 15 through 21)	1	
15	<u>1010237</u>	Bushing	2	
16	<u>1011862</u>	Brace, Right-Hand Canopy Mount Knee	1	
17	<u>1011865</u>	Brace, Left-Hand Canopy Mount Knee	1	
18	<u>1011964</u>	Washer, 1/4 Flat	2	
19	<u>102076701</u>	Screw, 1/4-20 X 1.75 Hex Sems	2	
20	<u>102242401</u>	Nut - Nylon Insert W/cap	2	
21	<u>103787401</u>	Asm, Windshield Frame, Alum	1	
22	<u>1218</u>	Screw, 5/16-18 X 1.25 Hex-Head Cap	2	
23	<u>324</u>	Screw, 1/4-20 X 2.50 Hx Hd Cap	16	
24	<u>332</u>	Washer, 1/4 Type A Narrow Flat	56	
25	<u>7479</u>	Screw, 1/4-20 X 1.25 Hex-Head Cap	4	
26	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	24	
27	<u>101835501</u>	XI Canopy - White	1	

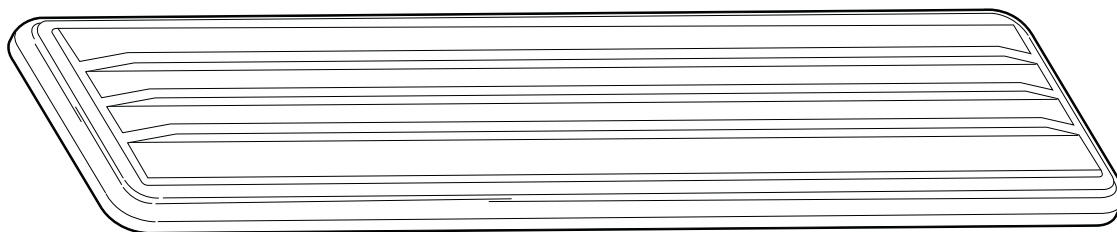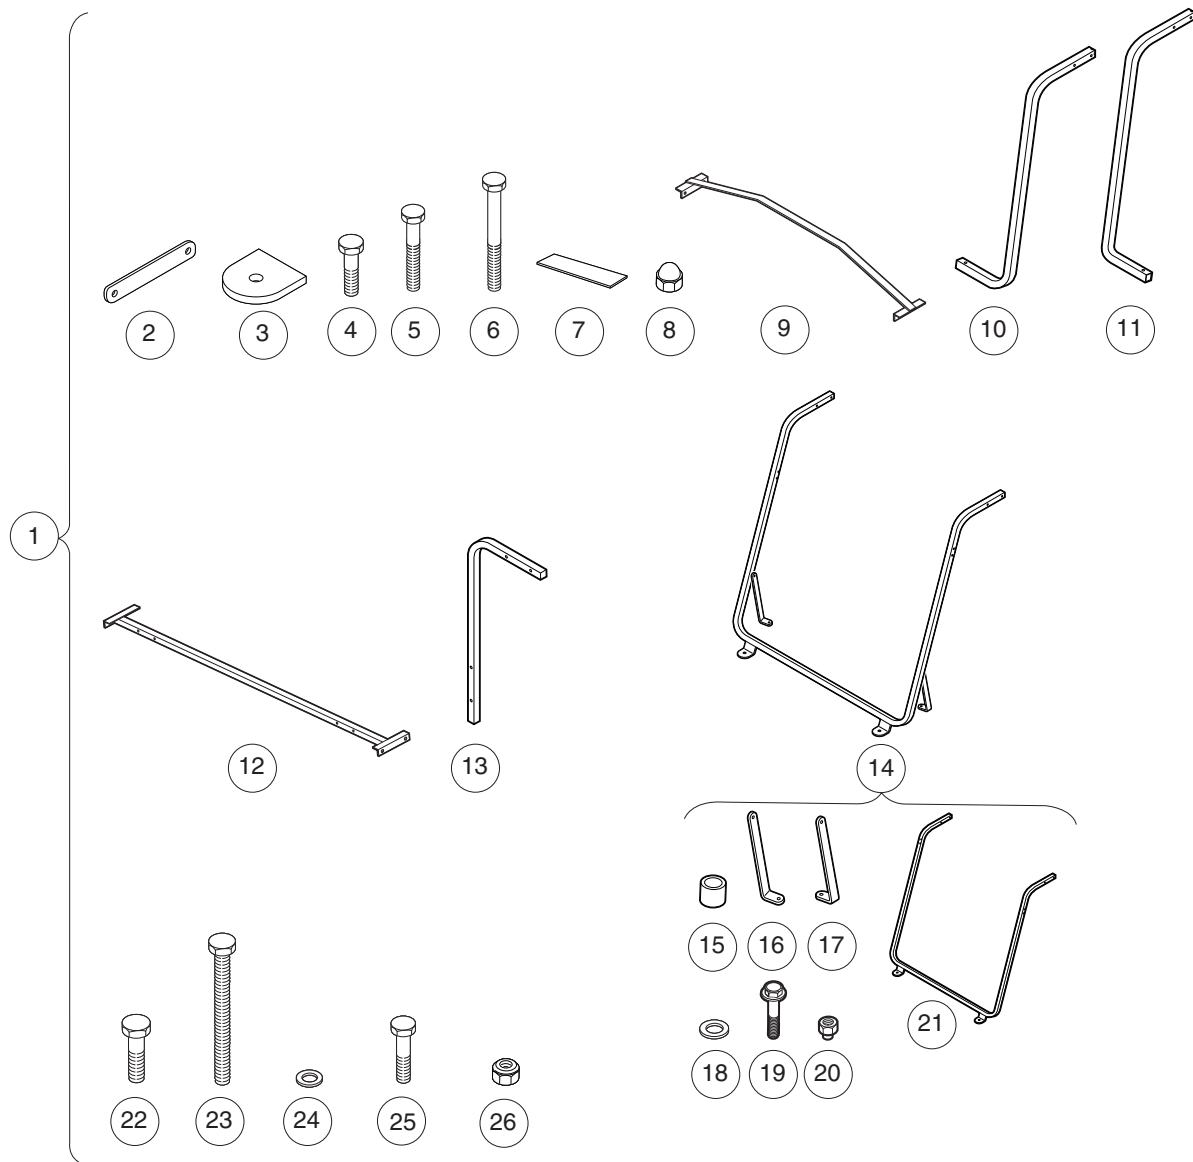1**G****E****27**

001285-003

CANOPY KIT, BEIGE – VILL. 8 WITH FLAT BED

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101835001</u>	Kit, Rv XI Canopy Hardware (includes items 2 through 26)	1
2	<u>1011852</u>	Plate, Canopy Trim	4
3	<u>1011883</u>	Pad, Windshield Frame Mounting	2
4	<u>1011937</u>	Bolt, 5/16-18 X 1.25 Hex Head	2
5	<u>1013509</u>	Screw, 1/4-20 X 1.75 Hx Hd Cap	4
6	<u>1014201</u>	Screw, 1/4-20 X 2.25 Hex Cap	8
7	<u>1014471</u>	Tape, Vinyl Foam 1/8" x 3/4"	20
8	<u>1015091</u>	Nut, 1/4-20 Stainless-Steel Center-Lock Cap	8
9	<u>101800201</u>	Canopy Top Brace Weldment	2
10	<u>101805501</u>	Side Brace XI Canopy L.h.	2
11	<u>101805502</u>	Side Brace XI Canopy R.h.	2
12	<u>101835101</u>	Rear Cross Brace XI Canopy	1
13	<u>101835401</u>	Rear Brace XI Canopy	2
14	<u>103789601</u>	W/s Fr / Knee Br, Aluminum (includes items 15 through 21)	1
15	<u>1010237</u>	Bushing	2
16	<u>1011862</u>	Brace, Right-Hand Canopy Mount Knee	1
17	<u>1011865</u>	Brace, Left-Hand Canopy Mount Knee	1
18	<u>1011964</u>	Washer, 1/4 Flat	2
19	<u>102076701</u>	Screw, 1/4-20 X 1.75 Hex Sems	2
20	<u>102242401</u>	Nut - Nylon Insert W/cap	2
21	<u>103787401</u>	Asm, Windshield Frame, Alum	1
22	<u>1218</u>	Screw, 5/16-18 X 1.25 Hex-Head Cap	2
23	<u>324</u>	Screw, 1/4-20 X 2.50 Hx Hd Cap	16
24	<u>332</u>	Washer, 1/4 Type A Narrow Flat	56
25	<u>7479</u>	Screw, 1/4-20 X 1.25 Hex-Head Cap	4
26	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	24
27	<u>101835502</u>	XI Canopy - Beige	1

1
G
E

1

G





E

WHEELS AND TIRES

2


G

E

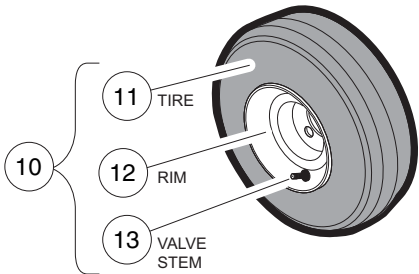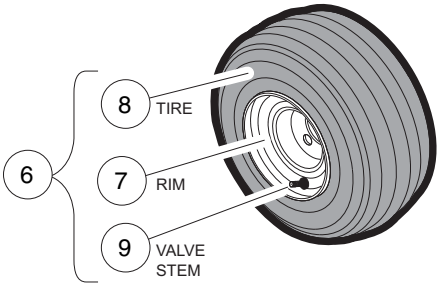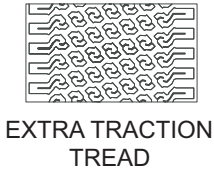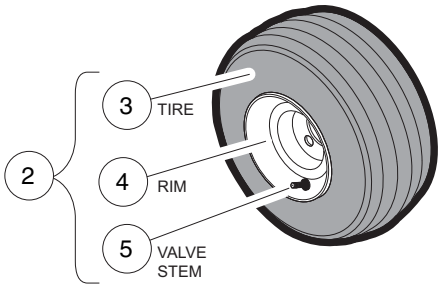

WHEELS (SILVER) AND TIRES

ITEM	PART NO.	DESCRIPTION	QTY	2 G E
		1 2 3 4		
1	<u>1010984</u>	.500-20 Unf Lug Nut	16	
2	<u>103951002</u>	Assembly, Silver Wheel Kenda, X/t 6ply (includes items 3 through 5)	A/R	
3	<u>102569302</u>	Tire, Kenda, 18x8.5-8, 6-ply Xtr	1	
4	<u>103459104</u>	Wheel Rim, 8"x7", Silver, Std	1	
5	<u>7310</u>	Valve Stem, Black Plastic	1	
6	<u>103951003</u>	Asm,silver Whl Kenda, Hn1 6pl (includes items 7 through 9)	A/R	
7	<u>103459104</u>	Wheel Rim, 8"x7", Silver, Std	1	
8	<u>103658601</u>	Tire, Kenda Hn1, 6pl	1	
9	<u>7310</u>	Valve Stem, Black Plastic	1	
10	<u>103951004</u>	Asm,silver Whl Kenda,6.5" 6pl (includes items 11 through 13)	A/R	
11	<u>103722901</u>	Tire, Kenda Hole-N-One, 18x6.5 - 8, Prem, 6-Ply	1	
12	<u>103723003</u>	Wheel Rim, 8 X 5.375, Silver	1	
13	<u>7310</u>	Valve Stem, Black Plastic	1	

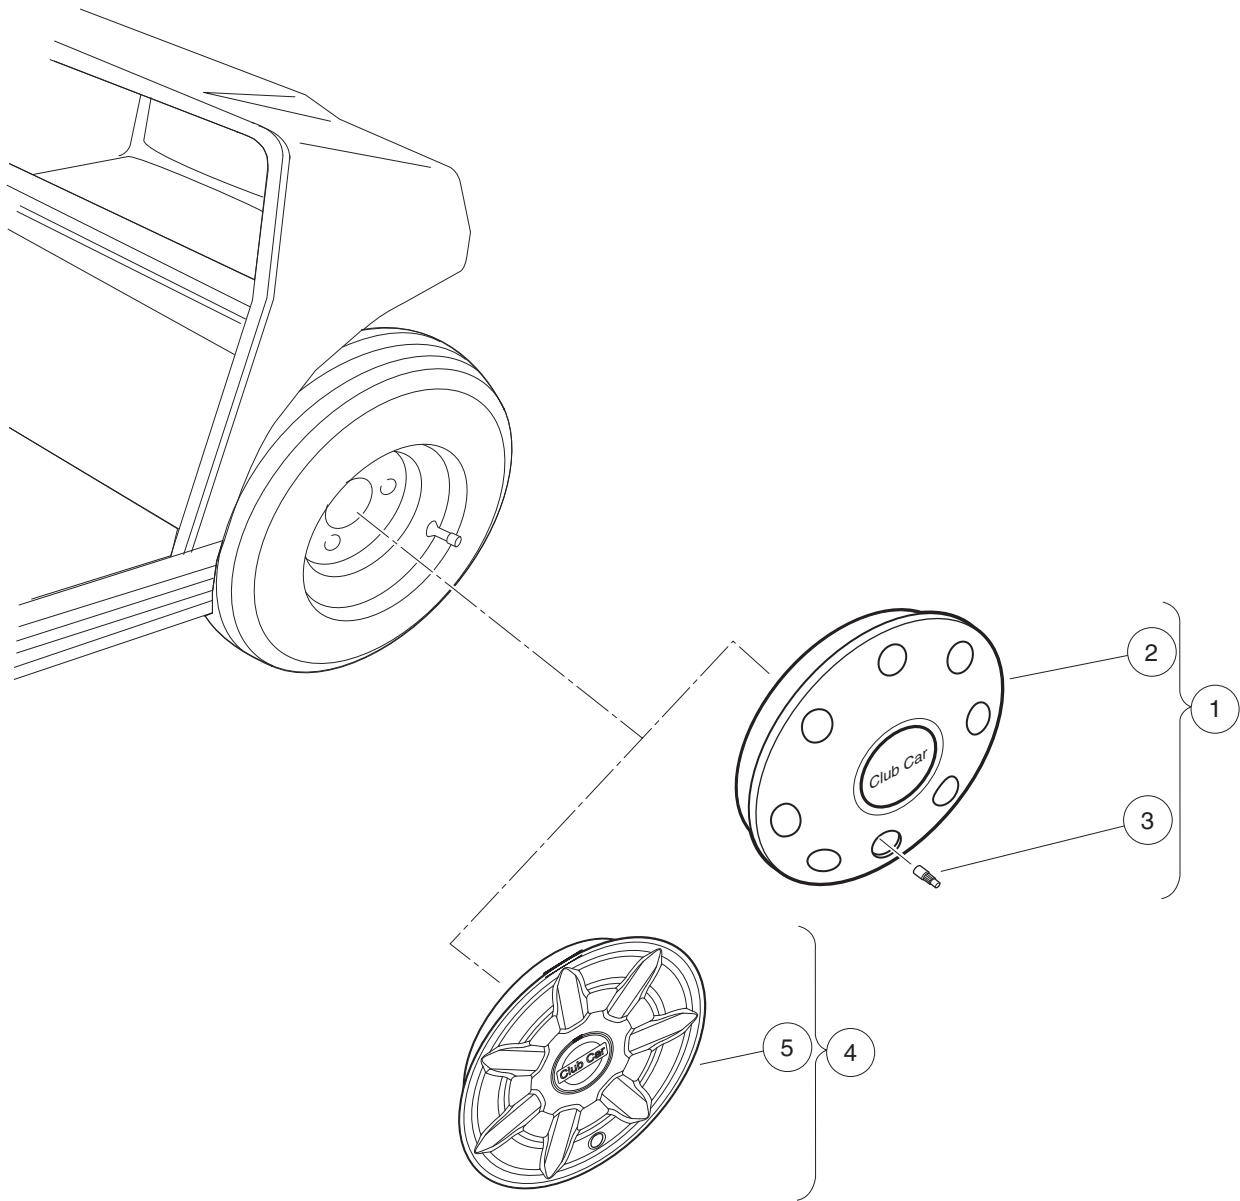

001203-001

WHEEL COVERS

ITEM	PART NO.	DESCRIPTION	QTY	2 G E
		1 2 3 4		
1	<u>1012642</u>	Sport Wheel Cover Kit (each) (includes items 2 and 3)	4	
2	<u>1012640</u>	Hubcap	1	
3	<u>1012641</u>	Valve Extension	1	
4	<u>102559901</u>	Hub Cap Kit, Prec (includes item 5)	1	
5	<u>103694501</u>	Hub Cap, 7 Prong	4	

2

G

E

DECALS

3


G

E

3

G

E

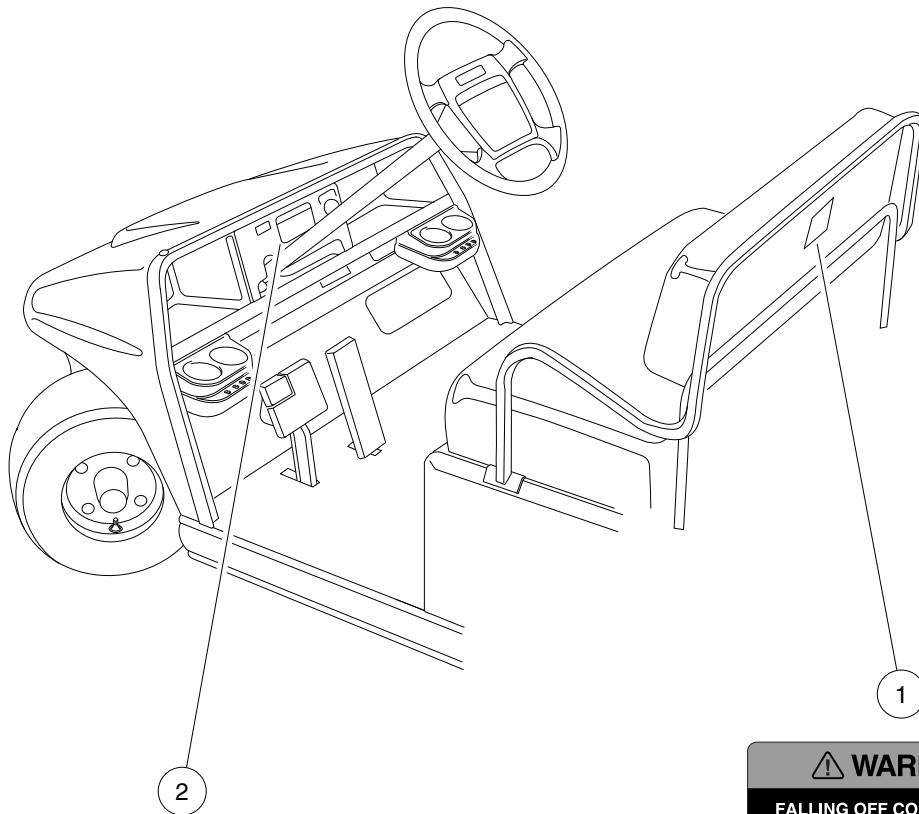

⚠ WARNING

ROLLOVER OR FALLING OFF MAY CAUSE DEATH.

- Before using vehicle, read operating instructions.
- Remain seated and hold on to seat handle while moving.
- Do not start vehicle until all occupants are seated.
- Two (2) persons per seat maximum.
- Operate from driver side only and not on public roads.
- Keep entire body inside vehicle while moving.
- Drive slowly in turns and straight up and down slopes.
- Do not leave children unattended on vehicle.
- Never operate under the influence of alcohol or drugs.
- Use brakes to reduce speed when coasting downhill.
- Never stand in front of or behind vehicle.

CC# 103205401

⚠ WARNING

FALLING OFF COULD RESULT IN SEVERE INJURY OR DEATH

- Remain seated with entire body inside vehicle and hold on to seat handle or handrail at all times.
- Two (2) persons per bench seat maximum.
- One (1) person per bucket seat maximum.
- Do not leave children unattended on vehicle at anytime.
- Never stand in front of or behind vehicle.

CC# 101705701

000374-002

DECALS – VILLAGER 6 GAS AND IQ PLUS

ITEM	PART NO.	DESCRIPTION	QTY	3 G E
1	<u>101705701</u>	1 2 3 4 Decal, Warning	1	
2	<u>103205401</u>	Decal, Warning, Rollover, Utl	1	

OPERATING INSTRUCTIONS

Before using vehicle, read owner's manual and vehicle safety warnings. Study and understand controls.

TO OPERATE

- Ensure wheels are turned in desired direction and path is clear.
- Turn key to ON position.
- Select FORWARD or REVERSE only when stopped.
- Release park brake fully.
- Vehicle will start moving when accelerator pedal is pressed.
- Slowly press accelerator pedal to increase speed.
- During operation, beeping alarm indicates reduction in motor braking.
- To stop, release accelerator pedal and press brake pedal.

WARNING

Unintended vehicle movement may cause severe injury or death. Before leaving vehicle:

- Engage park brake to lock wheels.
- Place vehicle in NEUTRAL.
- Turn key to OFF and remove key.

103783001

⚠ DANGER / POISON

SHIELD EYES

EXPLOSIVE
GASES CAN CAUSE
BLINDNESS OR INJURY

NO
• SPARKS
• FLAMES
• SMOKING

SULFURIC ACID
CAN CAUSE
BLINDNESS OR
SEVERE BURNS

FLUSH EYES
IMMEDIATELY
WITH WATER
GET
MEDICAL
HELP FAST


KEEP OUT OF THE REACH OF CHILDREN - DO NOT TIP - KEEP VENT CAPS TIGHT AND LEVEL

CAUTION

**EXPOSURE TO WATER MAY
DAMAGE ELECTRONIC COMPONENTS**

- Do not operate vehicle without this cover properly installed.
- Do not direct water stream in the area of the cover without cover securely in place.
- See vehicle maintenance and service manual before servicing.

CCI 102518361

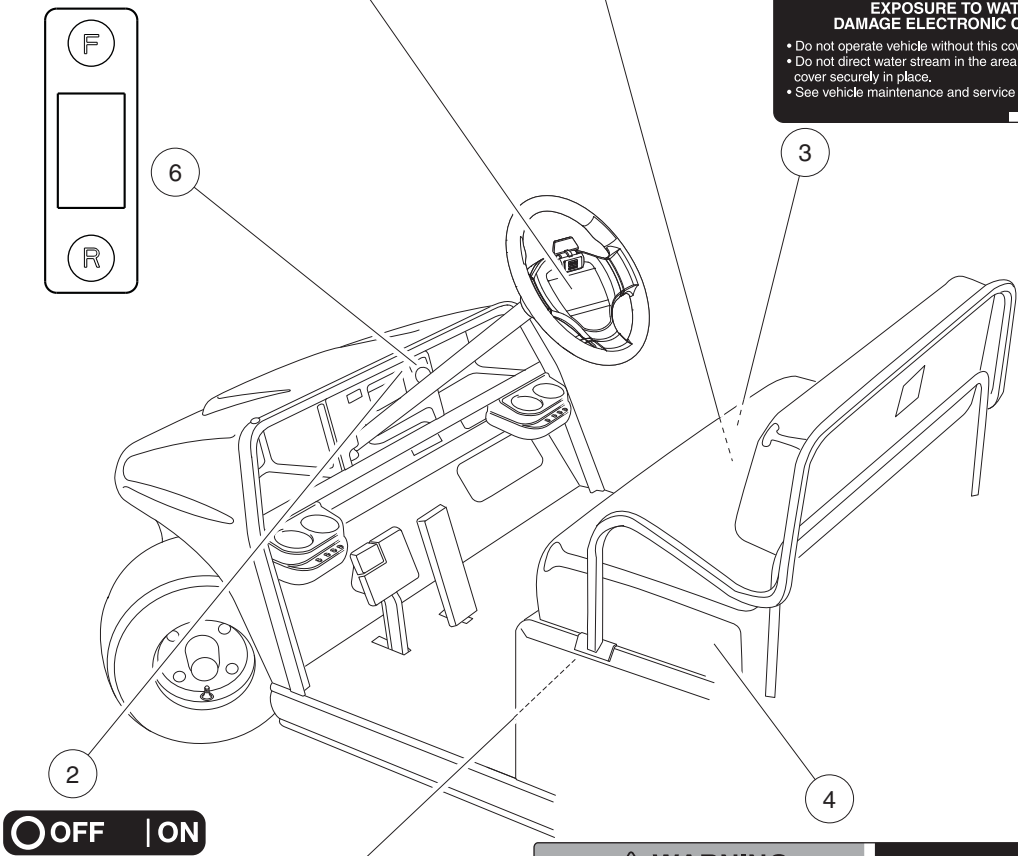

OFF | ON

⚠ WARNING

AVOID FIRE HAZARD

- Replacement battery wires must be 4-gauge (AWG) with low-resistance terminals equivalent to factory-installed wires.
- Ensure that battery connections are clean and properly tightened. See owner's manual.

CCI 102967601

⚠ WARNING

BATTERY EXPLOSION COULD RESULT IN SEVERE PERSONAL INJURY.

- Do not store items in battery compartment.
- Place Run/Tow switch in TOW position before:
 - Disconnecting or connecting battery cables
 - Towing this vehicle
 - Extended storage
 - Servicing the vehicle

NORMAL

TOW

TRIPPED


RUN

CCI 102845101

001292-001

DECALS – VILLAGER 6 IQ PLUS VEHICLE ONLY

ITEM	PART NO.	DESCRIPTION	QTY	3 G E
		1 2 3 4		
1	<u>1013677</u>	Decal, Battery Danger	1	
2	<u>101825101</u>	Decal, Off/On	1	
3	<u>102518301</u>	Decal, Caution, Electrical Component Cover	1	
4	<u>102845101</u>	Decal, Tow Switch	1	
5	<u>102967601</u>	Decal, Warning, 4 Gauge Wire	1	
6	<u>103210301</u>	Decal, Forward/Reverse, Electric	1	
7	<u>103783001</u>	Decal, Op Instr, Ele	1	

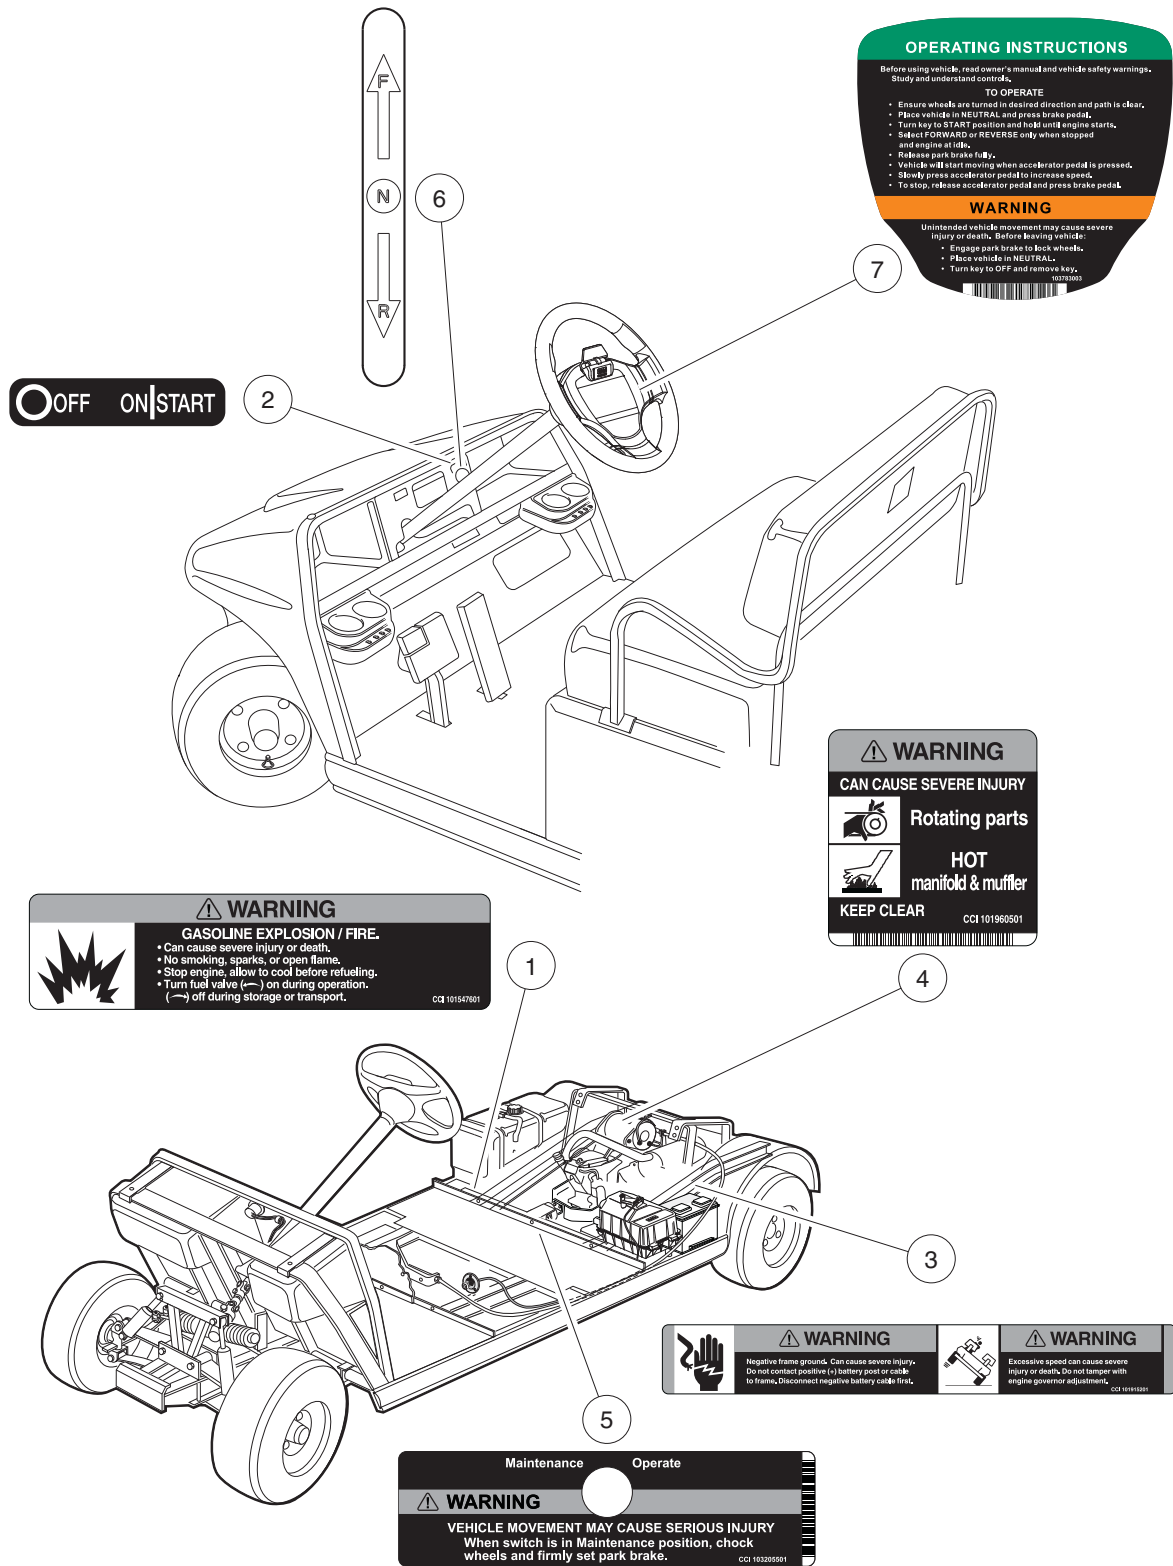

001293-001

DECALS – VILLAGER 6 GASOLINE VEHICLE ONLY

ITEM	PART NO.	DESCRIPTION	QTY	3 G E
		1 2 3 4		
1	<u>101547601</u>	Decal, Gasoline Explosion/Fire Warning	1	
2	<u>101825102</u>	Decal, Off/On/Start	1	
3	<u>101915201</u>	Decal, Frame Ground and Governor Warning	1	
4	<u>101960501</u>	Decal, Rotating Parts/Hot Manifold	1	
5	<u>103205501</u>	Decal, Run/Service Switch	1	
6	<u>103210201</u>	Decal, Forward/Reverse, Gas	1	
7	<u>103783003</u>	Decal, Op Instr, Gas Ks	1	

⚠ WARNING

ROLLOVER OR FALLING OFF MAY CAUSE DEATH.

- Before using vehicle, read operating instructions.
- Remain seated and hold on to seat handle while moving.
- Do not start vehicle until all occupants are seated.
- Two (2) persons per seat maximum.
- Operate from driver side only and not on public roads.
- Keep entire body inside vehicle while moving.
- Drive slowly in turns and straight up and down slopes.
- Do not leave children unattended on vehicle.
- Never operate under the influence of alcohol or drugs.
- Use brakes to reduce speed when coasting downhill.
- Never stand in front of or behind vehicle.


CCJ 103205401

⚠ WARNING

FALLING OFF COULD RESULT IN SEVERE INJURY OR DEATH

- Remain seated with entire body inside vehicle and hold on to seat handle or handrail at all times.
- Two (2) persons per bench seat maximum.
- One (1) person per bucket seat maximum.
- Do not leave children unattended on vehicle at anytime.
- Never stand in front of or behind vehicle.

CCJ 101706701

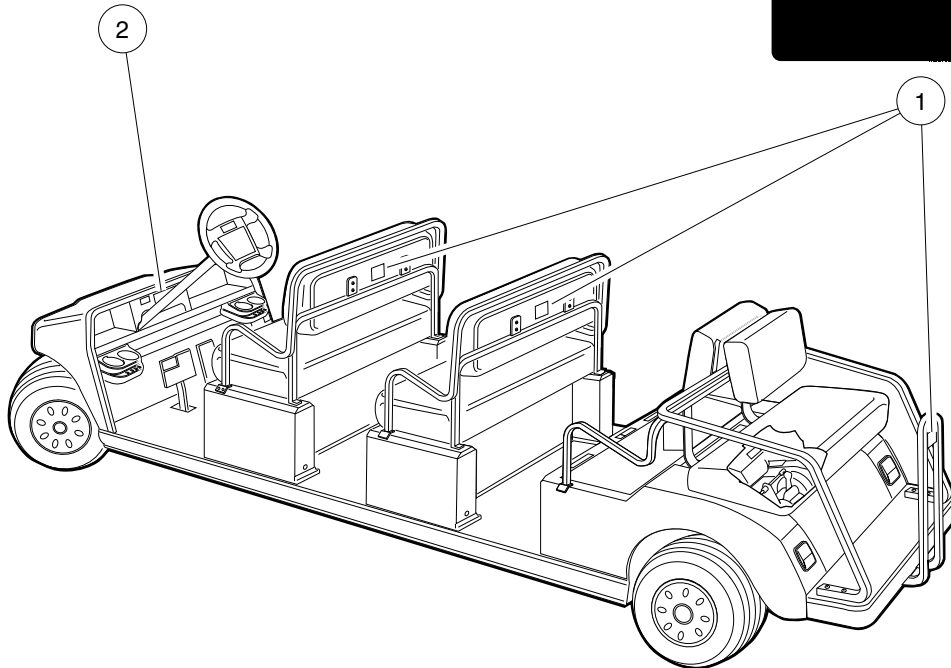

000377-002


DECALS – VILLAGER 8 GAS AND IQ PLUS

ITEM	PART NO.	DESCRIPTION	QTY	
1	<u>101705701</u>	1 2 3 4 Decal, Warning	3	3
2	<u>103205401</u>	Decal, Warning, Rollover, Utl	1	G
				E

3


G

E

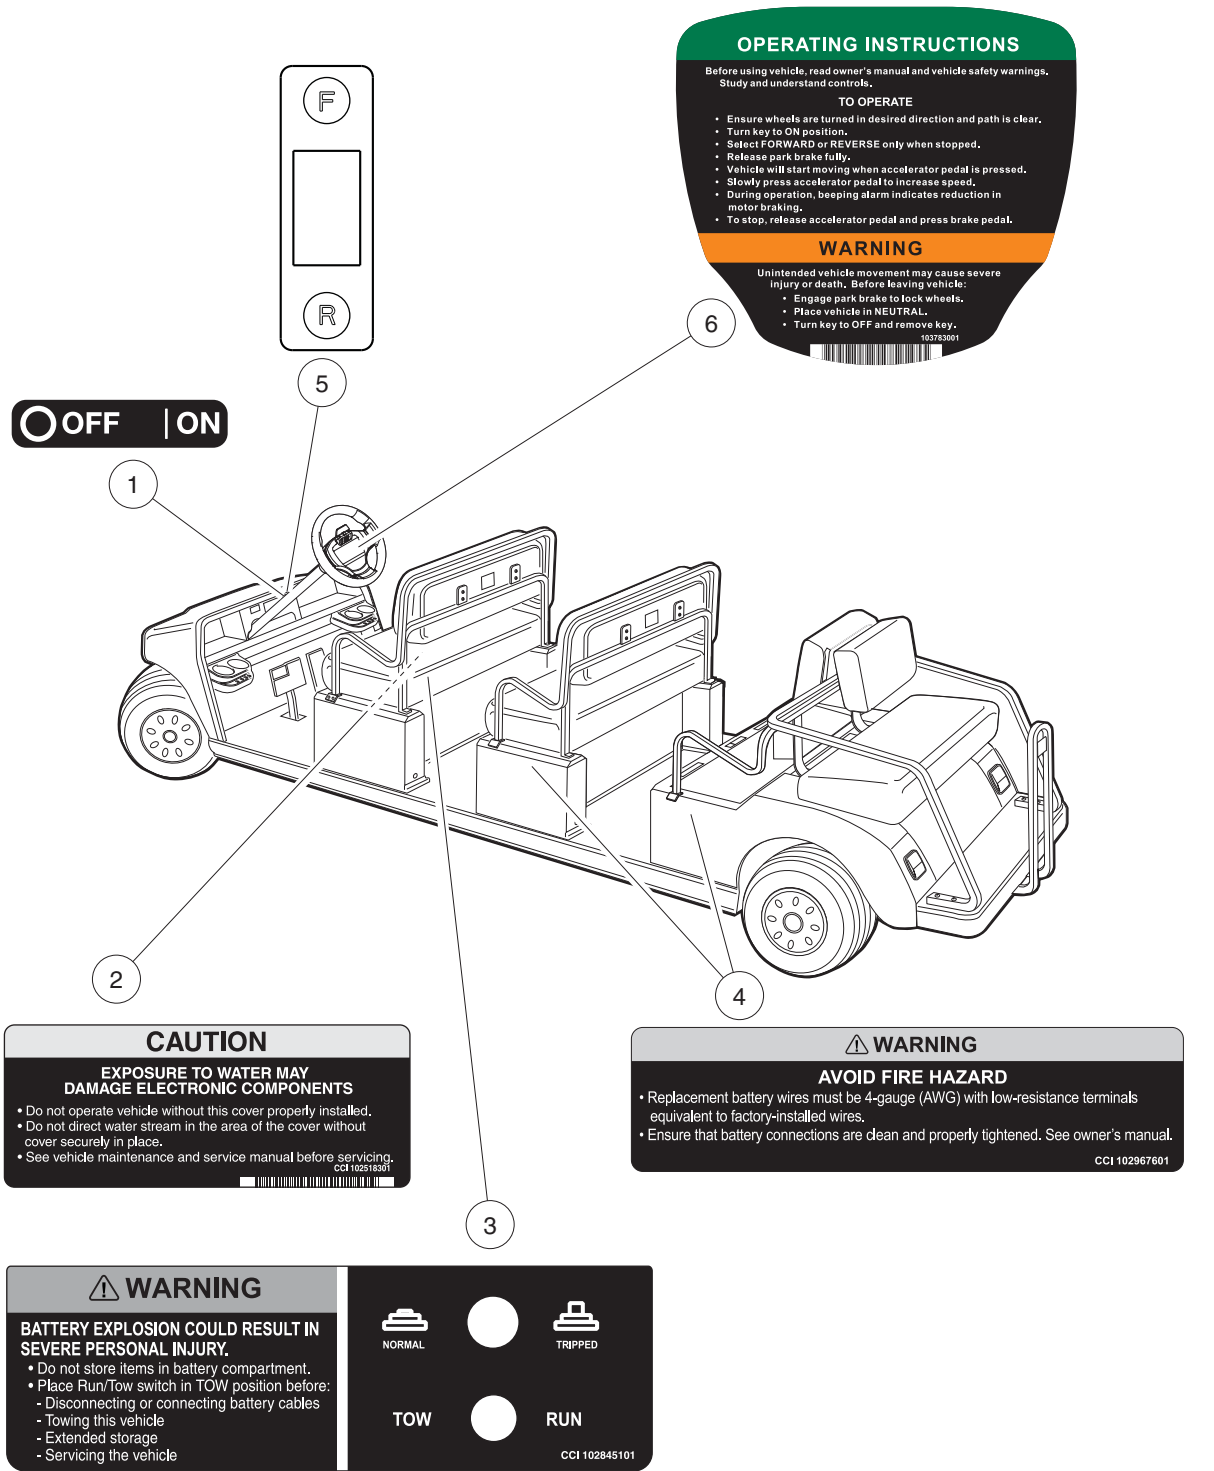

DECALS – VILLAGER 8 IQ PLUS VEHICLE ONLY

ITEM	PART NO.	DESCRIPTION	QTY	3 G E
		1 2 3 4		
1	<u>101825101</u>	Decal, Off/On	1	
2	<u>102518301</u>	Decal, Caution, Electrical Component Cover	1	
3	<u>102845101</u>	Decal, Tow Switch	1	
4	<u>102967601</u>	Decal, Warning, 4 Gauge Wire	2	
5	<u>103210301</u>	Decal, Forward/Reverse, Electric	1	
6	<u>103783001</u>	Decal, Op Instr, Ele	1	

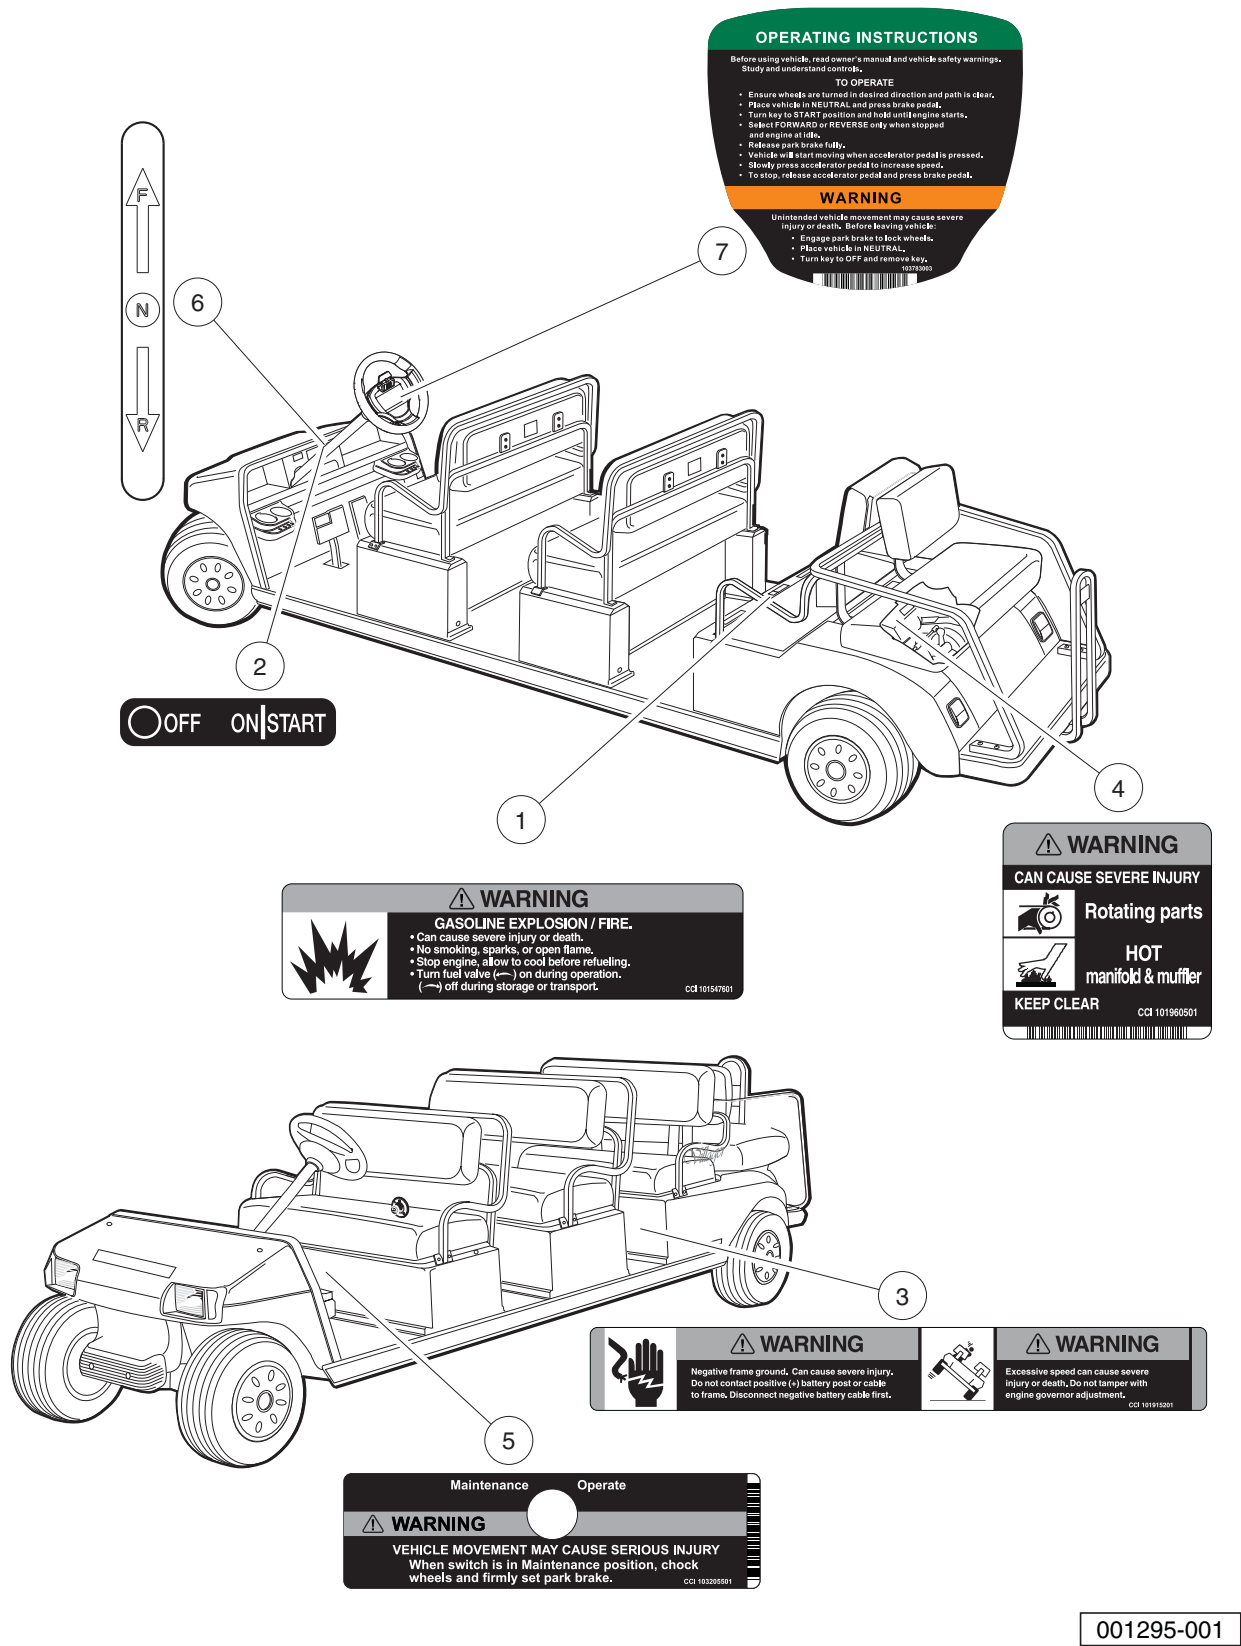

DECALS – VILLAGER 8 GASOLINE VEHICLE ONLY

ITEM	PART NO.	DESCRIPTION	QTY	3 G E
		1 2 3 4		
1	<u>101547601</u>	Decal, Gasoline Explosion/Fire Warning	1	
2	<u>101825102</u>	Decal, Off/On/Start	1	
3	<u>101915201</u>	Decal, Frame Ground and Governor Warning	1	
4	<u>101960501</u>	Decal, Rotating Parts/Hot Manifold	2	
5	<u>103205501</u>	Decal, Run/Service Switch	1	
6	<u>103210201</u>	Decal, Forward/Reverse, Gas	1	
7	<u>103783003</u>	Decal, Op Instr, Gas Ks	1	

3

G

E

Club Car

1

(ON FRONT OF COWL)

Villager

2

(ON REAR BODY)

IR Ingersoll Rand

3

(ON REAR BODY)

000380-001


BADGING DECALS – VILLAGER

ITEM	PART NO.	DESCRIPTION	QTY
1	<u>1014198</u>	Nameplate Kit (gold)	1
2	<u>102158701</u>	Decal, Villager	2
3	<u>103234303</u>	Decal, Badge, Ir Black	2

3

G

E

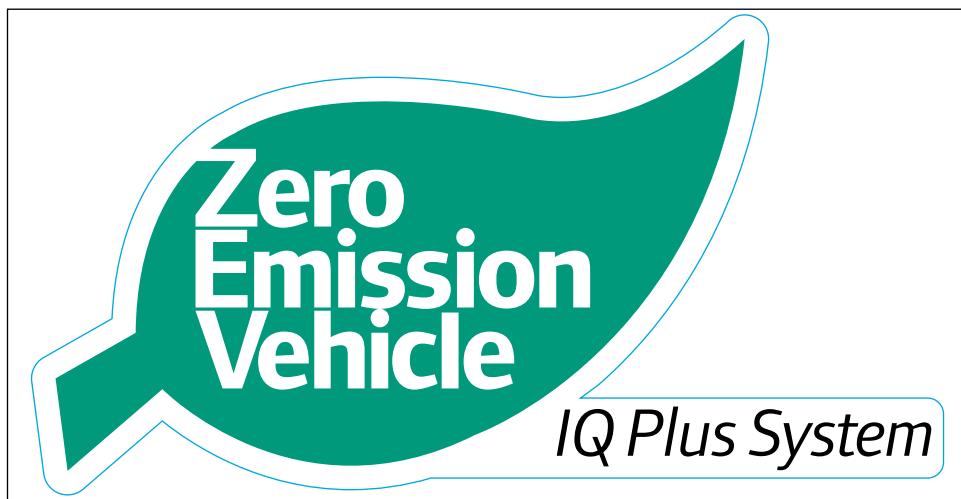

1

000422-003

IQ PLUS LOGO DECAL – IQ PLUS VEHICLES ONLY

ITEM	PART NO.	DESCRIPTION	QTY	3 G E
1	<u>103464801</u>	1 2 3 4 Decal, Iq Plus, Zev	2	

3

G


E

LIGHTS, CONTROLS, AND INDICATORS

4

G

E

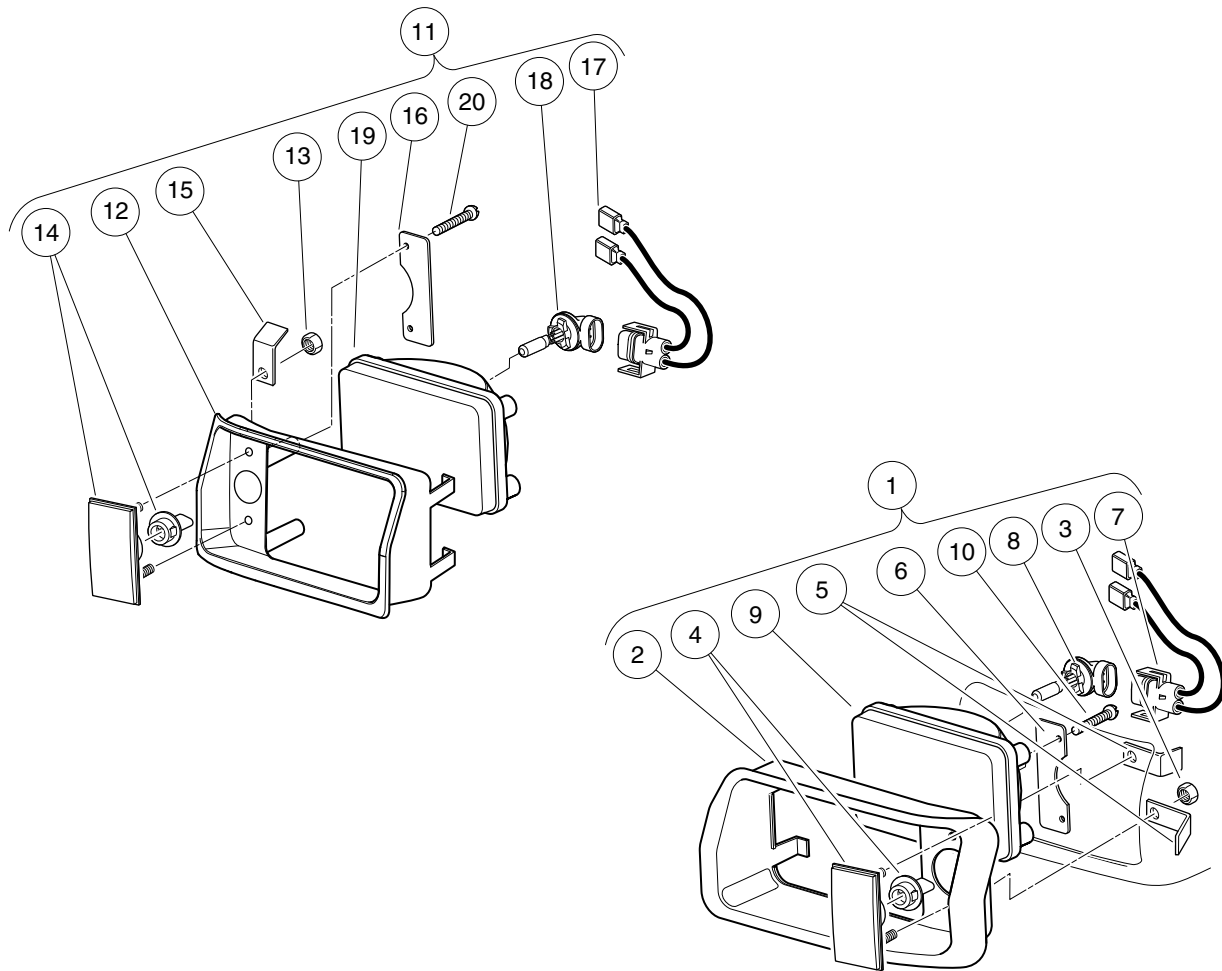

001097-001


HEADLIGHTS

ITEM	PART NO.	DESCRIPTION	QTY	4
		1 2 3 4		G
1	<u>101988001</u>	Headlight Assembly, Driver-Side Single Beam (includes items 2 through 10)	1	E
2	<u>1016880</u>	Headlight Bezel, Left	1	
3	<u>1017</u>	Nut, #10-24 Stainless-Steel Hex Machine	2	
4	<u>1017062</u>	Turn Signal Lens Assy	1	
5	<u>1017064</u>	Mounting Bracket	2	
6	<u>1017065</u>	Retainer, Headlight	1	
7	<u>101987901</u>	Connector, Harness Assembly, Headlight	1	
8	<u>101988101</u>	Bulb, Headlight	1	
9	<u>101988201</u>	Lens, Headlight	1	
10	1620	Screw, #10-16 X 0.75 Pan-Head Tap	2	
11	<u>101988002</u>	Headlight Assy, Passenger-Side Single Beam (includes items 12 through 20)	1	
12	<u>1016879</u>	Headlight Bezel, Right	1	
13	<u>1017</u>	Nut, #10-24 Stainless-Steel Hex Machine	2	
14	<u>1017062</u>	Turn Signal Lens Assy	1	
15	<u>1017064</u>	Mounting Bracket	2	
16	<u>1017065</u>	Retainer, Headlight	1	
17	<u>101987901</u>	Connector, Harness Assembly, Headlight	1	
18	<u>101988101</u>	Bulb, Headlight	1	
19	<u>101988201</u>	Lens, Headlight	1	
20	1620	Screw, #10-16 X 0.75 Pan-Head Tap	2	

4

G

E

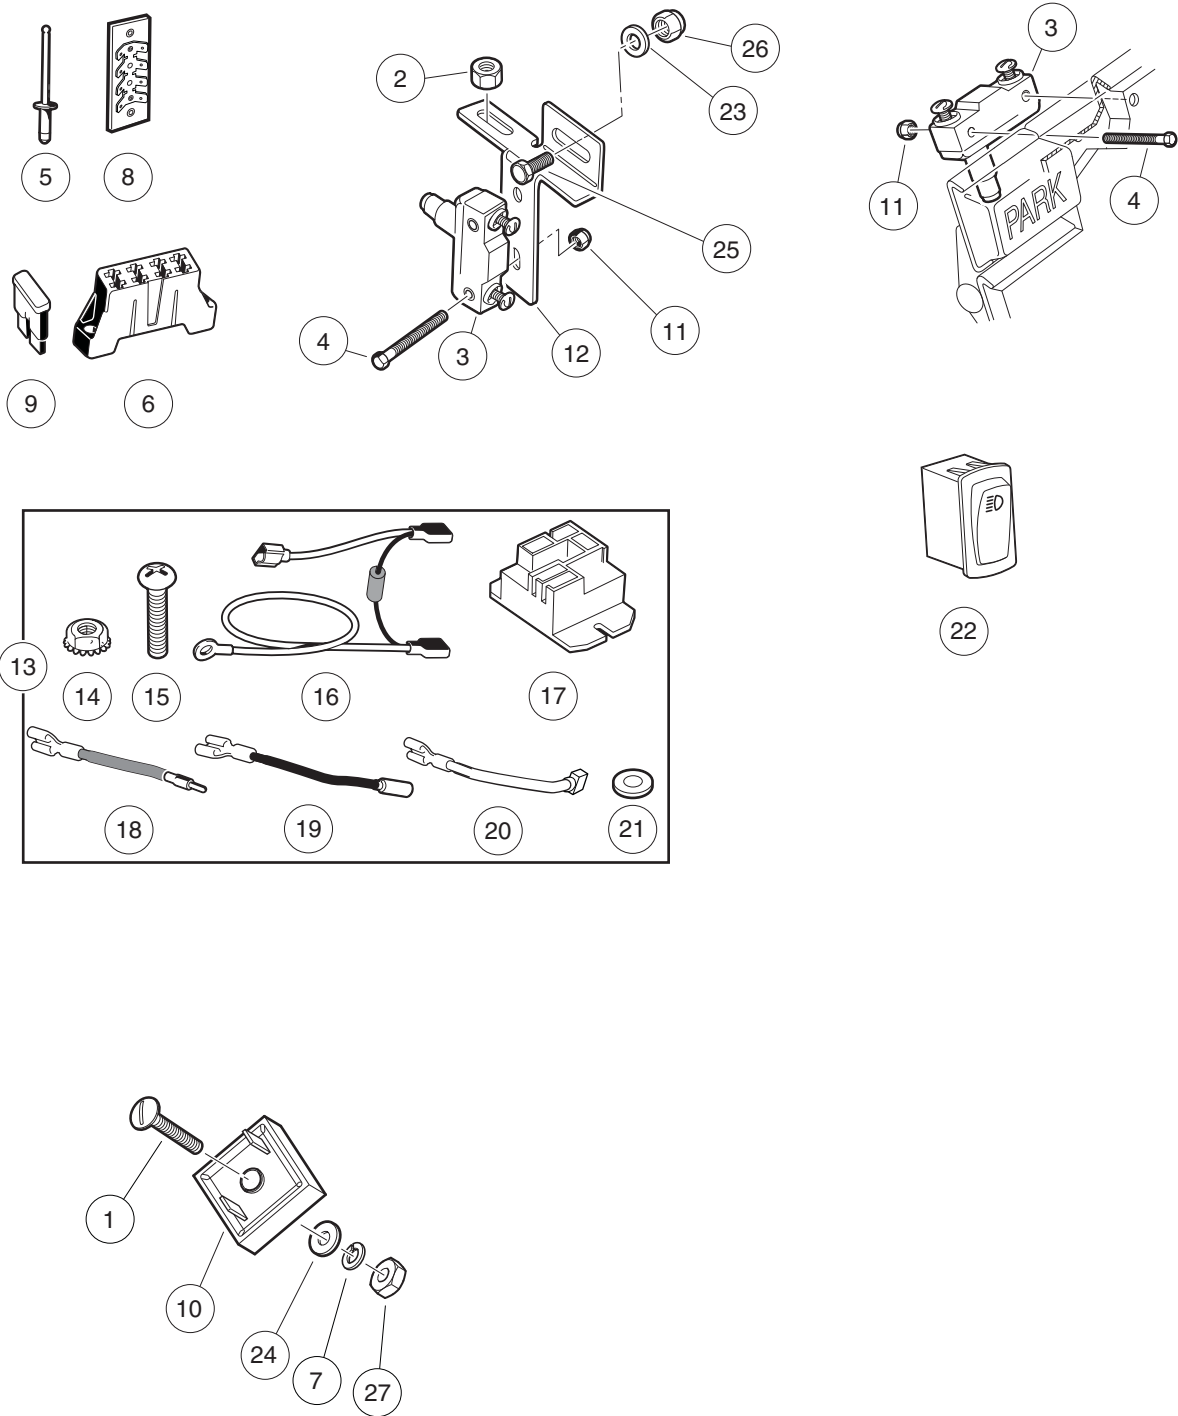

001291-001

LIGHTING SYSTEM COMPONENTS – TRANSPORTATION GASOLINE VEHICLES


ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1010909</u>	Screw, #10-32 X 1.25 Rd Hd Mch	1
2	<u>1011280</u>	Locknut, 5/16-18	1
3	<u>1011439</u>	Switch, Limit	2
4	<u>1011557</u>	Screw, #6-32 X 1.00 Hex-Head Machine	4
5	<u>1013357</u>	Rivet, 5/32 Aluminum Pop	2
6	<u>1015741</u>	Fuse Block	1
7	<u>1016</u>	Lockwasher, #10 Split	1
8	<u>1016356</u>	Terminal Block with Insulator	1
9	<u>1016423</u>	Fuse, 20-Amp	3
10	<u>1017721</u>	Limiter, Voltage	1
11	<u>101932201</u>	Locknut, #6-32 Nylon	4
12	<u>101957101</u>	Bracket, Brake Light Switch	1
13	<u>102198701</u>	Brake Relay Kit - 12v (includes items 14 through 21)	1
14	<u>1011229</u>	Locknut, #6-32 Whiz	2
15	<u>1017853</u>	Screw, #6-32 X 0.75 Hex-Head Machine	2
16	<u>101914401</u>	Assembly, Voltage Suppressor	1
17	<u>102199001</u>	Relay, 12-Volt	1
18	<u>102199201</u>	Wire Asm #18 Brown	1
19	<u>102199301</u>	Wire Asm #18 Black	1
20	<u>102199401</u>	Wire Asm #18 Black	1
21	<u>7591</u>	Washer, #6, Flat	2
22	<u>102869401</u>	Switch, Rocker, Light	1
23	<u>1241</u>	Washer, 5/16 Type A Flat	1
24	<u>183</u>	Washer, #10, Type A, Flat	1
25	<u>7173</u>	Screw, 5/16-18 X 0.75, Hex-Head Cap	1
26	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	1
27	<u>7893</u>	Nut, #10-32 Hex	1
Note: The Villager 6 and 8 gasoline models have wiring for lights built into the main wire harness.			

4
G
E

4

G

E

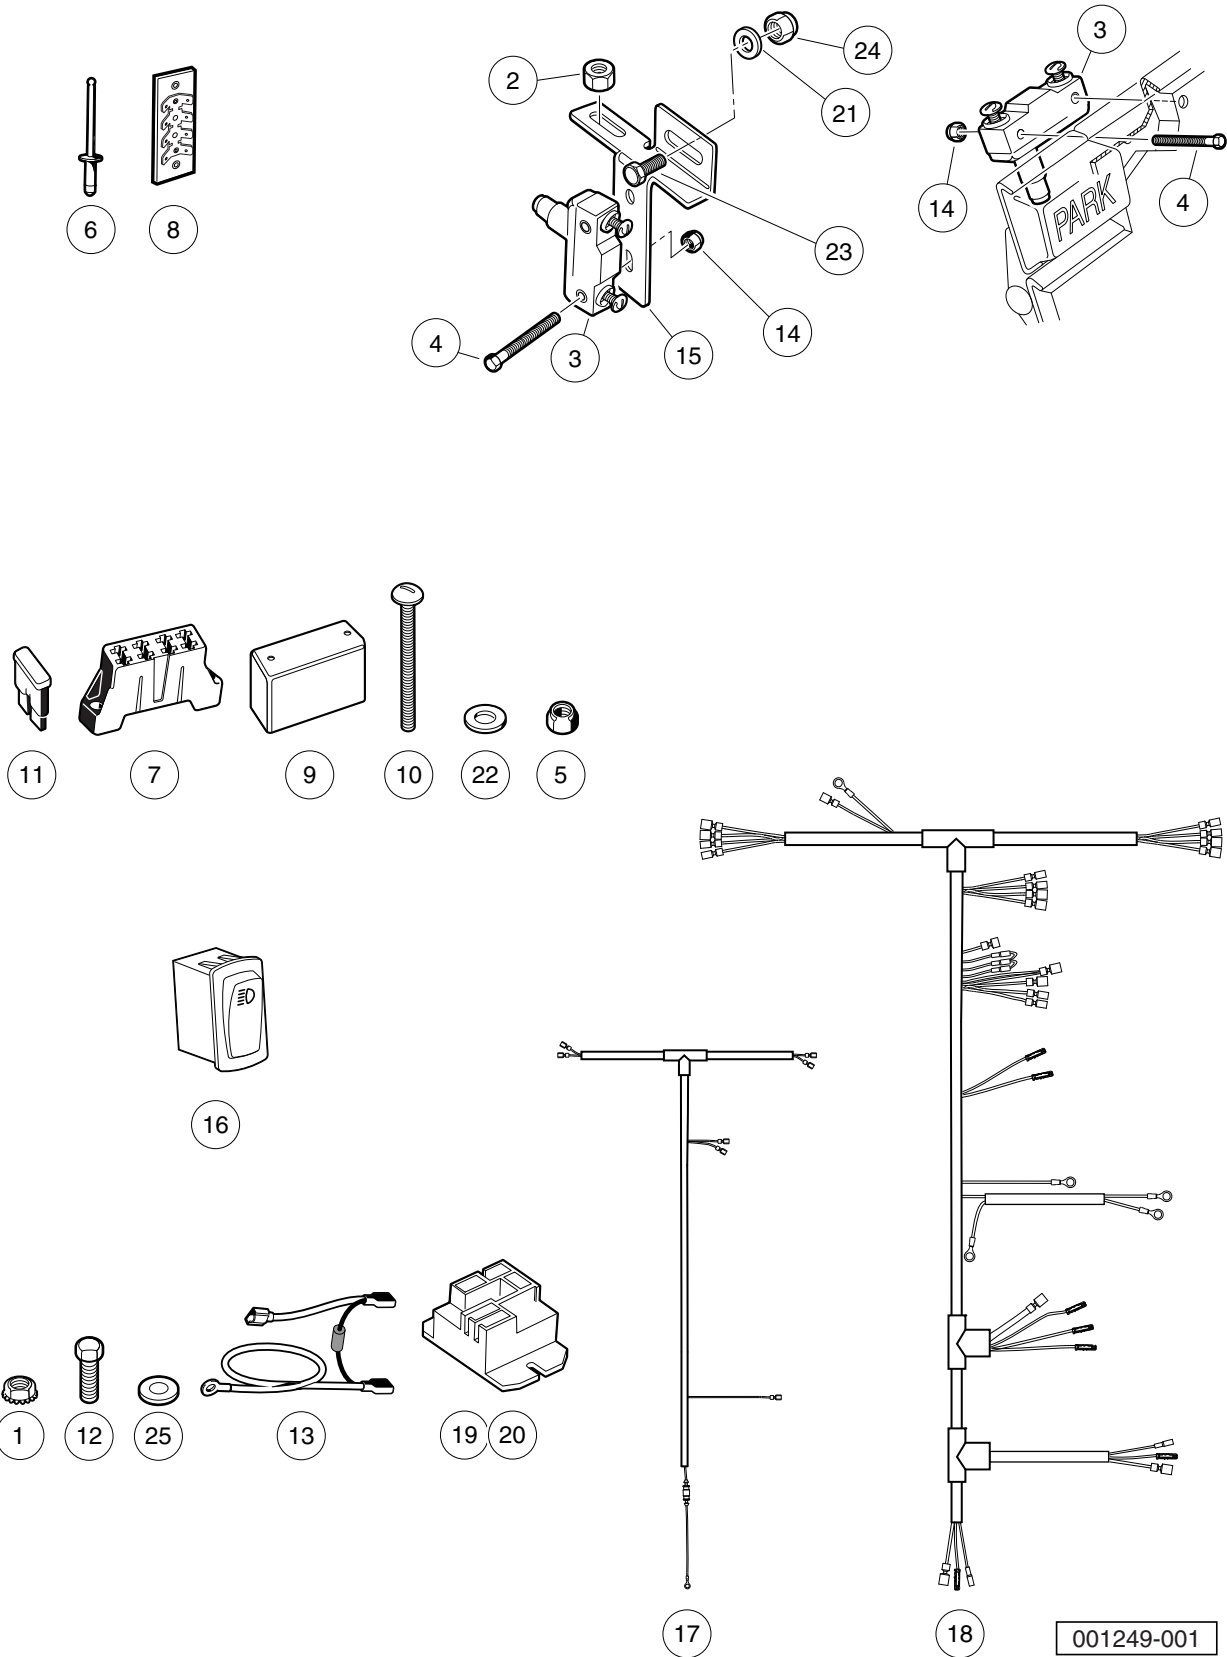


LIGHTING SYSTEM COMPONENTS – CA 6 AND VILL. 6 ELEC. WITH IQ PLUS CHARGER

ITEM	PART NO.	DESCRIPTION	QTY	4 G E
		1 2 3 4		
1	<u>1011229</u>	Locknut, #6-32 Whiz	2	
2	<u>1011280</u>	Locknut, 5/16-18	1	
3	<u>1011439</u>	Switch, Limit	2	
4	<u>1011557</u>	Screw, #6-32 X 1.00 Hex-Head Machine	4	
5	<u>1012438</u>	Locknut, #10-24 Nylon Insert	2	
6	<u>1013357</u>	Rivet, 5/32 Aluminum Pop	2	
7	<u>1015741</u>	Fuse Block	1	
8	<u>1016356</u>	Terminal Block with Insulator	1	
9	<u>1016363</u>	Fuse Block Cover	1	
10	<u>1016366</u>	Screw, #10-24 X 3.0 Pan-Head Machine	2	
11	<u>1016423</u>	Fuse, 20-Amp	3	
12	<u>1017853</u>	Screw, #6-32 X 0.75 Hex-Head Machine	2	
13	<u>101914401</u>	Assembly, Voltage Suppressor	1	
14	<u>101932201</u>	Locknut, #6-32 Nylon	4	
15	<u>101957101</u>	Bracket, Brake Light Switch	1	
16	<u>102869401</u>	Switch, Rocker, Light	1	
17	<u>103255701</u>	Wire Harness, Headlights-Only, CA, Electric	1	
18	<u>103257101</u>	Wire Harness, Lighting Package, Stretch, Electric	1	
19	<u>103414901</u>	Kit, Relay, 48v 30a W/instr (includes item 20)	1	
20	<u>103397901</u>	Relay, Spst No, 48v 30a, Pmt	1	
21	<u>1241</u>	Washer, 5/16 Type A Flat	1	
22	<u>183</u>	Washer, #10, Type A, Flat	4	
23	<u>7173</u>	Screw, 5/16-18 X 0.75, Hex-Head Cap	1	
24	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	1	
25	<u>7591</u>	Washer, #6, Flat	2	
Note: Use item 17 for headlights only. NOTE 2: Use item 18 for headlights and taillights.				

4


G

E

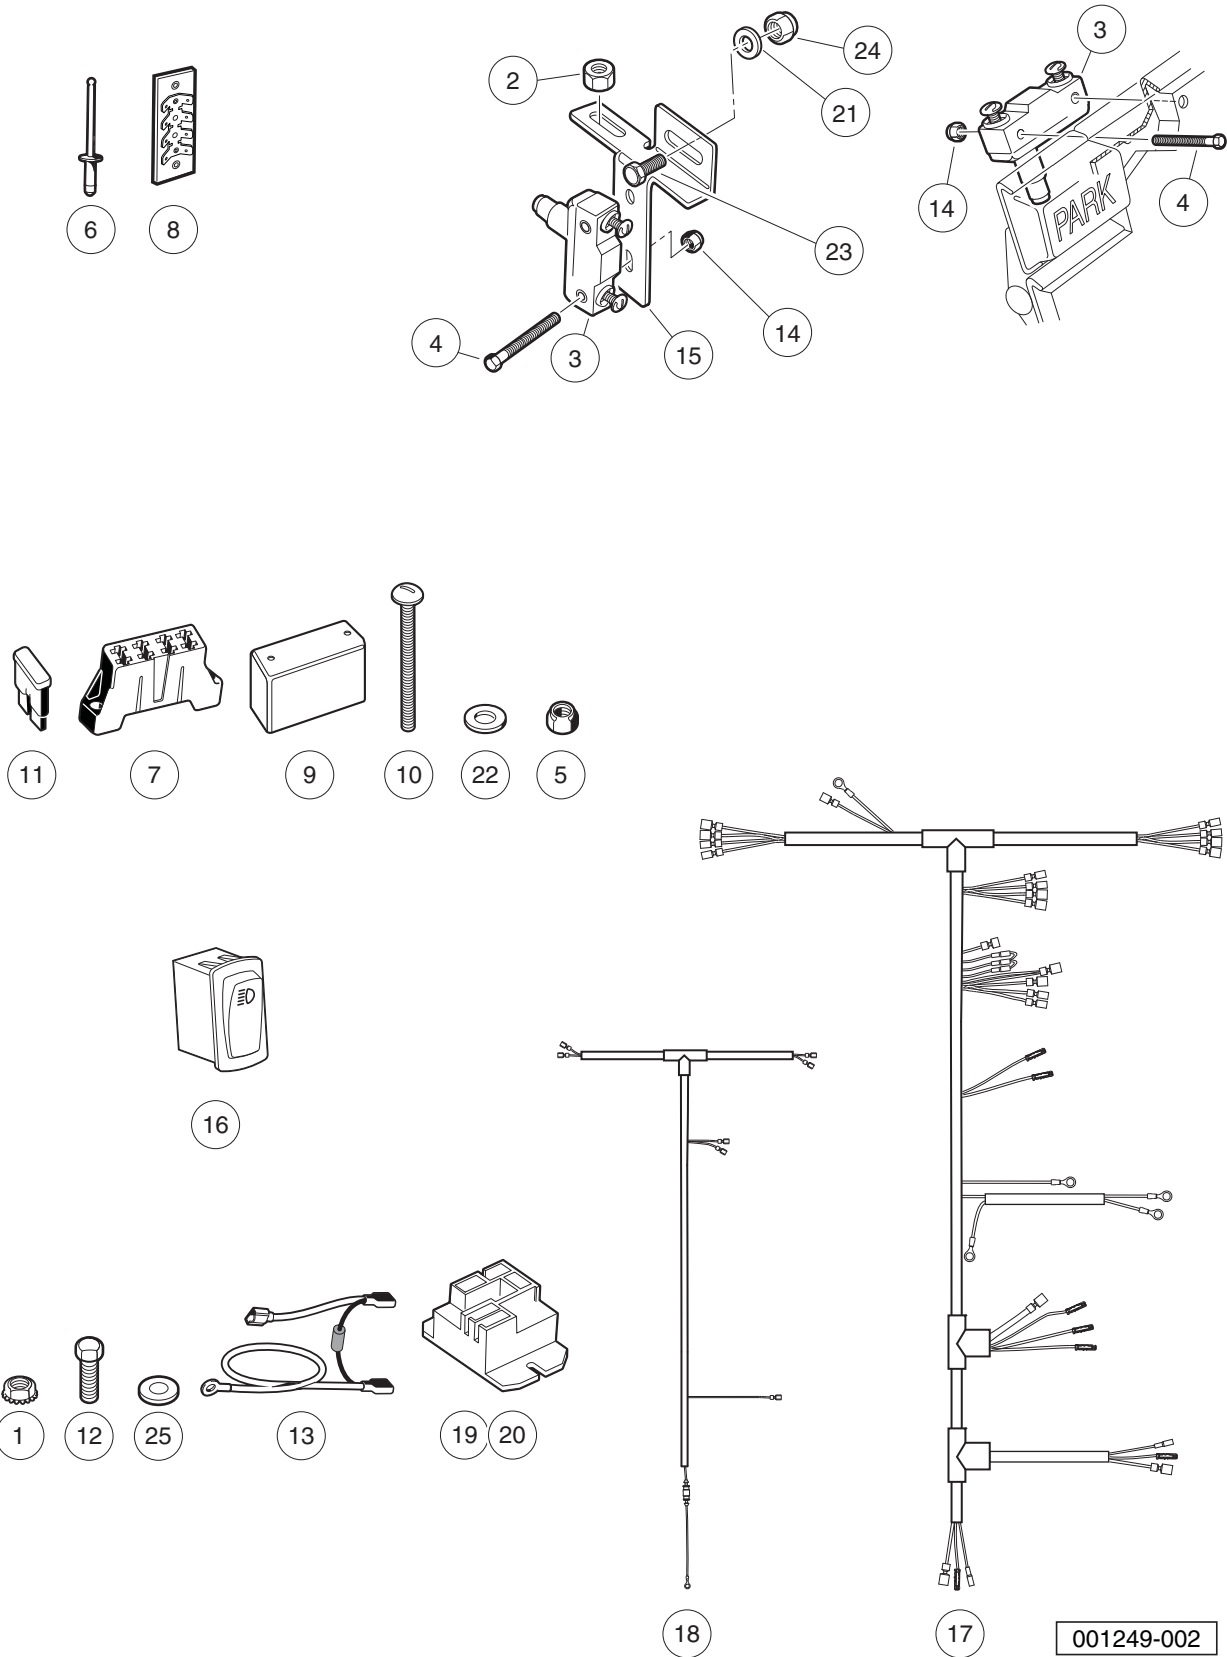

LIGHTING SYSTEM COMPONENTS – VILLAGER 8 ELEC. WITH IQ PLUS CHARGER


ITEM	PART NO.	DESCRIPTION	QTY	4 G E
		1 2 3 4		
1	<u>1011229</u>	Locknut, #6-32 Whiz	2	
2	<u>1011280</u>	Locknut, 5/16-18	1	
3	<u>1011439</u>	Switch, Limit	2	
4	<u>1011557</u>	Screw, #6-32 X 1.00 Hex-Head Machine	4	
5	<u>1012438</u>	Locknut, #10-24 Nylon Insert	2	
6	<u>1013357</u>	Rivet, 5/32 Aluminum Pop	2	
7	<u>1015741</u>	Fuse Block	1	
8	<u>1016356</u>	Terminal Block with Insulator	1	
9	<u>1016363</u>	Fuse Block Cover	1	
10	<u>1016366</u>	Screw, #10-24 X 3.0 Pan-Head Machine	2	
11	<u>1016423</u>	Fuse, 20-Amp	3	
12	<u>1017853</u>	Screw, #6-32 X 0.75 Hex-Head Machine	2	
13	<u>101914401</u>	Assembly, Voltage Suppressor	1	
14	<u>101932201</u>	Locknut, #6-32 Nylon	4	
15	<u>101957101</u>	Bracket, Brake Light Switch	1	
16	<u>102869401</u>	Switch, Rocker, Light	1	
17	<u>103254401</u>	Wire Harness, Lght Pkg, V8, El	1	
18	<u>103255701</u>	Wire Harness, Headlights-Only, CA, Electric	1	
19	<u>103414901</u>	Kit, Relay, 48v 30a W/instr (includes item 20)	1	
20	<u>103397901</u>	Relay, Spst No, 48v 30a, Pmt	1	
21	<u>1241</u>	Washer, 5/16 Type A Flat	1	
22	<u>183</u>	Washer, #10, Type A, Flat	4	
23	<u>7173</u>	Screw, 5/16-18 X 0.75, Hex-Head Cap	1	
24	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	1	
25	<u>7591</u>	Washer, #6, Flat	2	
Note: Use item 18 for headlights only. NOTE 2: Use item 17 for headlights and taillights.				

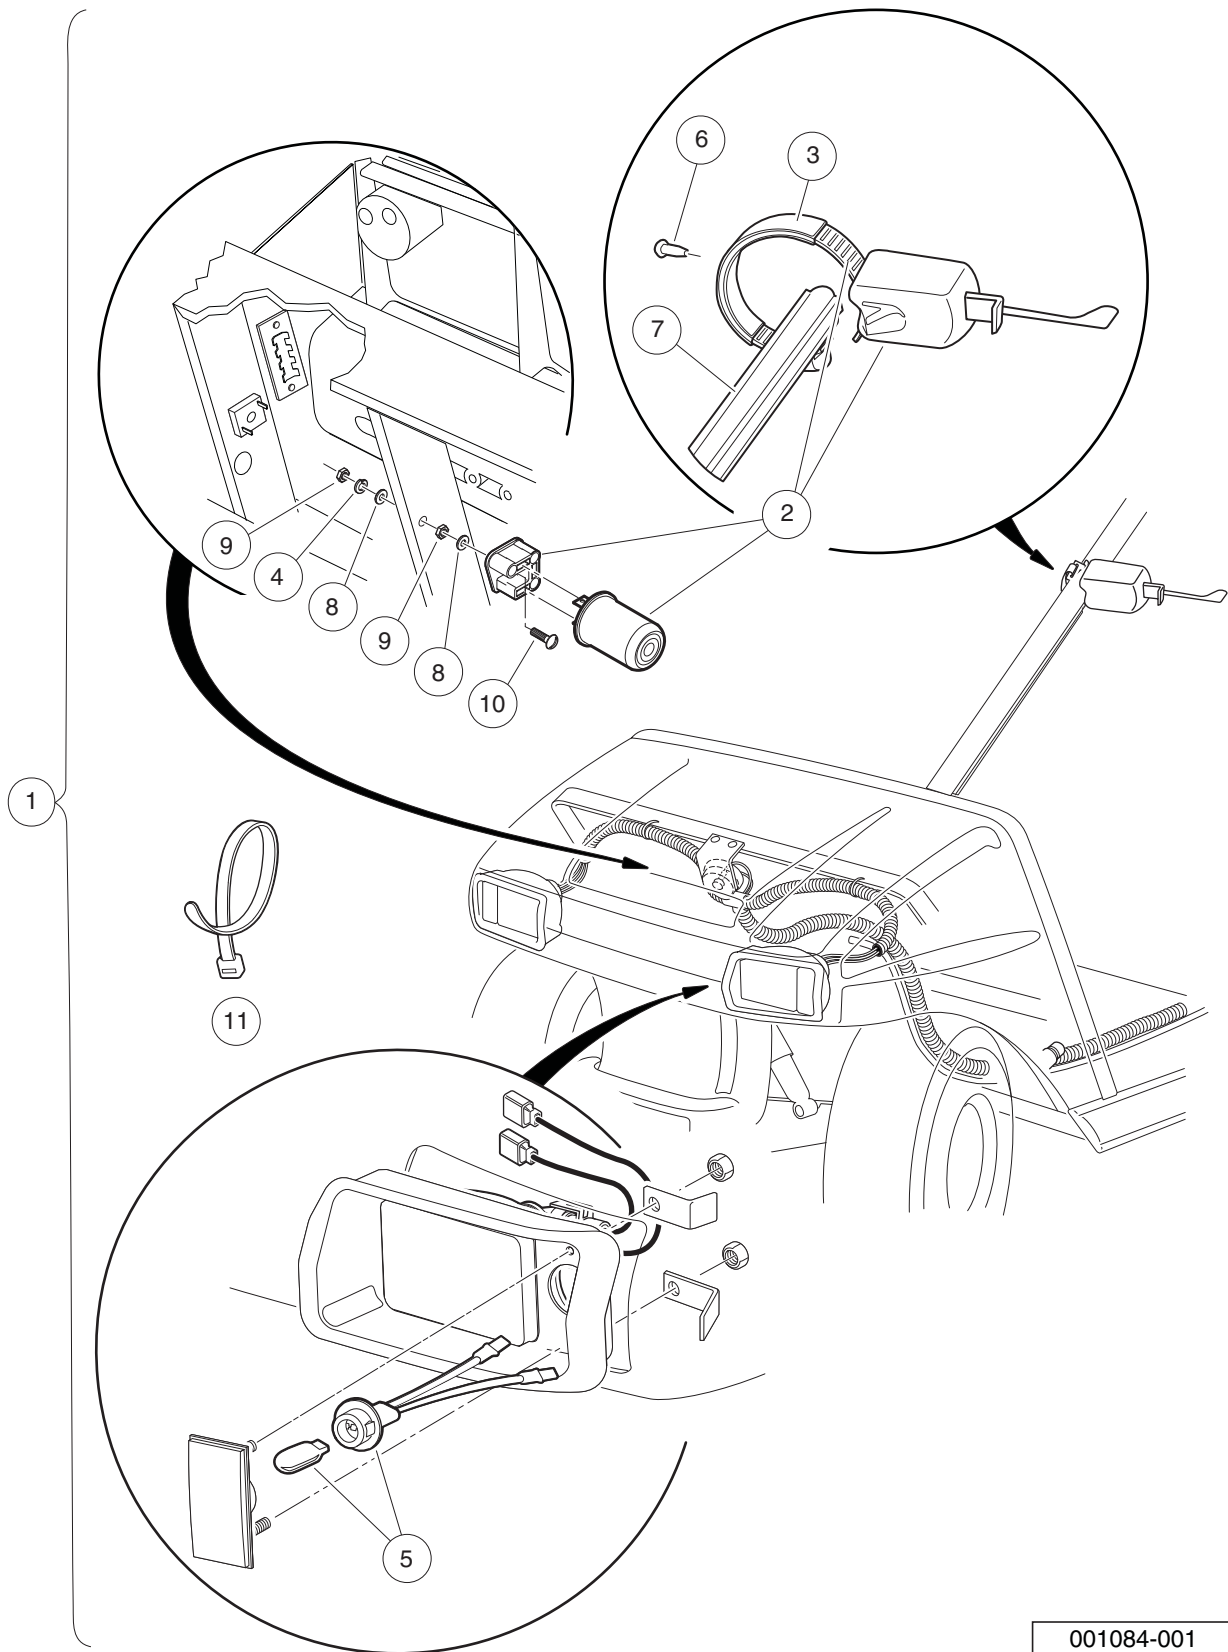

001084-001

TURN SIGNAL KIT – DS AND UTILITY GASOLINE AND ELECTRIC VEHICLES


ITEM	PART NO.	DESCRIPTION	QTY	4 G E
		1 2 3 4		
1	101707402	Turn Signal Conversion Kit (includes items 2 through 11)	1	
2	<u>1011590</u>	Switch Sub-assy, Turn Signal	1	
3	N/A	Strap, Extrusion	1	
4	<u>1016</u>	Lockwasher, #10 Split	1	
5	<u>1017075</u>	Socket & Lamp Assembly	2	
6	<u>1017724</u>	Rivet, Plastic	1	
7	<u>102529201</u>	Wire Cover, Steering Column	1	
8	<u>183</u>	Washer, #10, Type A, Flat	2	
9	<u>7893</u>	Nut, #10-32 Hex	2	
10	8104	Screw, #10-32 X .75 Rd Hd Mach	1	
11	<u>8990</u>	Tie Wrap, 8" Nylon	1	

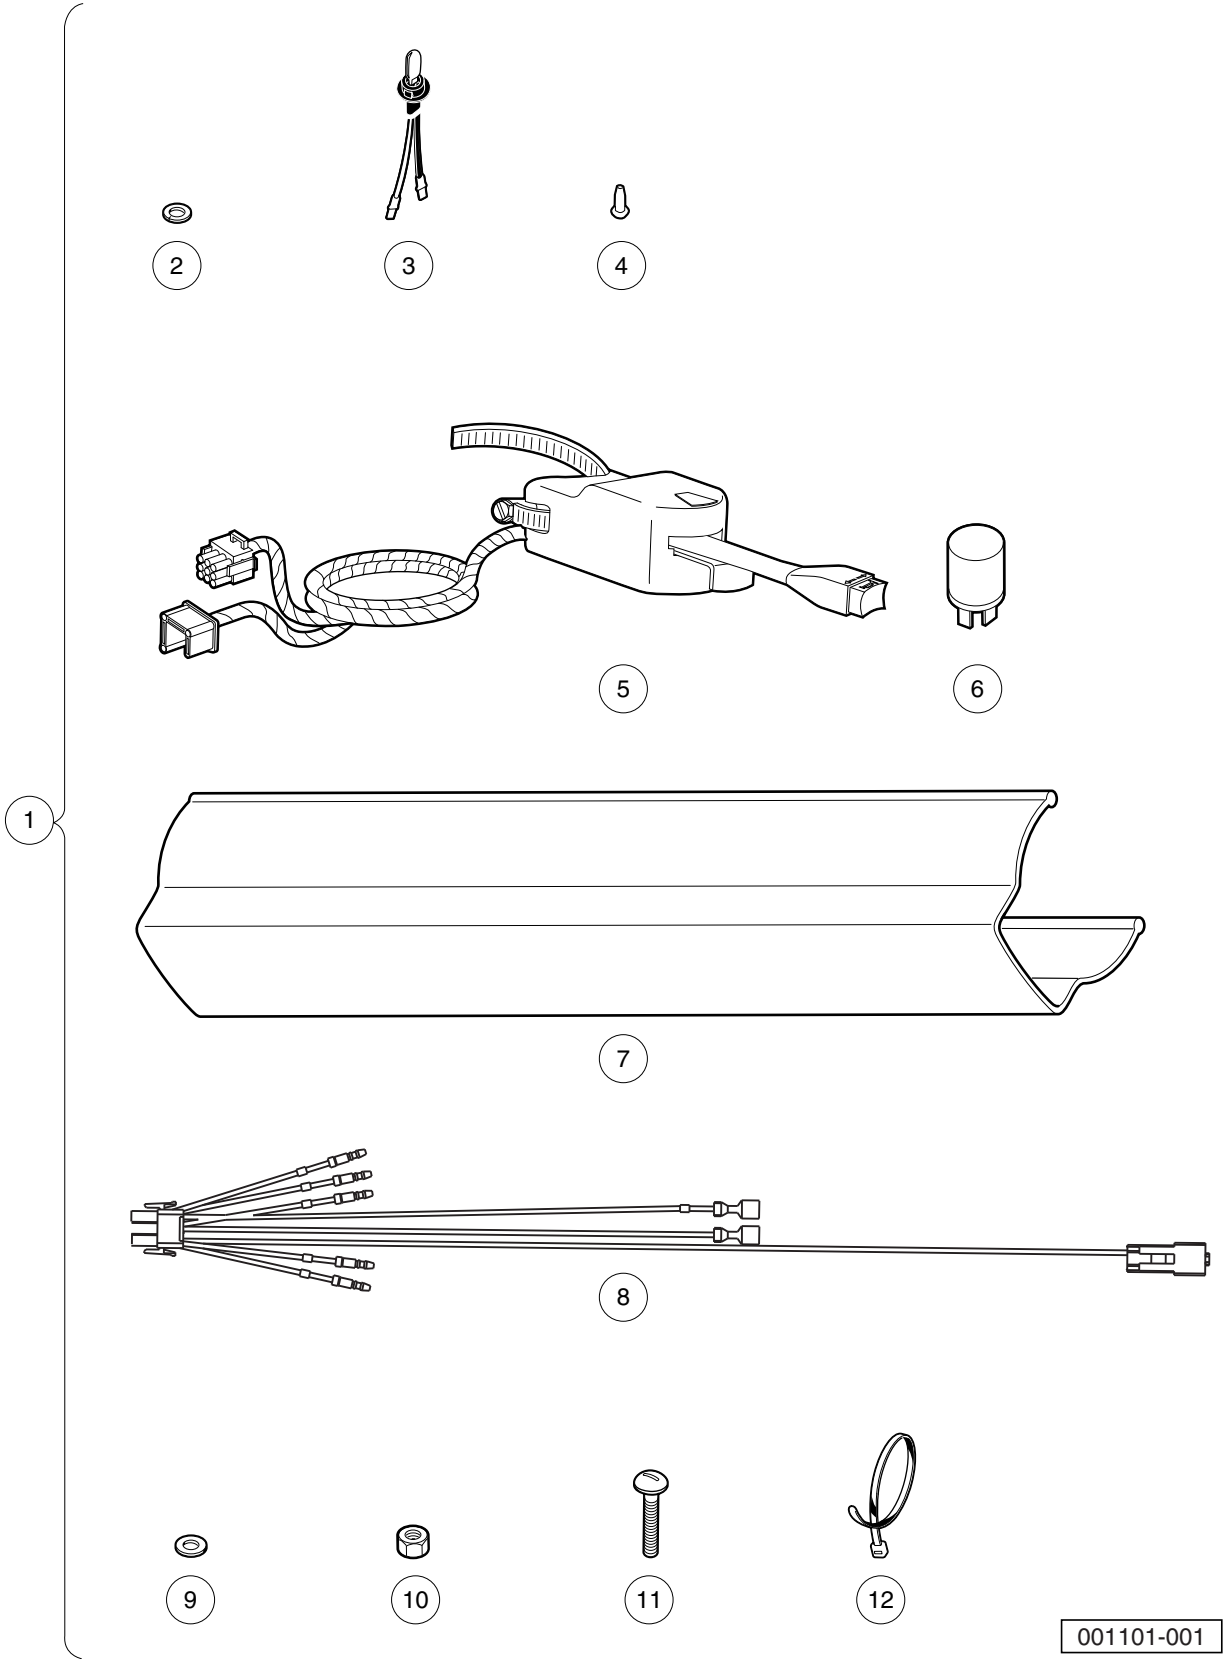

001101-001

TURN SIGNAL (WITH HORN BUTTON) KIT – DS AND UTILITY GAS AND ELECTRIC VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY	4 G E
		1 2 3 4		
1	101707405	Kit, Turn Signal-horn (includes items 2 through 12)	1	
2	<u>1016</u>	Lockwasher, #10 Split	1	
3	<u>1017075</u>	Socket & Lamp Assembly	2	
4	<u>1017724</u>	Rivet, Plastic	1	
5	<u>102517501</u>	Turn Signal Asm (includes item 6)	1	
6	<u>102546401</u>	Flasher Unit, Prec	1	
7	<u>102529201</u>	Wire Cover, Steering Column	1	
8	<u>103618001</u>	Harness, Jumper, Turn Signal	1	
9	<u>183</u>	Washer, #10, Type A, Flat	2	
10	<u>7893</u>	Nut, #10-32 Hex	2	
11	8104	Screw, #10-32 X .75 Rd Hd Mach	1	
12	<u>8990</u>	Tie Wrap, 8" Nylon	1	

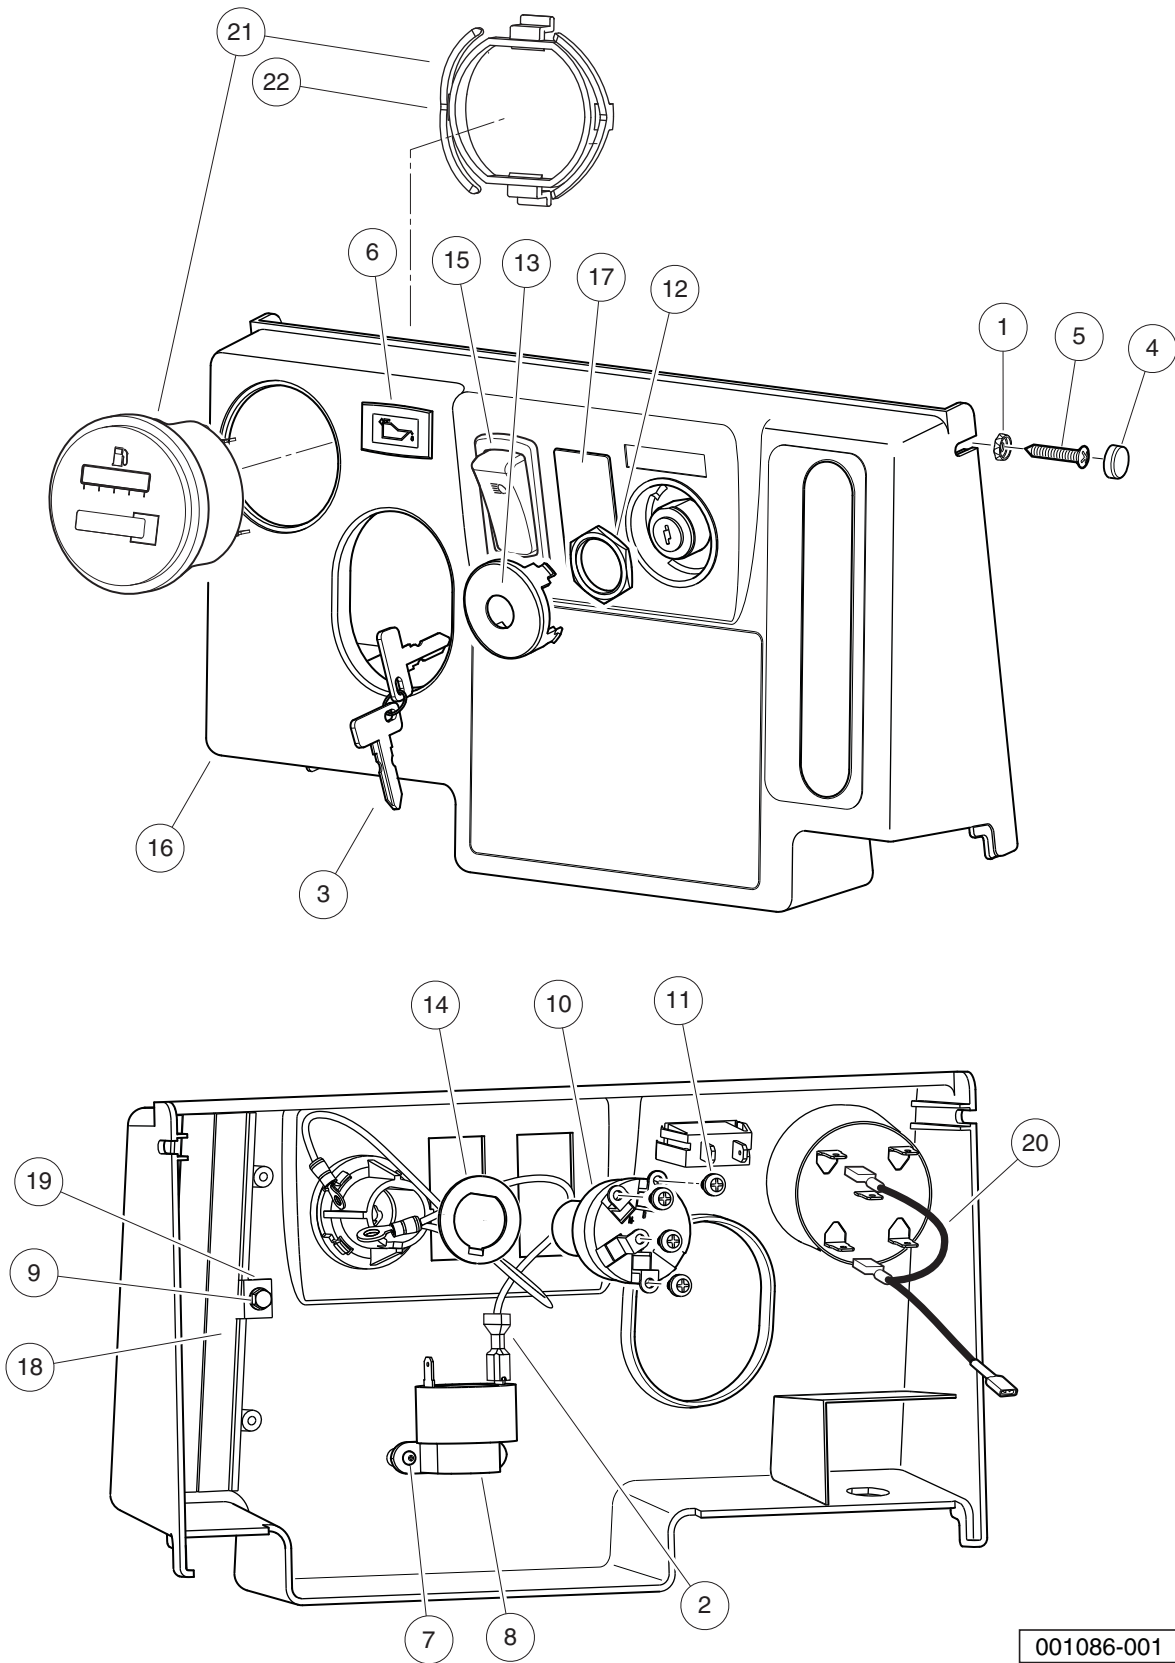

001086-001


INSTRUMENT PANEL AND ELECTRICAL COMPONENTS – CA6/ VILL 6 & 8 GAS

ITEM	PART NO.	DESCRIPTION	QTY	4 G E
		1 2 3 4		
1	1011382	Washer, #10 Pan-Head Screw	2	
2	1012396	Wire Assy #18 Black	1	
3	<u>1012505</u>	Keys (set of 2)	1	
4	<u>1013494</u>	Cover, Screw Head	2	
5	<u>1015528</u>	Screw, #10 x 1-1/4 Phillips Head	2	
6	<u>1016630</u>	Light, Oil	1	
7	<u>1016849</u>	Screw, #4-24 X 0.33, Pan-Head, Machine	2	
8	<u>1016851</u>	Buzzer, Reverse (9-48 VDC)	1	
9	<u>101804301</u>	Screw, #8 X 0.500, Hex-Head Hi-Lo	2	
10	101826401	Key Switch, 12-Volt, Off/On/Start	1	
11	101830601	Screw and Washer Assembly	5	
12	<u>101830701</u>	Nut, Key Switch	1	
13	<u>101834502</u>	Cap, Black Key Switch	1	
14	<u>101851101</u>	Washer, Key Switch	1	
15	<u>102869401</u>	Switch, Rocker, Light	1	
16	<u>102977001</u>	Panel, Dash, Center, Gas (Instrument Panel)	1	
17	<u>103180101</u>	Cover, Hole, Switch, Rocker	1	
18	<u>103199001</u>	Brush, Closeout, FNR	2	
19	<u>103199101</u>	Washer, Retaining, Brush, FNR	2	
20	<u>103348501</u>	Asm, Wire Meter, F-h Jumper	1	
21	<u>103348601</u>	Gauge, Fuel-hour,sep Gnd,utl (includes item 22)	1	
22	<u>103348201</u>	Clip, Meter, Round	1	

4

G

E

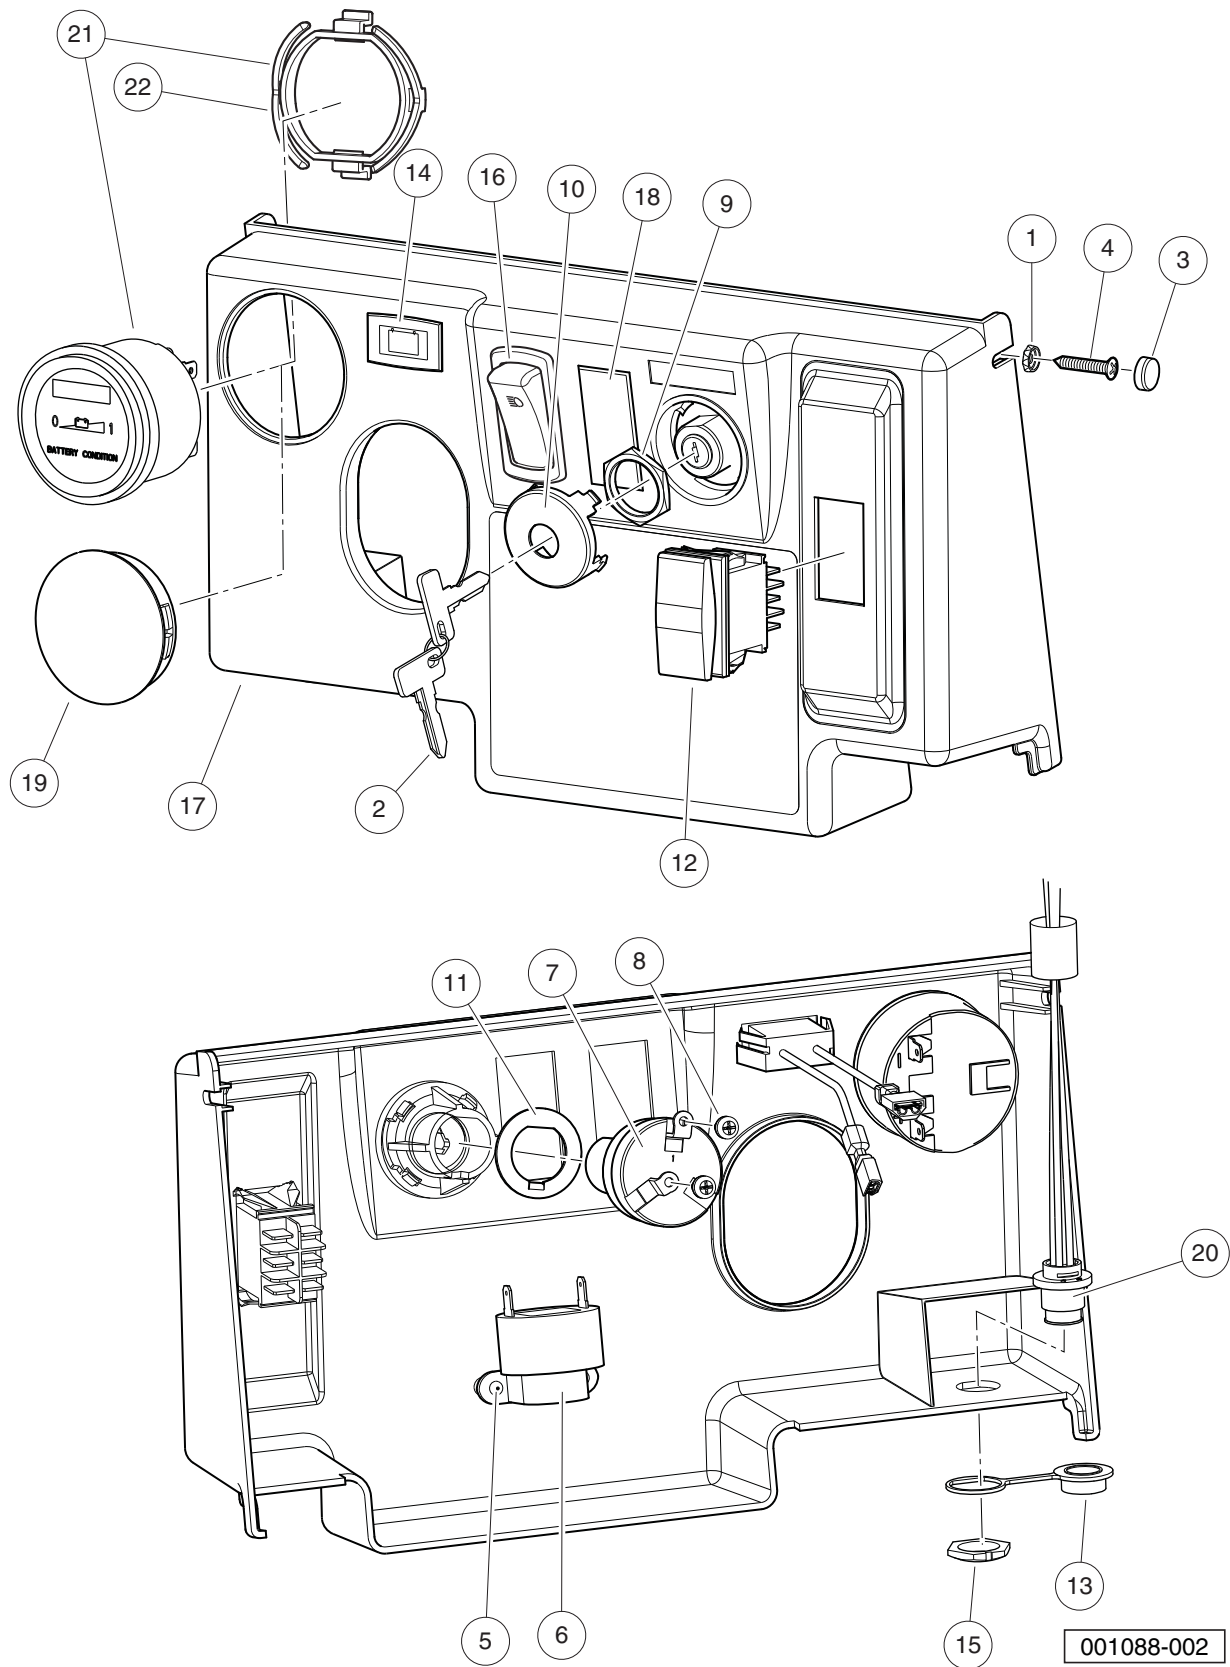

INSTRUMENT PANEL WITH ELECTRICAL COMPONENTS – CA6/ VILL 6/8 ELEC. W/LESTER CHARGER


ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1011382	Washer, #10 Pan-Head Screw	2
2	<u>1012505</u>	Keys (set of 2)	1
3	<u>1013494</u>	Cover, Screw Head	2
4	<u>1015528</u>	Screw, #10 x 1-1/4 Phillips Head	2
5	<u>1016849</u>	Screw, #4-24 X 0.33, Pan-Head, Machine	2
6	<u>1016851</u>	Buzzer, Reverse (9-48 VDC)	1
7	<u>101826201</u>	Key Switch, On/Off	1
8	101830601	Screw and Washer Assembly	2
9	<u>101830701</u>	Nut, Key Switch	1
10	<u>101834502</u>	Cap, Black Key Switch	1
11	<u>101851101</u>	Washer, Key Switch	1
12	<u>101856002</u>	Switch, Rocker, Single-Pole	1
13	<u>102196901</u>	Dust Cap	1
14	<u>102508701</u>	Light, Battery	1
15	<u>102572401</u>	Nut, Diagnostic Port, Prec	1
16	<u>102869401</u>	Switch, Rocker, Light	1
17	<u>102977002</u>	Panel, Dash, Center, Elec (Instrument Panel)	1
18	<u>103180101</u>	Cover, Hole, Switch, Rocker	1
19	<u>103198301</u>	Plug, Hole, Round, 2.0 In	1
20	<u>103218601</u>	Harness, Diagnostic Port	1
21	<u>103354401</u>	Gauge, Battery Cond Ind, Rnd (includes item 22)	1
22	<u>103348202</u>	Clip, Bci, Round	1

4
G
E

4

G

E

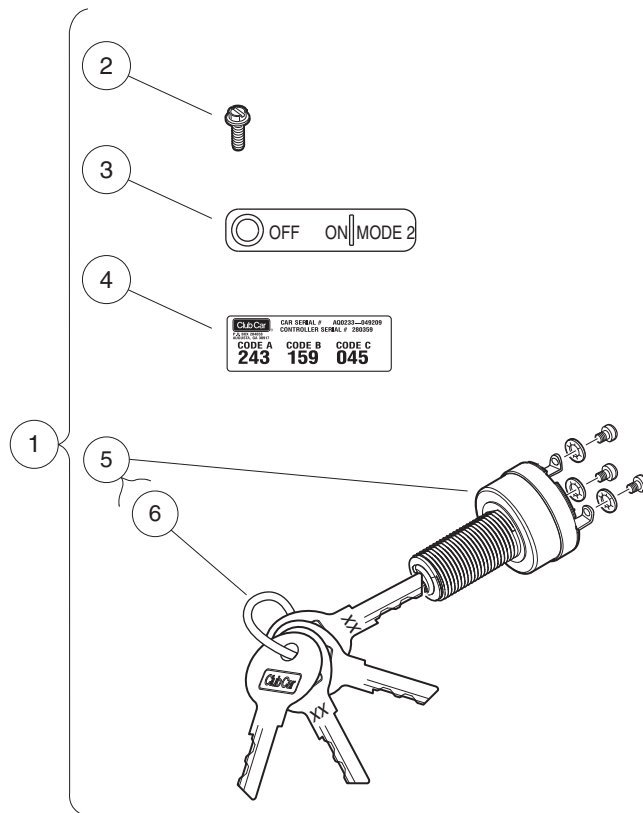

001212-001


KEYS AND KEYSWITCHES, SMARTKEY KIT – ELECTRIC VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY	4 G E
		1 2 3 4		
1	<u>102962602</u>	Kit, Field, Smartkey (includes items 2 through 5)	1	
2	<u>1011017</u>	Screw, #8-32 X 0.375	1	
3	<u>101825103</u>	Decal, Keyswitch, Iq Plus Mode	1	
4	N/A	Decal, Passcode	1	
5	<u>102950301</u>	Key Switch, Mode B, Iq Plus (includes item 6)	1	
6	<u>102962303</u>	Keys, Set Of 4, Iq Plus Mode	1	
Note: Not available in the EU.				

4

G


E

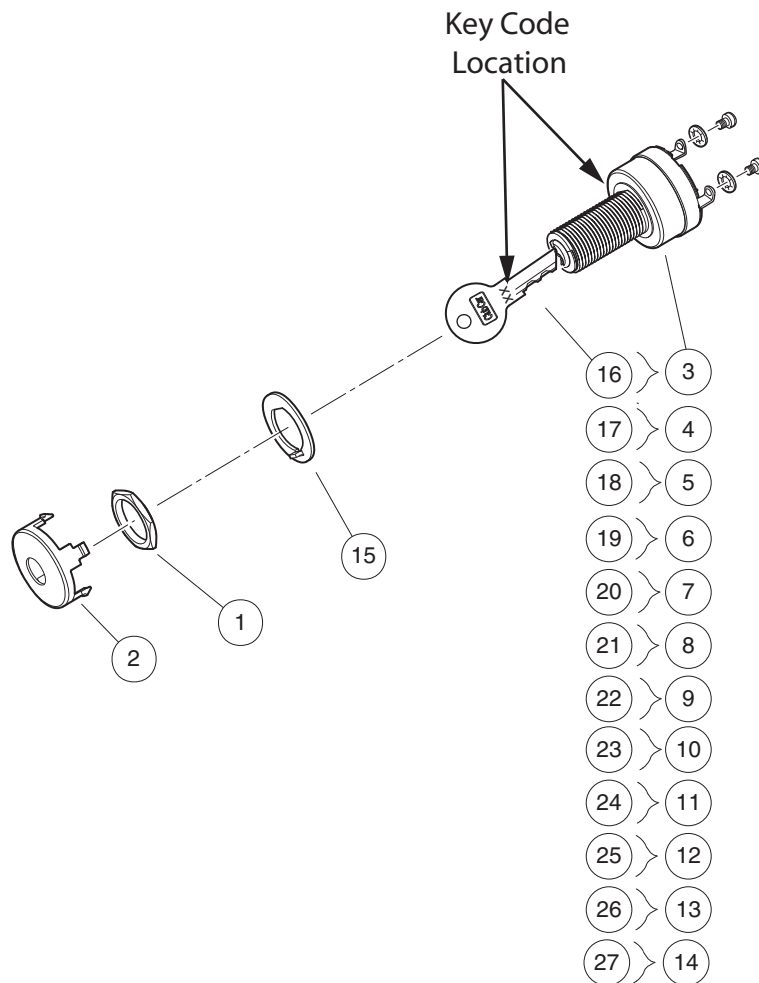

001089-001

KEYS AND KEYSWITCHES, UNCOMMON – GAS VEHICLE


ITEM	PART NO.	DESCRIPTION	QTY	4 G E
		1 2 3 4		
1	<u>101830701</u>	Nut, Key Switch	1	
2	<u>101834502</u>	Cap, Black Key Switch	1	
3	<u>101839801</u>	Keyswtch Uncom A408 On/off/st	1	
4	<u>101839802</u>	Keyswtch Uncom B408 On/off/st	1	
5	<u>101839803</u>	Keyswtch Uncom C408 On/off/st	1	
6	<u>101839804</u>	Keyswtch Uncom D408 On/off/st	1	
7	<u>101839805</u>	Keyswtch Uncom 2a408 On/off/st	1	
8	<u>101839806</u>	Keyswtch Uncom 2b408 On/off/st	1	
9	<u>101839807</u>	Keyswtch Uncom 2c408 On/off/st	1	
10	<u>101839808</u>	Keyswtch Uncom 2d408 On/off/st	1	
11	<u>101839809</u>	Keyswtch Uncom E408 On/off/st	1	
12	<u>101839810</u>	Keyswtch Uncom F408 On/off/st	1	
13	<u>101839811</u>	Keyswtch Uncom 2e408 On/off/st	1	
14	<u>101839812</u>	Keyswtch Uncom 2f408 On/off/st	1	
15	<u>101851101</u>	Washer, Key Switch	1	
16	<u>101974701</u>	Key, Uncommon 1a	1	
17	<u>101974702</u>	Key, Uncommon 1b	1	
18	<u>101974703</u>	Key, Uncommon 1c	1	
19	<u>101974704</u>	Key, Uncommon 1d	1	
20	<u>101974705</u>	Key, Uncommon 2a	1	
21	<u>101974706</u>	Key, Uncommon 2b	1	
22	<u>101974707</u>	Key, Uncommon 2c	1	
23	<u>101974708</u>	Key, Uncommon 2d	1	
24	<u>101974709</u>	Key, Uncommon 1e	1	
25	<u>101974710</u>	Key, Uncommon 1f	1	
26	<u>101974711</u>	Key, Uncommon 2e	1	
27	<u>101974712</u>	Key, Uncommon 2f	1	
Note: Keyswitches <u>101839801</u> through <u>101839812</u> are for key-start, gasoline vehicles ONLY.				

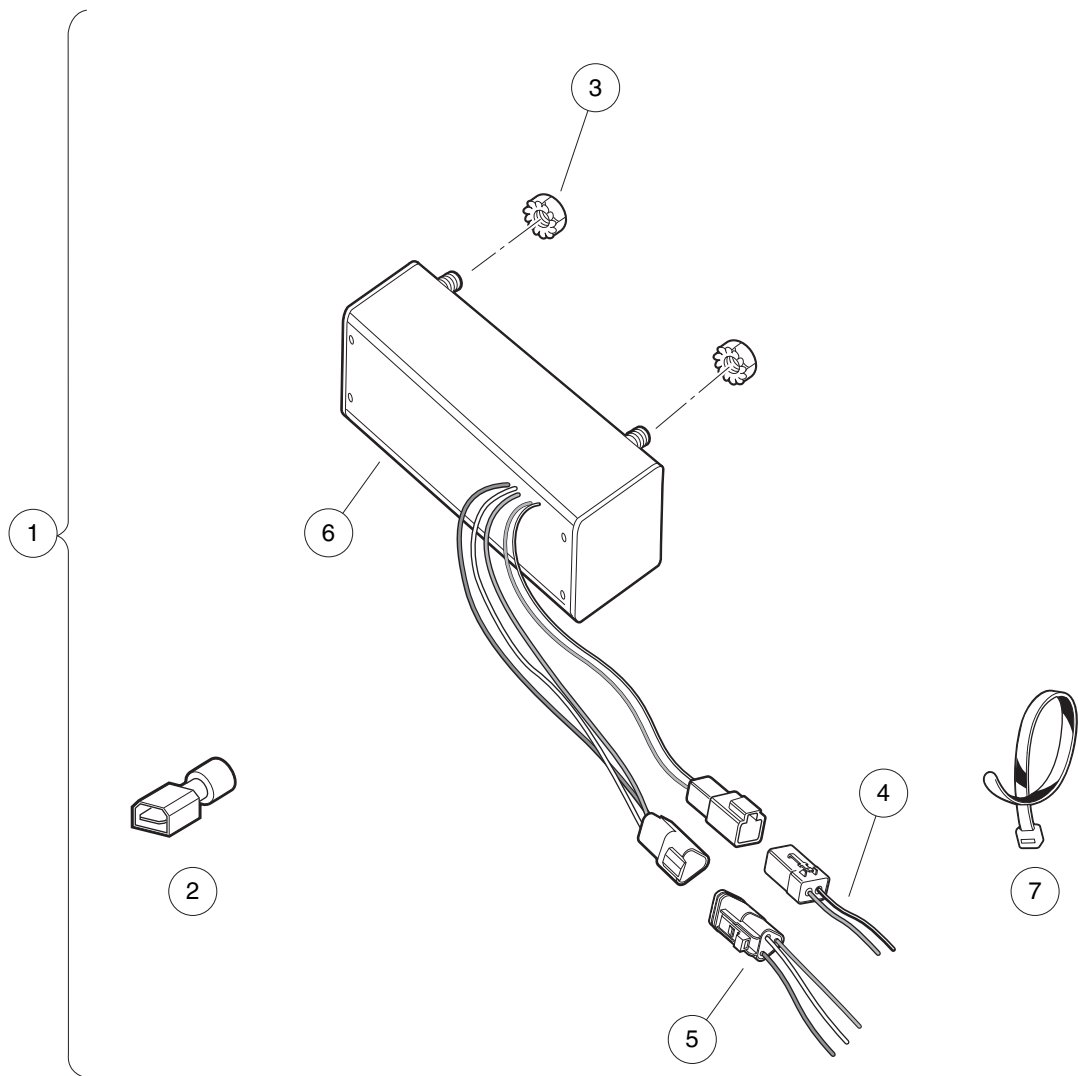

001090-002

DC CONVERTER (ISOLATED) – ELECTRIC VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY	4 G E
		1 2 3 4		
1	<u>102918701</u>	Kit, DC/DC Converter, IQ Plus (includes items 2 through 7)	1	
2	<u>1016365</u>	Terminal, 1/4" Male Quick Disconnect	1	
3	<u>101835601</u>	Locknut, 1/4-20 Hex Whiz	2	
4	<u>102354901</u>	Harness, Dc Converter - 12v	1	
5	<u>102890201</u>	Harness, Dc Converter, 48v	1	
6	<u>103700301</u>	Converter, Dc/dc, Isoltd	1	
7	<u>8990</u>	Tie Wrap, 8" Nylon	10	

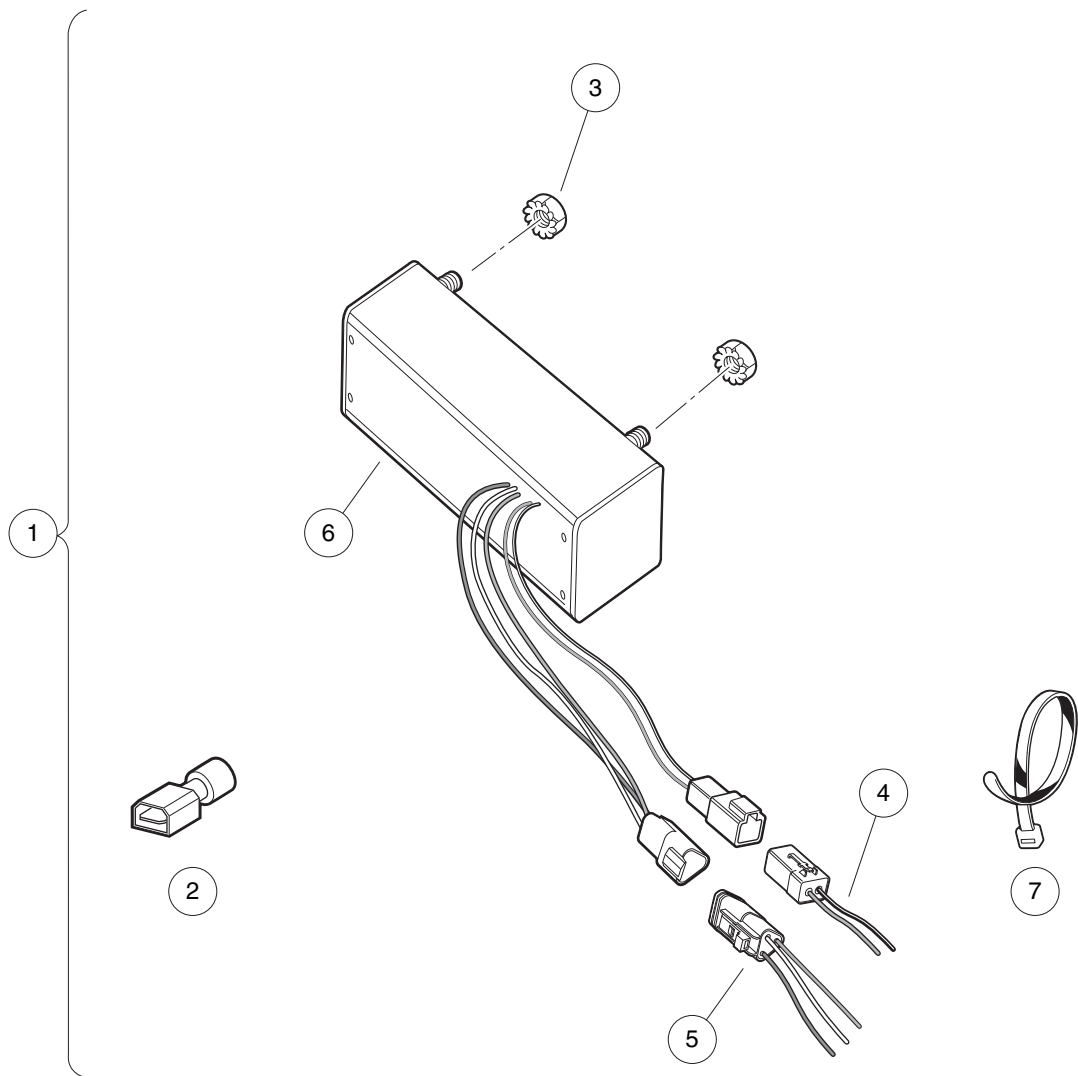

001090-002


DC CONVERTER (ISOLATED) – CE ELECTRIC VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY	4 G E
		1 2 3 4		
1	<u>102918702</u>	Kit, Dc Conv. Iq Plus Ce (includes items 2 through 7)	1	
2	<u>1016365</u>	Terminal, 1/4" Male Quick Disconnect	1	
3	<u>101835601</u>	Locknut, 1/4-20 Hex Whiz	2	
4	<u>102354901</u>	Harness, Dc Converter - 12v	1	
5	<u>102890201</u>	Harness, Dc Converter, 48v	1	
6	<u>103802401</u>	Converter, Dc/dc, Ce	1	
7	<u>8990</u>	Tie Wrap, 8" Nylon	10	

4

G


E

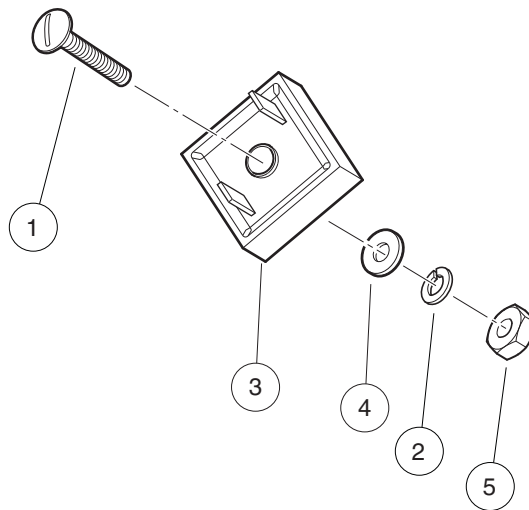

001091-001

VOLTAGE LIMITER – GASOLINE VEHICLE


ITEM	PART NO.	DESCRIPTION	QTY	4
		1 2 3 4		G
1	<u>1010909</u>	Screw, #10-32 X 1.25 Rd Hd Mch	1	E
2	<u>1016</u>	Lockwasher, #10 Split	1	
3	<u>1017721</u>	Limiter, Voltage	1	
4	<u>183</u>	Washer, #10, Type A, Flat	1	
5	<u>7893</u>	Nut, #10-32 Hex	1	

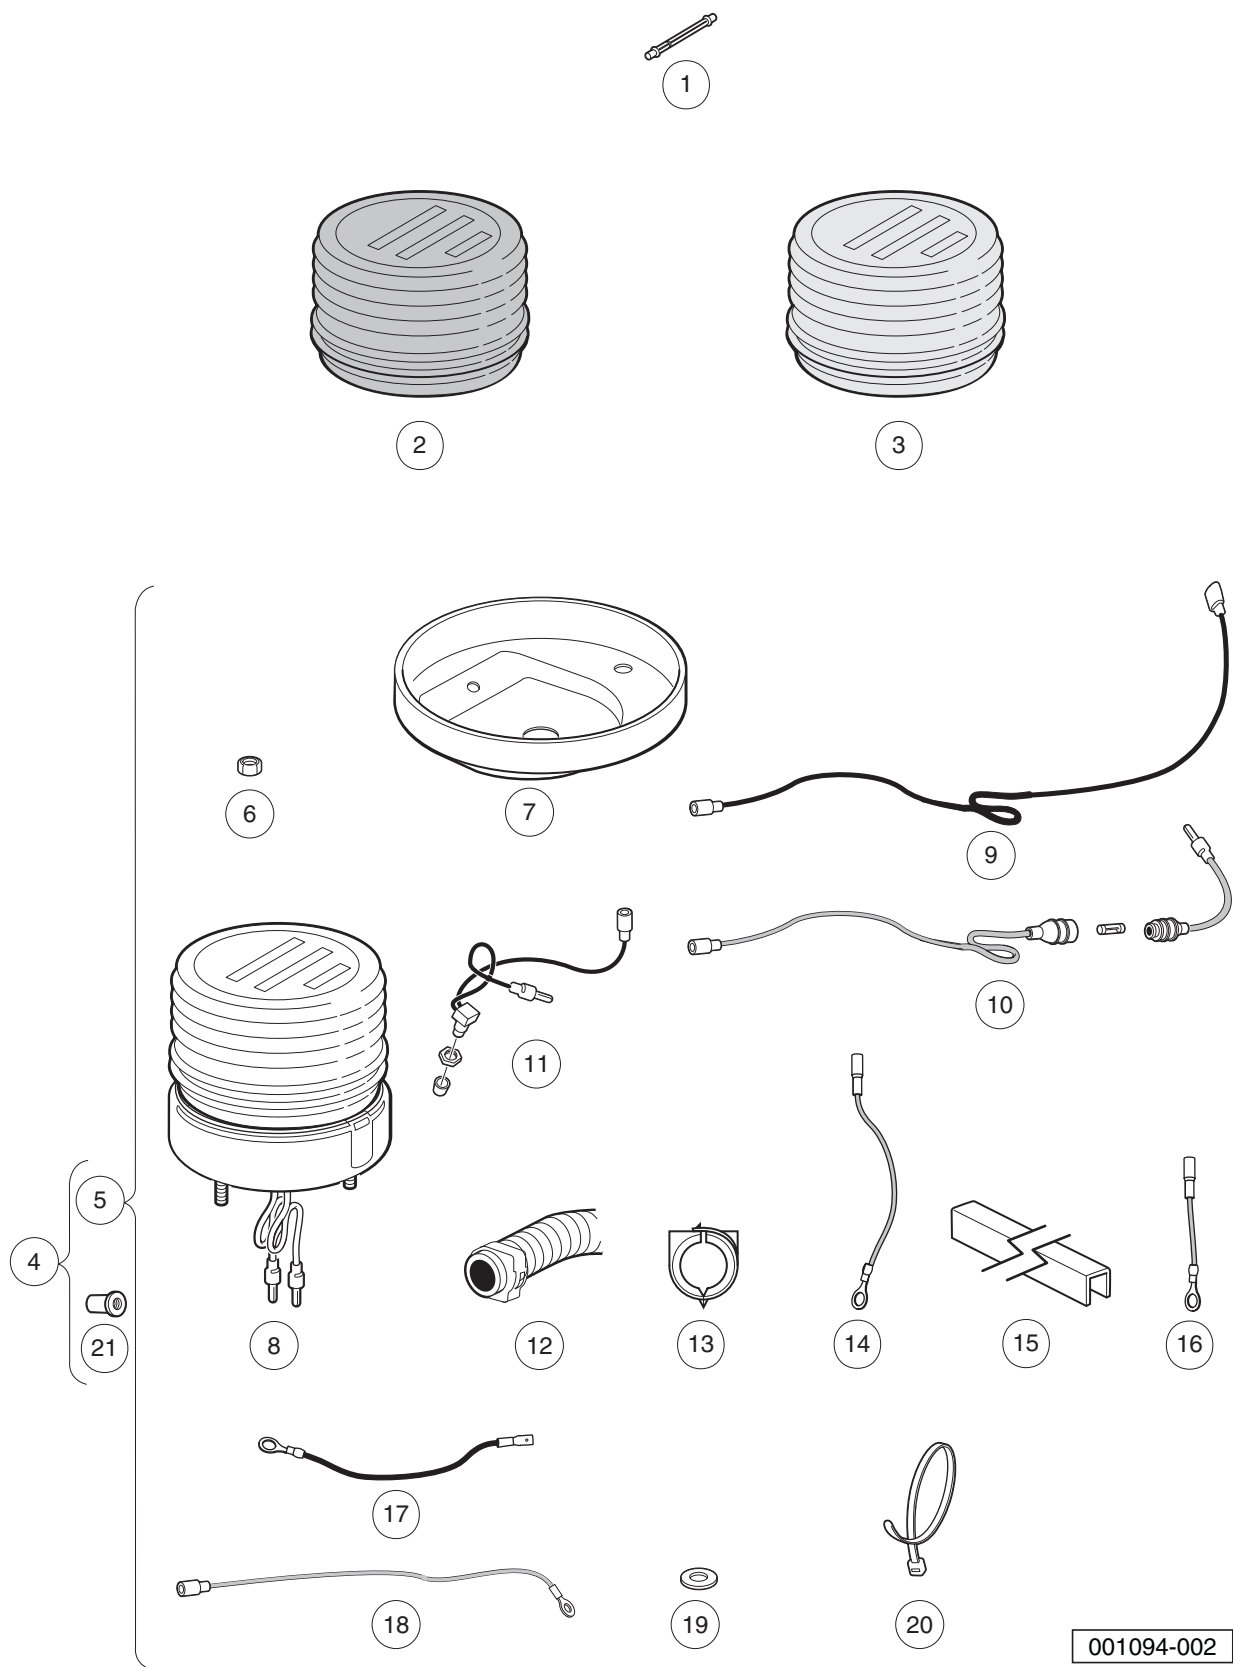

001094-002

STROBE LIGHT, ROOF-MOUNTED


ITEM	PART NO.	DESCRIPTION	QTY	4
		1 2 3 4		G
1	<u>1015526</u>	Bulb, Replacement, for Strobe Light	1	E
2	<u>AM1243701</u>	Lens, Blue, for Strobe Light	A/R	
3	<u>AM1243801</u>	Lens, Red, for Strobe Light	A/R	
4	<u>SVP119201</u>	Light, Roof-Mounted Strobe, Field (includes items 5 through 21)	A/R	
5	<u>AM1243501</u>	Kit, Roof Mounted Strobe Fd (includes items 6 through 20)	1	
6	<u>1012438</u>	Locknut, #10-24 Nylon Insert	2	
7	<u>1015010</u>	Cover Plate Switch	1	
8	<u>1015156</u>	Light Assembly, Strobe	1	
9	<u>1015167</u>	#16 Black Wire Asm	1	
10	<u>1015170</u>	Wire Assembly #16	1	
11	<u>1015187</u>	Switch Assembly	1	
12	<u>1015768</u>	Split Convoluted Elec Conduit	11	
13	<u>1015770</u>	Outlet Ring - .5 Diameter	5	
14	<u>1016230</u>	Wire Asm #16 Red	1	
15	<u>1016267</u>	Snap On Conduit Vert.	1	
16	<u>1016287</u>	Wire Asm #16 Red	1	
17	<u>1016929</u>	Wire Assembly Black #16	1	
18	<u>101821601</u>	#18 Red Wire Assembly	1	
19	<u>183</u>	Washer, #10, Type A, Flat	2	
20	<u>8639</u>	Tie Wrap, 11" Nylon	8	
21	<u>SVP493201</u>	Well Nut, 10-32	3	

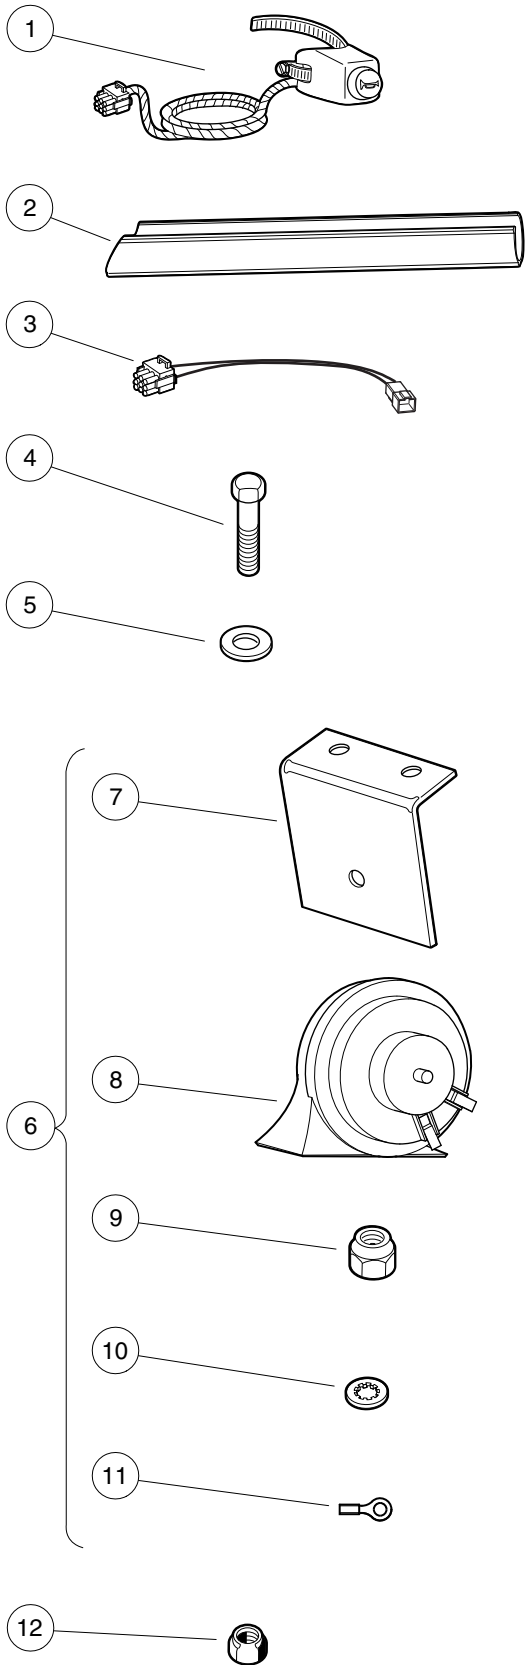

001095-002

HORN WITH COLUMN-MOUNTED BUTTON


ITEM	PART NO.	DESCRIPTION	QTY	4
		1 2 3 4		G
1	102517601	Subasm, Horn Button Harness	1	E
2	<u>102529203</u>	Wire Cover-steer Column 304 Mm	1	
3	<u>103618101</u>	Harness, Jumper, Horn	1	
4	304	Screw, 1/4-20 X 1.0 Hex-Head Cap	2	
5	<u>332</u>	Washer, 1/4 Type A Narrow Flat	2	
6	<u>4029</u>	Horn (includes items 7 through 11)	1	
7	<u>1011825</u>	Horn Bracket	1	
8	<u>1014530</u>	Horn, 12-VDC	1	
9	<u>101955101</u>	Nut, M6 Hex	1	
10	<u>7820</u>	Washer, 5/16 Internal-Tooth	1	
11	8294	5/16 Ring Term.	1	
12	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	2	

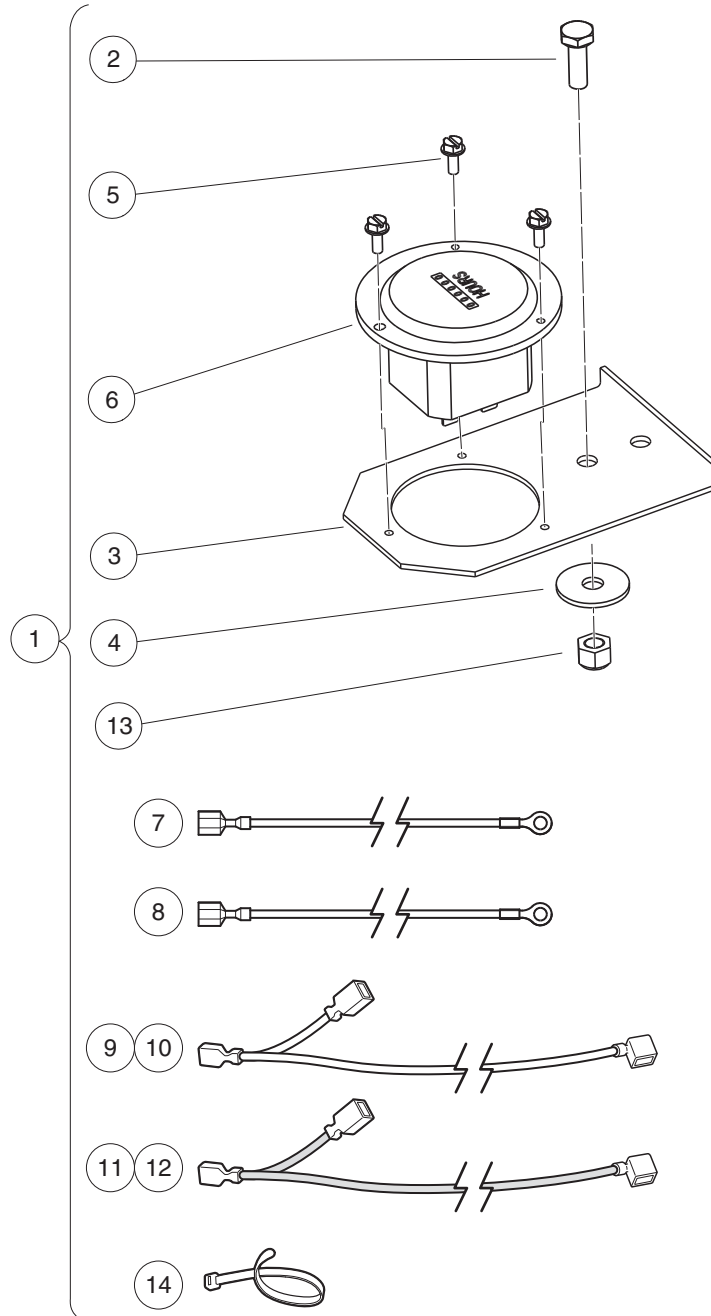

001096-001

HOUR METER – IQ SYSTEM AND IQ PLUS ELECTRIC VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY	4 G E
		1 2 3 4		
1	<u>1013579</u>	Kit, Hour Meter (includes items 2 through 14)	1	
2	<u>1012285</u>	Screw, 1/4 X 0.625 Hex-Head	1	
3	<u>1013547</u>	Hour Meter Bracket	1	
4	<u>1014306</u>	Washer, 1/4" Type B Flat	1	
5	<u>1014540</u>	Screw, #6-32 X 3/8 Taptite	3	
6	N/A	Hour Meter	1	
7	101881501	Wire Assembly Black #18	1	
8	101881601	Wire Assembly Red #18	1	
9	<u>101997802</u>	Wire Assembly #18 Yellow	1	
10	<u>101997803</u>	Wire Asm #18 Yellow 31"	1	
11	<u>101997902</u>	Wire Assembly #18 Red	1	
12	<u>101997903</u>	Wire Asm # 18 Red 31"	1	
13	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	1	
14	<u>8990</u>	Tie Wrap, 8" Nylon	1	
Note: The kit includes components that apply to multiple vehicles. The installation instructions will specify which components are required for a specific model. After installation, discard components not used.				

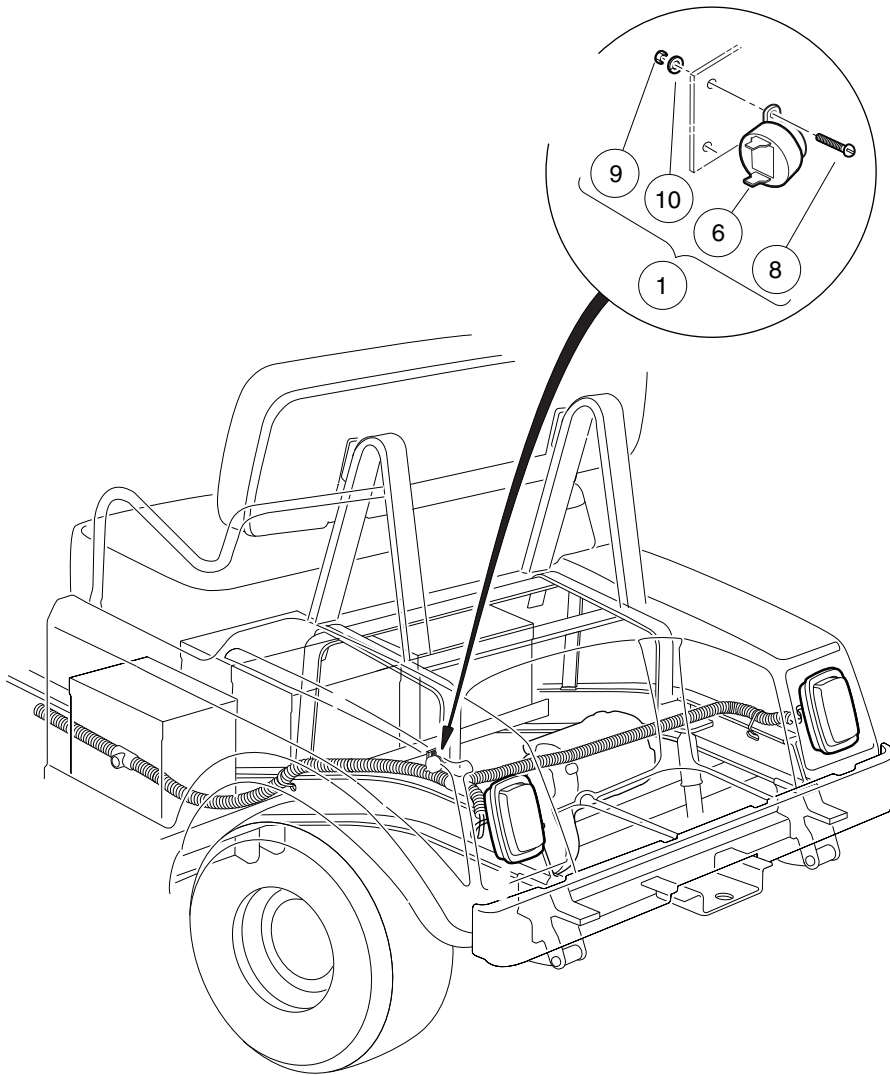

000433-001


REAR REVERSE BUZZER

ITEM	PART NO.	DESCRIPTION	QTY	4 G E
		1 2 3 4		
1	<u>1016859</u>	Kit, Reverse Buzzer (includes items 2 through 10)	1	
2	<u>1011229</u>	Locknut, #6-32 Whiz	1	
3	<u>1012431</u>	Washer, #4 Flat	2	
4	<u>1015720</u>	Screw, #6-32 X 1/2 Hex Washer-Head	1	
5	<u>1016849</u>	Screw, #4-24 X 0.33, Pan-Head, Machine	2	
6	<u>1016851</u>	Buzzer, Reverse (9-48 VDC)	1	
7	<u>1016857</u>	Wire Assembly Black #18	1	
8	<u>8056</u>	Screw, #4-40 X 0.75 Round-Head Machine	2	
9	<u>8057</u>	Nut, #4-40 Hex Machine	2	
10	<u>8058</u>	Lockwasher, #4 Split	2	
Note: Note: Items 2 through 5 and 7 are included in the kit, but are not used in this application.				

4

G

E

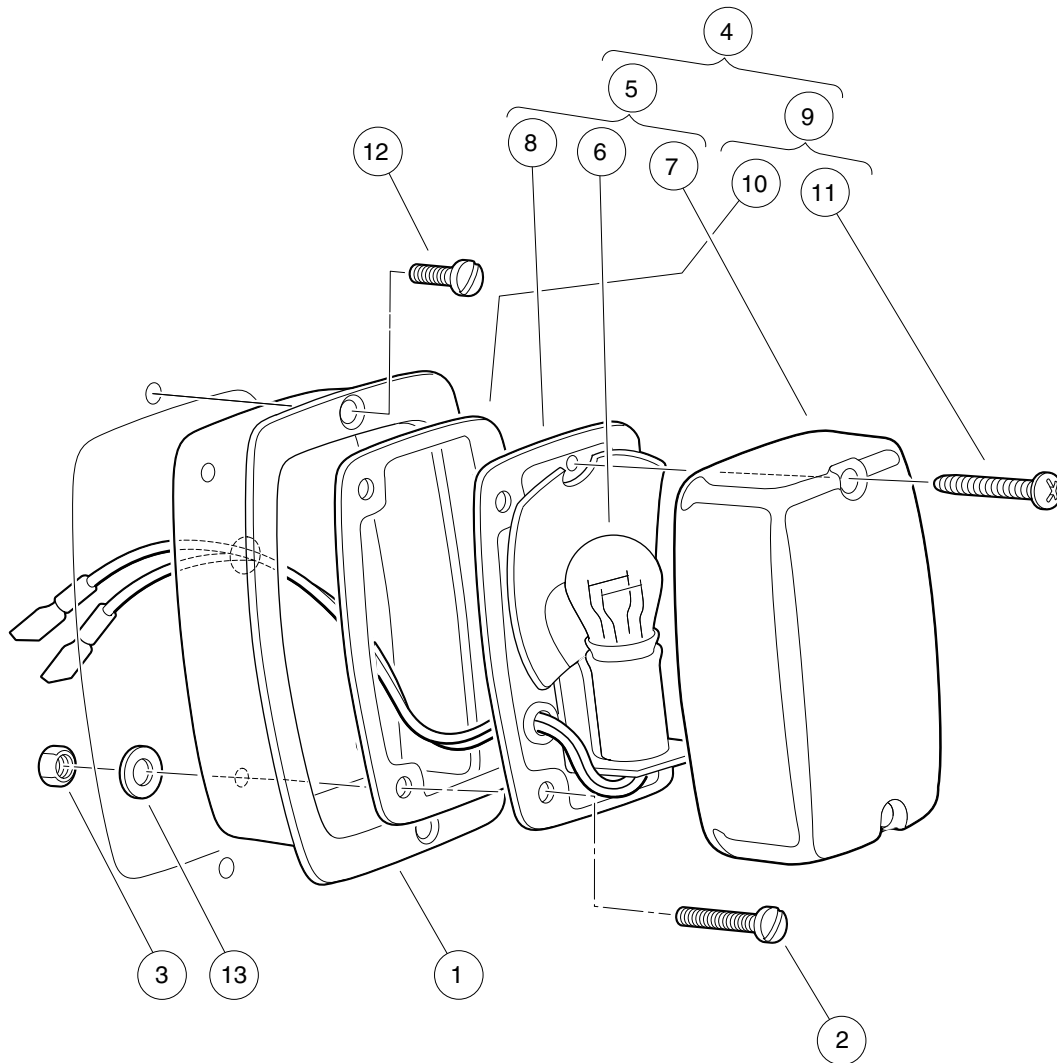

000348-006

TAIL LIGHTS

ITEM	PART NO.	DESCRIPTION	QTY	4
		1 2 3 4		G
1	<u>1011497</u>	Bezel, Taillight	1	E
2	<u>1011557</u>	Screw, #6-32 X 1.00 Hex-Head Machine	1	
3	<u>1011558</u>	Nut, #6-32 Hex	1	
4	1017035	Taillight Assembly (includes items 5 through 9)	1	
5	N/A	Light, Tail (includes items 6 through 8)	1	
6	<u>1011582</u>	Taillight Bulb	1	
7	<u>1011843</u>	Taillight Lens	1	
8	N/A	Base, Taillight	1	
9	<u>1017699</u>	Hardware Kit, Tail Light (includes items 10 and 11)	1	
10	N/A	Gasket	1	
11	N/A	Screw, Tapered	2	
12	<u>102915601</u>	Plastic Rivet - Tuflock	1	
13	<u>7591</u>	Washer, #6, Flat	1	

4

G


E

BRAKES, PEDALS, AND CABLES

5

G


E

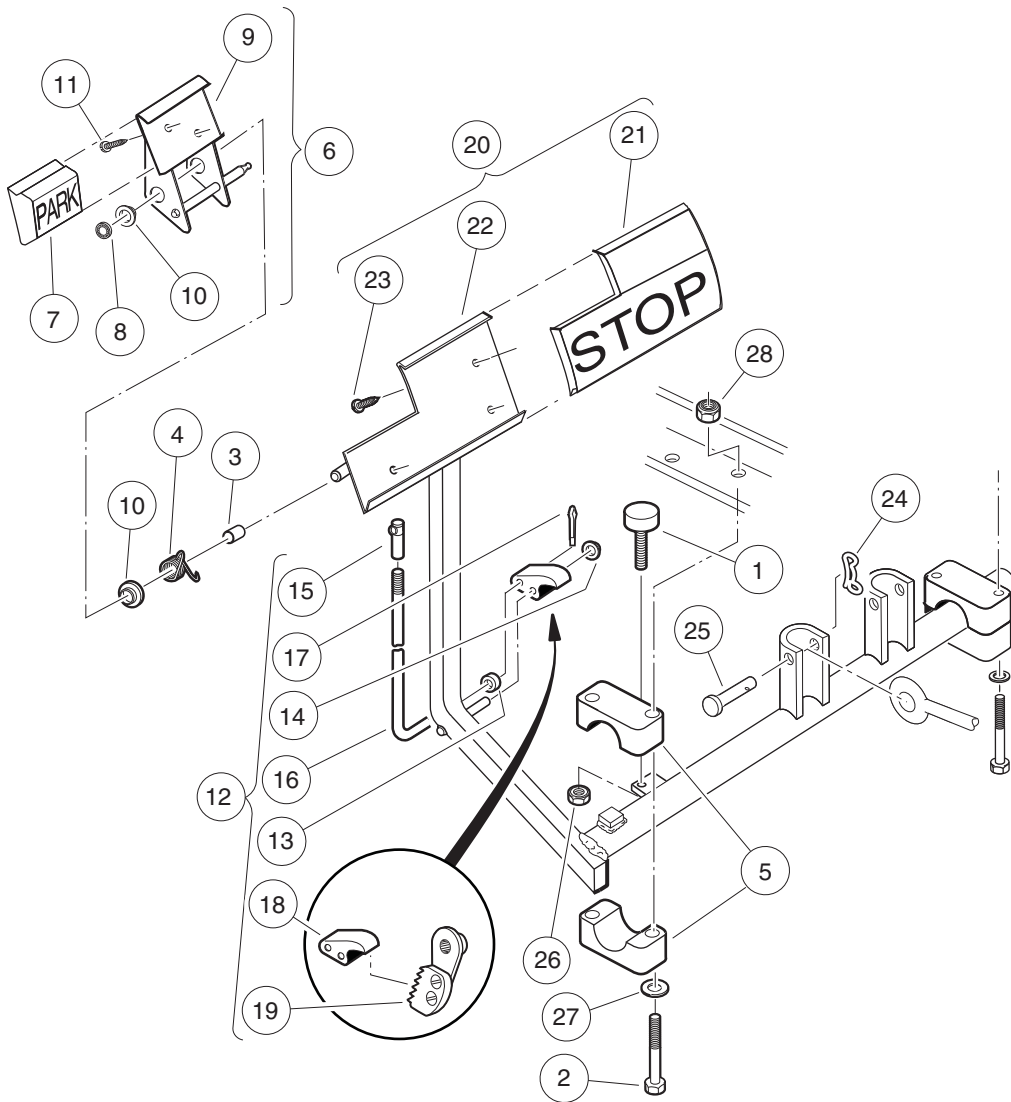

000187-001

BRAKE PEDAL ASSEMBLY

ITEM	PART NO.	DESCRIPTION	QTY	5 G E
		1 2 3 4		
1	<u>1010878</u>	Bumper, Rubber	1	
2	<u>1010921</u>	Screw, 5/16-18 X 2.50 Hex Cap	4	
3	<u>1010927</u>	Hill Brake Spacer	1	
4	<u>1010933</u>	Spring, Hill Brake Torsion	1	
5	<u>1011402</u>	Package, Brake Mounting Block	1	
6	<u>1011418</u>	Kit, Hill Brake Pedal (includes items 7 through 11)	1	
7	<u>1013870</u>	Pad, Hill Brake	1	
8	<u>1013876</u>	Pushnut, 3/8	1	
9	N/A	Hill Brake Weld Assembly	1	
10	<u>1032</u>	Bushing, Nylon	2	
11	7716	Screw, #10-16 Type AB, Sheet Metal	2	
12	<u>101187702</u>	Kit, Hill Brake Latch (includes items 13 through 19)	1	
13	<u>1010805</u>	Sleeve, Hill Brake Rod	1	
14	<u>1010877</u>	Pushnut, 3/8	1	
15	1010932	Ball Joint, 1/4-28	1	
16	N/A	Rod, Hill Brake	1	
17	<u>1017029</u>	Pin, Cotter, 7/64 x 1/2 Stainless-Steel	1	
18	N/A	Pawl, Hill Brake	1	
19	101918501	Ratchet Assembly	1	
20	<u>101878201</u>	Brake Pedal Kit (includes items 21 through 23)	1	
21	<u>1013869</u>	Pad, Brake Pedal	1	
22	N/A	Weldment, Brake Pedal, 2wr Std	1	
23	7716	Screw, #10-16 Type AB, Sheet Metal	3	
24	<u>102323101</u>	Pin, Bow Tie Locking	1	
25	<u>102323201</u>	Pin, 3/8 X 1-5/16 Clevis	1	
26	<u>1028</u>	Nut, 1/4-20 Hex	1	
27	<u>1241</u>	Washer, 5/16 Type A Flat	4	
28	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	4	

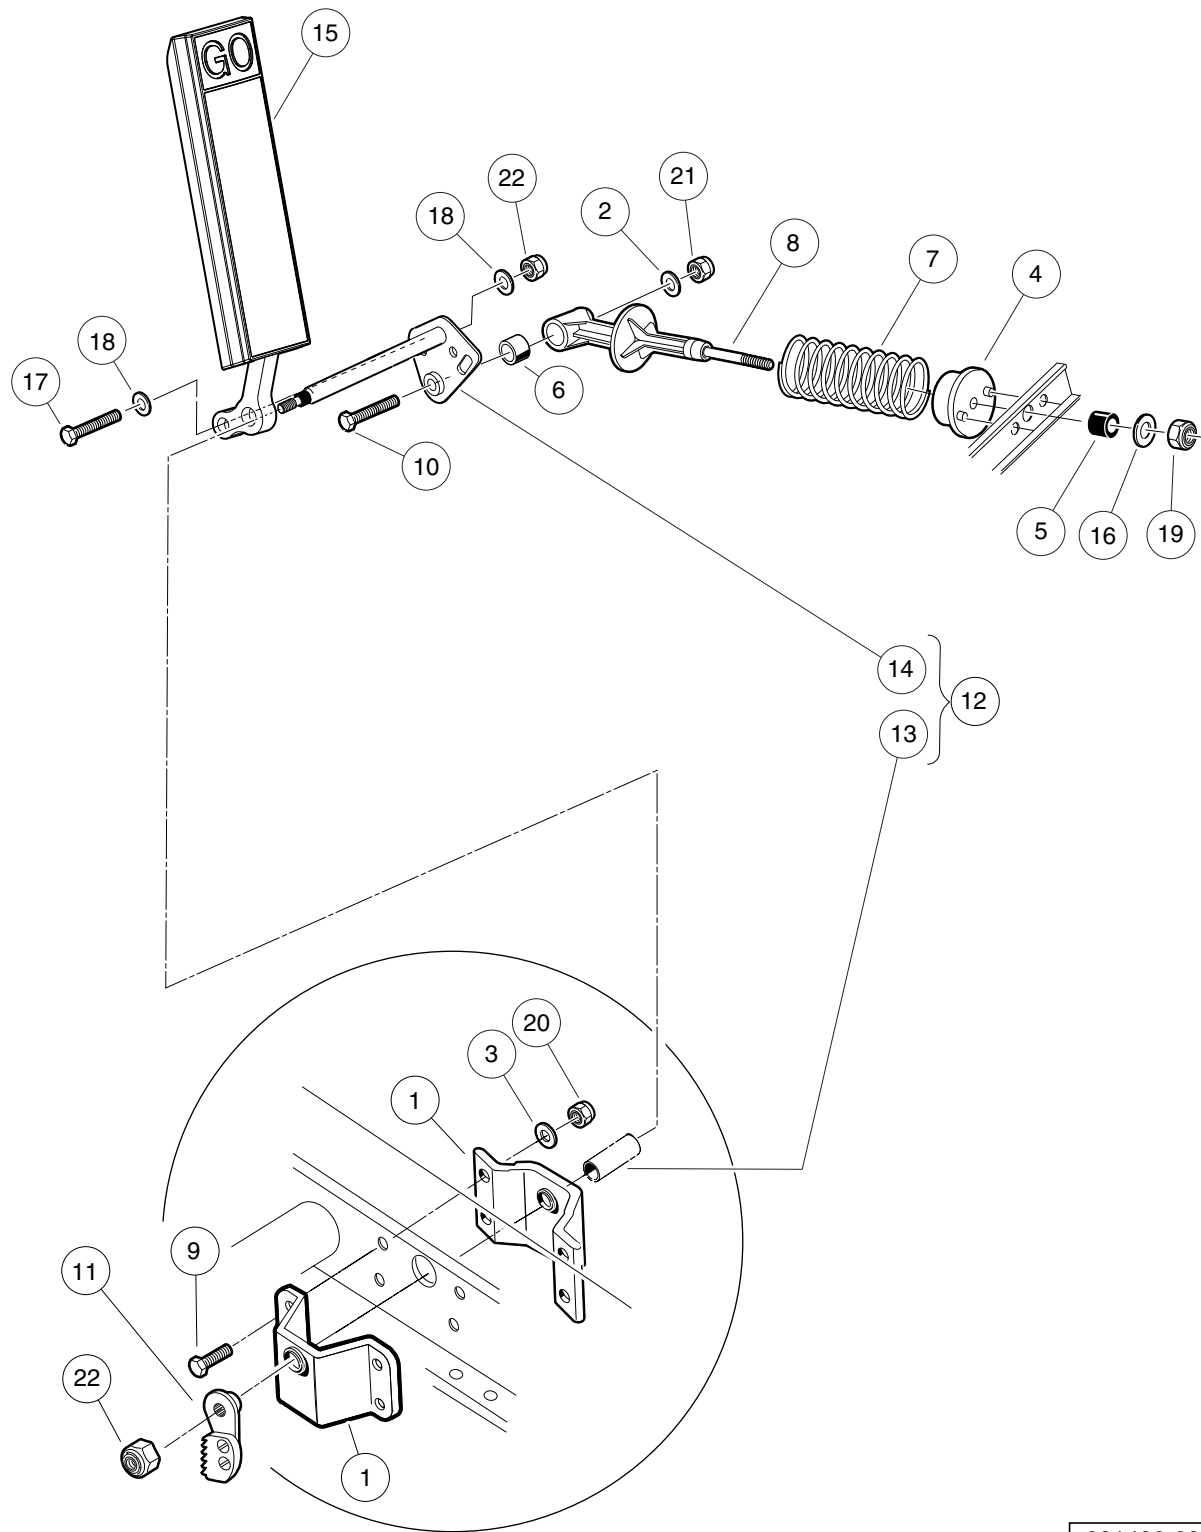


001406-001

ACCELERATOR PEDAL ASSEMBLY – ELECTRIC VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1011694</u>	Accelerator Bracket and Bearing Assembly	2
2	<u>1011931</u>	Washer, 1/4 Flat	1
3	<u>1014007</u>	Washer, 1/4, Flat	4
4	<u>1017378</u>	Cup, Spring	1
5	<u>1017380</u>	Bumper, Spring Return	1
6	<u>1017424</u>	Bearing, Pivot Support	1
7	101796201	Spring, Accelerator Return	1
8	<u>101817401</u>	Retainer, Spring	1
9	<u>101861901</u>	Screw, 1/4-20 X 1.125 Hex Cap	4
10	<u>101862001</u>	Screw, 1/4-20 X 1.500 Flange	1
11	101918501	Ratchet Assembly	1
12	<u>102026001</u>	Kit, Accelerator Pivot Rod Assembly (includes items 13 and 14)	1
13	101919801	Spacer, Accelerator	1
14	<u>102158901</u>	Pivot Rod Weldment	1
15	<u>103865101</u>	Pedal, Accel, Insert	A/R
16	<u>1241</u>	Washer, 5/16 Type A Flat	1
17	<u>1624</u>	Screw, 3/8-16 X 1.50, Hex-Head Cap	1
18	<u>334</u>	Washer, 3/8, Type A, Flat	2
19	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	1
20	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	4
21	<u>8717</u>	Locknut, Nylon Insert, 1/4-28	1
22	<u>8754</u>	Locknut, 3/8-16 Hex	2

5
G
E

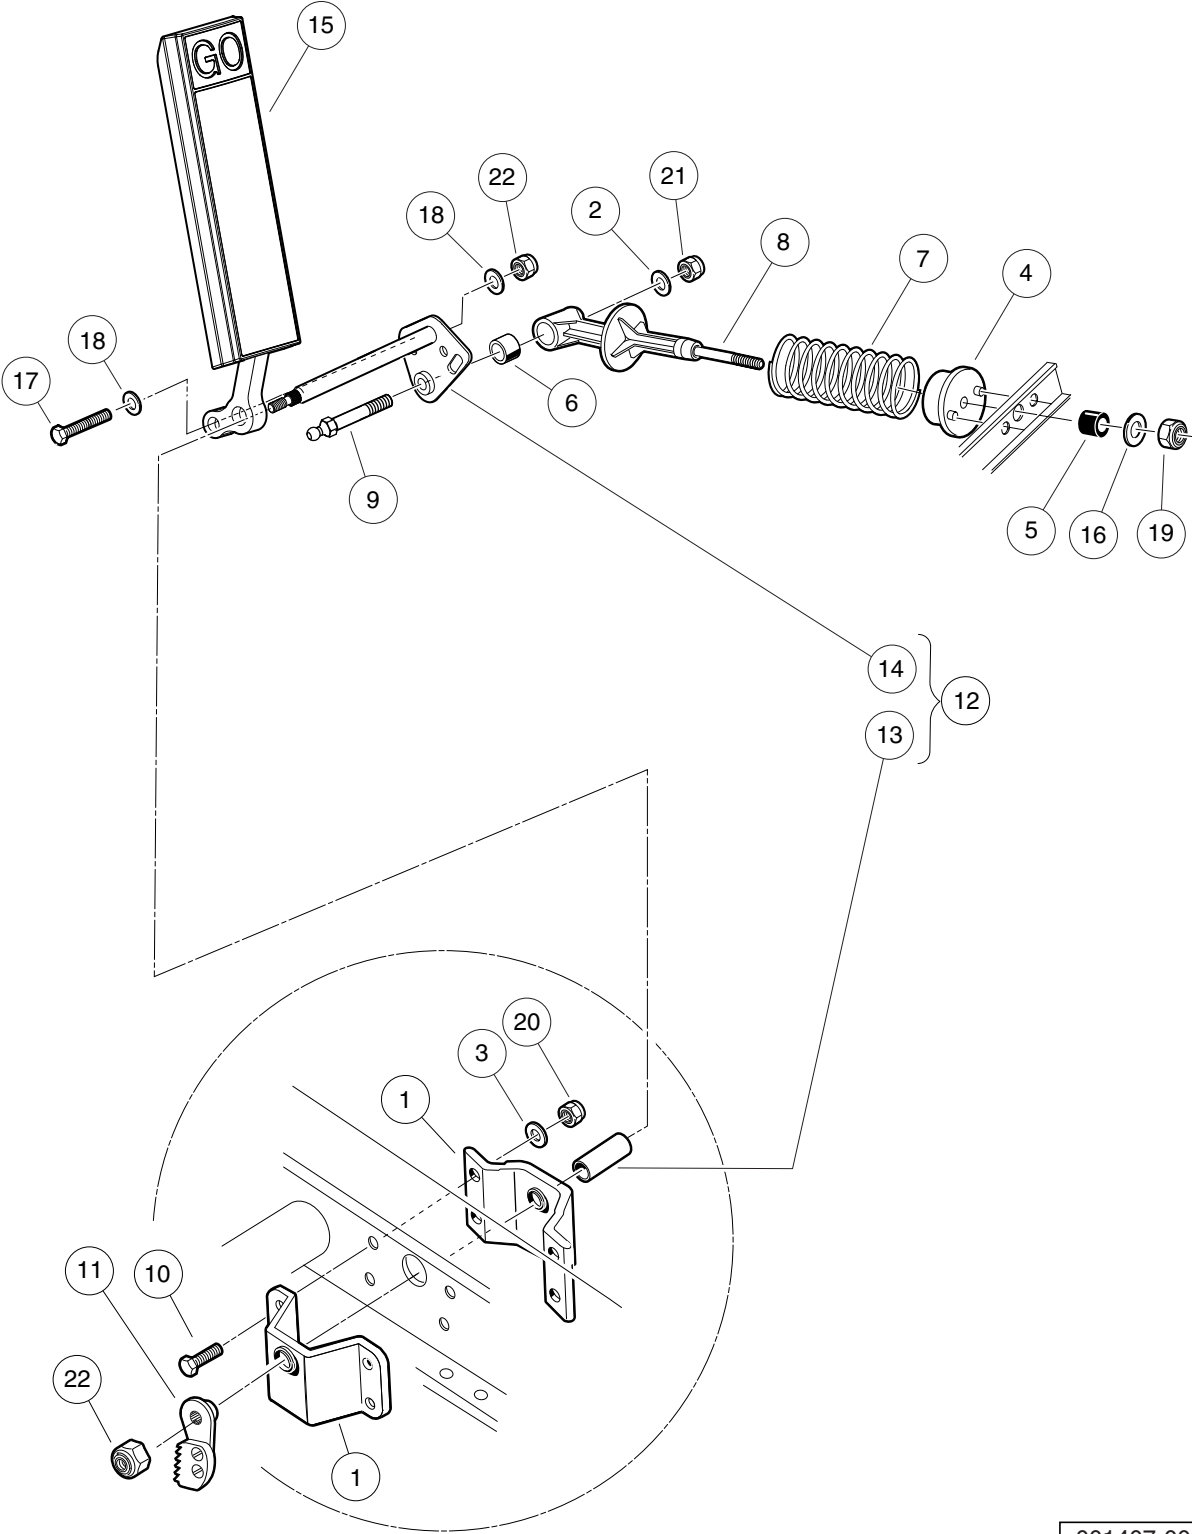


001407-003

ACCELERATOR PEDAL ASSEMBLY – GASOLINE VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY	5 G E
		1 2 3 4		
1	<u>1011694</u>	Accelerator Bracket and Bearing Assembly	2	
2	<u>1011931</u>	Washer, 1/4 Flat	1	
3	<u>1014007</u>	Washer, 1/4, Flat	4	
4	<u>1017378</u>	Cup, Spring	1	
5	<u>1017380</u>	Bumper, Spring Return	1	
6	<u>1017424</u>	Bearing, Pivot Support	1	
7	101796201	Spring, Accelerator Return	1	
8	<u>101817401</u>	Retainer, Spring	1	
9	101818801	Stud, 1/4-28 X 1.35 Ball	1	
10	<u>101861901</u>	Screw, 1/4-20 X 1.125 Hex Cap	4	
11	101918501	Ratchet Assembly	1	
12	<u>102026001</u>	Kit, Accelerator Pivot Rod Assembly (includes items 13 and 14)	1	
13	101919801	Spacer, Accelerator	1	
14	<u>102158901</u>	Pivot Rod Weldment	1	
15	<u>103865101</u>	Pedal, Accel, Insert	1	
16	<u>1241</u>	Washer, 5/16 Type A Flat	1	
17	<u>1624</u>	Screw, 3/8-16 X 1.50, Hex-Head Cap	1	
18	<u>334</u>	Washer, 3/8, Type A, Flat	2	
19	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	1	
20	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	4	
21	<u>8717</u>	Locknut, Nylon Insert, 1/4-28	1	
22	<u>8754</u>	Locknut, 3/8-16 Hex	2	

ACCELERATOR ROD – TURF/CA 6 & VILLAGER 6 GAS VEHICLES


ITEM	PART NO.	DESCRIPTION	QTY	5 G E
		1 2 3 4		
1	<u>101674702</u>	Rod, Accelerator (includes items 2 through 4)	1	
2	<u>1011084</u>	Nut, 1/4-28 Hex Jam	2	
3	<u>1011734</u>	Joint, Ball	2	
4	N/A	Accelerator Rod Elec Stretch	1	

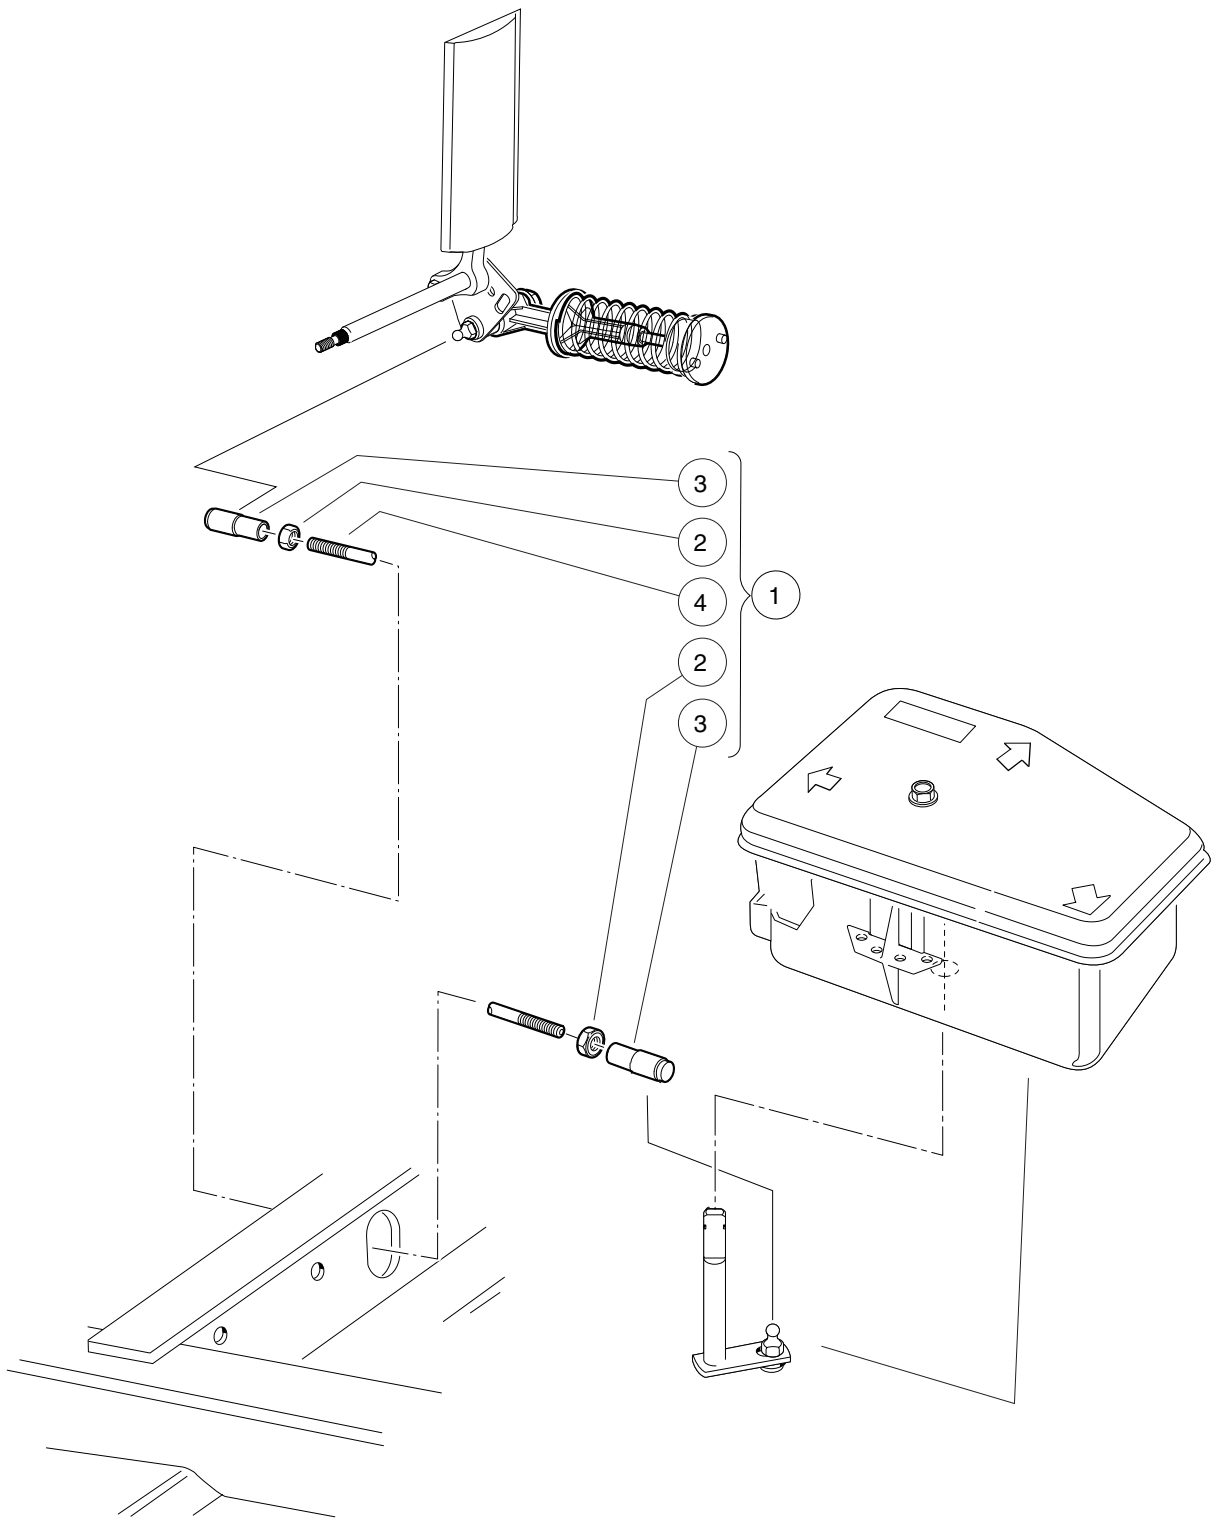

000362-001

ACCELERATOR ROD – VILLAGER 8 GAS VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY	5 G E
		1 2 3 4		
1	<u>101674704</u>	Accelerator Rod Assembly, RV XL (includes items 2 through 4)	1	
2	<u>1011084</u>	Nut, 1/4-28 Hex Jam	2	
3	<u>1011734</u>	Joint, Ball	2	
4	N/A	Accelerator Rod, RV XL	1	

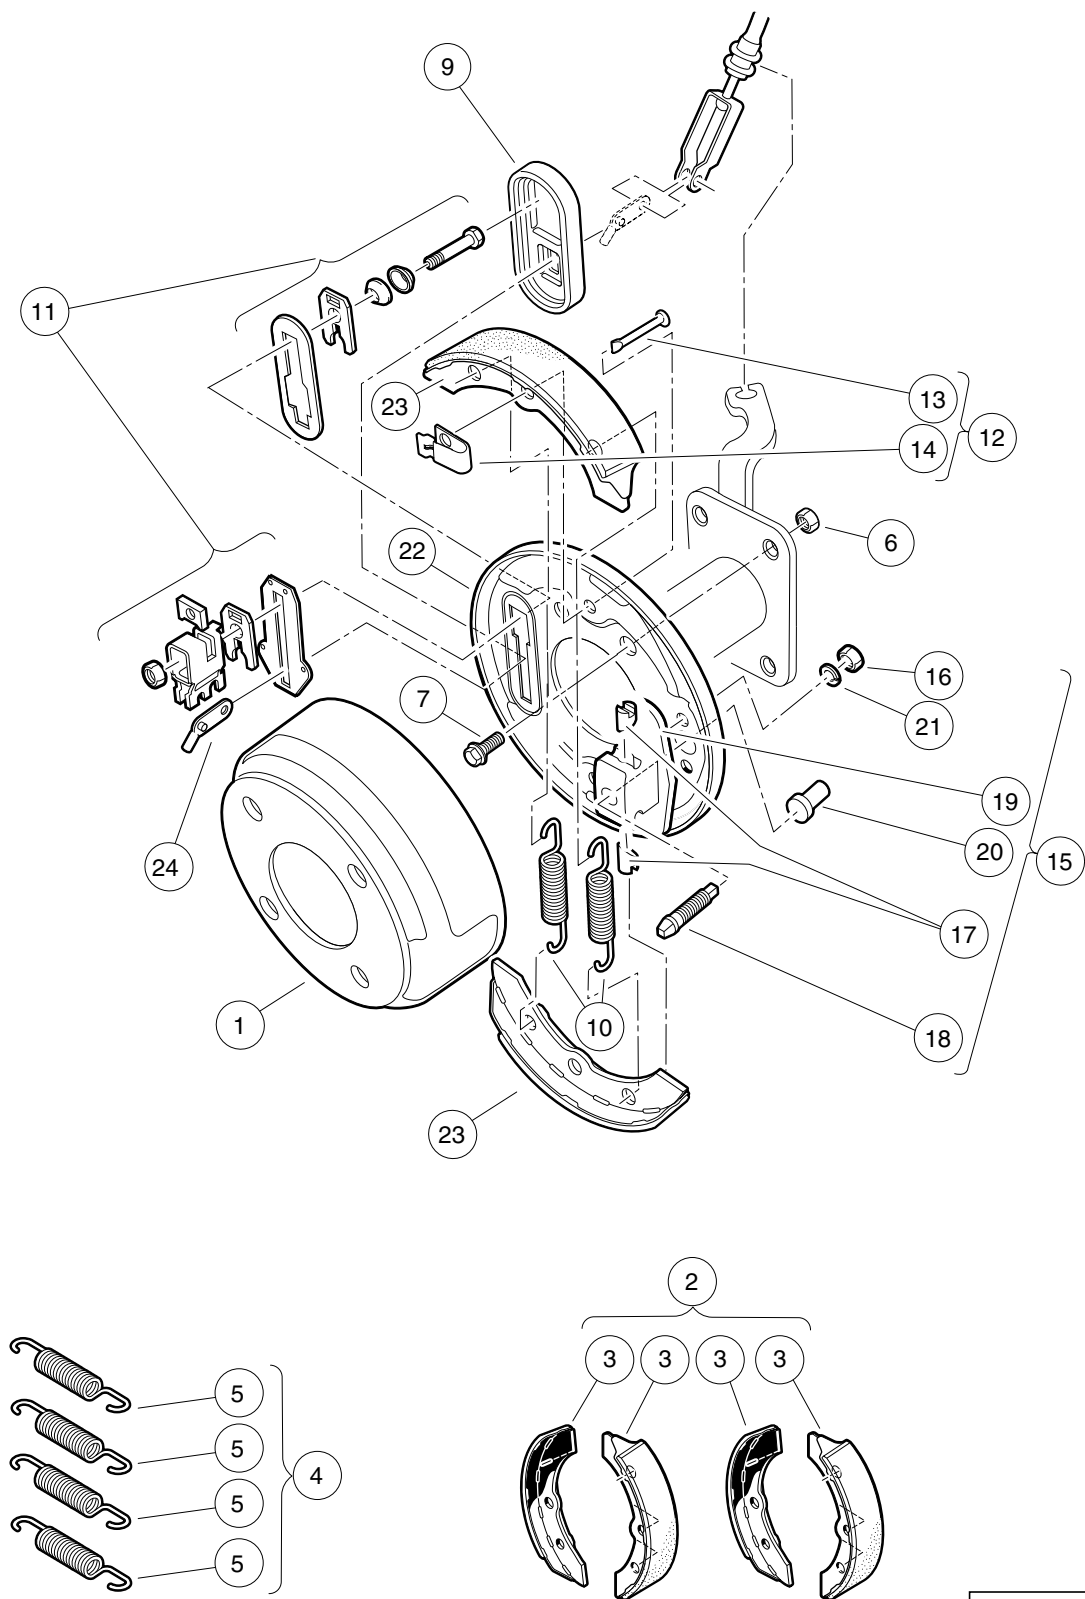

000298-001


FRONT BRAKE ASSEMBLY – VEHICLES WITH FOUR-WHEEL BRAKES

ITEM	PART NO.	DESCRIPTION	QTY	5 G E
		1 2 3 4		
1	<u>1011137</u>	Drum, Brake	2	
2	<u>101146302</u>	Kit, Non-Asbestos Brake Shoe (includes item 3)	1	
3	101880701	Shoe Brake Manual Adj (Available in Kit, Non-Asbestos Brake Shoe)	4	
4	<u>1011464</u>	Package, Brake Spring (includes item 5)	1	
5	1011314	Brake Spring	4	
6	<u>1013924</u>	Nut, 5/16-24, Hex Head Cone	8	
7	<u>1014153</u>	Bolt, Brake Cluster Mounting	8	
8	<u>1016557</u>	Cluster, Brake, Driver-Side (includes items 9 through 24)	1	
9	<u>1010850</u>	Dust Cover	1	
10	1011314	Brake Spring	2	
11	<u>1011465</u>	Kit, Brake Actuator	1	
12	<u>1011466</u>	Kit, Shoe Retainer (includes items 13 and 14)	1	
13	N/A	Pin	2	
14	N/A	Shoe Clamp Spring	2	
15	<u>1011467</u>	Kit, Anchor Body (includes items 16 through 21)	1	
16	<u>1011114</u>	Nut, M6-1.00 Hex	2	
17	1011298	Anchor Piston	2	
18	N/A	Adjustment Bolt	1	
19	N/A	Anchor Body Component	1	
20	<u>1011303</u>	Adjustment Bolt Cap	1	
21	<u>451</u>	Lockwasher, 1/4 Split	2	
22	1011494	Backing Plate, Left-Hand	1	
23	101880701	Shoe Brake Manual Adj (Available in Kit, Non-Asbestos Brake Shoe)	2	
24	N/A	Arm, Brake Lever	1	
25	<u>1016573</u>	Cluster, Brake, Passenger-Side (includes items 26 through 41)	1	
26	<u>1010850</u>	Dust Cover	1	
27	<u>1011154</u>	Backing Plate, Right-Hand	1	
28	1011314	Brake Spring	2	
29	<u>1011465</u>	Kit, Brake Actuator	1	
30	<u>1011466</u>	Kit, Shoe Retainer (includes items 31 and 32)	1	
31	N/A	Pin	2	
32	N/A	Shoe Clamp Spring	2	
33	<u>1011467</u>	Kit, Anchor Body (includes items 34 through 39)	1	
34	<u>1011114</u>	Nut, M6-1.00 Hex	2	
35	1011298	Anchor Piston	2	
36	N/A	Adjustment Bolt	1	
37	N/A	Anchor Body Component	1	
38	<u>1011303</u>	Adjustment Bolt Cap	1	
39	<u>451</u>	Lockwasher, 1/4 Split	2	
40	101880701	Shoe Brake Manual Adj (Available in Kit, Non-Asbestos Brake Shoe)	2	
41	N/A	Arm, Brake Lever	1	
Note: Passenger-side brake cluster not shown. Components have a similar appearance to driver-side brake cluster components.				

5

G


E

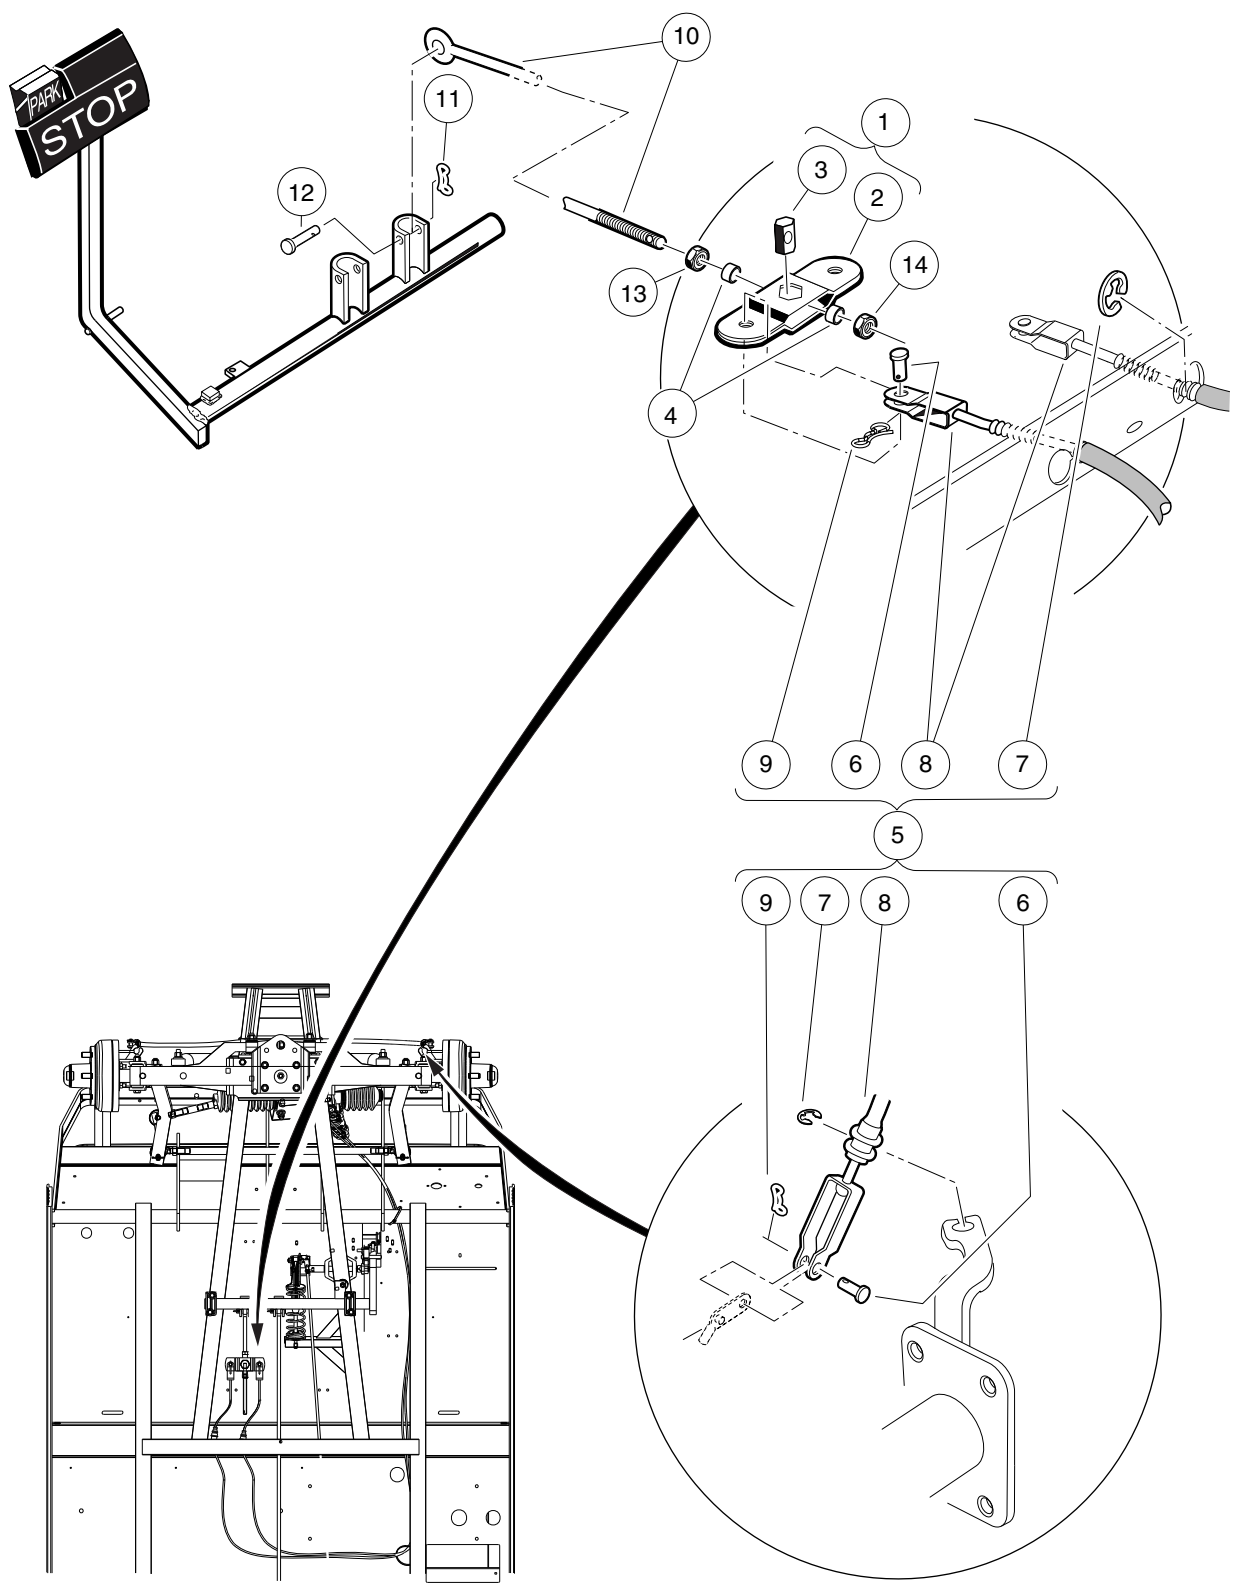

000294-001

FRONT BRAKE CABLES AND EQUALIZER – VEHICLES WITH FOUR-WHEEL BRAKES


ITEM	PART NO.	DESCRIPTION	QTY	5 G E
		1 2 3 4		
1	<u>1017211</u>	Kit, Equalizer and Pivot Limiter (includes items 2 and 3)	1	
2	<u>1016319</u>	Equalizer Weld Assembly	1	
3	<u>1016320</u>	Equalizer, Pivot Limiter	1	
4	<u>101865301</u>	Spacer	2	
5	<u>101874601</u>	Kit, Brake Cable (includes items 6 through 9)	1	
6	<u>1010829</u>	Pin, Clevis, 5/16 X 3/4	4	
7	<u>1011779</u>	E-Clip, 1/2	4	
8	N/A	Brake Cable	2	
9	<u>102292801</u>	Pin, Bow Tie Locking - .072	4	
10	<u>101953106</u>	Rod, Equalizer, 9.75"	1	
11	<u>102323101</u>	Pin, Bow Tie Locking	1	
12	<u>102323201</u>	Pin, 3/8 X 1-5/16 Clevis	1	
13	<u>1242</u>	Nut, 5/16-18 Hex	1	
14	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	1	

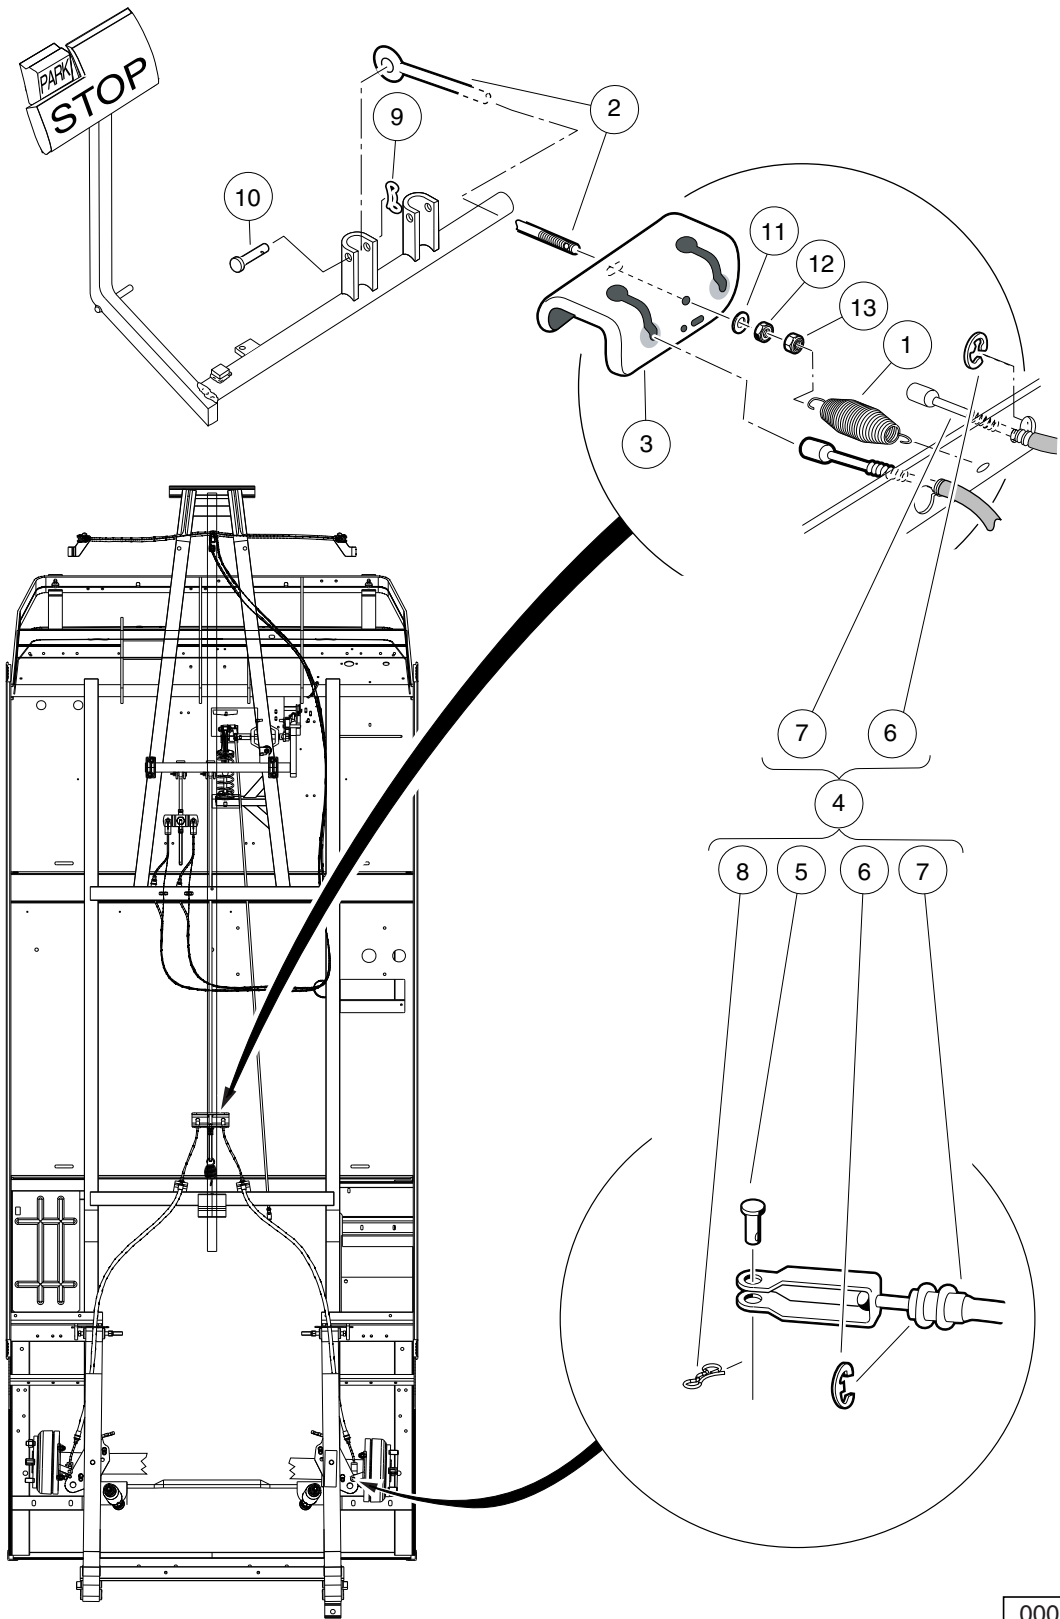

000296-004

REAR BRAKE CABLES AND EQUALIZER – TURF/CARRYALL 6 & VILLAGER 6


ITEM	PART NO.	DESCRIPTION	QTY	5 G E
		1 2 3 4		
1	<u>1013531</u>	Spring, Brake Return	1	
2	<u>101953103</u>	Rod, Equalizer, 41.91"	1	
3	<u>101990801</u>	Equalizer Bracket	1	
4	<u>102166901</u>	Kit, Brake Cable Rear (includes items 5 through 8)	1	
5	<u>1010829</u>	Pin, Clevis, 5/16 X 3/4	2	
6	<u>1011779</u>	E-Clip, 1/2	4	
7	<u>102162601</u>	Cable, Brake	2	
8	<u>102292801</u>	Pin, Bow Tie Locking - .072	2	
9	<u>102323101</u>	Pin, Bow Tie Locking	1	
10	<u>102323201</u>	Pin, 3/8 X 1-5/16 Clevis	1	
11	<u>1241</u>	Washer, 5/16 Type A Flat	1	
12	<u>1242</u>	Nut, 5/16-18 Hex	1	
13	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	1	

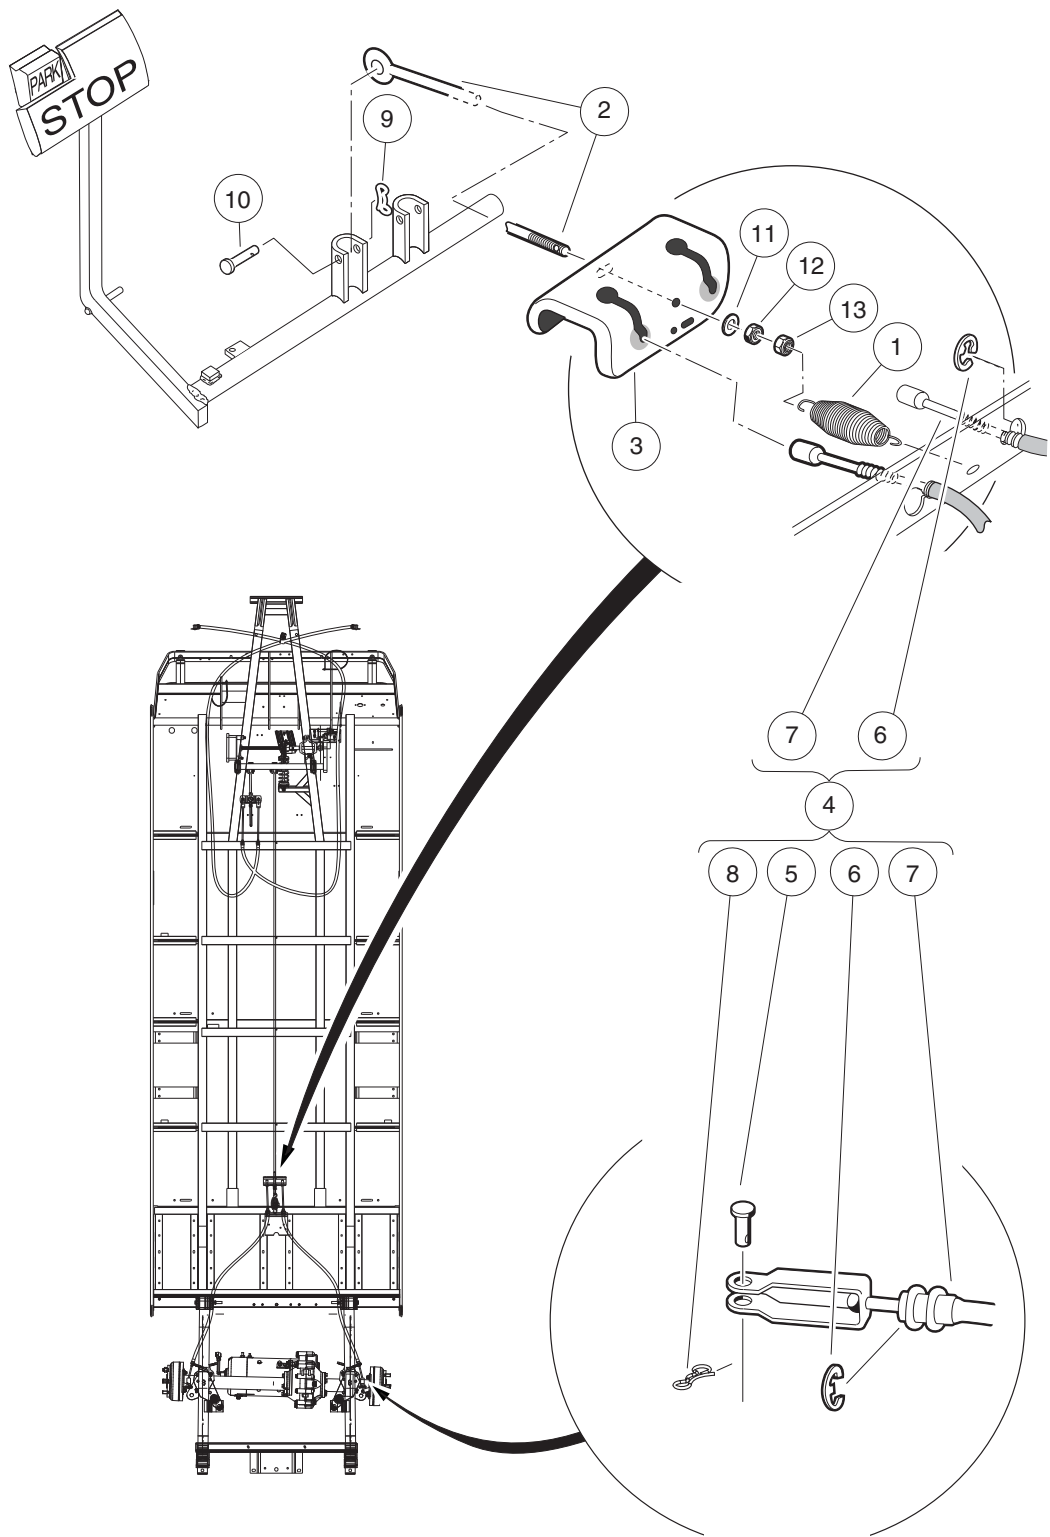

000296-003

REAR BRAKE CABLES AND EQUALIZER – VILLAGER 8

ITEM	PART NO.	DESCRIPTION	QTY	5 G E
		1 2 3 4		
1	<u>1013531</u>	Spring, Brake Return	1	
2	<u>101953104</u>	Rod, Equalizer	1	
3	<u>101990801</u>	Equalizer Bracket	1	
4	<u>102166901</u>	Kit, Brake Cable Rear (includes items 5 through 8)	1	
5	<u>1010829</u>	Pin, Clevis, 5/16 X 3/4	2	
6	<u>1011779</u>	E-Clip, 1/2	4	
7	<u>102162601</u>	Cable, Brake	2	
8	<u>102292801</u>	Pin, Bow Tie Locking - .072	2	
9	<u>102323101</u>	Pin, Bow Tie Locking	1	
10	<u>102323201</u>	Pin, 3/8 X 1-5/16 Clevis	1	
11	<u>1241</u>	Washer, 5/16 Type A Flat	1	
12	<u>1242</u>	Nut, 5/16-18 Hex	1	
13	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	1	

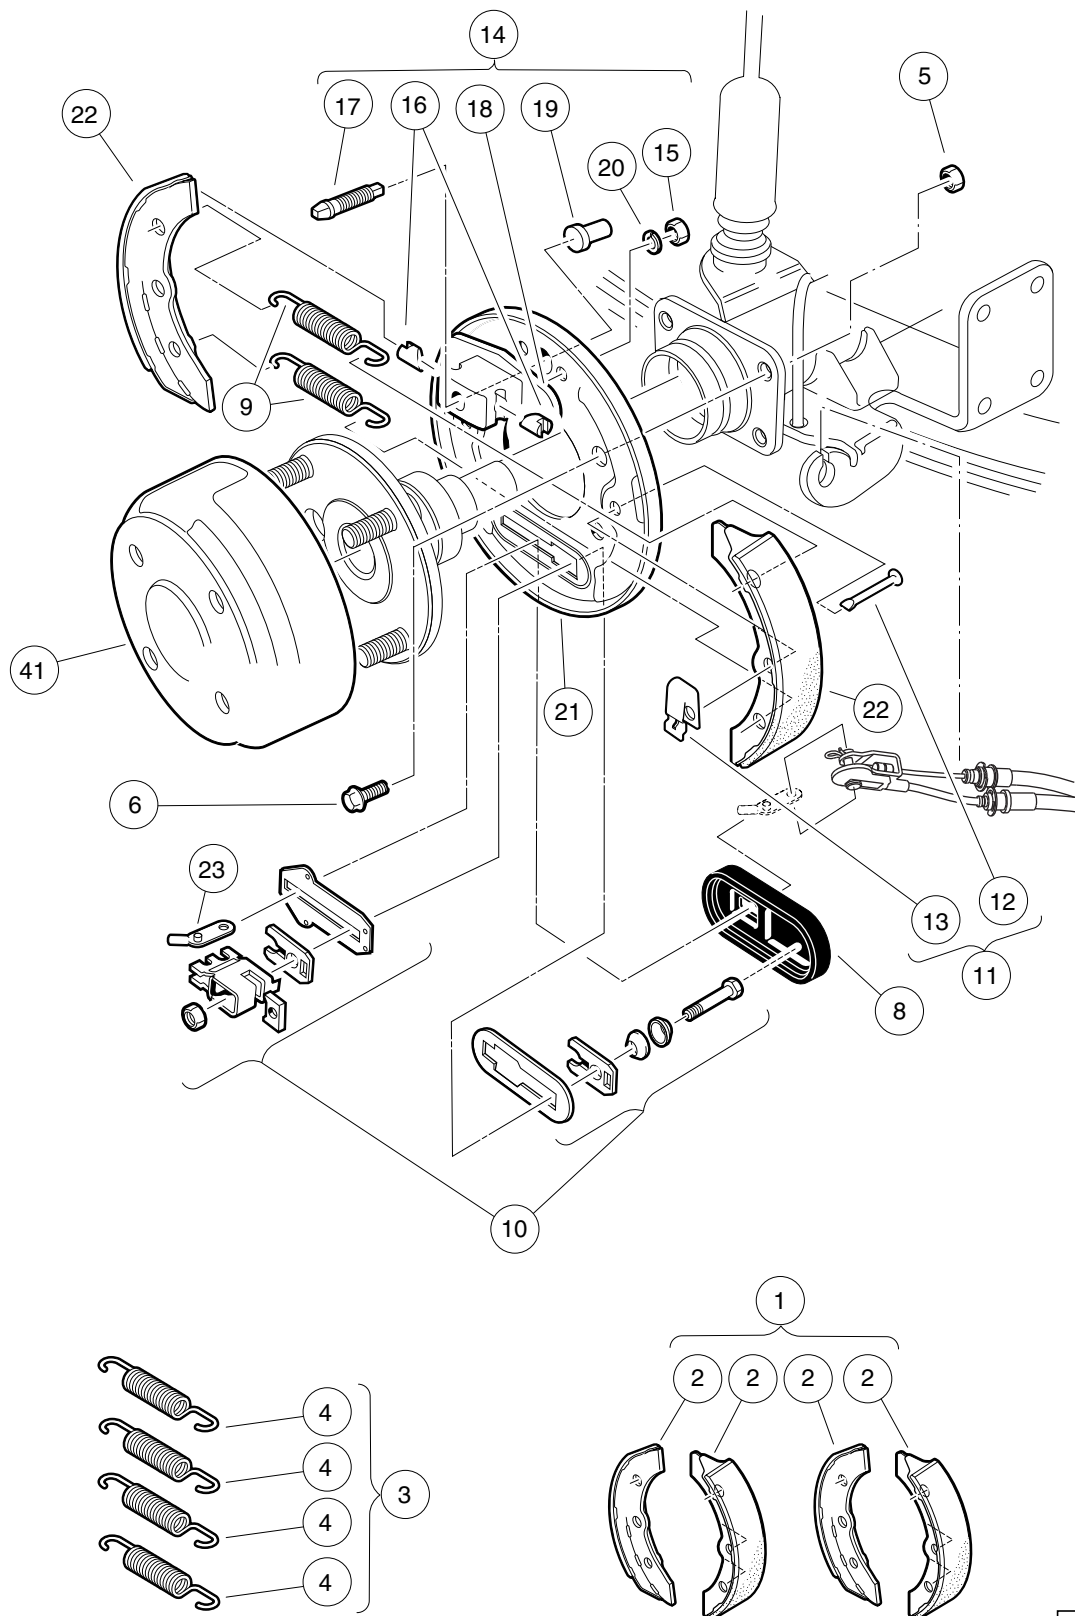

000293-002

REAR BRAKE ASSEMBLY, MANUALLY-ADJUSTED – VEHICLES WITH 4-WHEEL BRAKES

ITEM	PART NO.	DESCRIPTION	QTY	5 G E
		1 2 3 4		
1	<u>101146302</u>	Kit, Non-Asbestos Brake Shoe (includes item 2)	1	
2	101880701	Shoe Brake Manual Adj (Available in Kit, Non-Asbestos Brake Shoe)	4	
3	<u>1011464</u>	Package, Brake Spring (includes item 4)	1	
4	1011314	Brake Spring	4	
5	<u>1013924</u>	Nut, 5/16-24, Hex Head Cone	8	
6	<u>1014153</u>	Bolt, Brake Cluster Mounting	8	
7	<u>1016557</u>	Cluster, Brake, Driver-Side (includes items 8 through 23)	1	
8	<u>1010850</u>	Dust Cover	1	
9	1011314	Brake Spring	2	
10	<u>1011465</u>	Kit, Brake Actuator	1	
11	<u>1011466</u>	Kit, Shoe Retainer (includes items 12 and 13)	1	
12	N/A	Pin	2	
13	N/A	Shoe Clamp Spring	2	
14	<u>1011467</u>	Kit, Anchor Body (includes items 15 through 20)	1	
15	<u>1011114</u>	Nut, M6-1.00 Hex	2	
16	1011298	Anchor Piston	2	
17	N/A	Adjustment Bolt	1	
18	N/A	Anchor Body Component	1	
19	<u>1011303</u>	Adjustment Bolt Cap	1	
20	<u>451</u>	Lockwasher, 1/4 Split	2	
21	1011494	Backing Plate, Left-Hand	1	
22	101880701	Shoe Brake Manual Adj (Available in Kit, Non-Asbestos Brake Shoe)	2	
23	N/A	Arm, Brake Lever	1	
24	<u>1016573</u>	Cluster, Brake, Passenger-Side (includes items 25 through 40)	1	
25	<u>1010850</u>	Dust Cover	1	
26	<u>1011154</u>	Backing Plate, Right-Hand	1	
27	1011314	Brake Spring	2	
28	<u>1011465</u>	Kit, Brake Actuator	1	
29	<u>1011466</u>	Kit, Shoe Retainer (includes items 30 and 31)	1	
30	N/A	Pin	2	
31	N/A	Shoe Clamp Spring	2	
32	<u>1011467</u>	Kit, Anchor Body (includes items 33 through 38)	1	
33	<u>1011114</u>	Nut, M6-1.00 Hex	2	
34	1011298	Anchor Piston	2	
35	N/A	Adjustment Bolt	1	
36	N/A	Anchor Body Component	1	
37	<u>1011303</u>	Adjustment Bolt Cap	1	
38	<u>451</u>	Lockwasher, 1/4 Split	2	
39	101880701	Shoe Brake Manual Adj (Available in Kit, Non-Asbestos Brake Shoe)	2	
40	N/A	Arm, Brake Lever	1	
41	<u>101791101</u>	Drum without Center Hole, Brake	2	
		Note: Passenger-side brake cluster not shown. Components have a similar appearance to driver-side brake cluster components.		

5

G


E

STEERING AND SUSPENSIONS

6

G

E

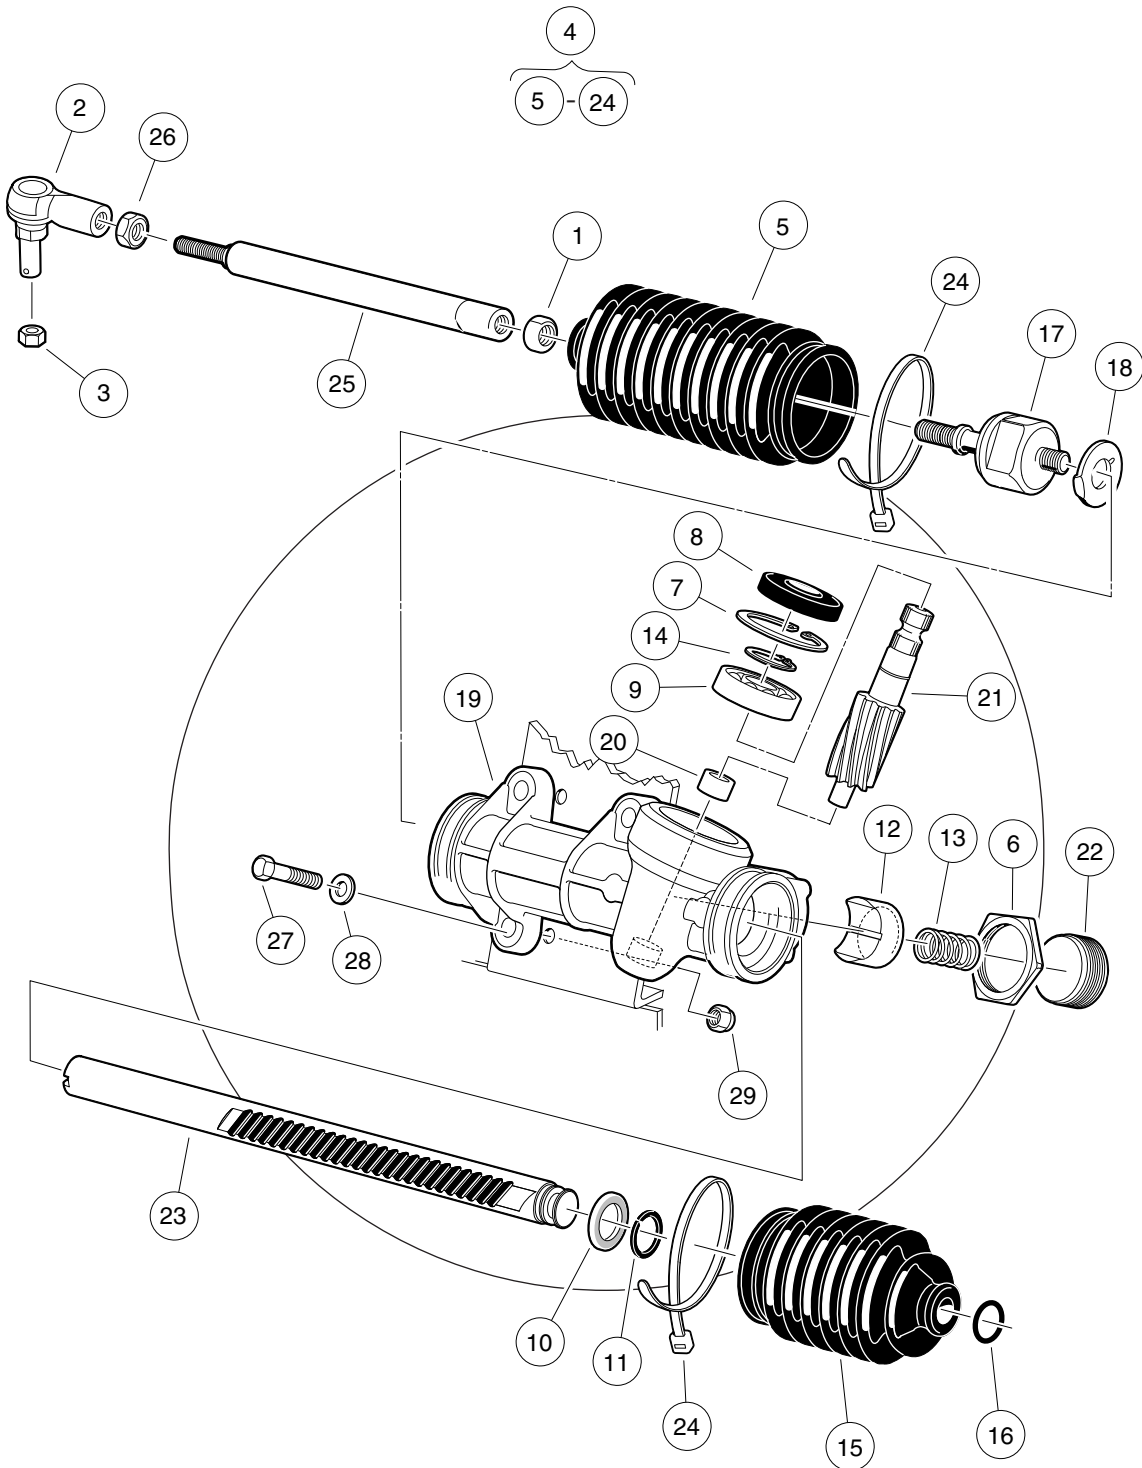6**G****E**

001500-002

STEERING GEAR ASSEMBLY (WANDA) – MAINT.-FREE BALL JOINT

ITEM	PART NO.	DESCRIPTION	QTY	6 G E
		1 2 3 4		
1	1013042	Nut, 12mm Hex	1	
2	<u>102022602</u>	End, Tie Rod, M12 X 1.25, Lh	1	
3	<u>102289201</u>	Nut - Hex Locking, M12 X 1.25	1	
4	<u>103601501</u>	Asm, Steering Rack And Pinion (includes items 5 through 24)	1	
5	<u>1013035</u>	Bellows, Long	1	
6	<u>1013044</u>	Rack Screw Locknut	1	
7	N/A	Snap Ring	1	
8	<u>1013052</u>	Seal, Steering Pinion Dust	1	
9	<u>101879401</u>	Bearing, Ball	1	
10	<u>101879501</u>	Stop Washer	1	
11	<u>101879601</u>	Stop Ring, C-Type	1	
12	<u>101879701</u>	Support Yoke	1	
13	<u>101879801</u>	Rack Guide Pressure Spring	1	
14	<u>101879901</u>	Ring, Stop, C-Type	1	
15	<u>101880001</u>	Bellows, Short	1	
16	<u>101880101</u>	Dust Seal Retaining Ring	1	
17	<u>101880201</u>	Inner Ball Joint Asm	1	
18	<u>101880301</u>	Washer, Tab	1	
19	N/A	Box, Steering Gear	1	
20	N/A	Bearing, Lower Pinion	1	
21	N/A	Pinion, Steering	1	
22	N/A	Screw, Rack Guide	1	
23	N/A	Rack, Steering	1	
24	<u>8990</u>	Tie Wrap, 8" Nylon	2	
25	<u>103653401</u>	Link, Drag, Male Thd	1	
26	<u>103653501</u>	Nut, Jam, M12-1.25, Lh	1	
27	<u>1624</u>	Screw, 3/8-16 X 1.50, Hex-Head Cap	3	
28	<u>334</u>	Washer, 3/8, Type A, Flat	3	
29	<u>8754</u>	Locknut, 3/8-16 Hex	3	


STEERING COLUMN – UTILITY

ITEM	PART NO.	DESCRIPTION	QTY	6 G E
		1 2 3 4		
1	<u>1011578</u>	Washer, 5/16 Type B Flat	1	
2	<u>1011697</u>	Washer, 5/16 Flat	1	
3	<u>1014288</u>	Screw, 5/16-18 X 0.75, Thread-Forming	1	
4	<u>1016183</u>	Screw, 3/8-16 X 7.00 Hex Cap	2	
5	<u>1016269</u>	Screw, 5/16-18 Thrd Forming	2	
6	<u>1017313</u>	Steering Shaft Assembly (includes items 7 through 15)	1	
7	<u>1012604</u>	Washer, 0.675 ID X 1.19 OD	1	
8	<u>1012605</u>	Ring, 0.579 Internal Retaining	1	
9	<u>1014125</u>	Wedge, Molded	2	
10	<u>1014126</u>	Seat, Plastic Bearing	2	
11	<u>1014213</u>	Bearing, Ball	2	
12	<u>1014214</u>	Ring, Retaining	1	
13	<u>1014217</u>	Spring, Steering Shaft	1	
14	<u>1017314</u>	Column, Aluminum Steering	1	
15	<u>1017315</u>	Shaft Steering Column	1	
16	<u>1017317</u>	Tube Cover, Steering Column	1	
17	101984801	Kit, Steering Column Mounting Bracket (includes items 18 and 19)	1	
18	N/A	Bracket, RH Steering Column Mount	1	
19	N/A	Bracket, LH Steering column mount	1	
20	<u>102278001</u>	Boot, Steering Column Round	1	
21	<u>334</u>	Washer, 3/8, Type A, Flat	4	
22	<u>8754</u>	Locknut, 3/8-16 Hex	2	

6

G

E

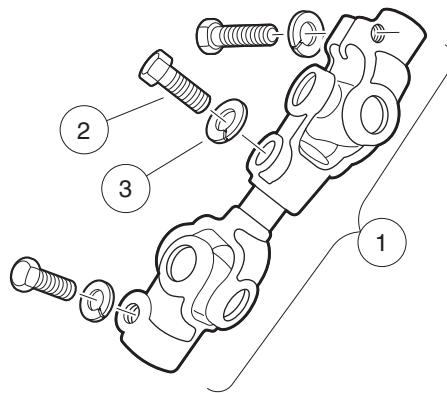

001217-001


INTERMEDIATE STEERING SHAFT (WANDA) – TURF/CA/ VILLAGER

ITEM	PART NO.	DESCRIPTION	QTY
1	<u>103601601</u>	1 2 3 4 Shaft, Intermediate Steering (includes items 2 and 3)	1
2	<u>1017226</u>	Bolt, Hex-Head, 8mm X 1.25 - 30	3
3	<u>7174</u>	Lockwasher, 5/16 Split	3

6

G

E

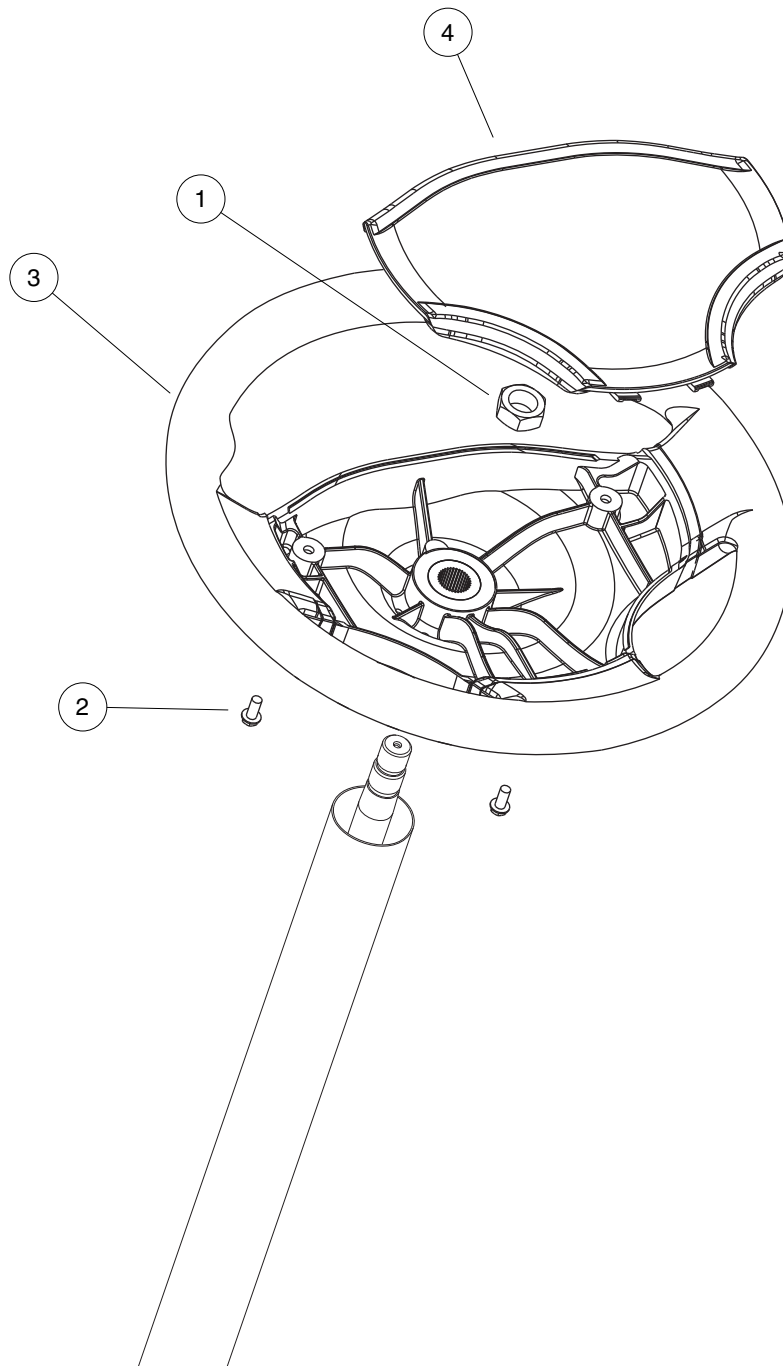

000246-007

STEERING WHEEL

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1017273</u>	Nut, 5/8-18 Nylon Insert Jam	1
2	<u>101850301</u>	Screw, #12-16 X 0.50 Washer-Head Hi-Lo	2
3	<u>103724502</u>	Wheel, Steering, Splined	1
4	<u>103724602</u>	Cover, Steering Wheel, Generic	1

6


G

E

6

G



E

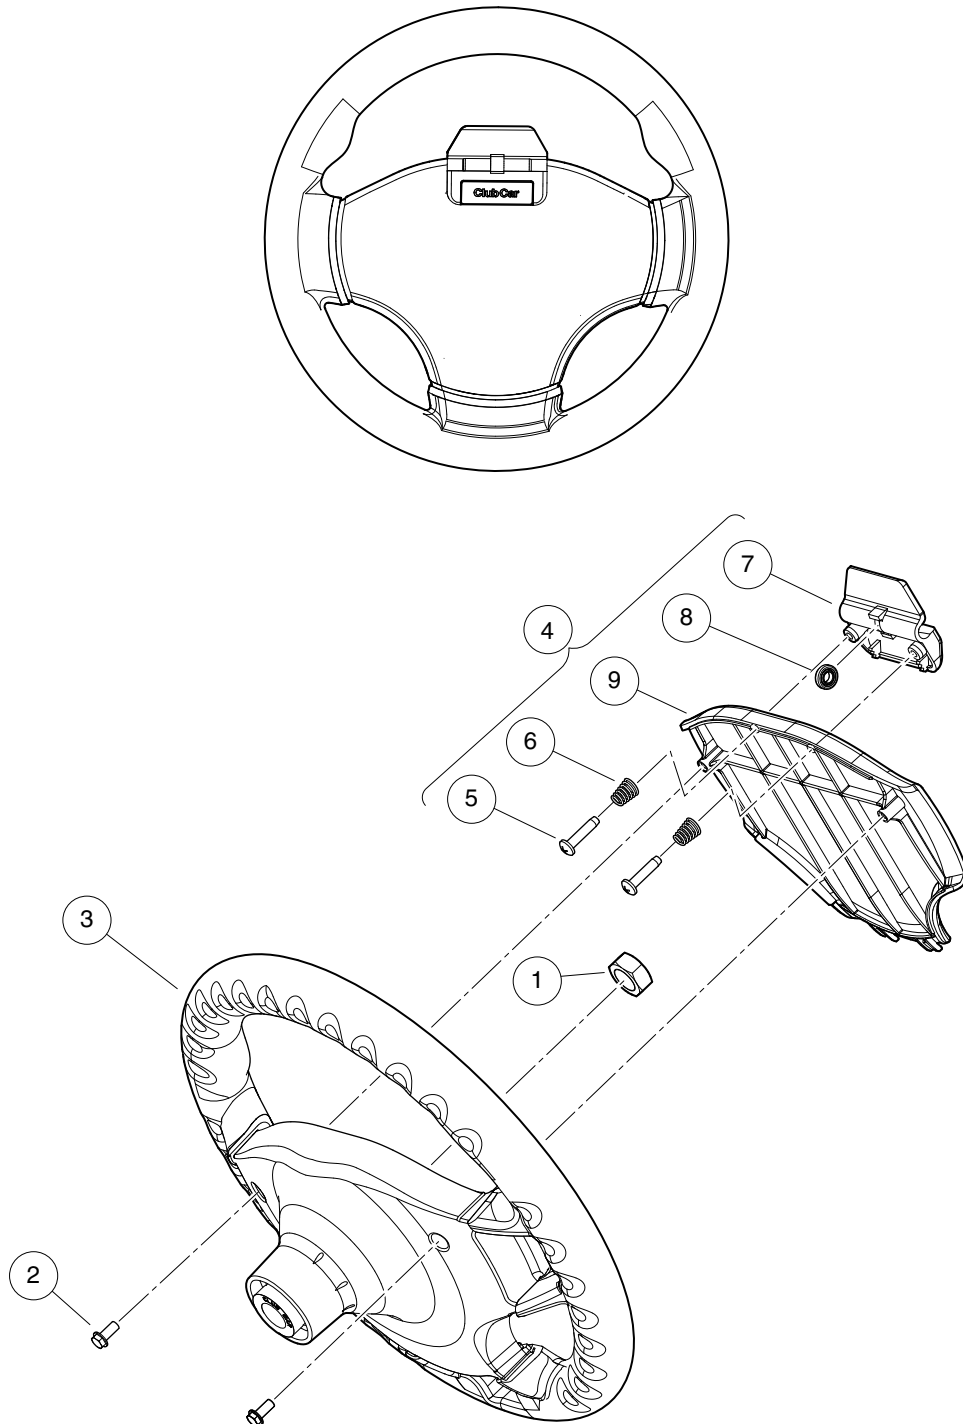

001504-001

STEERING WHEEL WITH CLIP


ITEM	PART NO.	DESCRIPTION	QTY	6 G E
		1 2 3 4		
1	<u>1017273</u>	Nut, 5/8-18 Nylon Insert Jam	1	
2	<u>101850301</u>	Screw, #12-16 X 0.50 Washer-Head Hi-Lo	2	
3	<u>103724502</u>	Wheel, Steering, Splined	1	
4	<u>103724901</u>	Asm, Scorecard, Clip (includes items 5 through 9)	1	
5	<u>1012565</u>	Screw, #12 Phillips Round Head	2	
6	<u>1012566</u>	Tapered Compression Spring	2	
7	<u>1016154</u>	Clip, Scorecard	1	
8	<u>1016214</u>	Pencil Grip	1	
9	<u>103724601</u>	Cover, Steering Wheel, Clip	1	

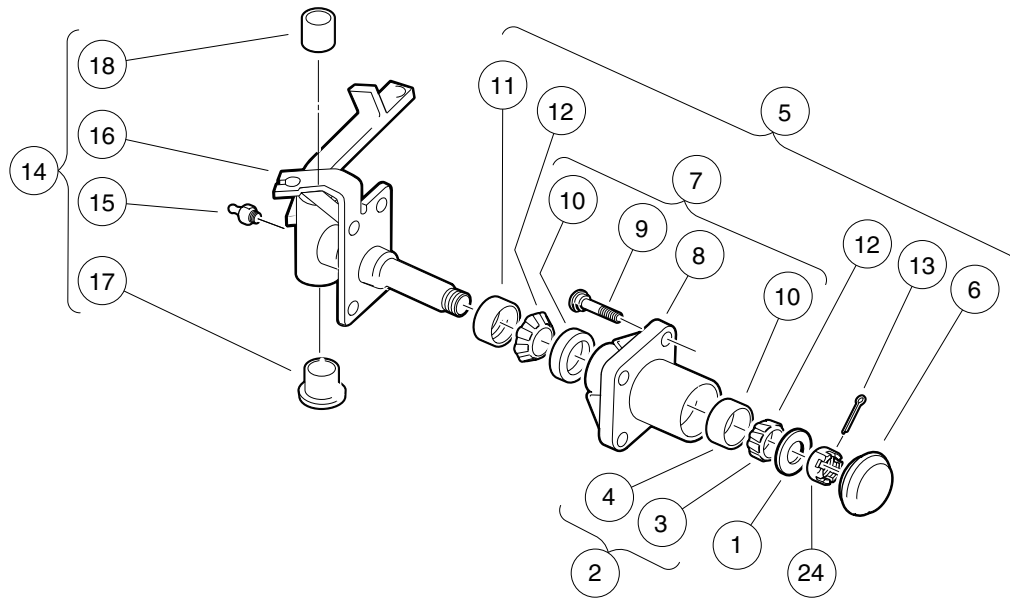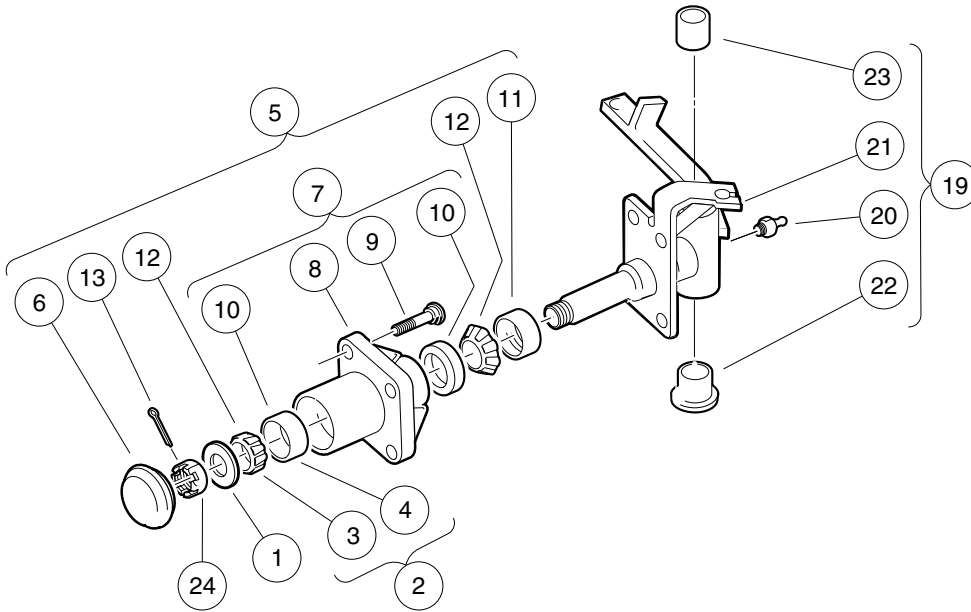6**G****E**

000310-002

FRONT SPINDLES AND HUBS – VEHICLES WITH FOUR-WHEEL BRAKES AND MAINTENANCE-FREE BALL JOINTS


ITEM	PART NO.	DESCRIPTION	QTY	6 G E
		1 2 3 4		
1	<u>1010005</u>	Washer, 3/4 Flat	2	
2	<u>1011393</u>	Hub Bearing Package (includes items 3 and 4)	4	
3	<u>7274</u>	Bearing, Front Hub Wheel	1	
4	<u>7308</u>	Race, Front Hub Bearing	1	
5	<u>1011892</u>	Hub Assembly (includes items 6 through 13)	2	
6	<u>1011887</u>	Dust Cover	1	
7	N/A	Hub (includes items 8 through 10)	1	
8	N/A	Front Hub	1	
9	<u>103477901</u>	Lug Stud, 1/2-20 Unf, 4037	4	
10	<u>7308</u>	Race, Front Hub Bearing	2	
11	<u>1013135</u>	Seal, Double Lip	1	
12	<u>7274</u>	Bearing, Front Hub Wheel	2	
13	<u>7910</u>	Pin, 5/32 X 1.00 Cotter	1	
14	<u>103717302</u>	Asm, Spindle, Lh, 4wb, Sp (includes items 15 through 18)	1	
15	<u>1015597</u>	Fitting, 1/4-28 Thread-Forming Grease	1	
16	N/A	Subasm, Spindle, Lh, 4wb	1	
17	<u>7048</u>	Bushing, Flanged Bronze	1	
18	<u>8067</u>	Bushing, Bronze Spindle	1	
19	<u>103717402</u>	Asm, Spindle, Rh, 4wb, Sp (includes items 20 through 23)	1	
20	<u>1015597</u>	Fitting, 1/4-28 Thread-Forming Grease	1	
21	N/A	Subasm, Spindle, Rh, 4wb	1	
22	<u>7048</u>	Bushing, Flanged Bronze	1	
23	<u>8067</u>	Bushing, Bronze Spindle	1	
24	<u>7840</u>	Nut, 3/4-16 Hex Slotted	2	

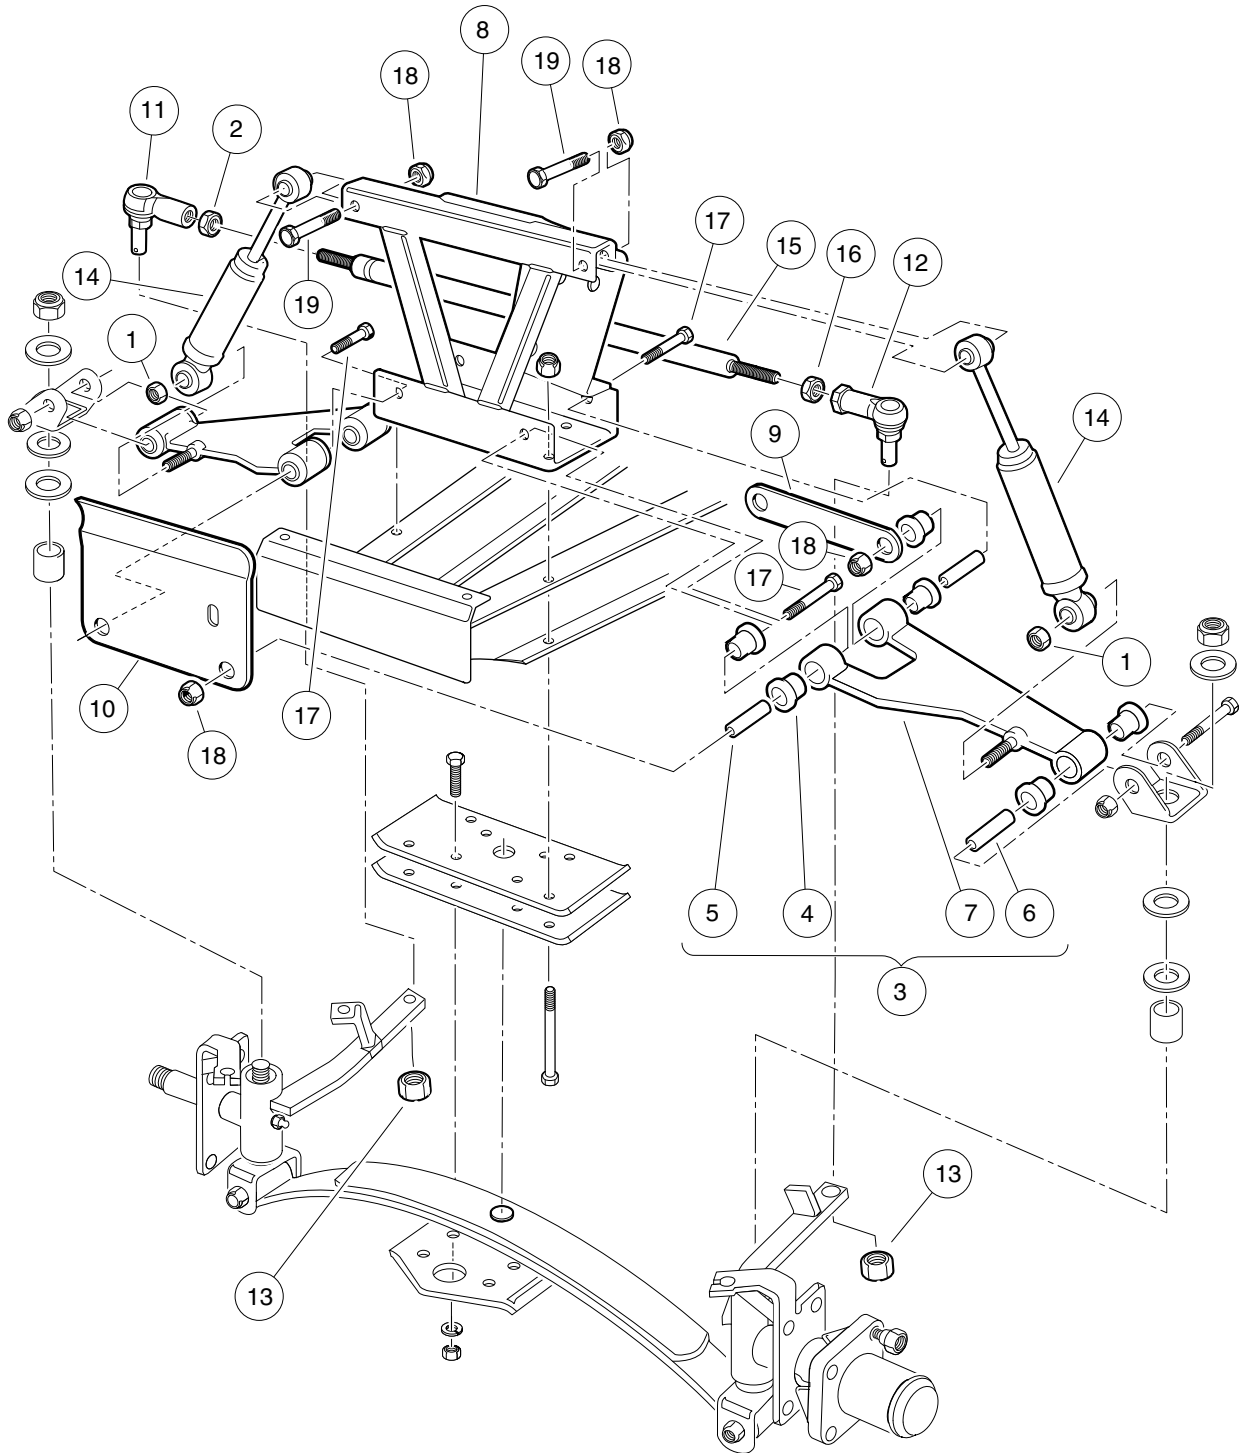6**G****E**

001265-001

FRONT SUSPENSION, UPPER – VILLAGER 6 AND 8 WITH MAINTENANCE-FREE BALL


ITEM	PART NO.	DESCRIPTION	QTY	6 G E
		1 2 3 4		
1	<u>1010138</u>	Locknut, 3/8-16 Dimpled	2	
2	<u>1013042</u>	Nut, 12mm Hex	1	
3	<u>1016353</u>	Sub-Assembly, Delta A-Plate (includes items 4 through 7)	2	
4	<u>1016346</u>	Bushing, Urethane	6	
5	<u>1016349</u>	Sleeve, Delta Inner	2	
6	<u>1016350</u>	Sleeve, Delta Outer	1	
7	<u>1016351</u>	Delta A-Plate	1	
8	<u>1016385</u>	Delta Shock and Gear Support Assembly	1	
9	<u>1017266</u>	A-Plate Strap	1	
10	<u>101955001</u>	Brake Cable Guide Bracket	1	
11	<u>102022601</u>	End, Tie Rod M12 X 1.25 Rh	1	
12	<u>102022602</u>	End, Tie Rod, M12 X 1.25, Lh	1	
13	<u>102289201</u>	Nut - Hex Locking, M12 X 1.25	3	
14	<u>103351001</u>	Shock Absorber, Front, Common	2	
15	<u>103354701</u>	Rod, Tie, Male Thd	1	
16	<u>103653501</u>	Nut, Jam, M12-1.25, Lh	1	
17	<u>2402</u>	Screw, 3/8-16 X 2.25 Hx Hd Cap	4	
18	<u>8754</u>	Locknut, 3/8-16 Hex	13	
19	<u>8861</u>	Bolt, 3/8-16 X 1.75 Hex	2	

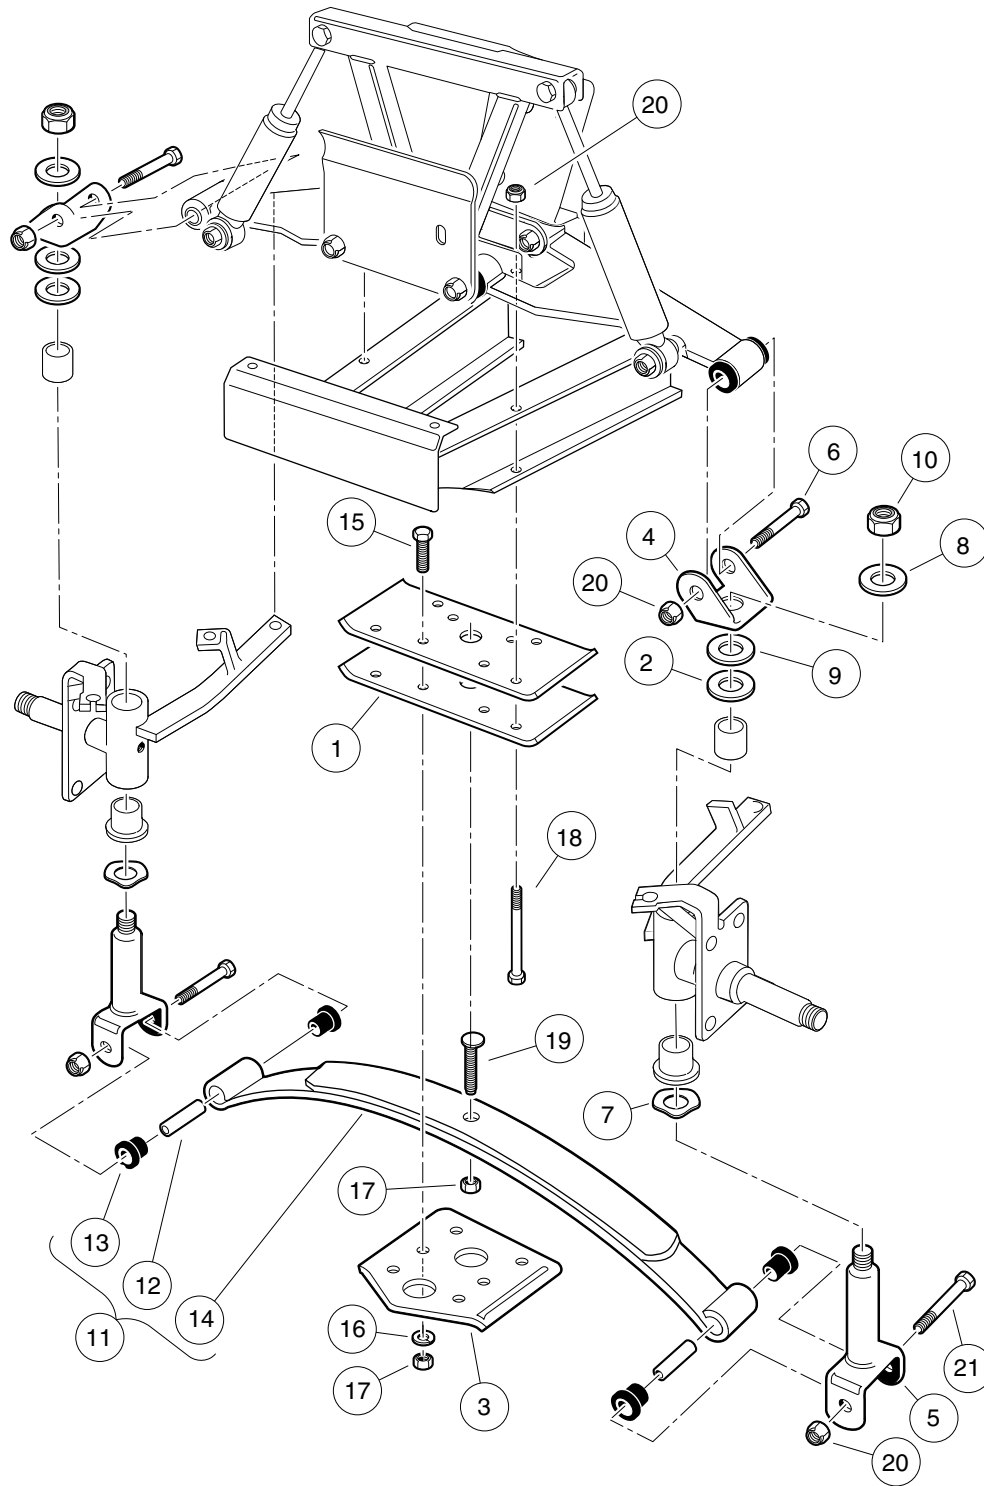

001266-001

FRONT SUSPENSION, LOWER – VILLAGER 6 WITH MAINTENANCE-FREE BALL

ITEM	PART NO.	DESCRIPTION	QTY	6 G E
		1 2 3 4		
1	<u>1010124</u>	Plate, Spring Mount	2	
2	<u>1010150</u>	Bearing, Thrust	2	
3	<u>1014276</u>	Plate, Front Spring Retainer	1	
4	<u>1016384</u>	Clevis, Delta Upper	2	
5	<u>1016386</u>	King Pin Assembly	2	
6	<u>1016387</u>	Screw, 3/8-16 X 2.75 Hx Hd Cap	2	
7	<u>1016389</u>	Washer, 1.125 Od Wave	2	
8	<u>102564002</u>	Washer-1/2 Conical, Yellow	2	
9	<u>102684501</u>	Washer, M12 Hard Regular	2	
10	<u>102766301</u>	Nut, 1/2-20, Center Lock	2	
11	<u>103628801</u>	Spring Asm, Front, 2 Leaf (includes items 12 through 14)	1	
12	<u>1012303</u>	Bushing, Steel	2	
13	<u>1015583</u>	Bushing, Urethane	4	
14	<u>103502701</u>	Spring, Front, 2 Leaf	1	
15	<u>2402</u>	Screw, 3/8-16 X 2.25 Hx Hd Cap	4	
16	<u>357</u>	Lockwasher, 3/8 Split	4	
17	<u>706</u>	Nut, Hex 3/8-16	5	
18	<u>7270</u>	Bolt, 3/8-16 X 4.50 Hex Head	4	
19	<u>8745</u>	Screw, Eccentric Adjustment	1	
20	<u>8754</u>	Locknut, 3/8-16 Hex	8	
21	<u>8755</u>	Screw, 3/8-16 X 3.375 Hex Cap	2	

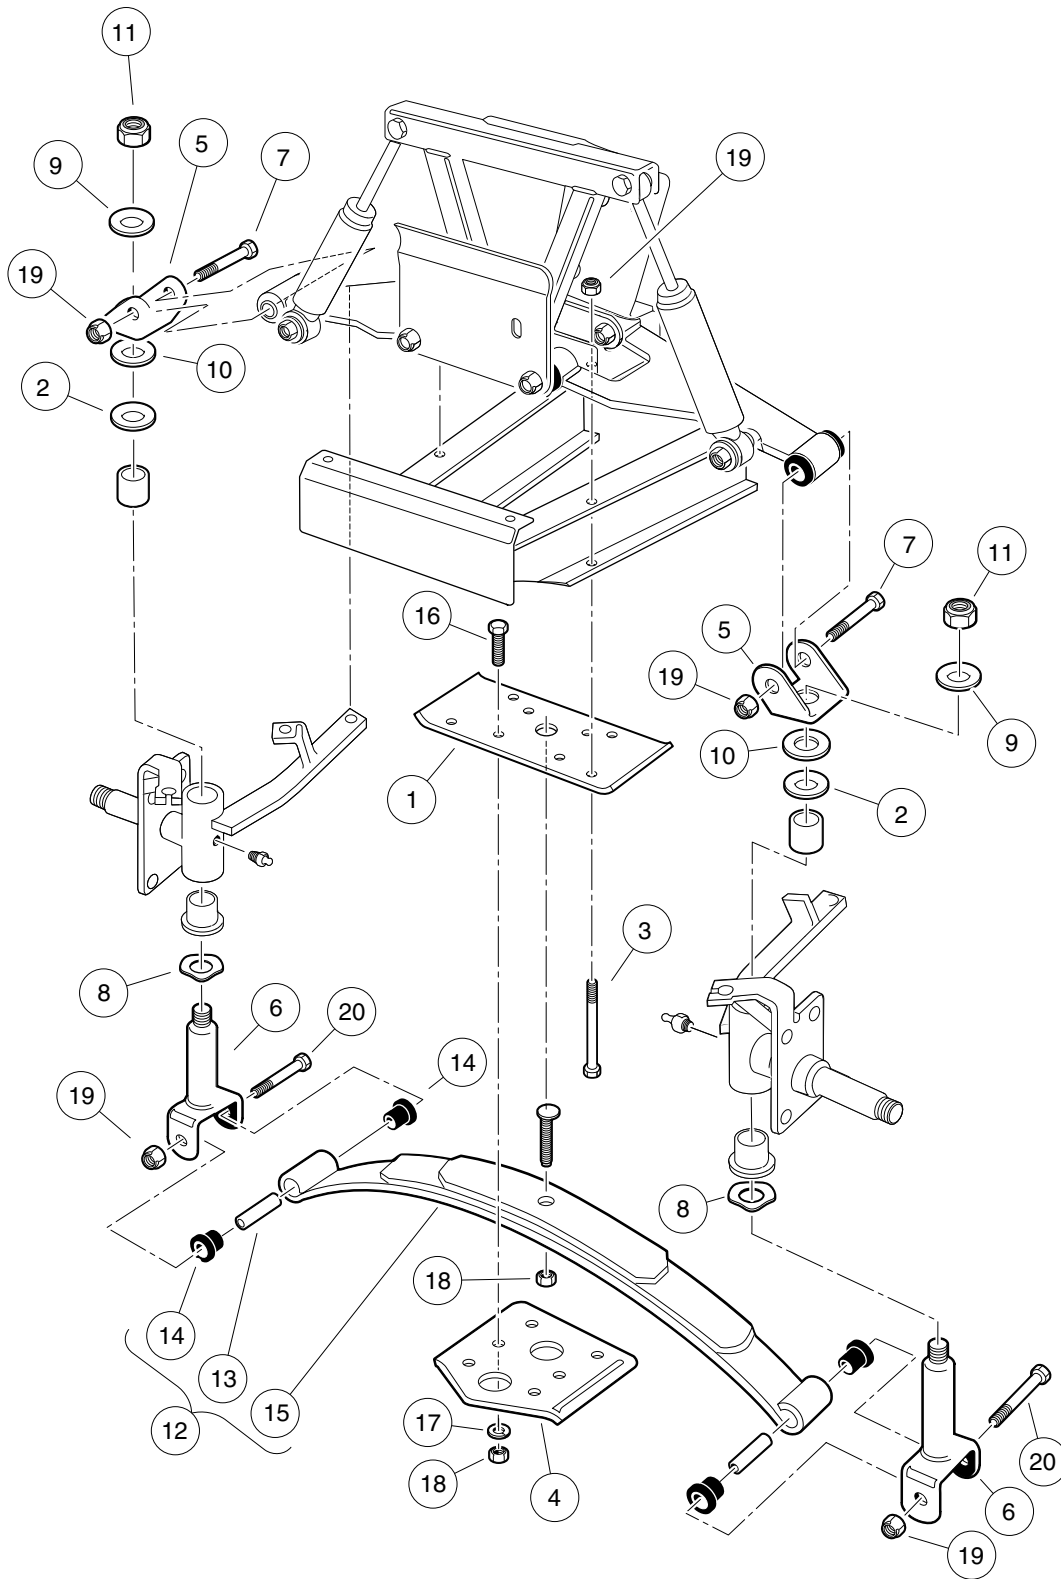


000313-005

FRONT SUSPENSION, LOWER – VILLAGER 8 WITH MAINTENANCE-FREE BALL JOINTS

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1010124</u>	Plate, Spring Mount	1
2	<u>1010150</u>	Bearing, Thrust	2
3	<u>1010200</u>	Bolt, 3/8-16 X 4.25 Hex Head	4
4	<u>1014276</u>	Plate, Front Spring Retainer	1
5	<u>1016384</u>	Clevis, Delta Upper	2
6	<u>1016386</u>	King Pin Assembly	2
7	<u>1016387</u>	Screw, 3/8-16 X 2.75 Hx Hd Cap	2
8	<u>1016389</u>	Washer, 1.125 Od Wave	2
9	<u>102564002</u>	Washer-1/2 Conical, Yellow	2
10	<u>102684501</u>	Washer, M12 Hard Regular	2
11	<u>102766301</u>	Nut, 1/2-20, Center Lock	2
12	<u>103628901</u>	Spring Asm, Front, 3 Leaf (includes items 13 through 15)	1
13	<u>1012303</u>	Bushing, Steel	2
14	<u>1015583</u>	Bushing, Urethane	4
15	<u>103502801</u>	Spring, Front, 3 Leaf	1
16	<u>2402</u>	Screw, 3/8-16 X 2.25 Hx Hd Cap	4
17	<u>357</u>	Lockwasher, 3/8 Split	4
18	<u>706</u>	Nut, Hex 3/8-16	5
19	<u>8754</u>	Locknut, 3/8-16 Hex	8
20	<u>8755</u>	Screw, 3/8-16 X 3.375 Hex Cap	2

6
G
E

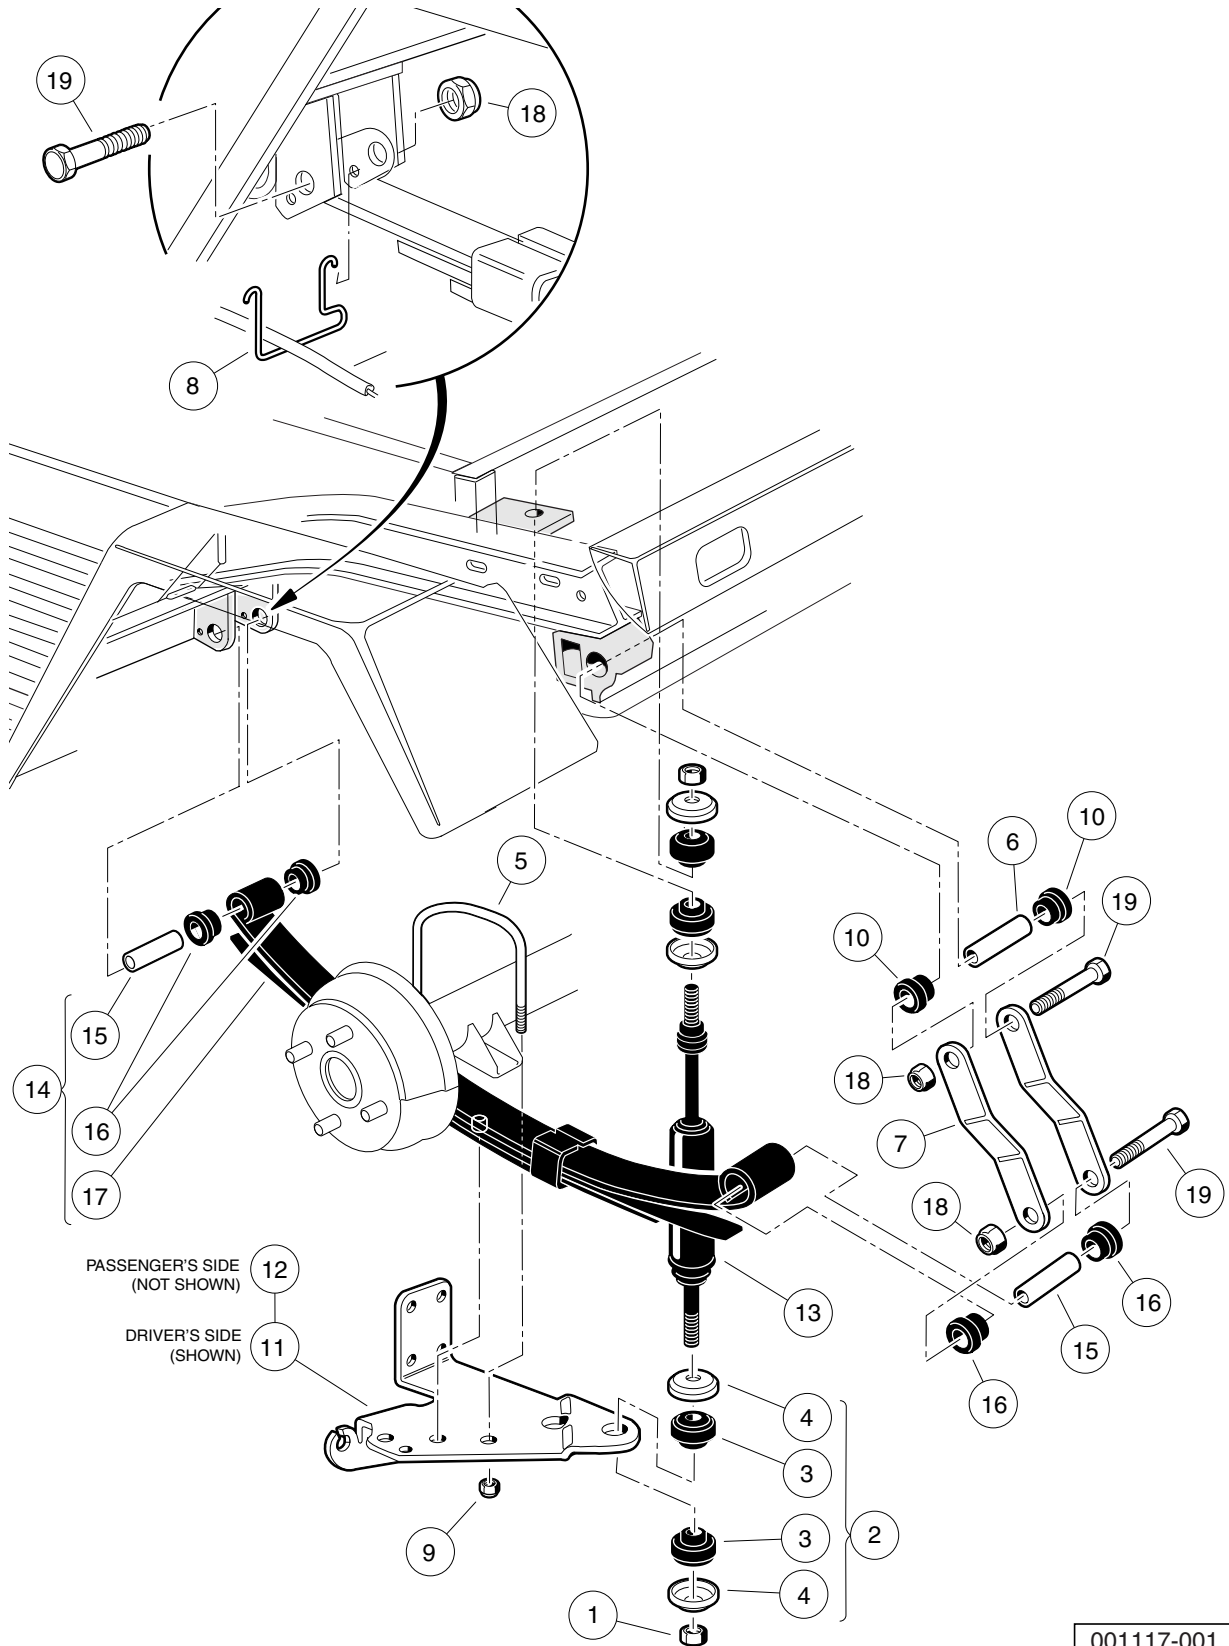
6**G****E**

001117-001

REAR SUSPENSION – TURF/CA 2, 2 PLUS, 6, AND VILLAGER GASOLINE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1010145</u>	Nut, 3/8-24 Hex	4
2	<u>1011415</u>	Kit, Shock Absorber Cushion (includes items 3 and 4)	4
3	N/A	Cushion, Shock Absorber	2
4	N/A	Retainer, Shock Absorber Cushion	2
5	<u>1012180</u>	U-Bolt	2
6	<u>1012303</u>	Bushing, Steel	2
7	<u>1012304</u>	Shackle, Rear Spring	4
8	<u>1013207</u>	Hanger, Brake Cable	2
9	<u>1014555</u>	Locknut, 7/16-14 Nylon Hex	4
10	<u>101558302</u>	Bushing, Urethane, Soft	4
11	<u>101926501</u>	Bracket, Left-Hand	1
12	<u>101929401</u>	Bracket, Right	1
13	<u>103350901</u>	Shock Absorber, Rear, Utility	2
14	<u>103657301</u>	Asm-rear 3leaf Spring, 600 Lb (includes items 15 through 17)	2
15	<u>1012303</u>	Bushing, Steel	2
16	<u>101558302</u>	Bushing, Urethane, Soft	4
17	<u>102871801</u>	Rear Spring, 3leaf, 600 Lb/in	1
18	<u>8754</u>	Locknut, 3/8-16 Hex	6
19	<u>8755</u>	Screw, 3/8-16 X 3.375 Hex Cap	6
Note: Only the driver-side rear suspension is shown. Parts for the passenger-side rear suspension are identical except for the leaf spring/shock mounting plate.			


6
G
E

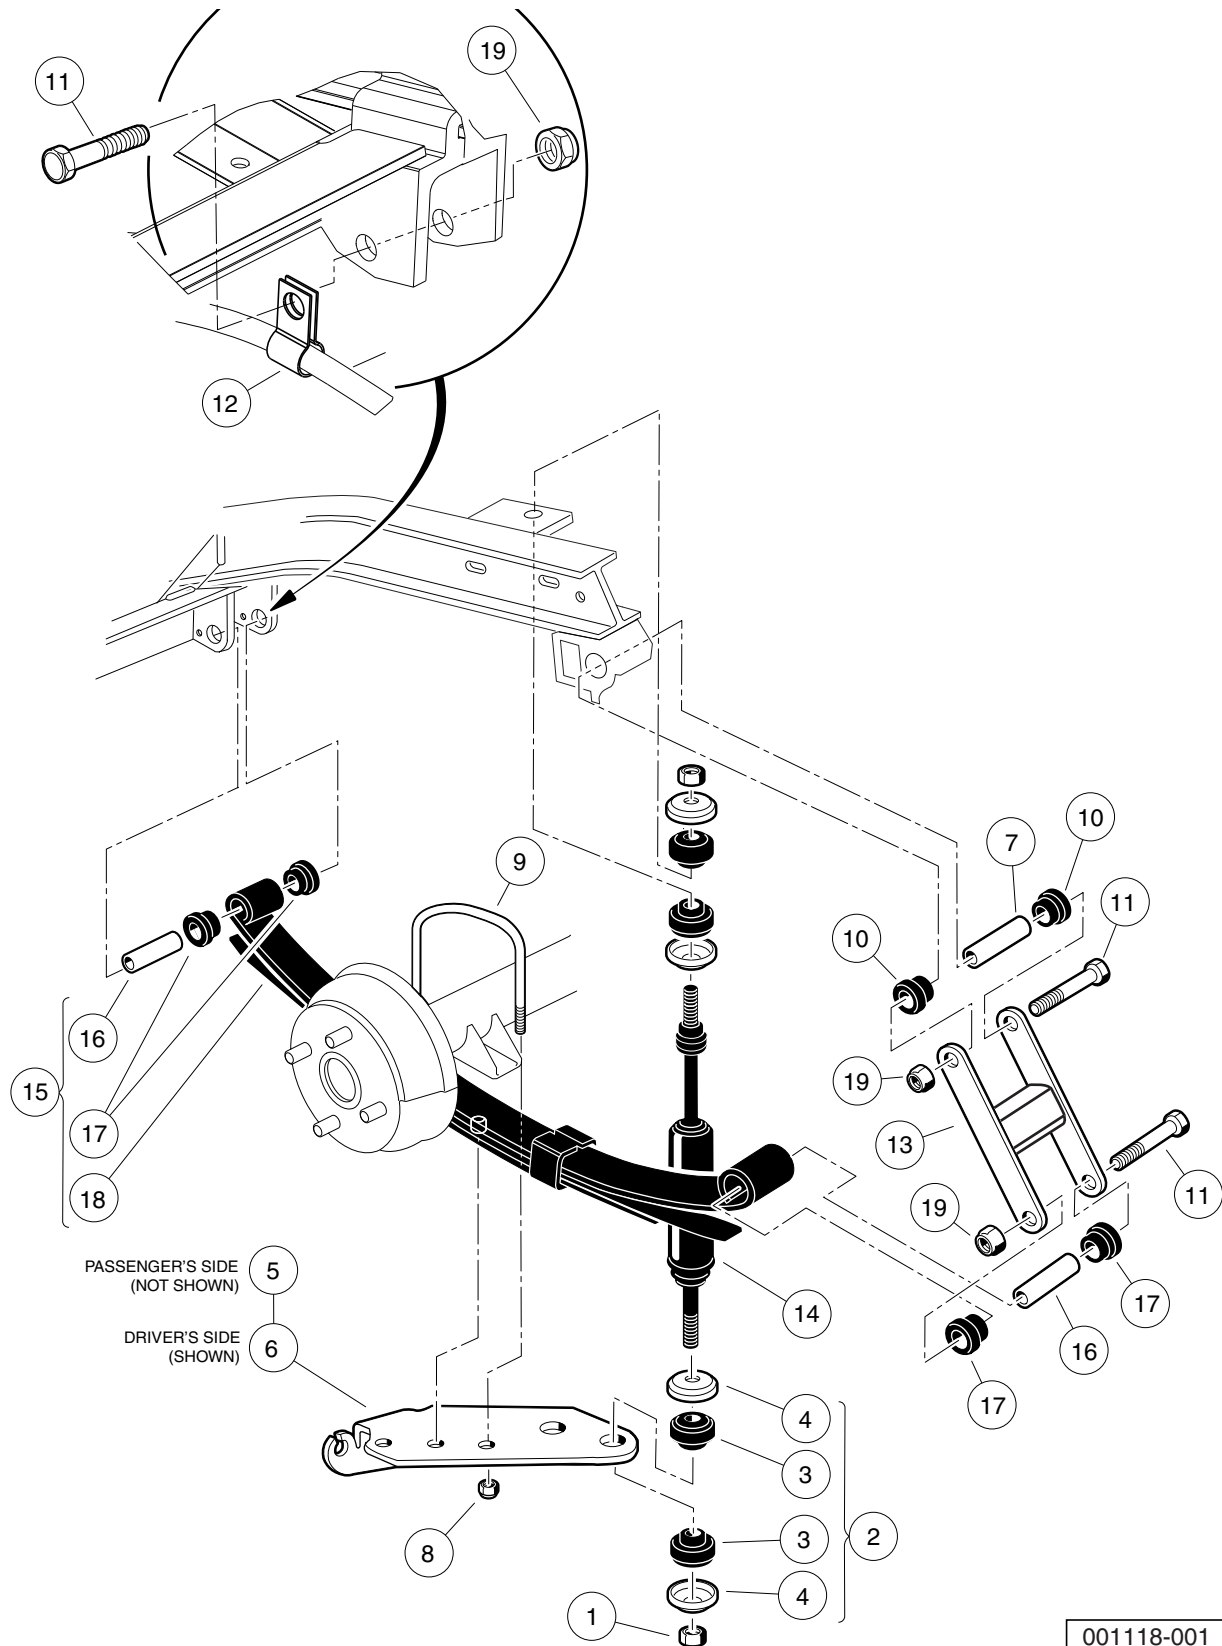6**G****E**

001118-001

REAR SUSPENSION – TURF/CA 2, 6, AND VILLAGER IQ PLUS ELECTRIC

ITEM	PART NO.	DESCRIPTION	QTY	6 G E
		1 2 3 4		
1	<u>1010145</u>	Nut, 3/8-24 Hex	4	
2	<u>1011415</u>	Kit, Shock Absorber Cushion (includes items 3 and 4)	4	
3	N/A	Cushion, Shock Absorber	2	
4	N/A	Retainer, Shock Absorber Cushion	2	
5	<u>1012181</u>	Bracket, Shock Mounting, Right (Passenger)	1	
6	<u>1012182</u>	Bracket, Shock Mounting, Left (Driver)	1	
7	<u>1012303</u>	Bushing, Steel	2	
8	<u>1014555</u>	Locknut, 7/16-14 Nylon Hex	4	
9	<u>1014902</u>	U-Bolt	2	
10	<u>101558302</u>	Bushing, Urethane, Soft	4	
11	<u>102066201</u>	Screw, 3/8-16 X 3.50 Hex Cap	6	
12	<u>102891101</u>	Clamp, Cable, Brake, Sym	2	
13	<u>102917101</u>	Weldment, Shackle	2	
14	<u>103351101</u>	Shock, Absorber, Utility	2	
15	<u>103657301</u>	Asm-rear 3leaf Spring, 600 Lb (includes items 16 through 18)	2	
16	<u>1012303</u>	Bushing, Steel	2	
17	<u>101558302</u>	Bushing, Urethane, Soft	4	
18	<u>102871801</u>	Rear Spring, 3leaf, 600 Lb/in	1	
19	<u>8754</u>	Locknut, 3/8-16 Hex	6	
Note: Only the driver-side rear suspension is shown. Parts for the passenger-side rear suspension are identical except for the leaf spring/shock mounting plate.				

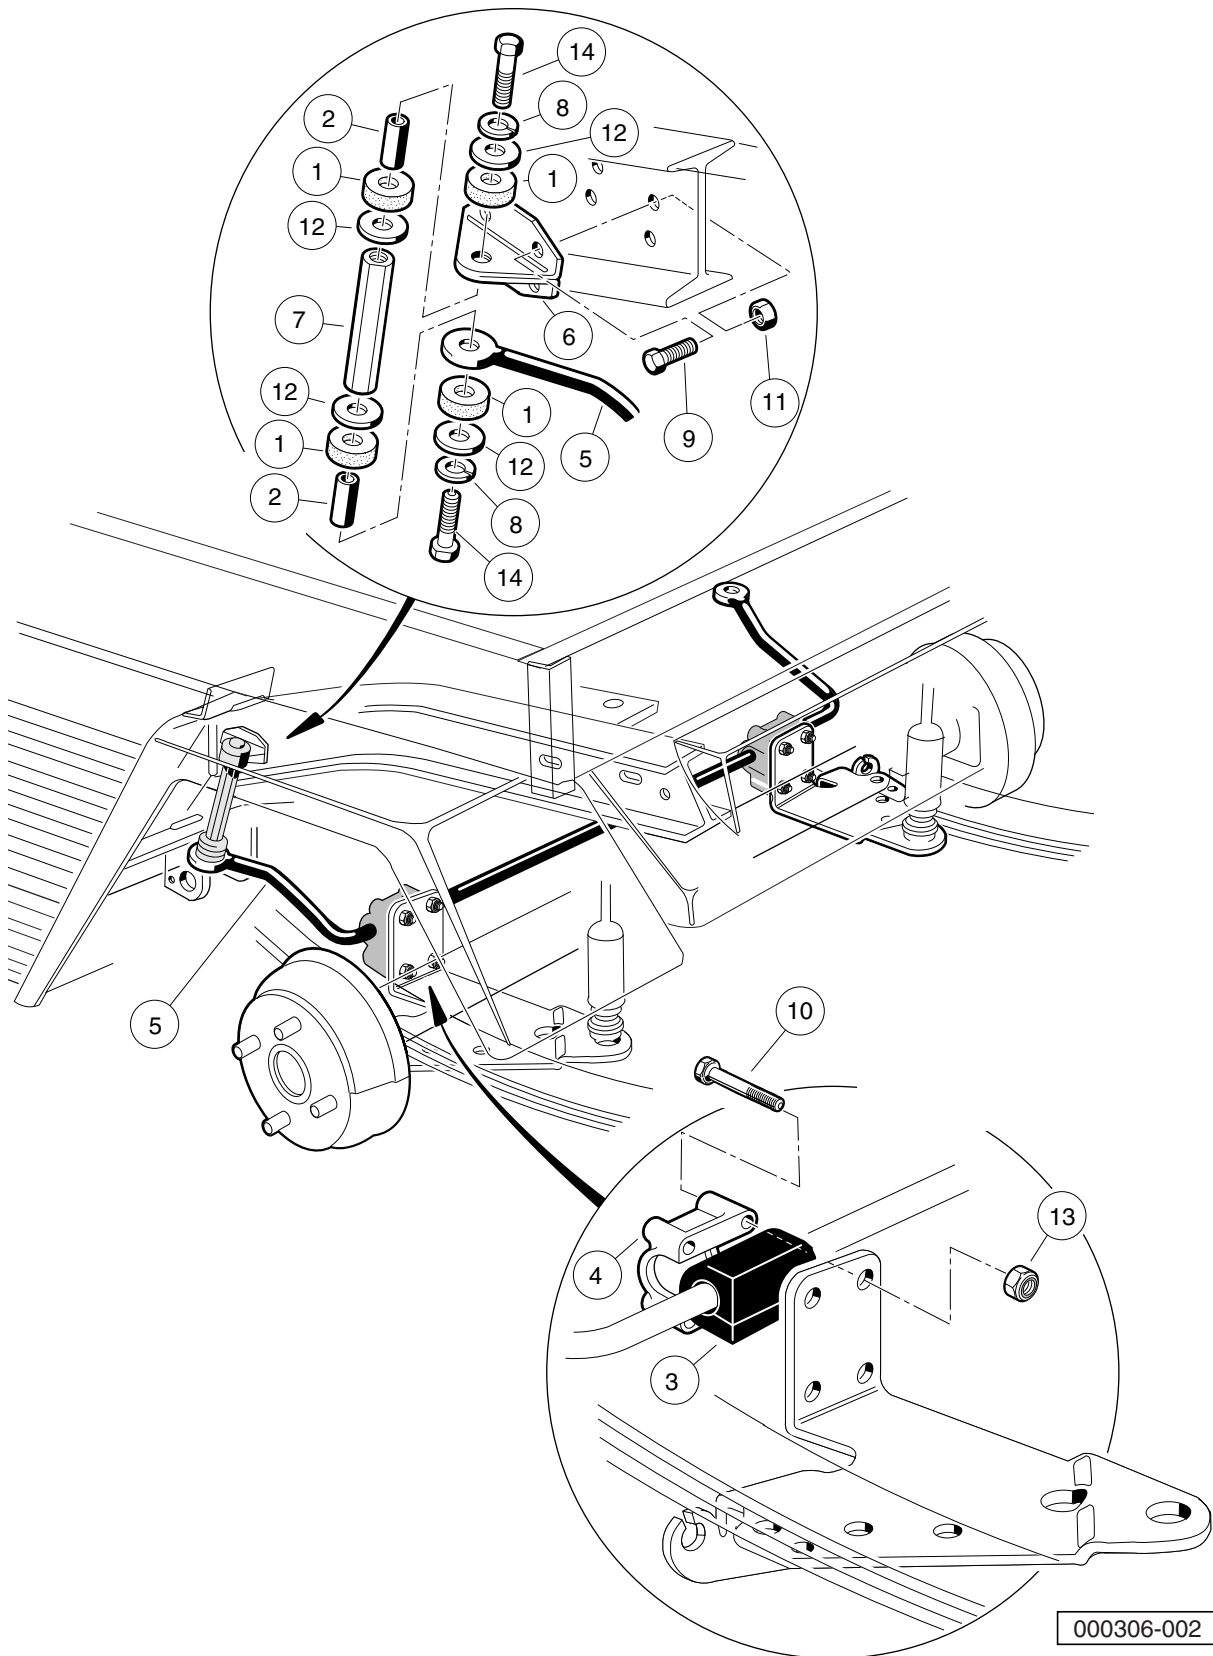6**G****E**

000306-002

STABILIZER BAR – TURF/CA 2, 2 PLUS, 6, AND VILLAGER GAS

ITEM	PART NO.	DESCRIPTION	QTY	6 G E
		1 2 3 4		
1	<u>1015453</u>	Compression Mount	8	
2	<u>1015457</u>	Spacer, 0.720"	4	
3	<u>1015613</u>	Bushing, Stabilizer Bar	2	
4	<u>1015614</u>	Support, Bushing	2	
5	<u>1015760</u>	Stabilizer Bar	1	
6	<u>1016813</u>	Mounting Bracket, Stabilizer Bar	2	
7	<u>1016814</u>	Link, Stabilizer Bar	2	
8	<u>357</u>	Lockwasher, 3/8 Split	4	
9	<u>7173</u>	Screw, 5/16-18 X 0.75, Hex-Head Cap	8	
10	<u>7311</u>	Screw, 1/4-20 X 2.00 Hex-Head Cap	8	
11	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	8	
12	<u>808</u>	Washer, 3/8 Type B Flat	8	
13	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	8	
14	<u>8861</u>	Bolt, 3/8-16 X 1.75 Hex	4	

6

G

E


ELECTRICAL SYSTEM – CARBURETED GASOLINE VEHICLES

7

G

7

G

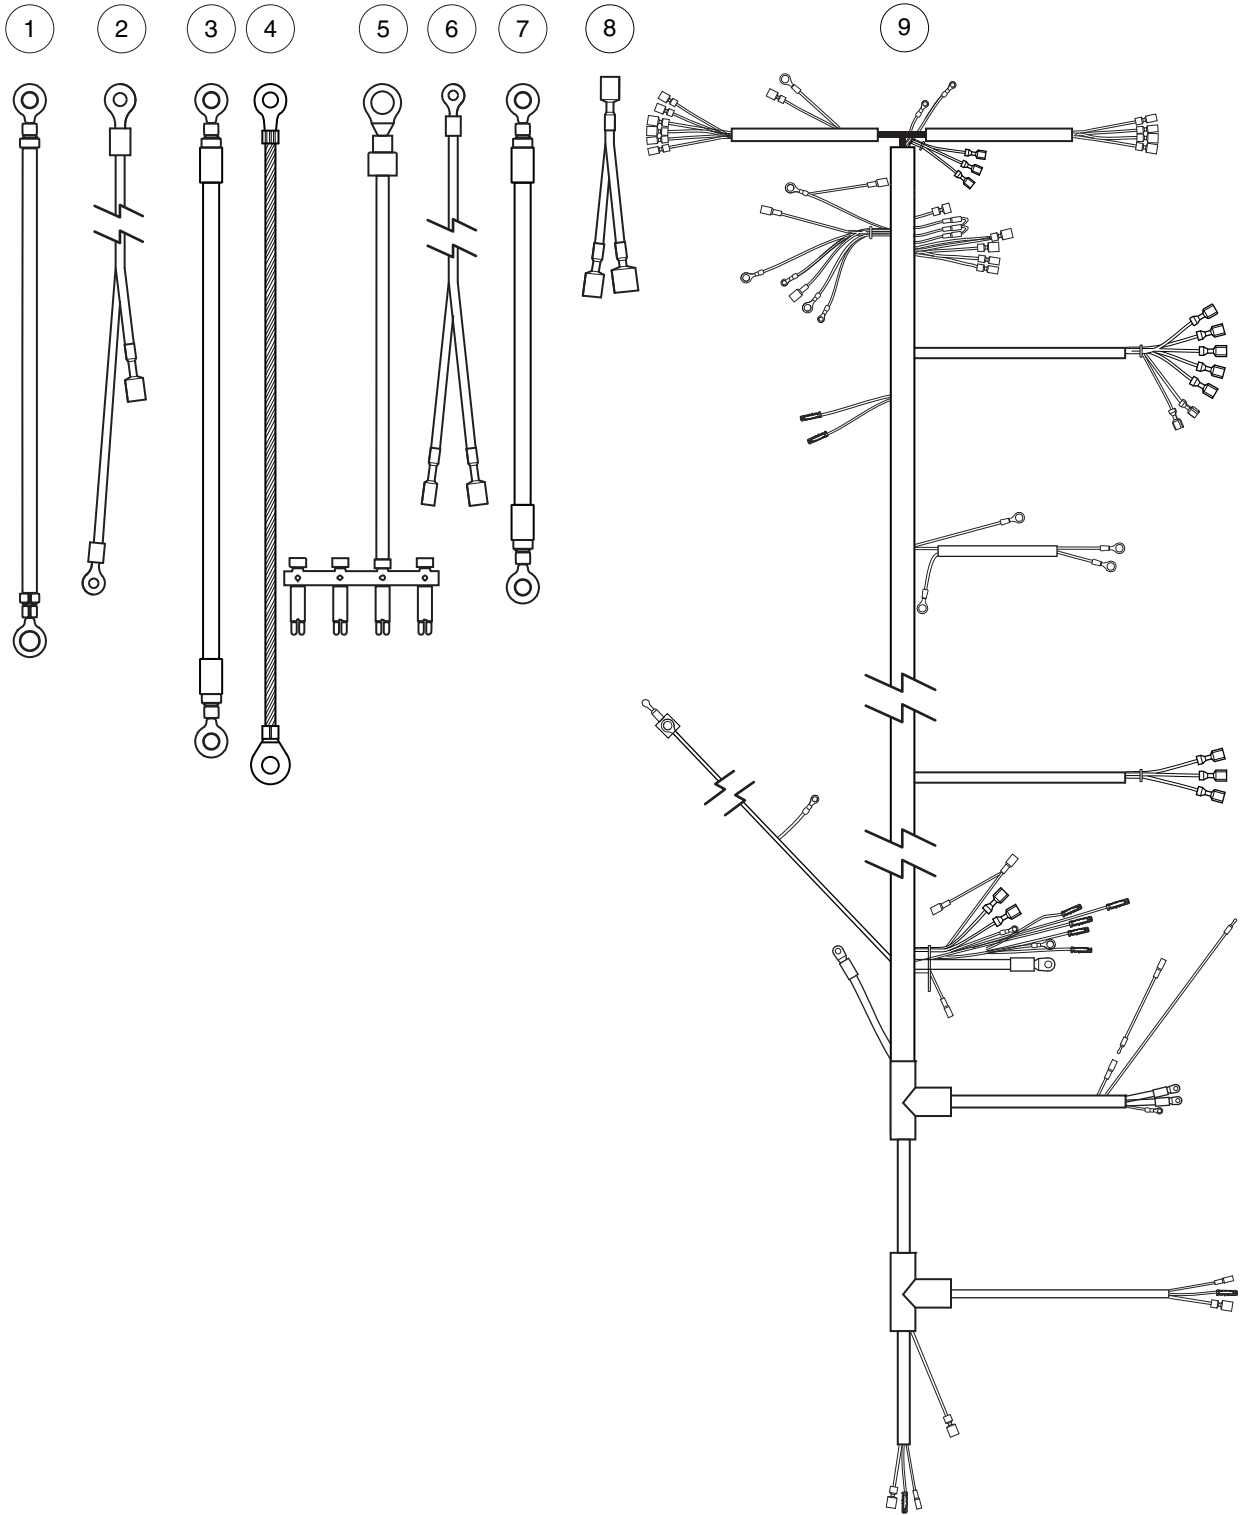

000574-003

WIRING – CARRYALL 6 AND VILLAGER 6 GAS WITH AMD STARTER GEN


ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1012382</u>	Wire Assy, #6 Black	1
2	<u>1012396</u>	Wire Assy #18 Black	1
3	<u>1014119</u>	Wire Assembly #6 Red	1
4	<u>1015332</u>	Wire, Ground, #10, Uninsulated	1
5	<u>1015737</u>	Wire Assy, #10 Red	1
6	<u>1017006</u>	Wire Assembly Orange #18	1
7	<u>101837301</u>	Wire Assy, #6 Green	1
8	<u>103348501</u>	Asm, Wire Meter, F-h Jumper	1
9	<u>103686501</u>	Asm, Harn, Str, Gas, Amd S/g	1

7

G

7


G

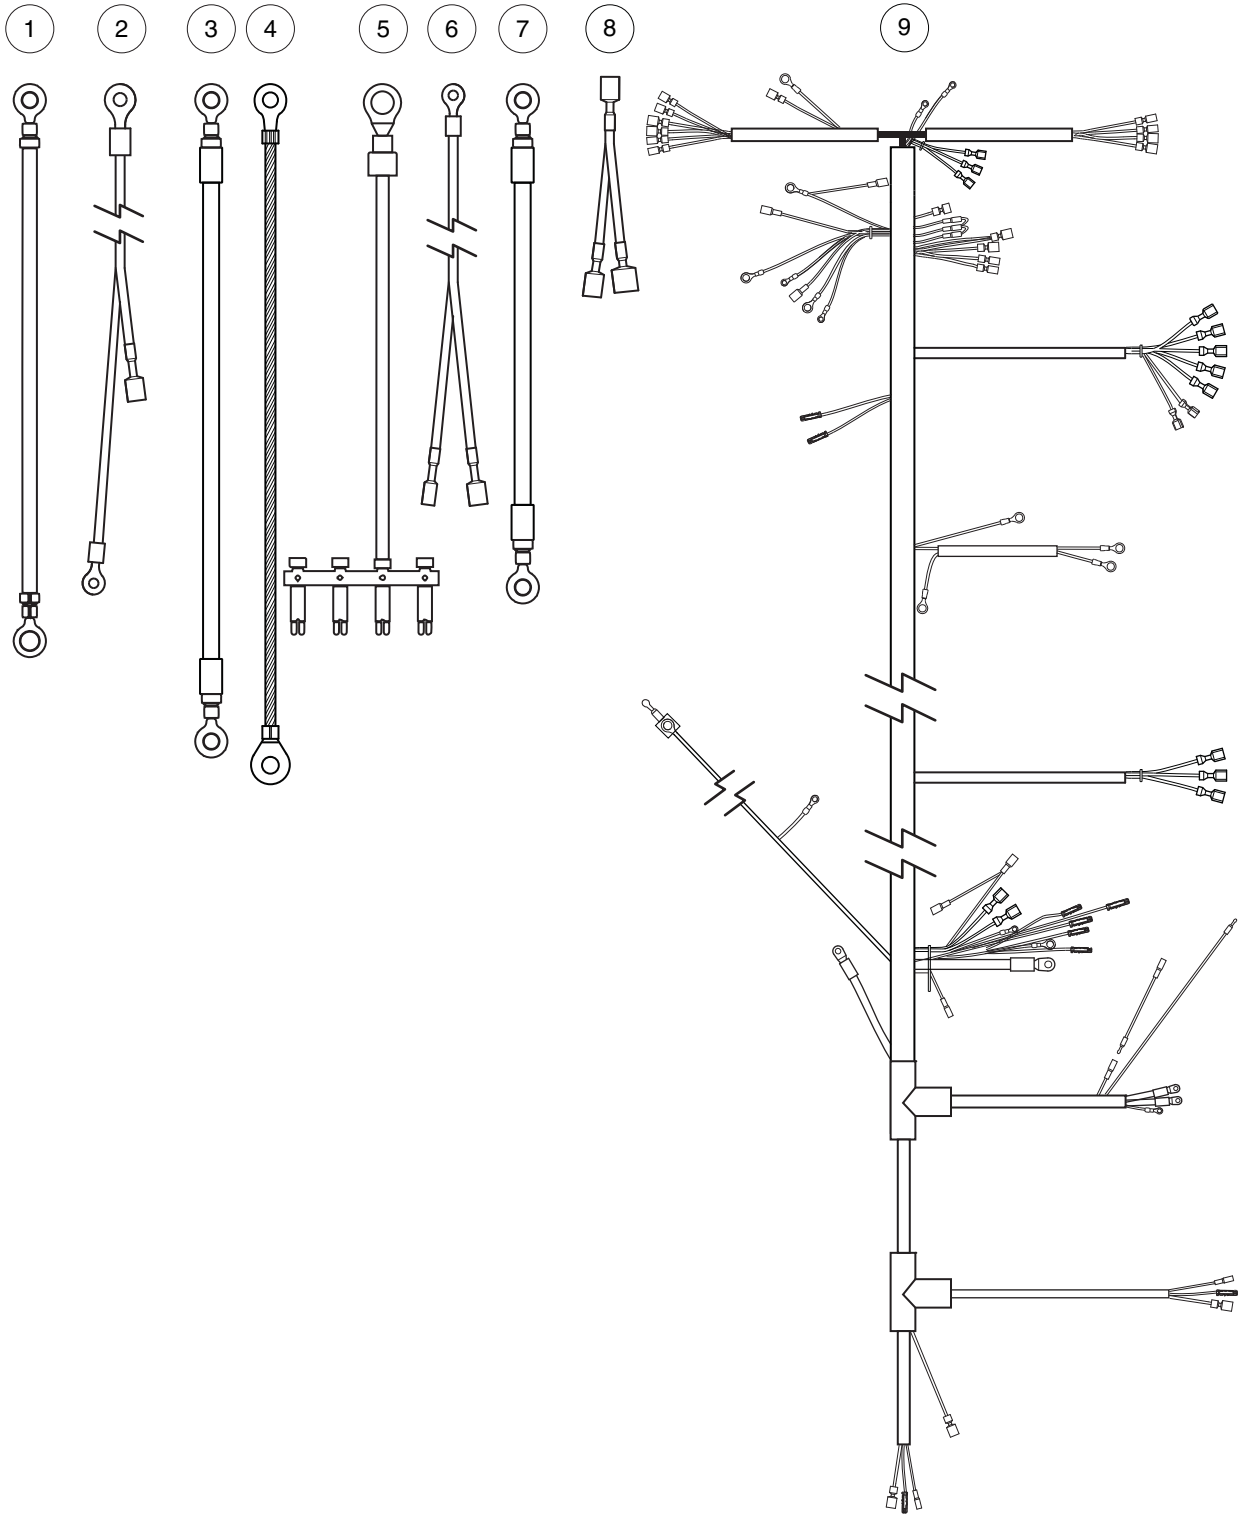

000574-003

WIRING – VILLAGER 8 GAS WITH AMD STARTER GEN

ITEM	PART NO.	DESCRIPTION	QTY	7
		1 2 3 4		G
1	<u>1012382</u>	Wire Assy, #6 Black	1	
2	<u>1012396</u>	Wire Assy #18 Black	1	
3	<u>1014119</u>	Wire Assembly #6 Red	1	
4	<u>1015332</u>	Wire, Ground, #10, Uninsulated	1	
5	<u>1015737</u>	Wire Assy, #10 Red	1	
6	<u>1017006</u>	Wire Assembly Orange #18	1	
7	<u>101837301</u>	Wire Assy, #6 Green	1	
8	<u>103348501</u>	Asm, Wire Meter, F-h Jumper	1	
9	<u>103686601</u>	Asm, Harn, V8, Gas, Amd S/g	1	

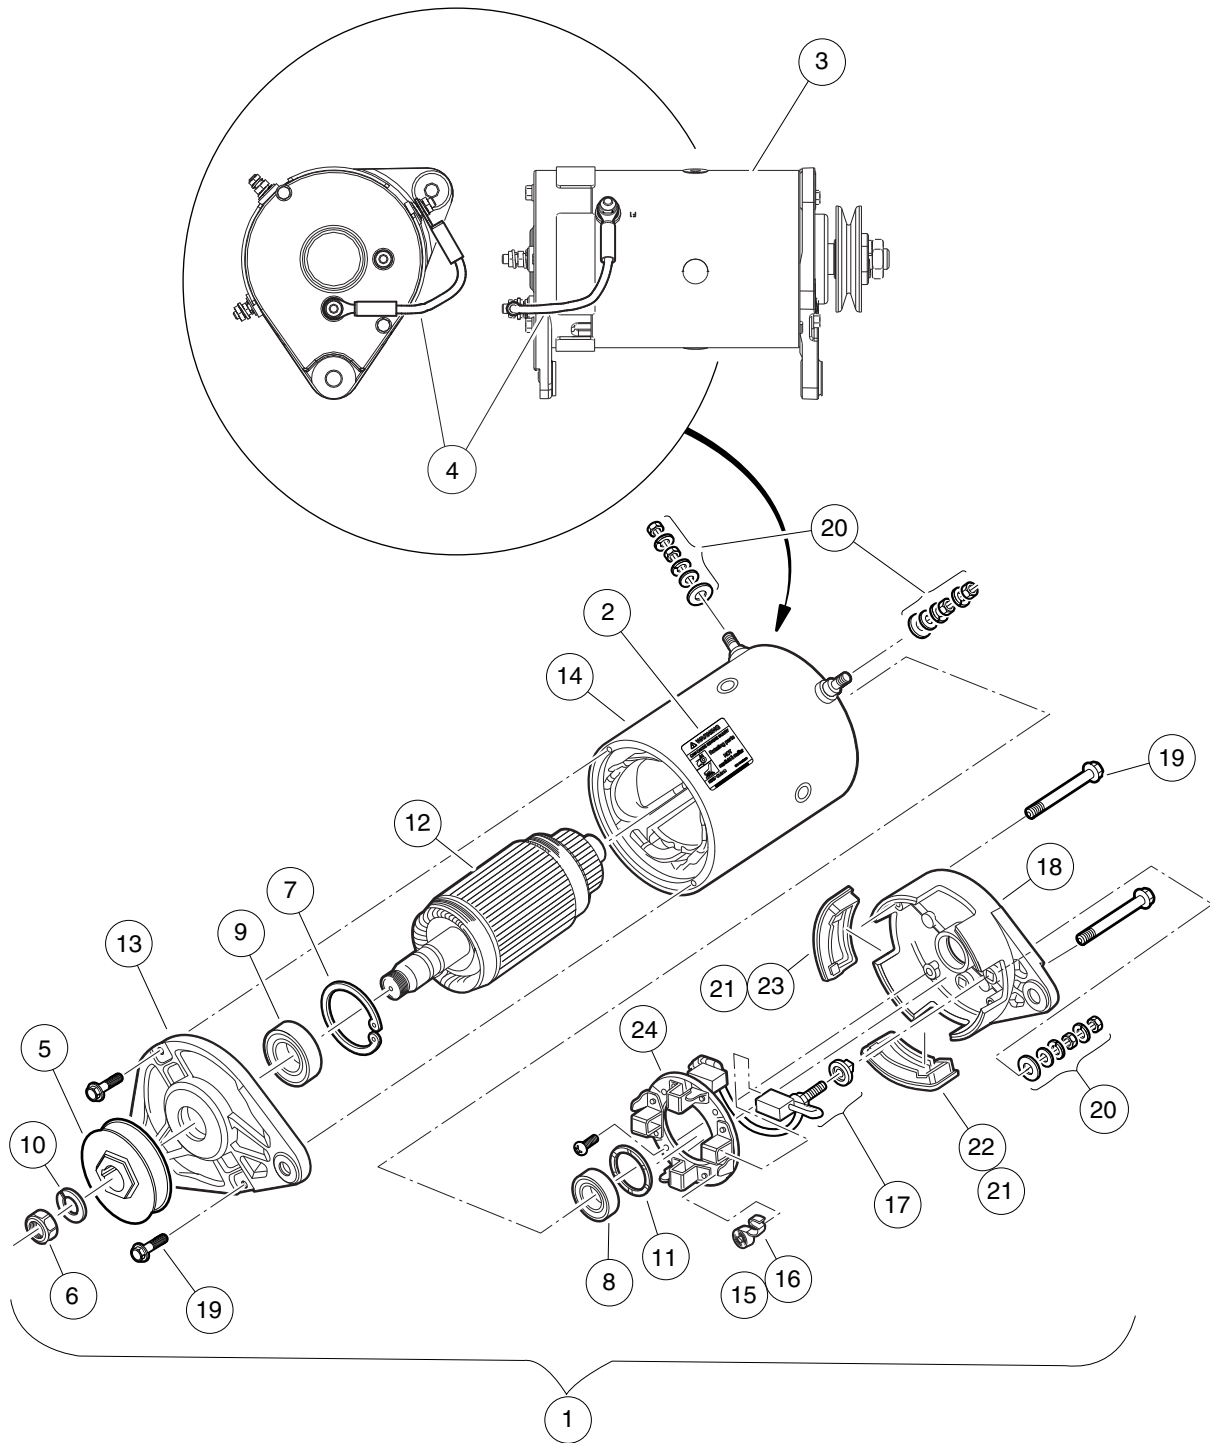


000124-005

STARTER/GENERATOR ASSEMBLY (KEY-START), MODEL 114-04-4001A

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>103678502</u>	Asm, St/gen, Bi-rot, Ks, Svc (includes items 2 and 3)	1
2	<u>101960501</u>	Decal, Rotating Parts/Hot Manifold	1
3	N/A	St/gen, Bi-rot, Util, Ks (includes items 4 through 24)	1
4	<u>101837301</u>	Wire Assy, #6 Green	1
5	<u>102711001</u>	Pulley, V-Belt	1
6	<u>102838701</u>	Nut, Hex, M14x2, S/G	1
7	<u>102838801</u>	Retainer, Front, S/G	1
8	<u>102838901</u>	Bearing, Ball, Front, S-g	1
9	<u>102839001</u>	Bearing, Ball, Front, S-g	1
10	<u>102839301</u>	Washer, Lock M14x2, S-g	1
11	<u>102841101</u>	Washer, Wave, S-g	1
12	N/A	Asm, Armature, Starter/Generator	1
13	<u>102844601</u>	Head, Drive End, S-g	1
14	<u>102844701</u>	Asm, Frame and Field, Starter/Generator	1
15	<u>103347101</u>	Kit, Spring Brush, Starter/Generator (includes item 16)	1
16	N/A	Spring, Brush, S-g	4
17	<u>103347301</u>	Set, Brush Term, S-g	1
18	<u>103347601</u>	Head, Comm End, S-g	1
19	<u>103347701</u>	Set, Fastener, Ceh Deh, S-g	1
20	<u>103347801</u>	Set, Term Hardware, S/G	1
21	<u>103347901</u>	Kit, Cover, Brush Insp, Starter/Generator (includes items 22 and 23)	1
22	N/A	Plug, Rubber Drain, Start/Generator	3
23	N/A	Cover, Inspection, S-g	1
24	<u>103953301</u>	Kit, Brush And Brush Holder	1


7
G

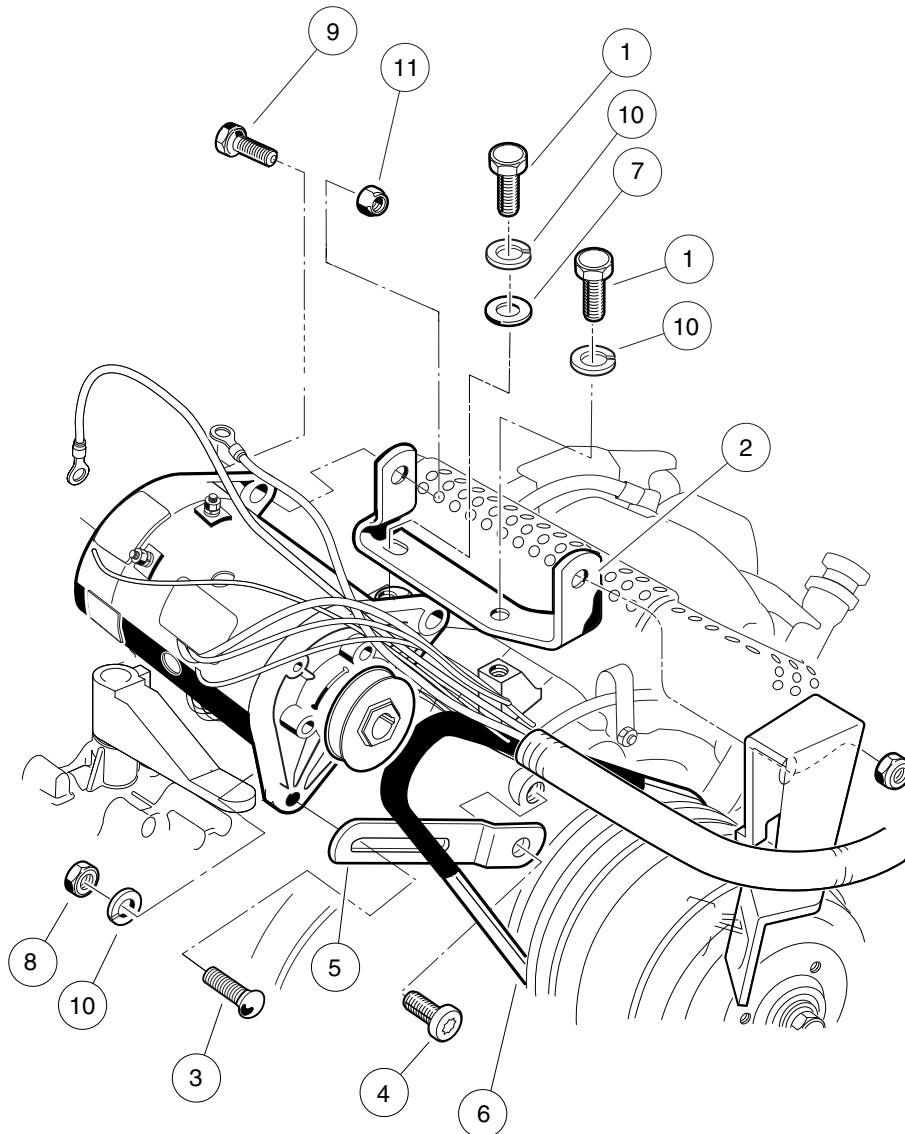

000238-005

STARTER/GENERATOR MOUNTING – 114-0X-400XX MODELS


ITEM	PART NO.	DESCRIPTION	QTY	7
		1 2 3 4		G
1	<u>1012830</u>	Screw, M8-125 X 22 Hex-Head	2	
2	<u>101524002</u>	Bracket, Starter/Generator Mounting	1	
3	<u>1015932</u>	Bolt, Carriage, 5/16-18	1	
4	<u>1016074</u>	Screw, M8-1.25 X 18mm Torx	1	
5	<u>1016883</u>	Bracket, Starter/Generator Adjustment	1	
6	<u>101916701</u>	V-Belt	1	
7	<u>1241</u>	Washer, 5/16 Type A Flat	1	
8	<u>1242</u>	Nut, 5/16-18 Hex	1	
9	<u>1624</u>	Screw, 3/8-16 X 1.50, Hex-Head Cap	2	
10	<u>7174</u>	Lockwasher, 5/16 Split	3	
11	<u>8754</u>	Locknut, 3/8-16 Hex	2	

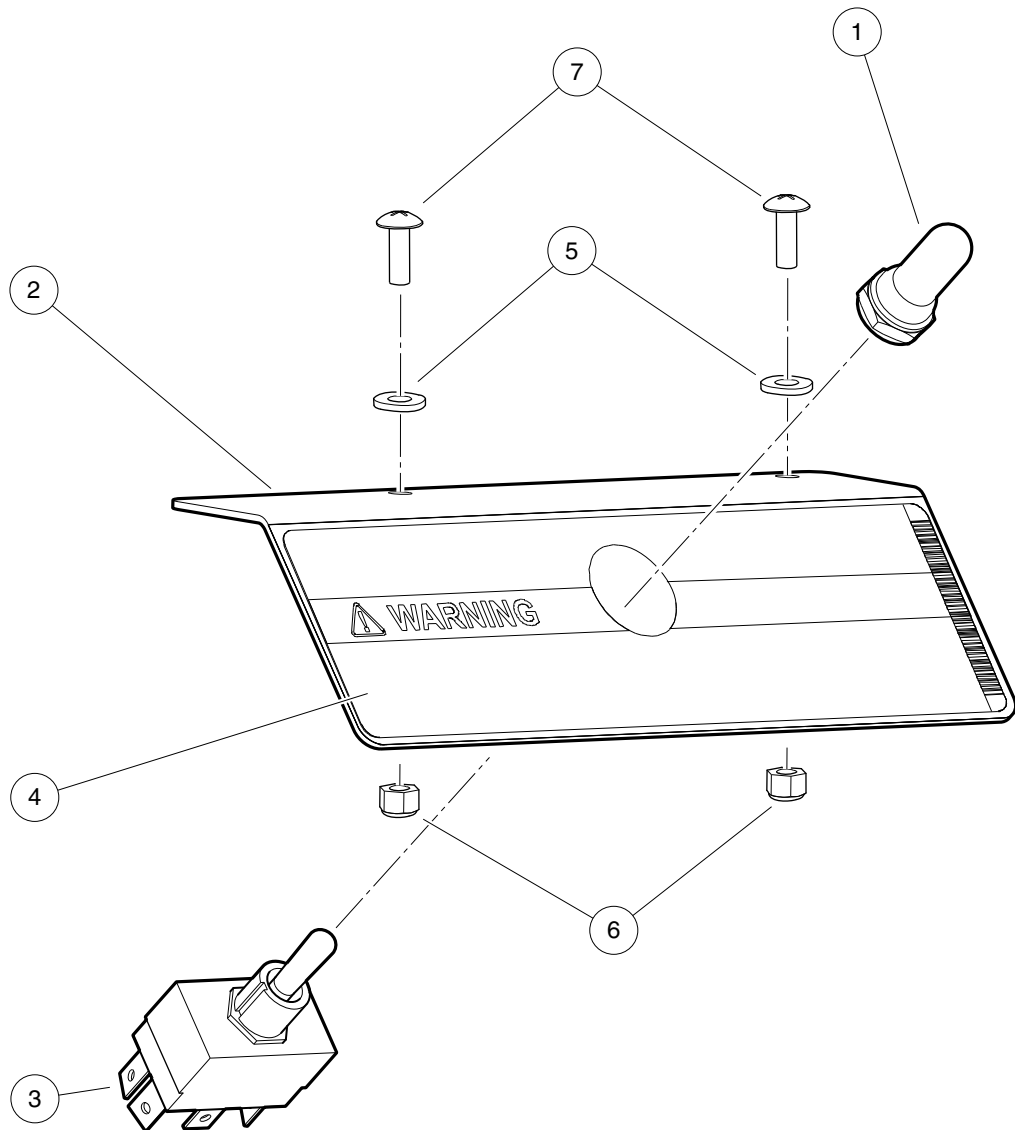

000755-003

OPERATION AND MAINTENANCE SWITCH

ITEM	PART NO.	DESCRIPTION	QTY	7	G
		1 2 3 4			
1	<u>101908401</u>	Boot, Switch	1		
2	<u>101922501</u>	Bracket, Tow/Run Switch Mounting	1		
3	<u>103198401</u>	Switch, Toggle, SPDT	1		
4	<u>103205501</u>	Decal, Run/Service Switch	1		
5	<u>332</u>	Washer, 1/4 Type A Narrow Flat	2		
6	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	2		
7	<u>8248</u>	Screw, 1/4-20 X 0.75, Truss-Head Machine	2		

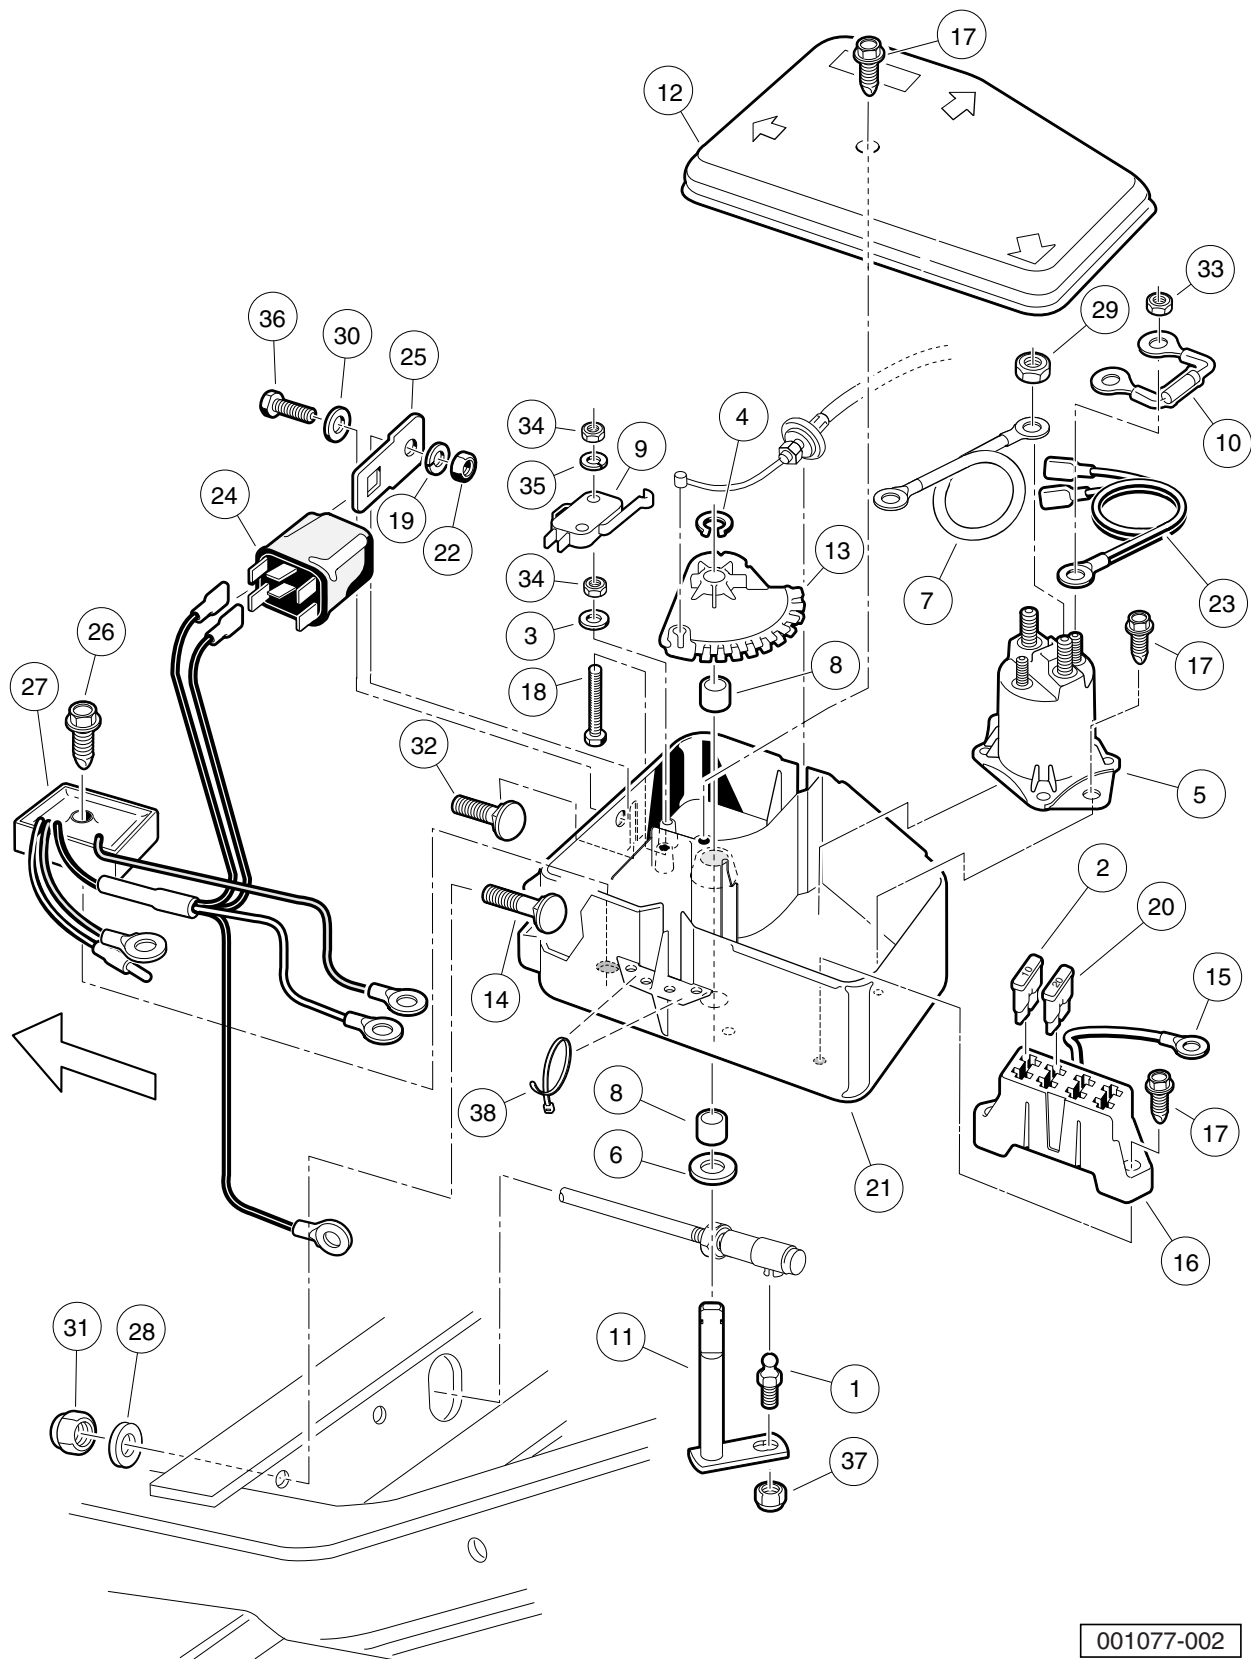


001077-002

ELECTRICAL COMPONENT BOX – CARRYALL 6 AND VILLAGER 6/8

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1010954</u>	Stud, Ball, 1/4-28 X 0.560	1
2	<u>1012295</u>	Fuse, 10-Amp	1
3	<u>1012431</u>	Washer, #4 Flat	2
4	<u>1013589</u>	Ring, Retaining, 0.338" Internal	1
5	<u>1013609</u>	Solenoid, 12-Volt	1
6	<u>1014065</u>	Washer, Flat, 0.38" ID, Delrin	1
7	<u>1014119</u>	Wire Assembly #6 Red	1
8	<u>1014145</u>	Bushing, Secondary Weight, Split	2
9	<u>1014807</u>	Switch, Limit	1
10	<u>1014948</u>	Diode	1
11	<u>1015345</u>	Bell Crank and Shaft Assembly	1
12	<u>1015372</u>	Cover, Electric Box	1
13	<u>1015373</u>	Cam, Electric Box	1
14	<u>1015405</u>	Bolt, Carriage, 5/16-18 X 2.0	1
15	<u>1015737</u>	Wire Assy, #10 Red	1
16	<u>1015741</u>	Fuse Block	1
17	<u>1015752</u>	Screw, #12-16 X 0.625, Hi-Lo	5
18	<u>1015878</u>	Screw, #4-40 Hex Head Machine	2
19	<u>1016</u>	Lockwasher, #10 Split	1
20	<u>1016423</u>	Fuse, 20-Amp	1
21	<u>1016997</u>	Electrical Component Box	1
22	<u>1017</u>	Nut, #10-24 Stainless-Steel Hex Machine	1
23	<u>1017006</u>	Wire Assembly Orange #18	1
24	<u>1017239</u>	Relay W/mounting Bracket	1
25	<u>1017243</u>	Mounting Bracket, Relay	1
26	<u>101856102</u>	Screw, 1/4-15 X 1.50, Hi-lo, Hex	1
27	<u>102803401</u>	Asm, Voltage Regulator Key Sta	1
28	<u>1241</u>	Washer, 5/16 Type A Flat	2
29	<u>1242</u>	Nut, 5/16-18 Hex	2
30	<u>183</u>	Washer, #10, Type A, Flat	1
31	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	2
32	<u>7818</u>	Bolt, Carriage, 5/16-18 X 1.5	1
33	<u>7893</u>	Nut, #10-32 Hex	2
34	<u>8057</u>	Nut, #4-40 Hex Machine	4
35	<u>8058</u>	Lockwasher, #4 Split	2
36	<u>8450</u>	Screw, #10-24 X 0.50, Hex-Head	1
37	<u>8717</u>	Locknut, Nylon Insert, 1/4-28	1
38	<u>8990</u>	Tie Wrap, 8" Nylon	3

7
G

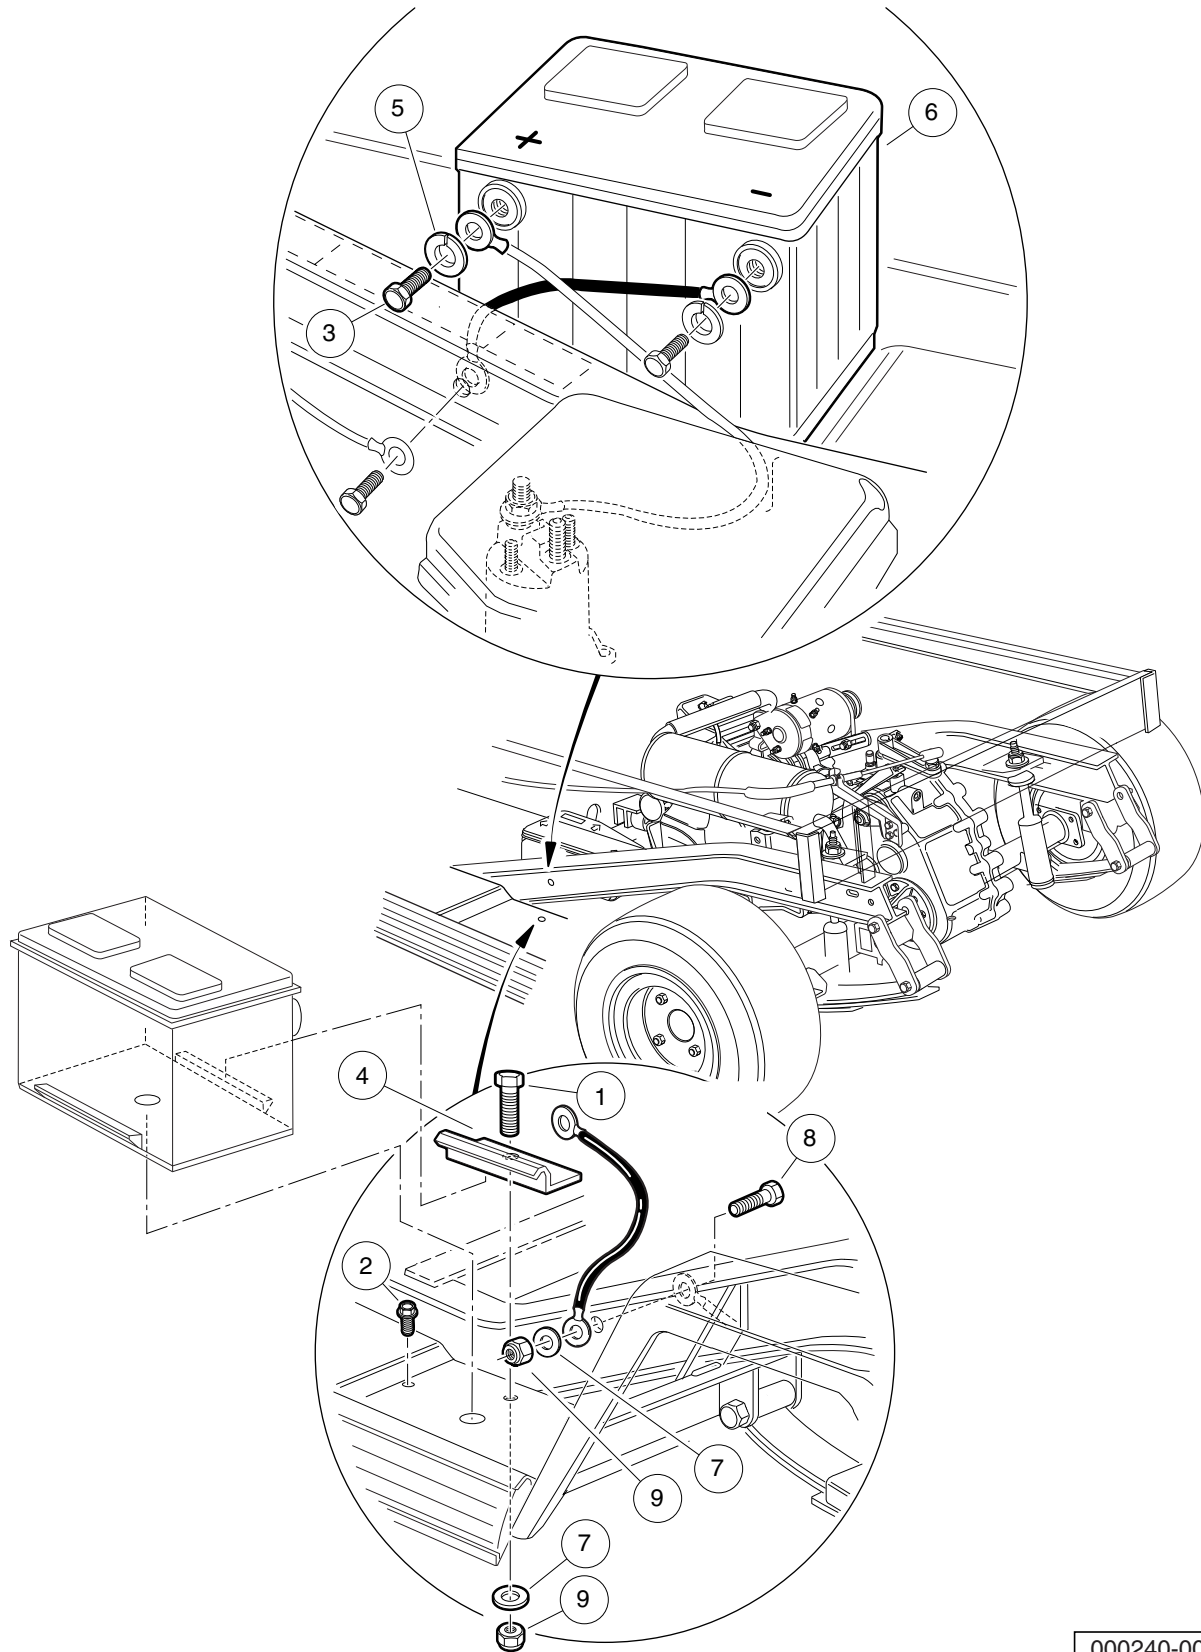

000240-001

BATTERY – GASOLINE UTILITY VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY	7
		1 2 3 4		G
1	<u>1010934</u>	Screw, 5/16-18 X 1.00 Hex Cap	1	
2	<u>1014288</u>	Screw, 5/16-18 X 0.75, Thread-Forming	1	
3	<u>1014375</u>	Screw, 3/8-16 X 0.50, Stainless Steel, Hex-Head	2	
4	<u>101898001</u>	Clamp, Battery	1	
5	<u>102355301</u>	Lockwasher, 3/8 Split Ss	2	
6	<u>103496801</u>	Battery, Start, 12v	1	
7	<u>1241</u>	Washer, 5/16 Type A Flat	2	
8	<u>7173</u>	Screw, 5/16-18 X 0.75, Hex-Head Cap	1	
9	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	2	


7

G

ENGINE (S27) W/O ACR, 50-STATE

8



G

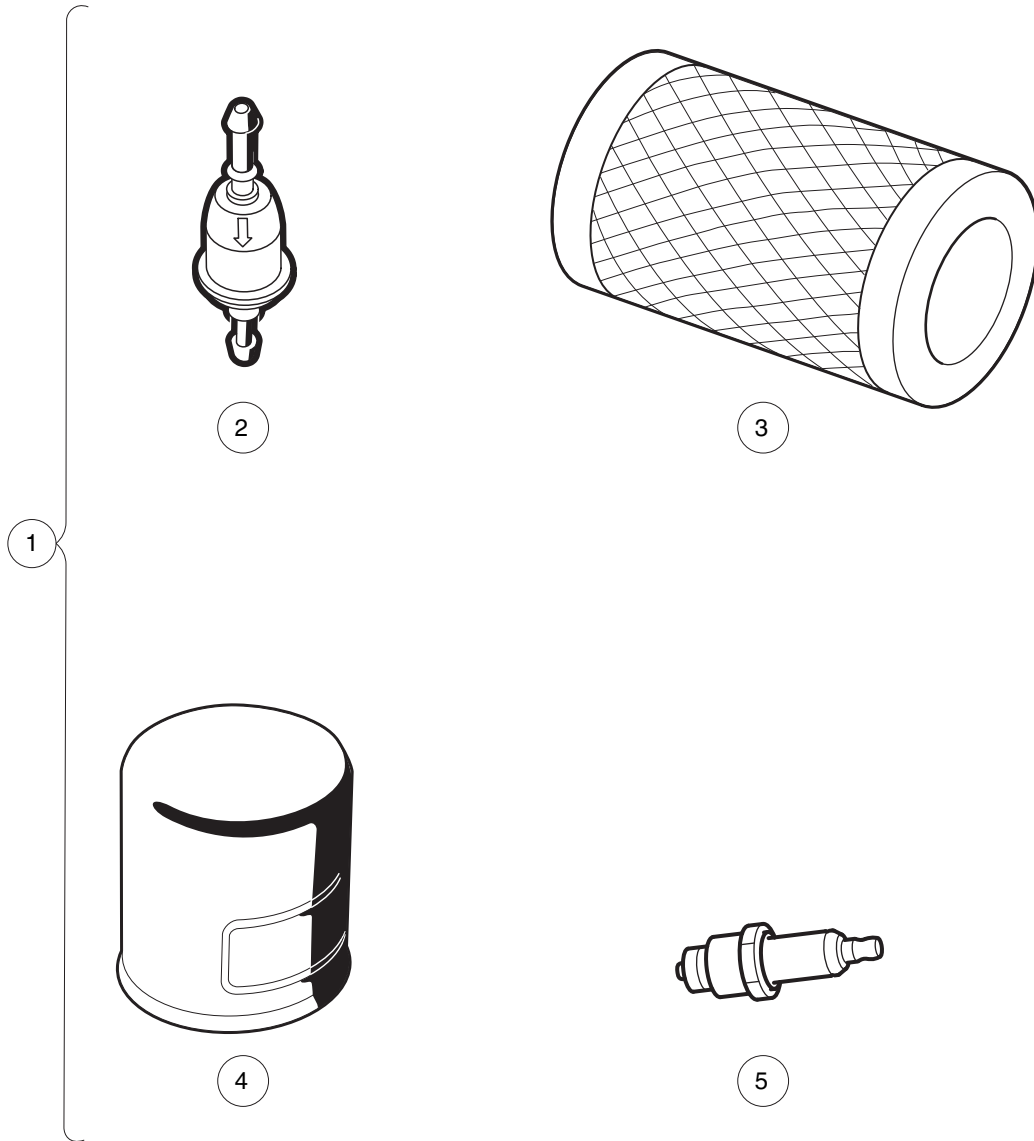

001064-001

TUNE-UP KIT – KAWASAKI FE350

ITEM	PART NO.	DESCRIPTION	QTY	8
		1 2 3 4		G
1	<u>AM1220301</u>	Kit, Tune-Up (For FE290 and FE350 engines) (includes items 2 through 5)	1	
2	<u>102003201</u>	Filter, Fuel, 30 Micron	1	
3	<u>102558201</u>	Air Filter, 4 Inch	1	
4	<u>103887901</u>	Filter, Oil, Kawasaki	1	
5	<u>AM1232301</u>	Spark Plug, BPR2ES	1	

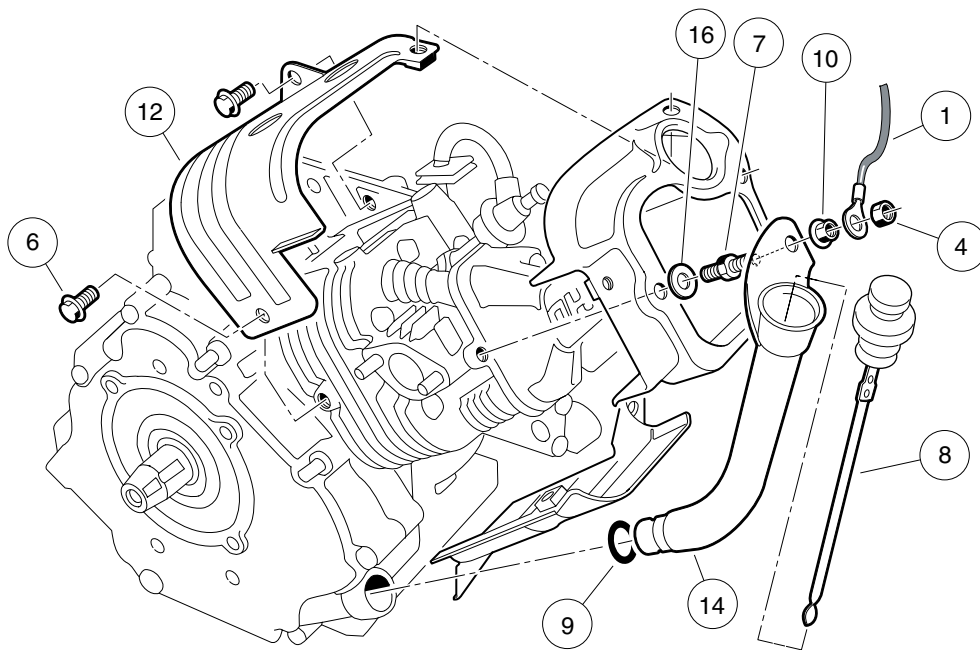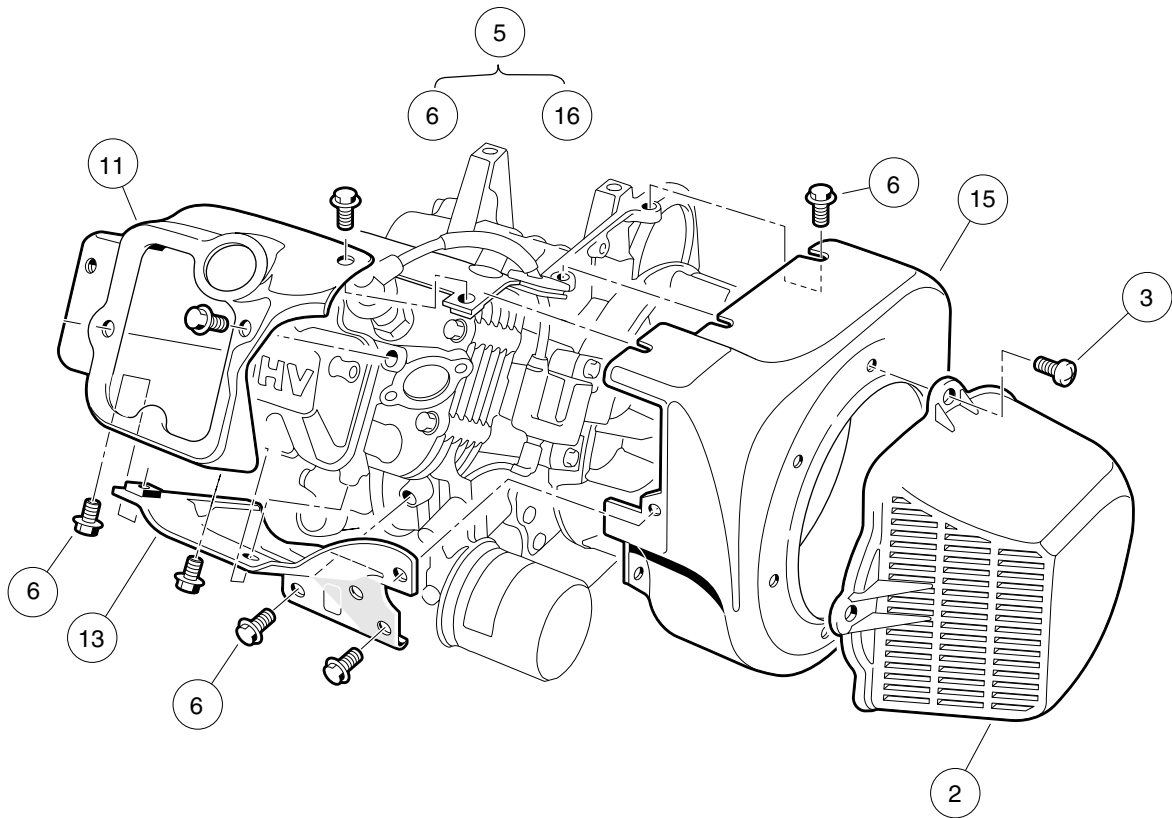


000201-002

FE350 ENGINE (S27) W/O ACR, SHROUDS, AND BRACKETS; 50-STATE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1015332</u>	Wire, Ground, #10, Uninsulated	1
2	<u>1015649</u>	Shroud, Fan	1
3	<u>1015969</u>	Screw, M6-1.00 X 10mm, Pan Hd	4
4	<u>101887601</u>	Locknut, M6-1.00 Nylon Insert	1
5	<u>103386202</u>	Engine, FE350 S27 (includes items 6 through 16)	1
6	1016456	Bolt, Flange Head, M6 x 1 x 12 mm	16
7	<u>1016507</u>	Bolt, Two-Ended	1
8	1016531	Dipstick	1
9	<u>1016539</u>	O-Ring	1
10	1016547	Nut, M6 Flange	1
11	<u>1017474</u>	Shroud, Engine	1
12	<u>1017475</u>	Shroud, Engine	1
13	<u>1017476</u>	Shroud, Engine	1
14	<u>1017486</u>	Tube, Oil Filler	1
15	<u>101916101</u>	Housing, FE350 Fan	1
16	N/A	Washer, 6mm Flat	1
Note: The S27 engine meets the 2009 Federal CARB requirement for all 50 states; can be used in place of S10, S11, S23, and S24 engines; and was a running change during the 2009 model year.			

8

G

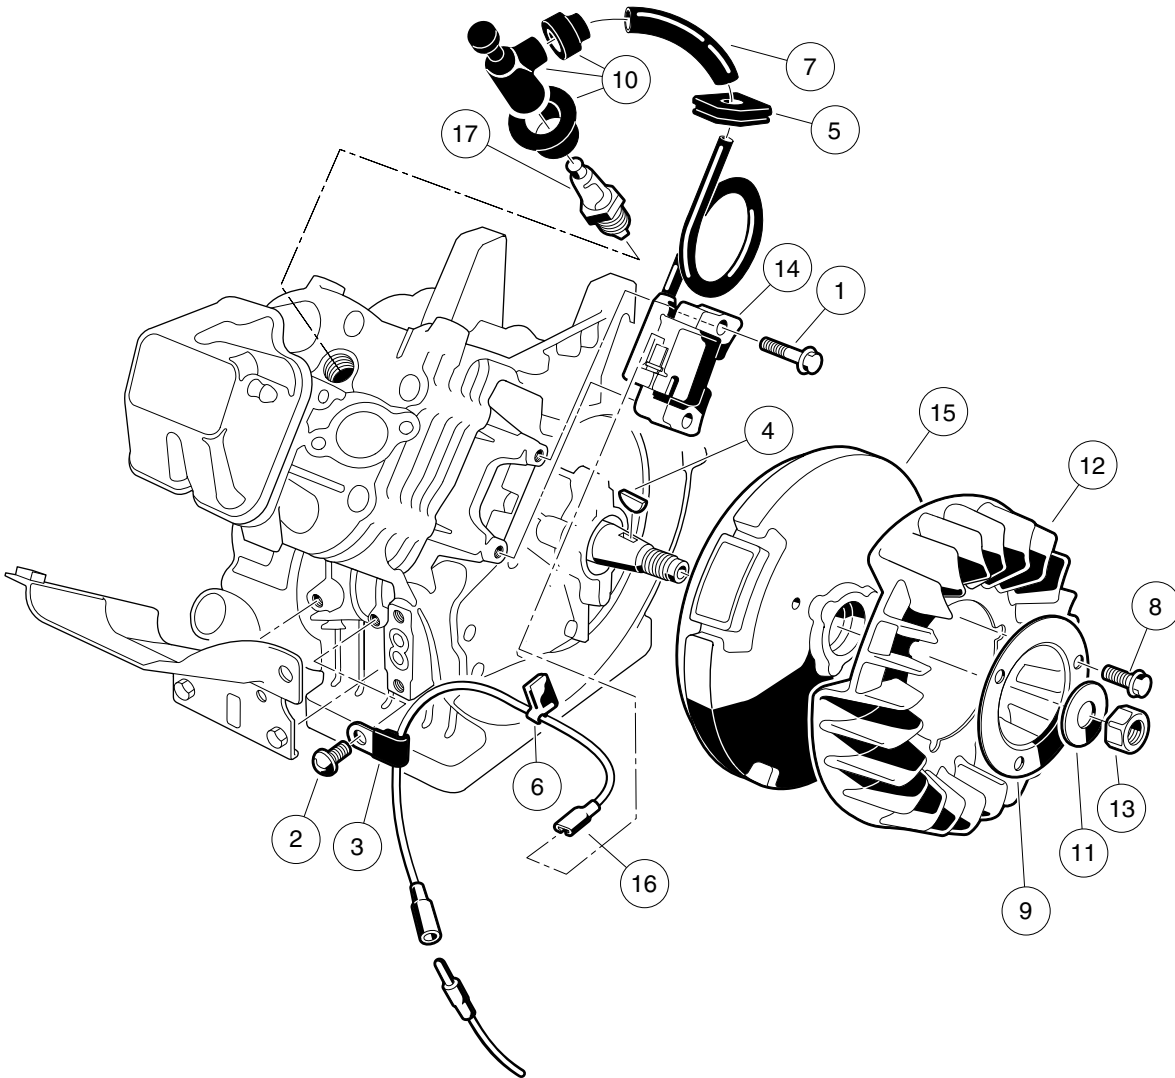


000202-004

FE350 ENGINE (S27) – IGNITION COMPONENTS AND FLYWHEEL

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1016455</u>	Bolt, Flange Head	2
2	<u>1016544</u>	Screw	1
3	<u>1016561</u>	Clamp	1
4	<u>1016562</u>	Key	1
5	<u>1016578</u>	Grommet, Ignition	1
6	<u>1016587</u>	Clamp	1
7	<u>1016588</u>	Tube, 7mm X 10mm X 70mm	1
8	<u>1017448</u>	Bolt, Flanged	3
9	<u>1017455</u>	Plate, Flywheel Fan	1
10	<u>1017463</u>	Cap Asm, Plug	1
11	<u>1017490</u>	Washer, Flat	1
12	<u>101916301</u>	Fan (cw)	1
13	<u>102838401</u>	Nut, Hex, 18 mm Fine	1
14	<u>103616501</u>	Coil Asm, Ignition	1
15	<u>103616601</u>	Flywheel, Complete	1
16	<u>103616701</u>	Wire Lead, Ignition	1
17	<u>AM1232301</u>	Spark Plug, BPR2ES	1


8
G

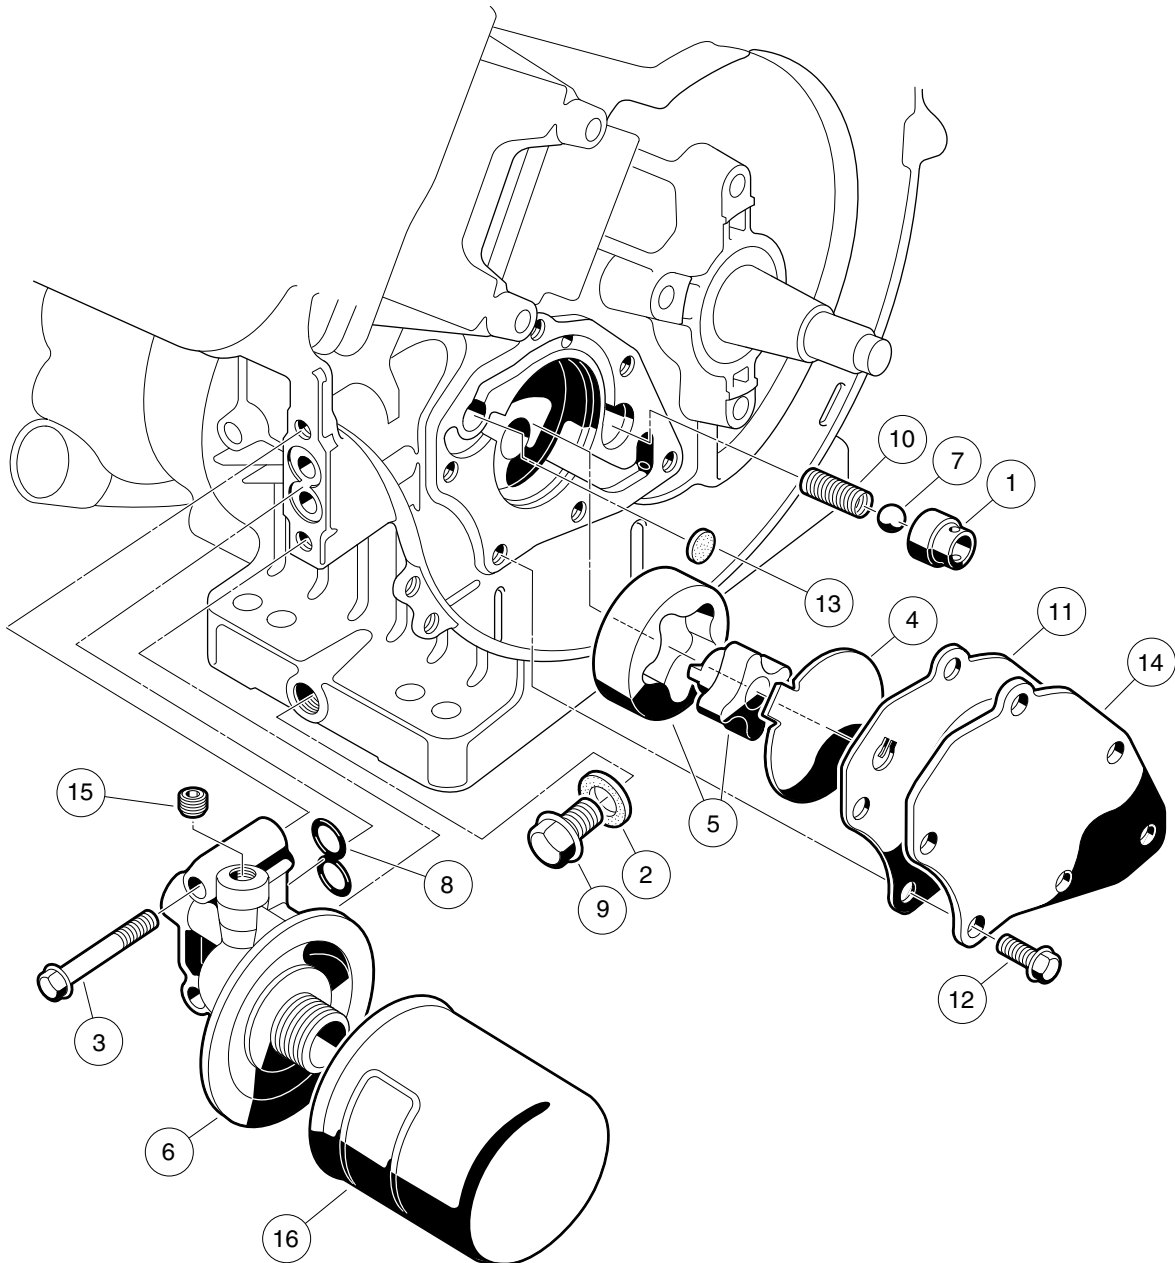

000203-002

FE350 ENGINE (S27) – OIL CIRCULATION

ITEM	PART NO.	DESCRIPTION	QTY	8
		1 2 3 4		G
1	1016429	Seat, Valve Oil Pressure Relief	1	
2	<u>1016432</u>	Gasket, Drain Plug	1	
3	<u>1016457</u>	Bolt, Flange Head	2	
4	<u>1016473</u>	Plate, Oil Pump	1	
5	<u>101648203</u>	Oil Pump And Rotor	1	
6	<u>1016502</u>	Bracket, Oil Filter Mount	1	
7	<u>1016537</u>	Ball, Steel, Press, Relief	1	
8	<u>1016570</u>	O-Ring	1	
9	1016576	Plug, Drain	1	
10	<u>1016581</u>	Spring	1	
11	<u>1017442</u>	Gasket	1	
12	<u>1017456</u>	Bolt, Flanged	6	
13	<u>1017458</u>	Filter	1	
14	<u>1017460</u>	Cover, Pump	1	
15	<u>1017507</u>	Plug	2	
16	<u>103887901</u>	Filter, Oil, Kawasaki	1	

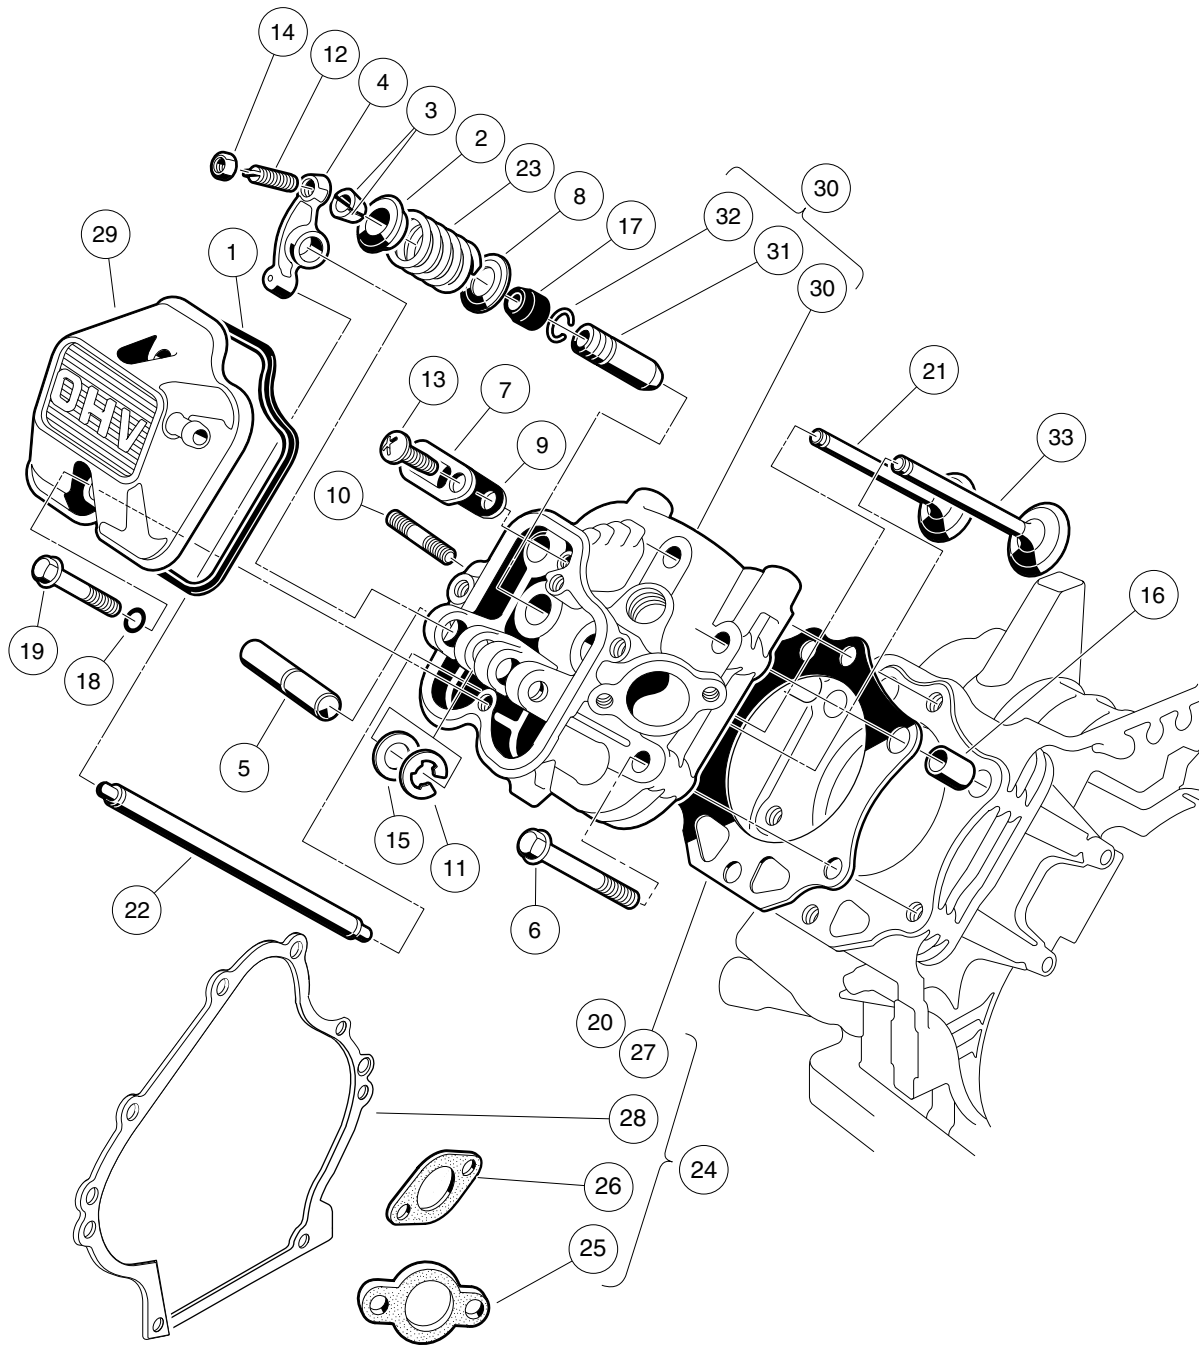


000204-007

FE350 ENGINE (S27) – CYLINDER HEAD

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1016436</u>	Gasket, Rocker Case	1
2	<u>1016449</u>	Retainer, Valve Spring	2
3	<u>1016450</u>	Collet	4
4	<u>1016451</u>	Arm, Rocker	2
5	<u>1016452</u>	Shaft, Rocker	1
6	<u>1016458</u>	Bolt, Flange Head, M8 x 1.25 x 45 mm	6
7	<u>1016474</u>	Plate	1
8	<u>1016479</u>	Seat, Spring	2
9	<u>1016483</u>	Valve	1
10	<u>1016489</u>	Stud, Two-Ended, M8-1.25	2
11	<u>1016517</u>	Circlip, Type-E	1
12	<u>1016542</u>	Screw	2
13	<u>1016544</u>	Screw	1
14	<u>1016545</u>	Nut	2
15	<u>1016549</u>	Washer, 12.1x19x1.8	1
16	<u>1016563</u>	Pin	2
17	<u>1016566</u>	Seal, Oil	2
18	<u>1016569</u>	O-Ring	2
19	<u>1016583</u>	Bolt, 6x35	2
20	<u>1017434</u>	Gasket, Head	1
21	<u>1017445</u>	Valve, Exhaust	1
22	<u>1017454</u>	Rod, Push	2
23	<u>1017473</u>	Spring, Engine Valve	2
24	<u>102304801</u>	Kit, Gasket, FE350 (includes items 25 through 28)	1
25	<u>1016440</u>	Gasket, Engine to Insulator	1
26	<u>1016904</u>	Gasket, Exhaust	1
27	<u>1017434</u>	Gasket, Head	1
28	<u>1017443</u>	Gasket, Crankcase Cover	1
29	<u>102753401</u>	Case, Rocker, Fe	1
30	<u>103615601</u>	Cylinder Head (includes items 31 and 32)	1
31	<u>1016519</u>	Guide, Valve, Intake, Exhaust	2
32	<u>1016560</u>	Snap Ring	2
33	<u>103616301</u>	Valve, Intake, Hard Tip	1
Note: Item 25 is not a component of the FE350 engine.			

8
G

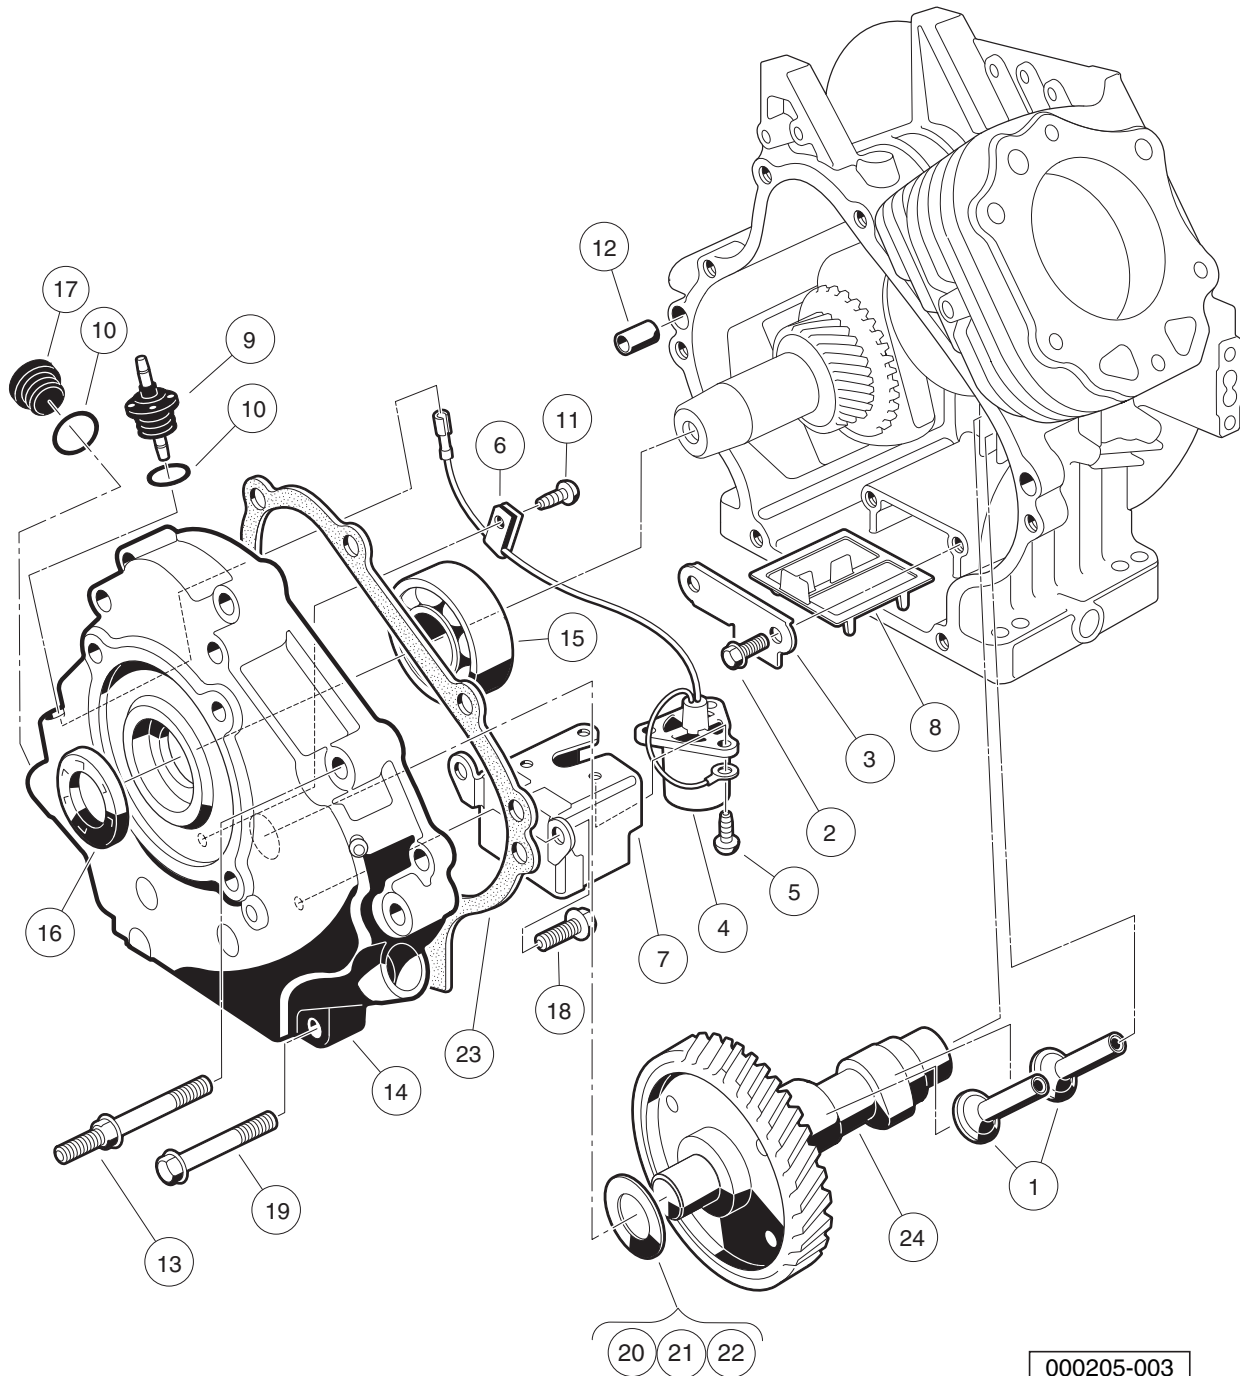


000205-003

FE350 ENGINE (S27) – CRANKCASE, CAMSHAFT, AND OIL SENSOR

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1016453	Tappet	2
2	<u>1016454</u>	Bolt, Flange Head, M5 x 0.8 x 8 mm	2
3	<u>1016472</u>	Plate, Oil Filter Screen	1
4	1016494	Sensor, Oil Level	1
5	<u>1016496</u>	Screw, Cross Pan-Head, M4 x 0.7 x 8 mm	3
6	<u>1016506</u>	Clamp	1
7	<u>1016510</u>	Bracket, Switch, Oil Level	1
8	<u>1016521</u>	Screen, Oil Filter	1
9	<u>1016535</u>	Connector, Cord	1
10	<u>1016538</u>	O-Ring	2
11	<u>1016544</u>	Screw	1
12	<u>1016564</u>	Pin	2
13	<u>1016584</u>	Bolt, Two-Ended, M8 x 1.25 x 69 mm	2
14	<u>1017472</u>	Cover Crankcase	1
15	<u>1017487</u>	Bearing, Ball	1
16	<u>1017504</u>	Seal, Oil	1
17	1017508	Plug	1
18	<u>1017513</u>	Bolt Switch Bracket	2
19	<u>1017514</u>	Screw, M8-1.25 X 45mm Hex	6
20	<u>101751801</u>	Shim, 0.3	1
21	<u>101751802</u>	Shim, 0.4	1
22	<u>101751803</u>	Shim, 0.5	1
23	<u>103615901</u>	Gasket, Crankcase Cover	1
24	<u>103616401</u>	Camshaft, Complete	1


8
G

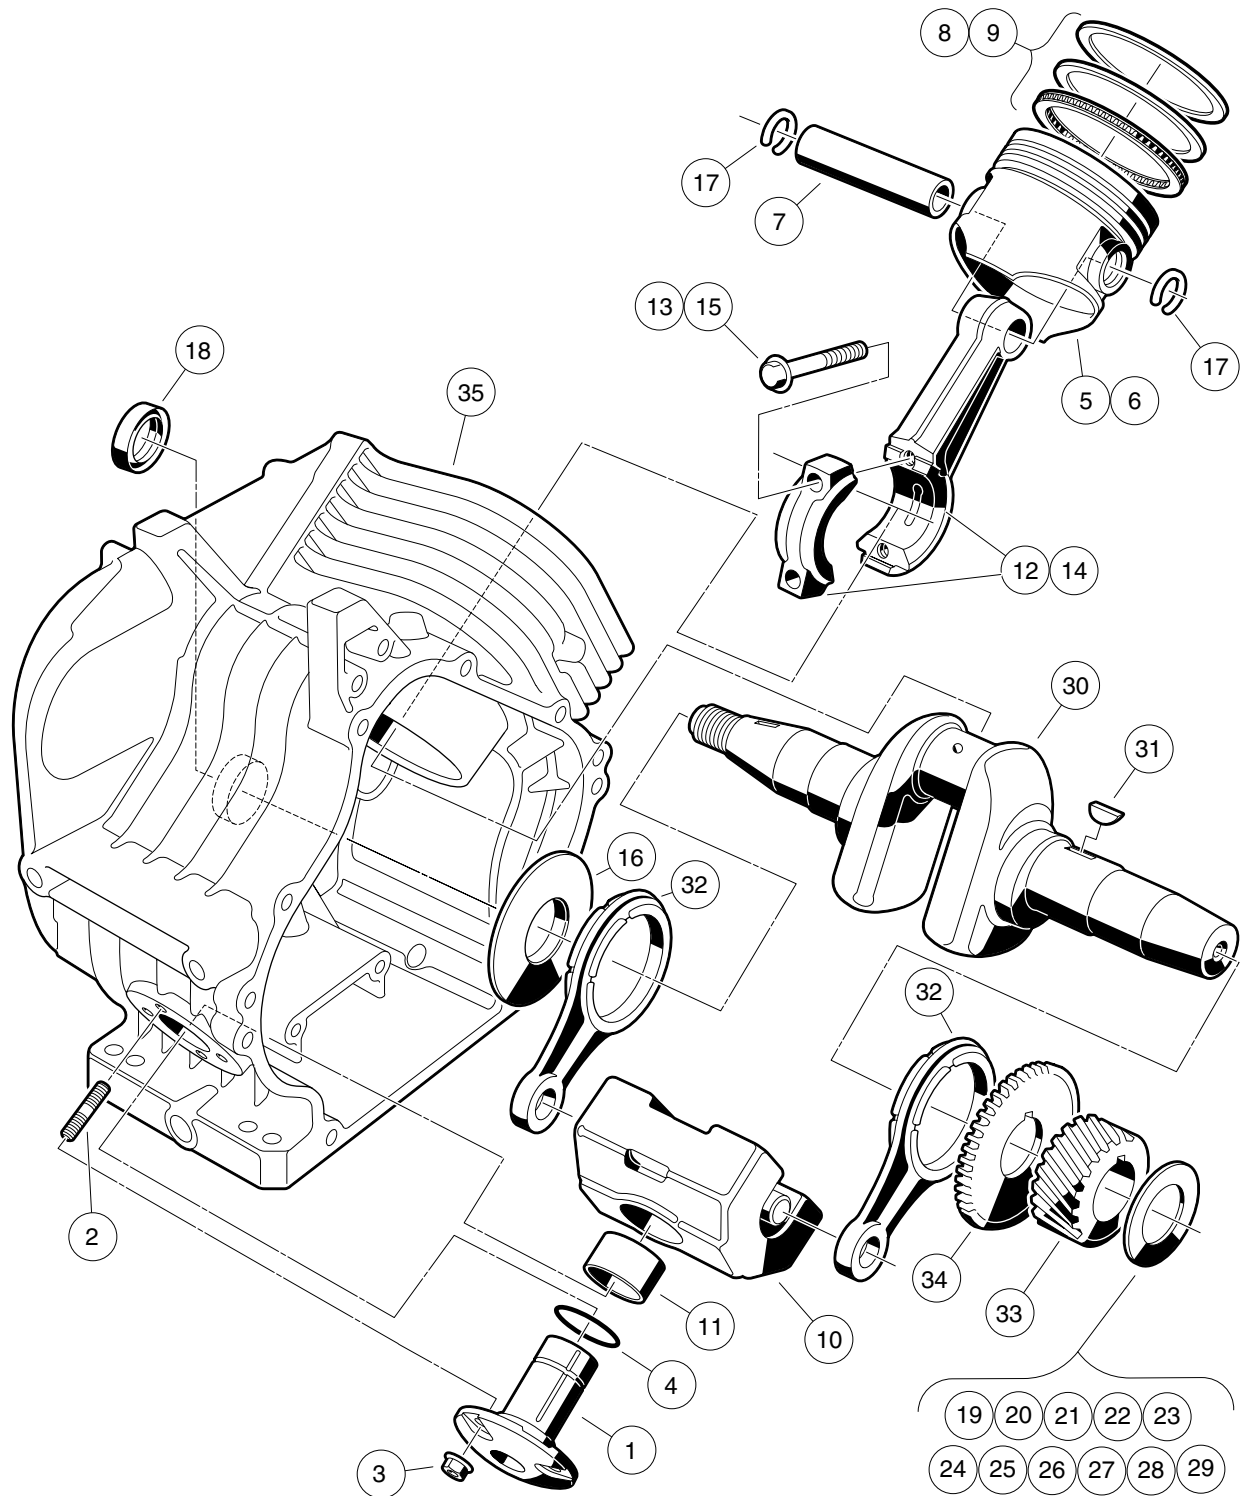

000206-003

FE350 ENGINE (S27) – CRANKCASE AND CRANKSHAFT

ITEM	PART NO.	DESCRIPTION	QTY	8
		1 2 3 4		G
1	1016470	Shaft, Guide, Counterbalance	1	
2	<u>1016541</u>	Stud, 6x14	4	
3	1016547	Nut, Flanged, M6 X 1.00	4	
4	<u>1016571</u>	O-Ring	1	
5	<u>101744901</u>	Piston, Standard	1	
6	<u>101744902</u>	Piston, 0.50 mm Oversize	1	
7	1017450	Pin, Piston	1	
8	<u>101745101</u>	Ring Set, Standard Piston	1	
9	<u>101745102</u>	Ring Set, Piston, 0.50 mm Oversize	1	
10	<u>1017453</u>	Counterbalance Weight (includes item 11)	1	
11	1017510	Bearing, Plain	1	
12	101745701	Asm, Con. Rod Std (includes item 13)	1	
13	<u>1017512</u>	Bolt	2	
14	<u>101745702</u>	Asm,Con.Rod 0.5mm U/s (includes item 15)	1	
15	<u>1017512</u>	Bolt	2	
16	1017501	Spacer	1	
17	<u>1017502</u>	Snap Ring	2	
18	<u>1017503</u>	Seal, Oil	1	
19	<u>101773301</u>	Shim, Crankshaft, 1.18mm	1	
20	<u>101773302</u>	Shim, Crankshaft, 1.25mm	1	
21	<u>101773303</u>	Shim, Crankshaft, 1.32mm	1	
22	<u>101773304</u>	Shim, Crankshaft, 1.39mm	1	
23	<u>101773305</u>	Shim, Crankshaft, 1.46mm	1	
24	<u>101773306</u>	Shim, Crankshaft, 1.53mm	1	
25	<u>101773307</u>	Shim, Crankshaft, 1.60mm	1	
26	<u>101773308</u>	Shim, Crankshaft, 1.67mm	1	
27	<u>101773309</u>	Shim, Crankshaft, 1.74mm	1	
28	<u>101773310</u>	Shim, Crankshaft, 1.11mm	1	
29	<u>101773311</u>	Shim, Crankshaft, 1.81mm	1	
30	<u>102430901</u>	Crankshaft, FE350 Left-Hand, 22-Tooth (includes items 31 through 34)	1	
31	<u>1016562</u>	Key	1	
32	<u>1017471</u>	Rod	2	
33	N/A	Gear, Helical	1	
34	N/A	Gear, Spur	1	
35	<u>103615801</u>	Crankcase, FE350	1	

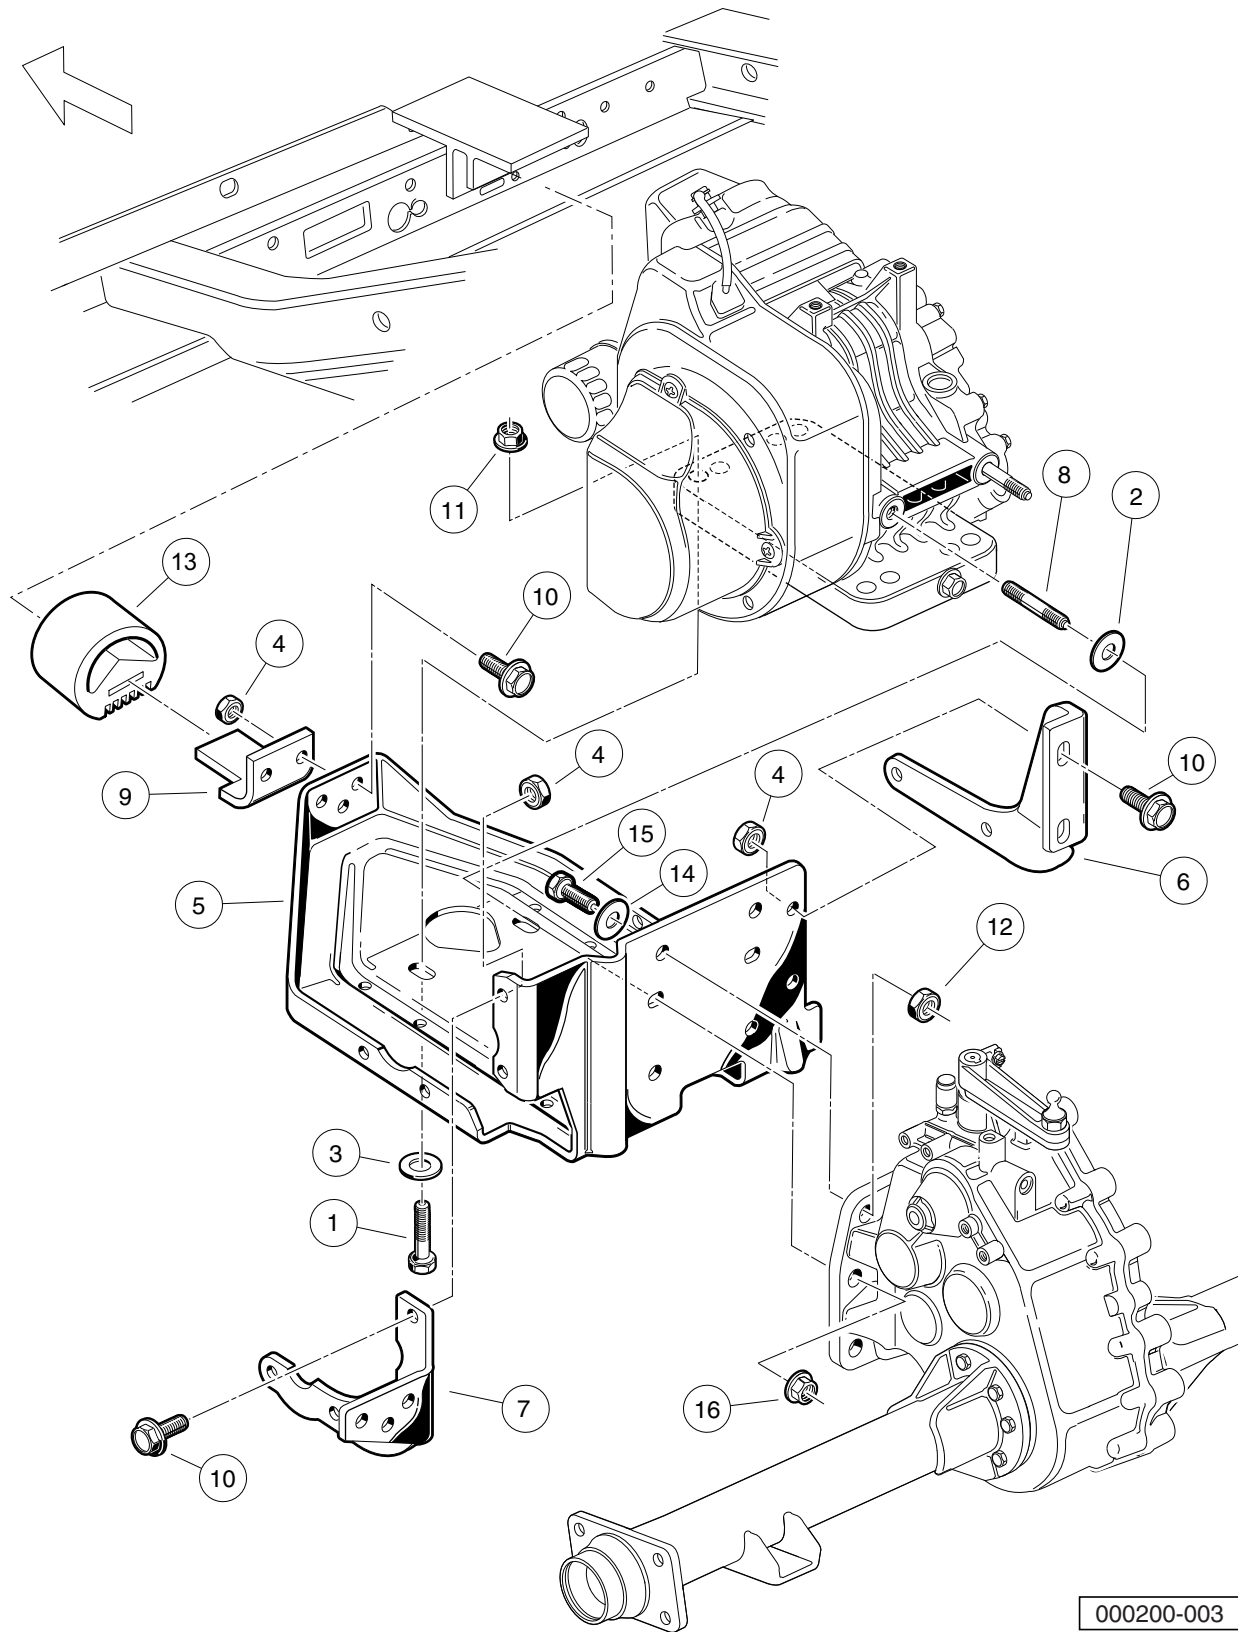

000200-003

FE350 ENGINE (S27) – MOUNTING

ITEM	PART NO.	DESCRIPTION	QTY	8
		1 2 3 4		G
1	<u>1010577</u>	Bolt, Hex-Head, 5/16-18 X 1.50	4	
2	<u>1011697</u>	Washer, 5/16 Flat	2	
3	<u>1012571</u>	Washer, 5/16 Extra Thick Flat	4	
4	<u>1013924</u>	Nut, 5/16-24, Hex Head Cone	10	
5	<u>101827101</u>	Plate, Engine Mounting	1	
6	<u>101832601</u>	Stiffener (PTO Side)	1	
7	<u>101832701</u>	Stiffener (Flywheel Side)	1	
8	<u>101833101</u>	Stud, M8-1.25 X 50 mm Two-Ended	2	
9	<u>101834601</u>	Bracket, Snubber	1	
10	<u>101884801</u>	Screw, 5/16-24 X 0.875, Grade-8	10	
11	<u>101963401</u>	Locknut, 5/16-18 Hex Flange	4	
12	<u>102065901</u>	Locknut, 3/8-16 Flanged Dimple	4	
13	<u>102540301</u>	Snubber, Inner Frame	1	
14	<u>334</u>	Washer, 3/8, Type A, Flat	4	
15	<u>705</u>	Screw, Cap-hex Hd 3/8-16x1.25	4	
16	<u>96704416</u>	Nut, Flange, M8 X 1.25 Serrated	2	


8

G

FUEL, INTAKE, AND GOVERNOR SYSTEM

9

G

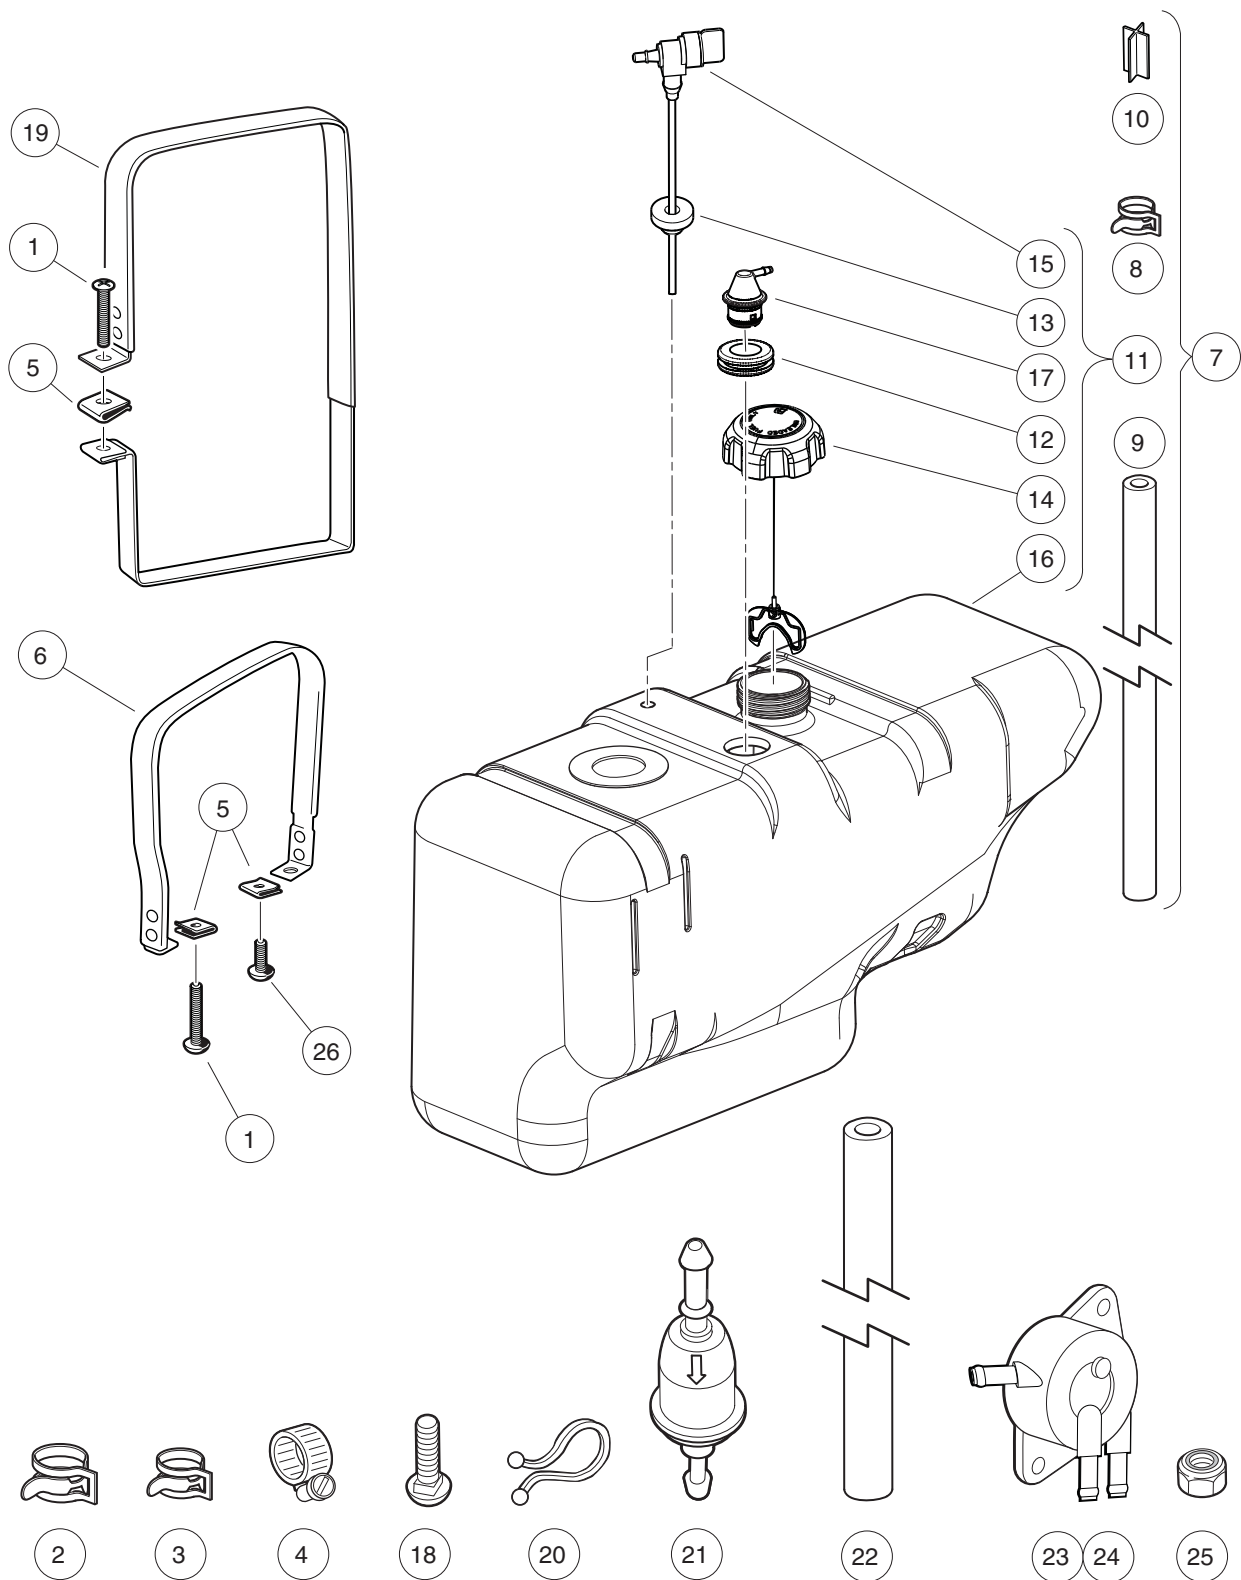


001288-004

FUEL SYSTEM AND TANK WITHOUT SENDING UNIT

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1011988</u>	Screw, 1/4-20 X 2.00 Phillips Truss-Head	2
2	<u>1012649</u>	Clamp, 0.460 Red Hose	6
3	<u>101313402</u>	Clamp, Green Hose	2
4	<u>1013687</u>	Clamp, 3/8" Hose (screw type)	1
5	<u>1014116</u>	Nut, 1/4-20 Speed	3
6	<u>1014928</u>	Fuel Strap Assembly Rear	1
7	<u>1016003</u>	Kit, Fuel Tank - Vented (includes items 8 through 11)	1
8	<u>1013746</u>	Clamp, 0.301 ID Hose	2
9	<u>101587703</u>	Hose, Fuel, Vent, 22" Long	1
10	<u>101824401</u>	Vent Barb	1
11	<u>103651902</u>	Asm, Tank, Ds Utl Wo/su† Nano (includes items 12 through 17)	1
12	<u>1015139</u>	Insulation Grommet	1
13	<u>102406701</u>	Bushing, Line, Return	1
14	<u>103372101</u>	Cap, Fuel Tank, Gas, Ratchet	1
15	<u>103372302</u>	Fuel Pickup w/Shut-Off Valve, 288mm	1
16	<u>103776902</u>	Tank, Fuel, Top, Wo/su Nano	1
17	<u>103905201</u>	Assembly, Vent, Fuel, 1/4 Inch O.D.	1
18	<u>1017203</u>	Carriage Bolt	2
19	<u>101955301</u>	Fuel Strap Assy, Front	1
20	<u>101987701</u>	Clamp, Plastic Tie	2
21	<u>102003201</u>	Filter, Fuel, 30 Micron	1
22	<u>102865101</u>	Fuel Line, 1/4 (available by the foot)	A/R
23	<u>103781101</u>	Kit, Fuel Pump Retrofit (includes item 24)	1
24	<u>103010101</u>	Pump, Fuel, Impulse, Fh	1
25	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	2
26	<u>8248</u>	Screw, 1/4-20 X 0.75, Truss-Head Machine	1

9
G

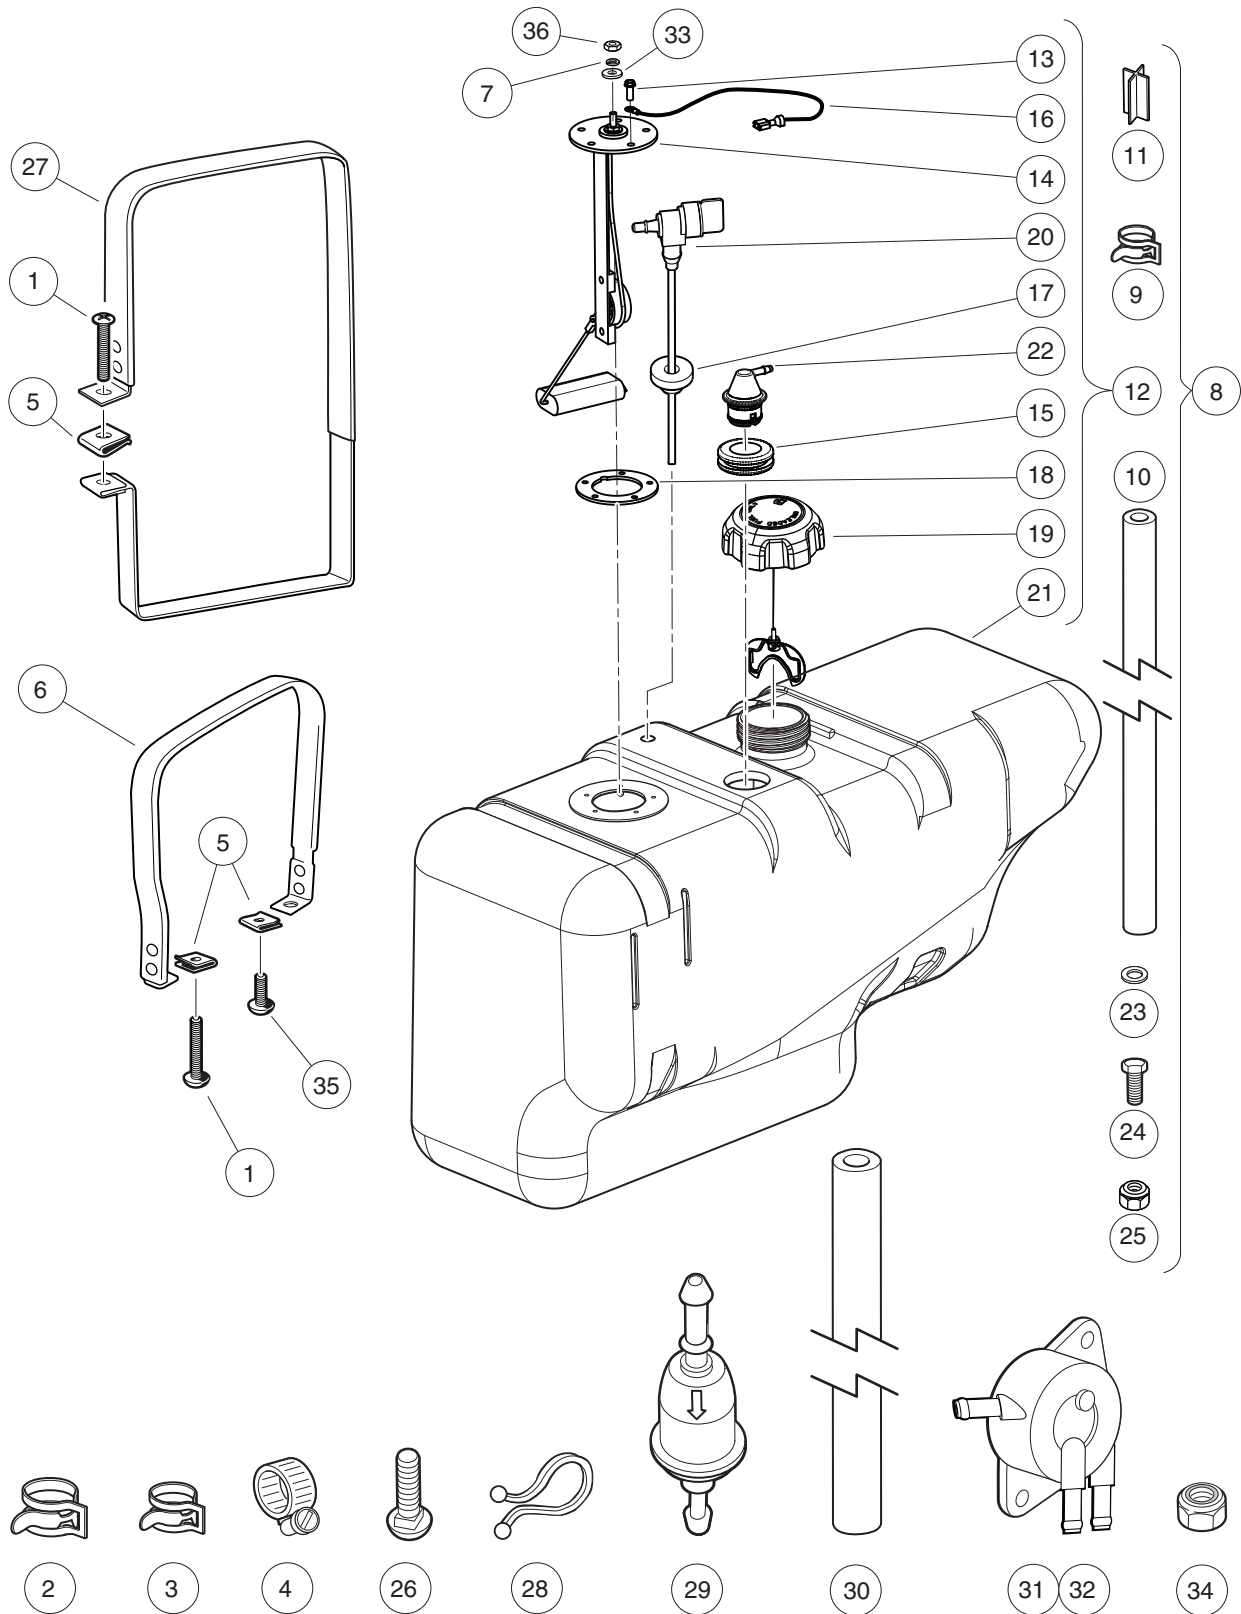


001287-004

FUEL SYSTEM AND TANK WITH SENDING UNIT

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1011988</u>	Screw, 1/4-20 X 2.00 Phillips Truss-Head	2
2	<u>1012649</u>	Clamp, 0.460 Red Hose	6
3	<u>101313402</u>	Clamp, Green Hose	2
4	<u>1013687</u>	Clamp, 3/8" Hose (screw type)	1
5	<u>1014116</u>	Nut, 1/4-20 Speed	3
6	<u>1014928</u>	Fuel Strap Assembly Rear	1
7	<u>1016</u>	Lockwasher, #10 Split	1
8	<u>1016004</u>	Tank Kit w/Sending Unit (includes items 9 through 25)	1
9	<u>1013746</u>	Clamp, 0.301 ID Hose	2
10	<u>101587703</u>	Hose, Fuel, Vent, 22" Long	1
11	<u>101824401</u>	Vent Barb	2
12	<u>103651901</u>	Asm, Tank, Ds Utl W/su† Nano (includes items 13 through 22)	1
13	<u>1013461</u>	Screw, #10-16 Hex-Head Hi-Lo	5
14	<u>1013462</u>	Sending Unit, Fuel Level *	1
15	<u>1015139</u>	Insulation Grommet	1
16	<u>1015921</u>	Wire Assembly #16 Black	1
17	<u>102406701</u>	Bushing, Line, Return	1
18	<u>102522001</u>	Gasket, Rubber	1
19	<u>103372101</u>	Cap, Fuel Tank, Gas, Ratchet	1
20	<u>103372302</u>	Fuel Pickup w/Shut-Off Valve, 288mm	1
21	<u>103776901</u>	Tank, Fuel, Top, W/su Nano	1
22	<u>103905201</u>	Assembly, Vent, Fuel, 1/4 Inch O.D.	1
23	<u>1241</u>	Washer, 5/16 Type A Flat	1
24	<u>7173</u>	Screw, 5/16-18 X 0.75, Hex-Head Cap	1
25	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	1
26	<u>1017203</u>	Carriage Bolt	2
27	<u>101955301</u>	Fuel Strap Assy, Front	1
28	<u>101987701</u>	Clamp, Plastic Tie	1
29	<u>102003201</u>	Filter, Fuel, 30 Micron	1
30	<u>102865101</u>	Fuel Line, 1/4 (available by the foot)	A/R
31	<u>103781101</u>	Kit, Fuel Pump Retrofit (includes item 32)	1
32	<u>103010101</u>	Pump, Fuel, Impulse, Fh	1
33	<u>183</u>	Washer, #10, Type A, Flat	1
34	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	2
35	<u>8248</u>	Screw, 1/4-20 X 0.75, Truss-Head Machine	1
36	<u>8797</u>	Nut, #10-32 Brass Hex	1
		* Note: Must replace fuel sending unit gasket when servicing this component.	

9

G

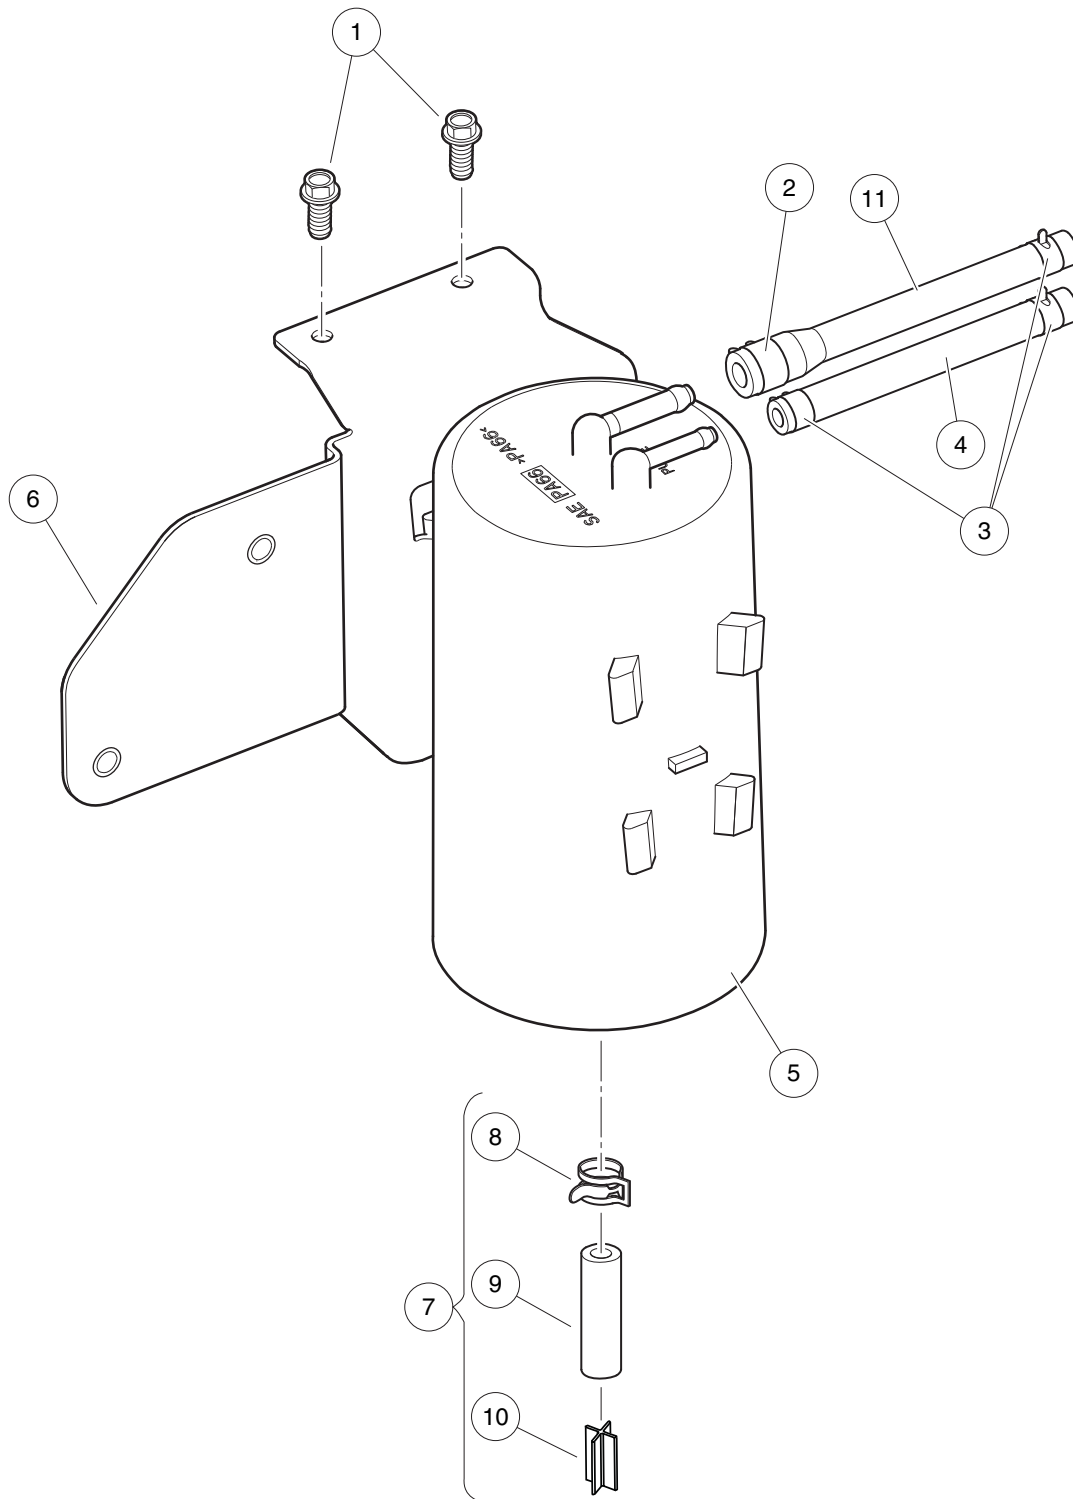


000980-008

CARBON CANISTER

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1012285</u>	Screw, 1/4 X 0.625 Hex-Head	2
2	<u>101313402</u>	Clamp, Green Hose	1
3	<u>1013746</u>	Clamp, 0.301 ID Hose	3
4	<u>1015137</u>	Fuel Line, 3/16 (available by the foot)	A/R
5	<u>103372401</u>	Canister, Carbon	1
6	<u>103372801</u>	Bracket, Carbon Canister, Sw	1
7	<u>103418601</u>	Asm, Vent Line, Utility (includes items 8 through 10)	1
8	<u>1012649</u>	Clamp, 0.460 Red Hose	1
9	N/A	Hose, Vent, 5/16 I.D., Bulk	A/R
10	N/A	Vent, Barb, 5/16 I.D. Hose	1
11	<u>103851201</u>	Hose, Vent Flared, 9.0 Inch	1

9


G

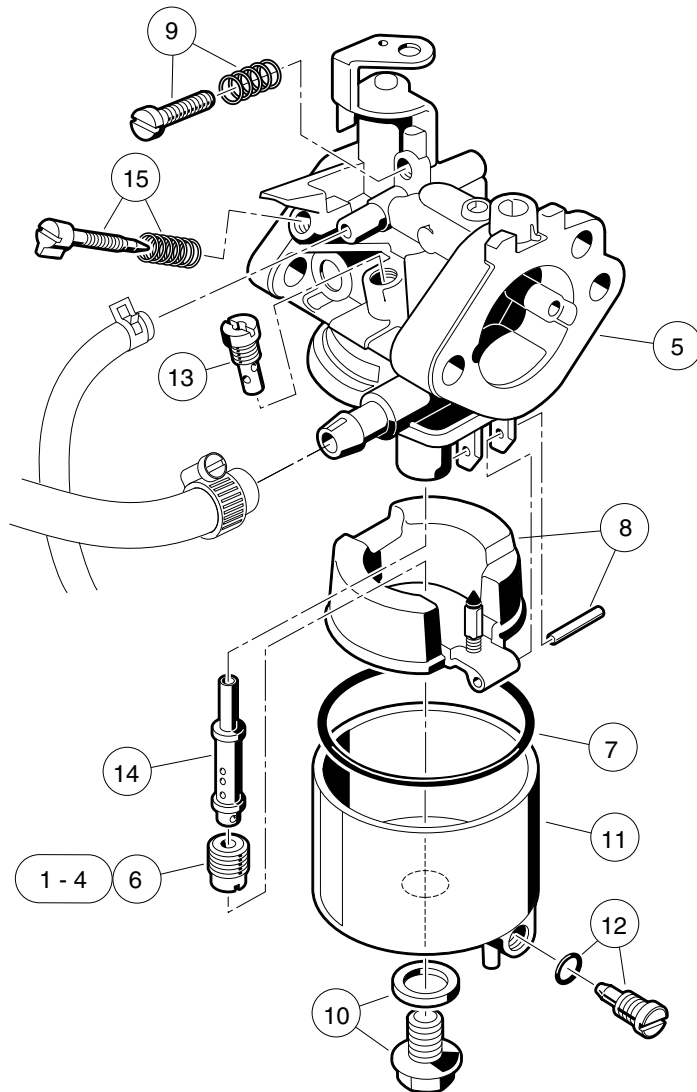

000212-002


CARBURETOR ASSEMBLY – FE350 S27

ITEM	PART NO.	DESCRIPTION	QTY	9
		1 2 3 4		G
1	<u>101642575</u>	Jet, Altitude, # 75	1	
2	<u>101642578</u>	Jet, Altitude, # 78	1	
3	<u>101642580</u>	Jet, Altitude, # 80	1	
4	<u>101642582</u>	Jet, Altitude, # 82	1	
5	<u>103617101</u>	Carburetor, FE350 S27 (includes items 6 through 15)	1	
6	<u>101642585</u>	Jet, Altitude, # 85	1	
7	<u>1016437</u>	Gasket, Carburetor Bowl OHV	1	
8	<u>1016486</u>	Float Assembly	1	
9	<u>1016501</u>	Screw Assembly	1	
10	<u>1016585</u>	Bolt	1	
11	<u>1017461</u>	Chamber Assembly, Float (includes item 12)	1	
12	<u>1016499</u>	Screw Assembly	1	
13	<u>101973101</u>	Jet, #40 Pilot	1	
14	<u>101973301</u>	Nozzle, Main	1	
15	N/A	Assembly, Pilot Air Screw	1	
Note: <u>101642585</u> for 0 - 3,200 feet; <u>101642582</u> for 3,200 - 6,500 feet; <u>101642580</u> for 6,500 - 9,800 feet; <u>101642578</u> for 9,800 feet and above.				




CARBURETOR MOUNTING, UTILITY, FE350 S27

ITEM	PART NO.	DESCRIPTION	QTY	9
		1 2 3 4		G
1	<u>1013746</u>	Clamp, 0.301 ID Hose	1	
2	<u>1015137</u>	Fuel Line, 3/16 (available by the foot)	1	
3	<u>1016438</u>	Gasket, Carb To Intake Manifold	1	
4	<u>1016440</u>	Gasket, Engine to Insulator	1	
5	<u>1016441</u>	Gasket, Sprg Brkt To Carb OHV	1	
6	<u>1016444</u>	Bracket, Throttle Spring Return	1	
7	101648102	Insulator, Carburetor	1	
8	<u>101649002</u>	Stud, M6-1.00 Two-Ended	2	
9	1016547	Nut, M6 Flange	2	
10	<u>1016572</u>	Tube, Crankcase Vent	1	
11	<u>1016582</u>	Spring, Throttle Return	1	
12	<u>1017466</u>	Clamp	2	
13	<u>101973401</u>	Gasket, Insulator To Bracket	1	
14	103507101	Carburetor Adapter w/ Tap	1	
15	103507201	Plug, Intake Manifold, Carb	1	
16	103507301	Bracket, Intake Manifold, Carb	1	

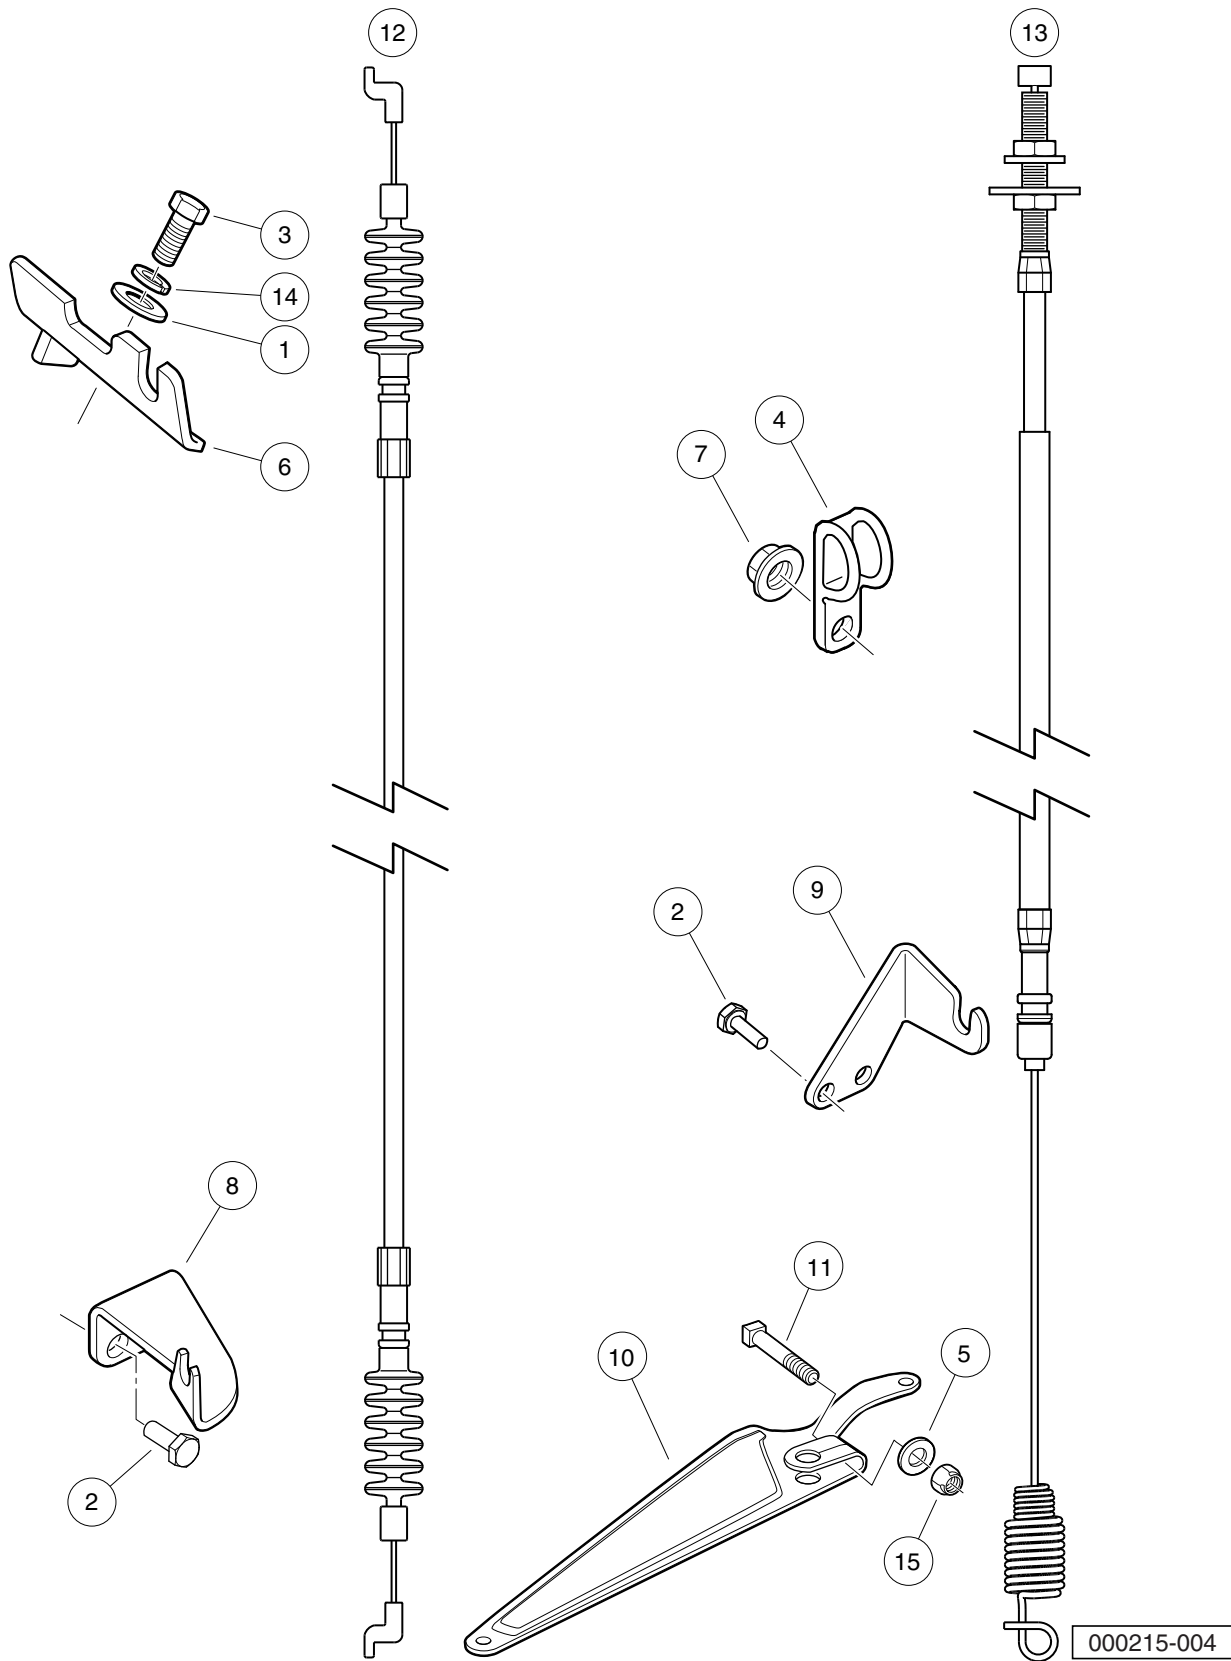

GOVERNOR AND ACCELERATOR CABLES


ITEM	PART NO.	DESCRIPTION	QTY	9
		1 2 3 4		G
1	<u>1011697</u>	Washer, 5/16 Flat	1	
2	<u>1012285</u>	Screw, 1/4 X 0.625 Hex-Head	4	
3	<u>1012830</u>	Screw, M8-125 X 22 Hex-Head	1	
4	<u>1013700</u>	Clamp	2	
5	<u>1014007</u>	Washer, 1/4, Flat	1	
6	<u>101584502</u>	Bracket, Governor Cable Snap-In	1	
7	<u>1016546</u>	Nut	2	
8	<u>101832202</u>	Bracket, Rear Governor Cable Snap-In	1	
9	<u>101832302</u>	Bracket, Rear Accelerator Cable Snap-In	1	
10	<u>101834801</u>	Arm, Governor	1	
11	<u>101886101</u>	Screw, 1/4-20 X 1.00, Square-Head	1	
12	<u>102336001</u>	Cable, Governor, Snap-In	1	
13	<u>102336101</u>	Cable, Accelerator, Snap-In	1	
14	<u>7174</u>	Lockwasher, 5/16 Split	1	
15	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	1	

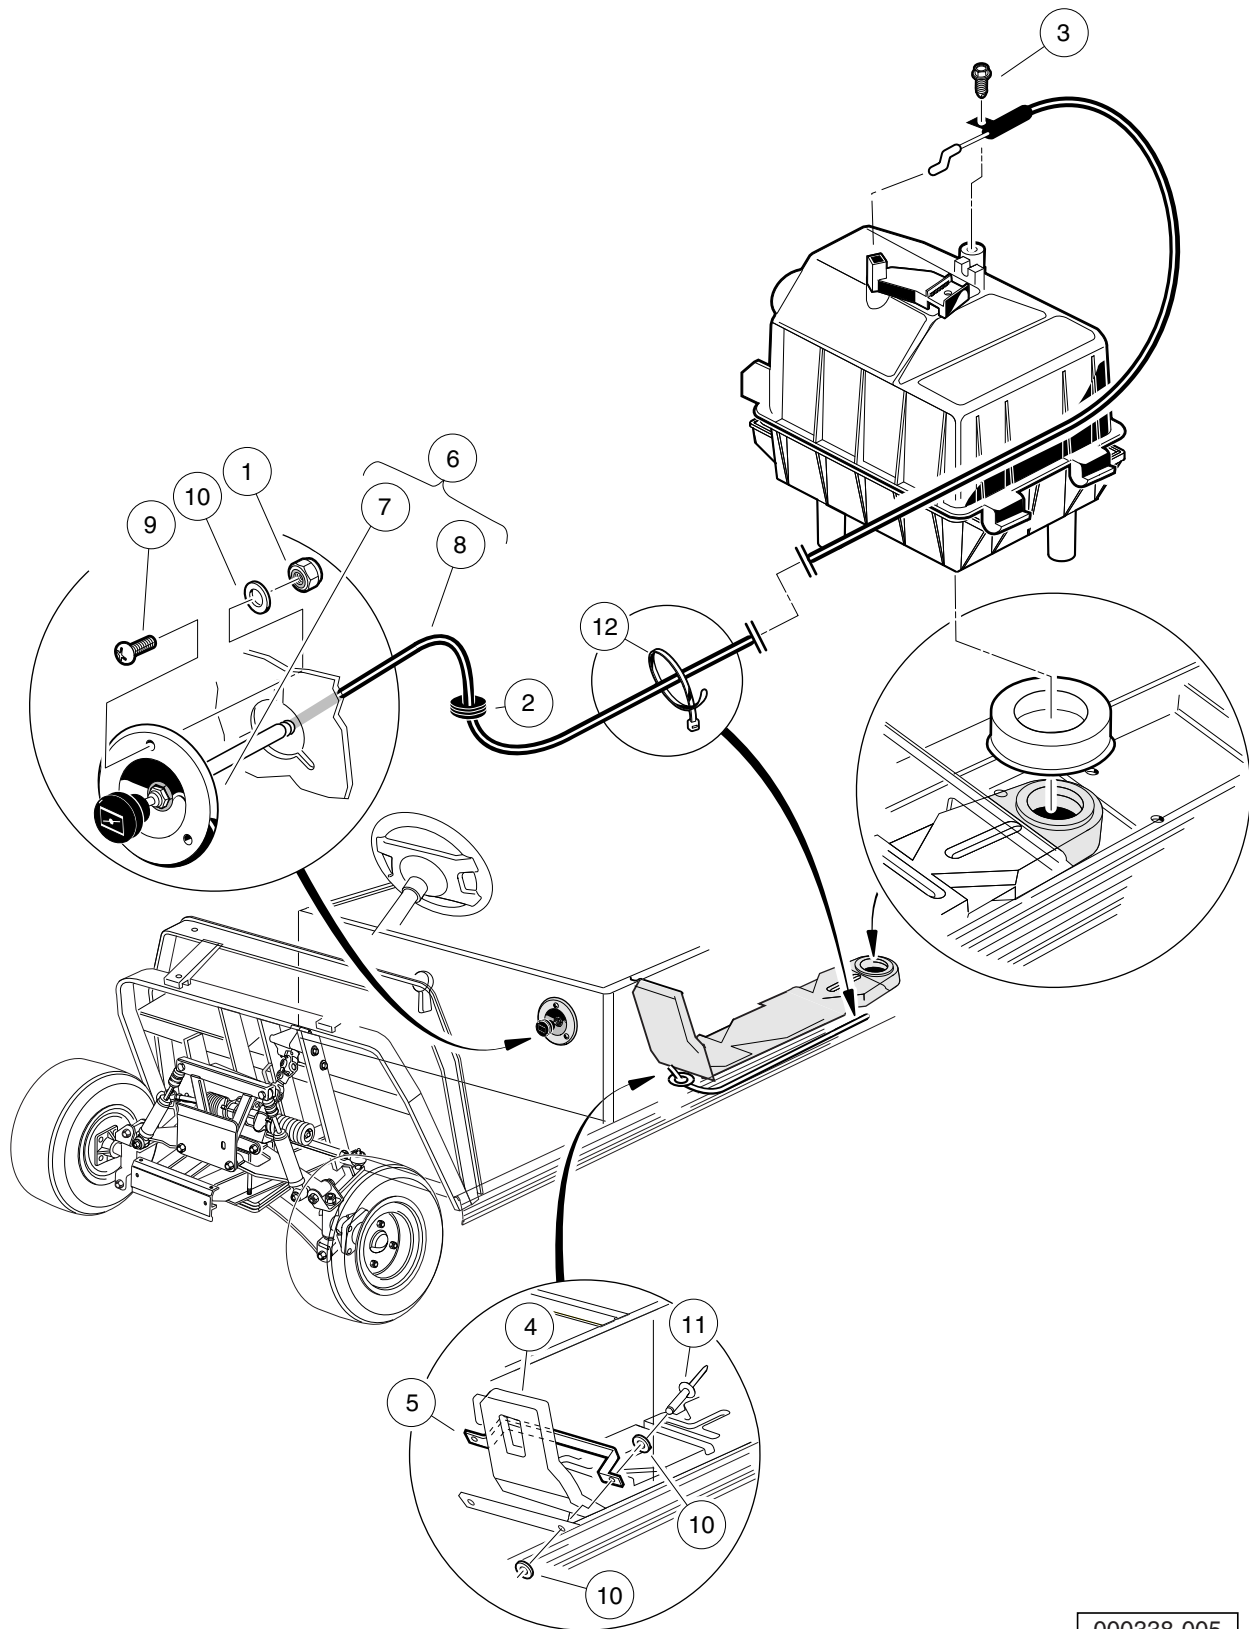

000338-005

AIR INTAKE DUCT AND CHOKE CABLE – VILLAGER 6

ITEM	PART NO.	DESCRIPTION	QTY	9
		1 2 3 4		G
1	<u>1012438</u>	Locknut, #10-24 Nylon Insert	3	
2	<u>1015139</u>	Insulation Grommet	1	
3	<u>101804301</u>	Screw, #8 X 0.500, Hex-Head Hi-Lo	1	
4	<u>101811301</u>	Duct, Intake	1	
5	<u>101825701</u>	Retaining Bracket	1	
6	<u>101926802</u>	Cable, Choke (includes items 7 and 8)	1	
7	<u>101933701</u>	Bezel, Choke Cable	1	
8	N/A	Choke Cable without Bezel, Long	1	
9	<u>1631</u>	Screw, #10-24 X 0.75 Phillips Pan-Head	3	
10	<u>183</u>	Washer, #10, Type A, Flat	7	
11	<u>7973</u>	Rivet, 3/16 X .400 Blind	2	
12	<u>8639</u>	Tie Wrap, 11" Nylon	2	

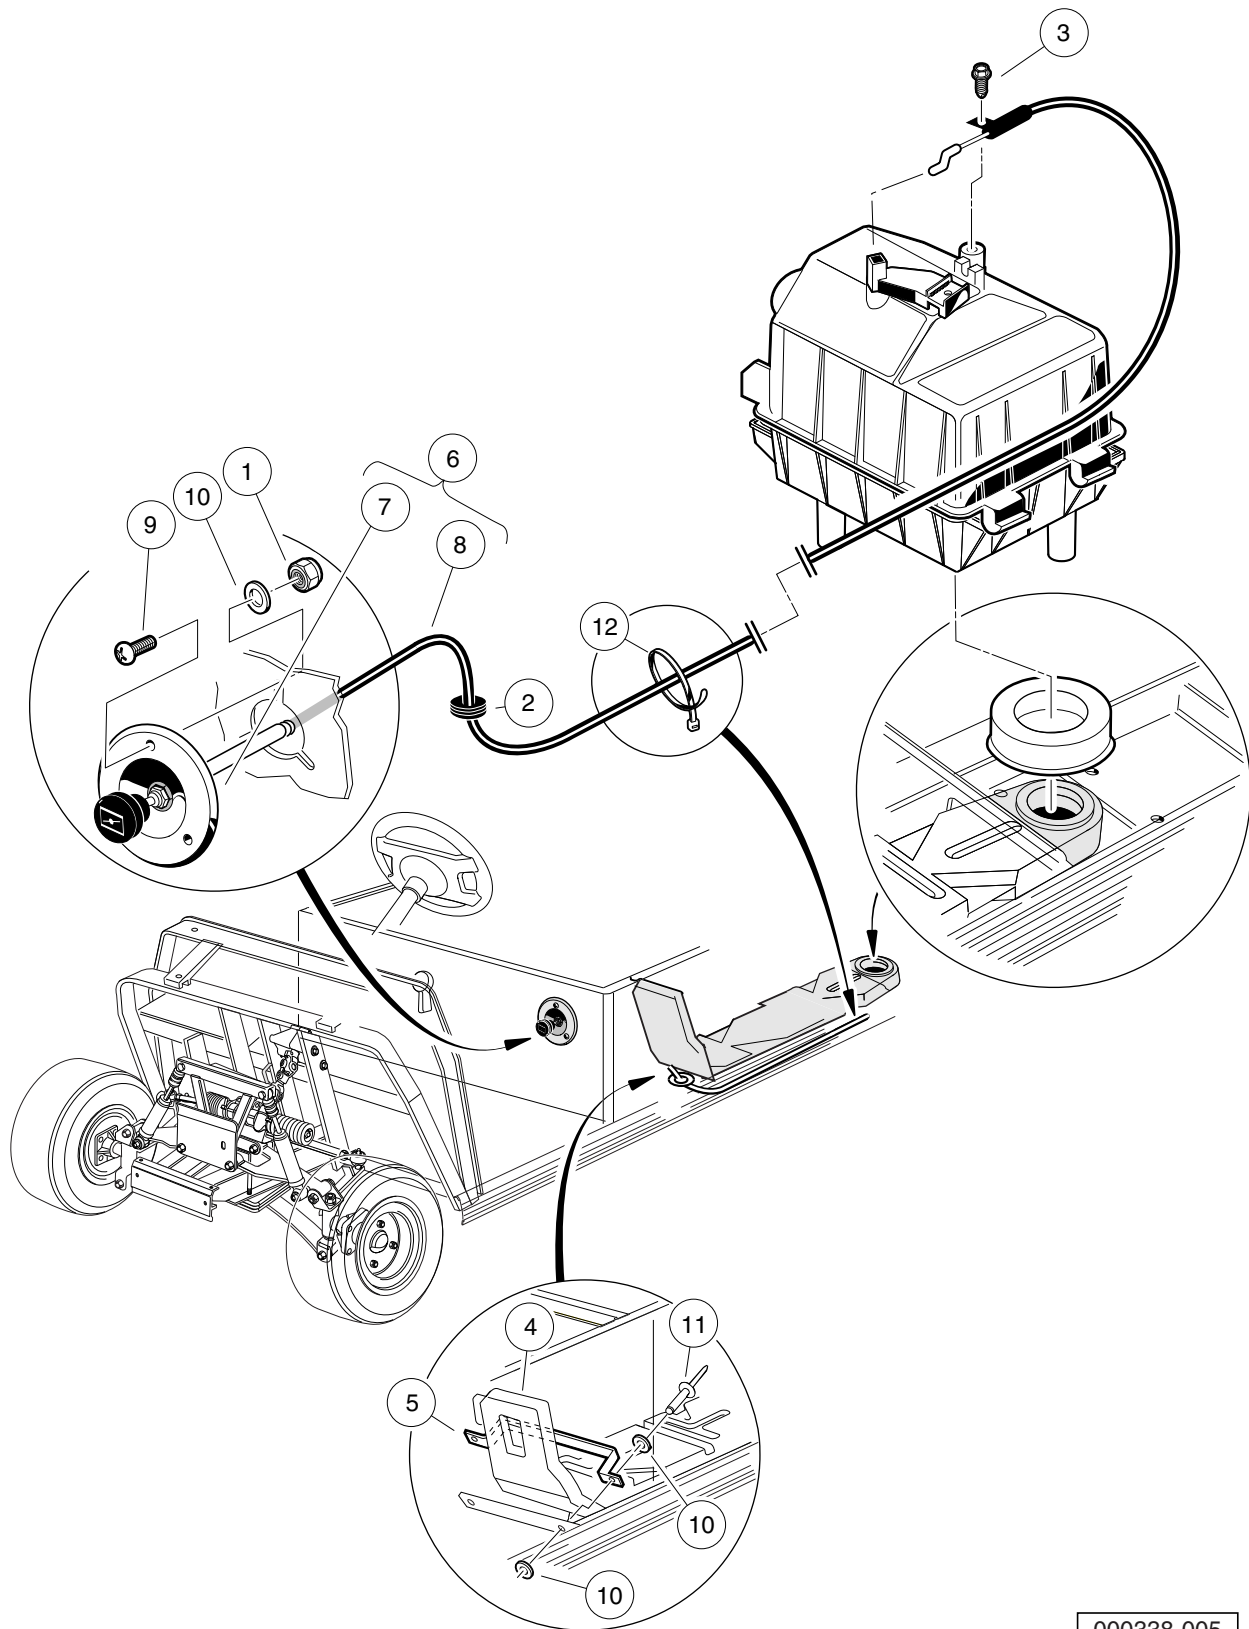


000338-005

AIR INTAKE DUCT AND CHOKE CABLE – VILLAGER 8

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1012438</u>	Locknut, #10-24 Nylon Insert	3
2	<u>1015139</u>	Insulation Grommet	1
3	<u>101804301</u>	Screw, #8 X 0.500, Hex-Head Hi-Lo	1
4	<u>101811301</u>	Duct, Intake	1
5	<u>101825701</u>	Retaining Bracket	1
6	<u>101926803</u>	Cable, Choke (includes items 7 and 8)	1
7	<u>101933701</u>	Bezel, Choke Cable	1
8	N/A	Choke Cable without Bezel, Long	1
9	<u>1631</u>	Screw, #10-24 X 0.75 Phillips Pan-Head	3
10	<u>183</u>	Washer, #10, Type A, Flat	7
11	<u>7973</u>	Rivet, 3/16 X .400 Blind	2
12	<u>8639</u>	Tie Wrap, 11" Nylon	2

9
G

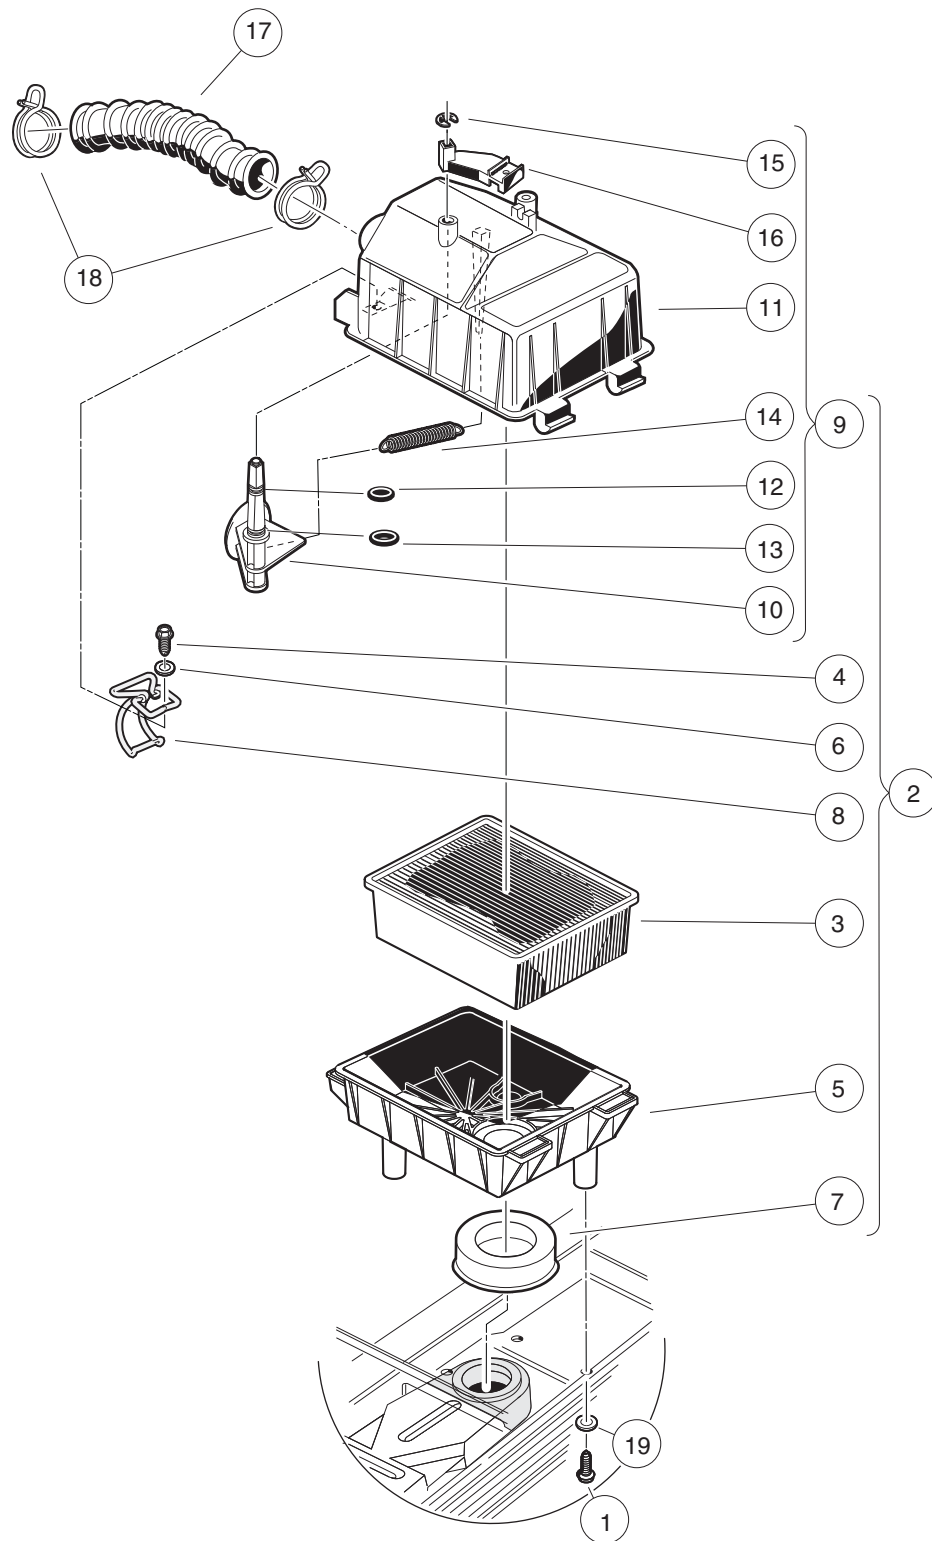

000332-001

AIR FILTER AND INTAKE HOSE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1015752</u>	Screw, #12-16 X 0.625, Hi-Lo	3
2	<u>101821501</u>	Assembly, Air Box (includes items 3 through 9)	1
3	<u>1015426</u>	Filter, Air	1
4	<u>101804301</u>	Screw, #8 X 0.500, Hex-Head Hi-Lo	2
5	<u>101811901</u>	Bottom, Air Box	1
6	<u>101881701</u>	Washer, #8 Stainless-Steel Flat	2
7	<u>101921501</u>	Seal, Intake	1
8	<u>101925701</u>	Latch, Wireform	2
9	<u>101972801</u>	Top Assy, Air Box (includes items 10 through 16)	1
10	N/A	Valve, Choke	1
11	N/A	Top, Air Box	1
12	N/A	O-Ring, 5/16	1
13	N/A	O-Ring, 3/8	1
14	<u>101812301</u>	Spring, Extension Return	1
15	<u>101813001</u>	Retaining Ring 0.25, Shaft	1
16	<u>101917601</u>	Lever, Choke	1
17	<u>101837101</u>	Hose, Air Intake	1
18	<u>101971301</u>	Clamp, 1.58" ID Hose	2
19	<u>332</u>	Washer, 1/4 Type A Narrow Flat	3

9

G


9

G

EXHAUST SYSTEM

10

G

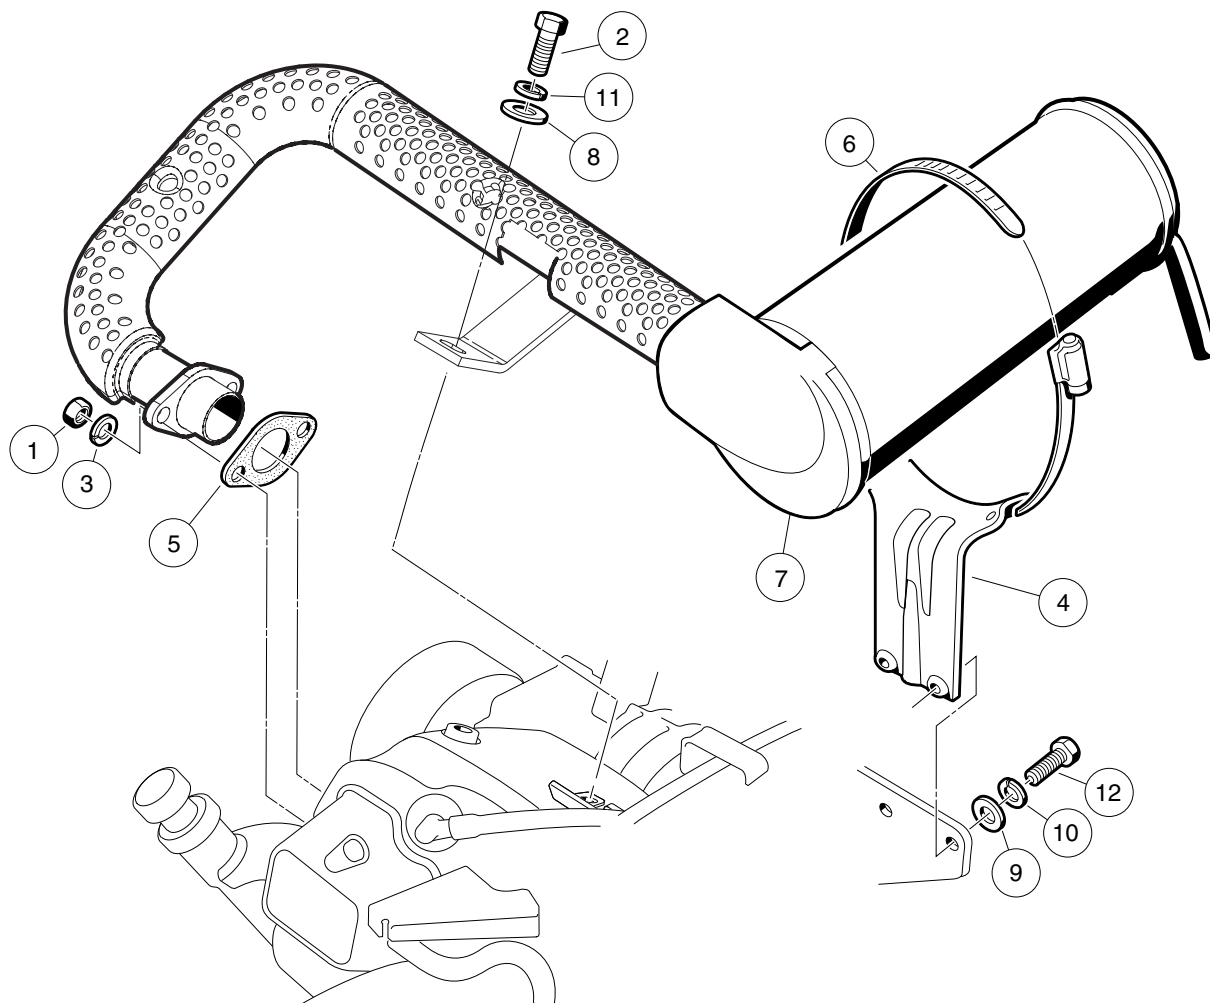

000491-001

EXHAUST SYSTEM – FE350 (ALL)

ITEM	PART NO.	DESCRIPTION	QTY	10	G
		1 2 3 4			
1	<u>1012528</u>	Nut, M8-1.25 Hex	2		
2	<u>1012830</u>	Screw, M8-125 X 22 Hex-Head	1		
3	<u>1013734</u>	Lockwasher, 8mm Split	2		
4	<u>1015814</u>	Bracket, Muffler Mounting	1		
5	<u>1016904</u>	Gasket, Exhaust	1		
6	<u>1017689</u>	Clamp, 5" Muffler Hose	1		
7	<u>102585901</u>	Exhaust System, FE350, Precedent	1		
8	<u>1241</u>	Washer, 5/16 Type A Flat	1		
9	<u>332</u>	Washer, 1/4 Type A Narrow Flat	2		
10	<u>451</u>	Lockwasher, 1/4 Split	2		
11	<u>7174</u>	Lockwasher, 5/16 Split	1		
12	<u>7847</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	2		
Note: This exhaust system also used in select utility vehicles at late-2012 model year.					


10

G

DRIVE BELT AND CLUTCHES – CARBURETED GASOLINE VEHICLES

11


G

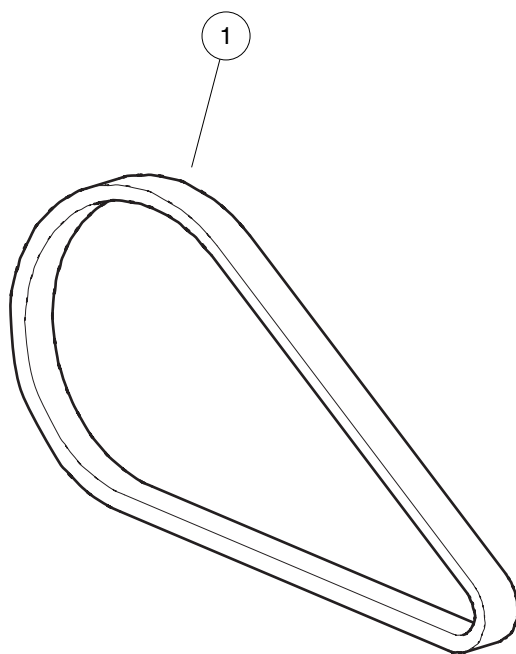

000918-001

DRIVE BELT

ITEM	PART NO.	DESCRIPTION	QTY	11
1	<u>1017188</u>	1 2 3 4 Belt, Drive (FE350)	1	G

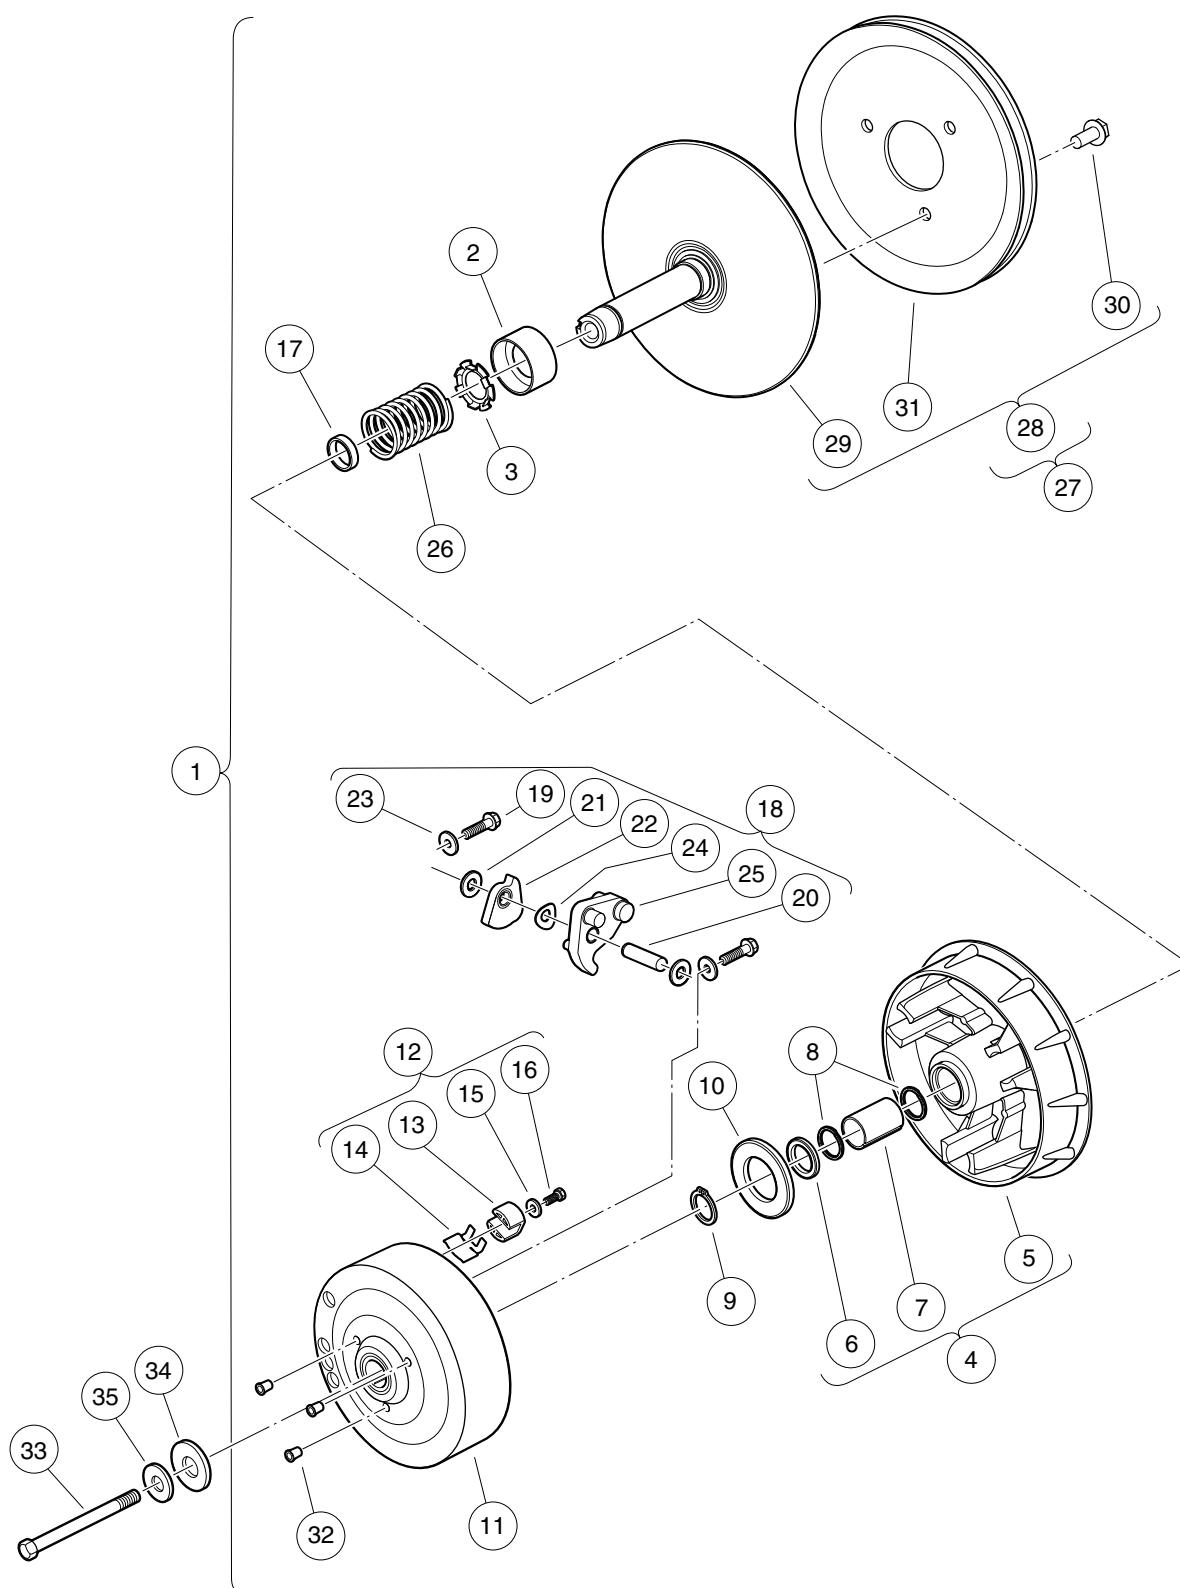


000217-007

DRIVE CLUTCH – CARRYALL 2 PLUS AND VILLAGER 6/8

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101833904</u>	Assembly, Drive Clutch (includes items 2 through 32)	1
2	<u>1014049</u>	Bearing, Idler	1
3	<u>1014050</u>	Retainer, Spring	1
4	<u>1014052</u>	Movable-Face Assembly (includes items 5 through 7)	1
5	N/A	Drive Clutch Movable Face	1
6	<u>1014055</u>	Retainer	1
7	N/A	Bushing, Split, Drive Clutch	1
8	<u>1014056</u>	Ring, Spiral Backup	2
9	<u>1014057</u>	Ring, 0.810" Internal Retaining	1
10	<u>1014058</u>	Thrust Washer	1
11	<u>1014059</u>	Drive Hub Assy, Drive Clutch	1
12	<u>1014453</u>	Kit, Drive Clutch Button (includes items 13 through 16)	1
13	<u>1014062</u>	Driver, Drive Clutch	3
14	<u>1014287</u>	Spring, Drive Button	3
15	<u>183</u>	Washer, #10, Type A, Flat	3
16	<u>8450</u>	Screw, #10-24 X 0.50, Hex-Head	3
17	<u>1016289</u>	Spacer, Fixed Face Shaft	1
18	<u>1016801</u>	Kit, Drive Clutch Weight (includes items 19 through 25)	1
19	<u>1014063</u>	Screw, 1/4-20 X 1.00, Hex Head	6
20	N/A	Pin, Dowel, 0.3752 x 1.50	3
21	<u>1014065</u>	Washer, Flat, 0.38" ID, Delrin	6
22	N/A	Clutch Weight, Secondary	3
23	N/A	Washer	6
24	<u>1016201</u>	Washer, Wave	3
25	N/A	Weight, Primary	3
26	<u>1016901</u>	Spring, Drive Clutch	1
27	<u>101738302</u>	Kit, Fixed Face - Drive (includes item 28)	1
28	<u>101738301</u>	Fixed Face Drive (includes items 29 through 31)	1
29	N/A	Fixed Face Assembly, Drive Clutch	1
30	<u>1014288</u>	Screw, 5/16-18 X 0.75, Thread-Forming	3
31	<u>1016011</u>	Pulley, Drive Clutch	1
32	N/A	Cap Plug	3
33	<u>103345701</u>	Screw 3/8-24x5.5 Hex Loc Ptch	1
34	<u>334</u>	Washer, 3/8, Type A, Flat	1
35	<u>808</u>	Washer, 3/8 Type B Flat	1

11
G

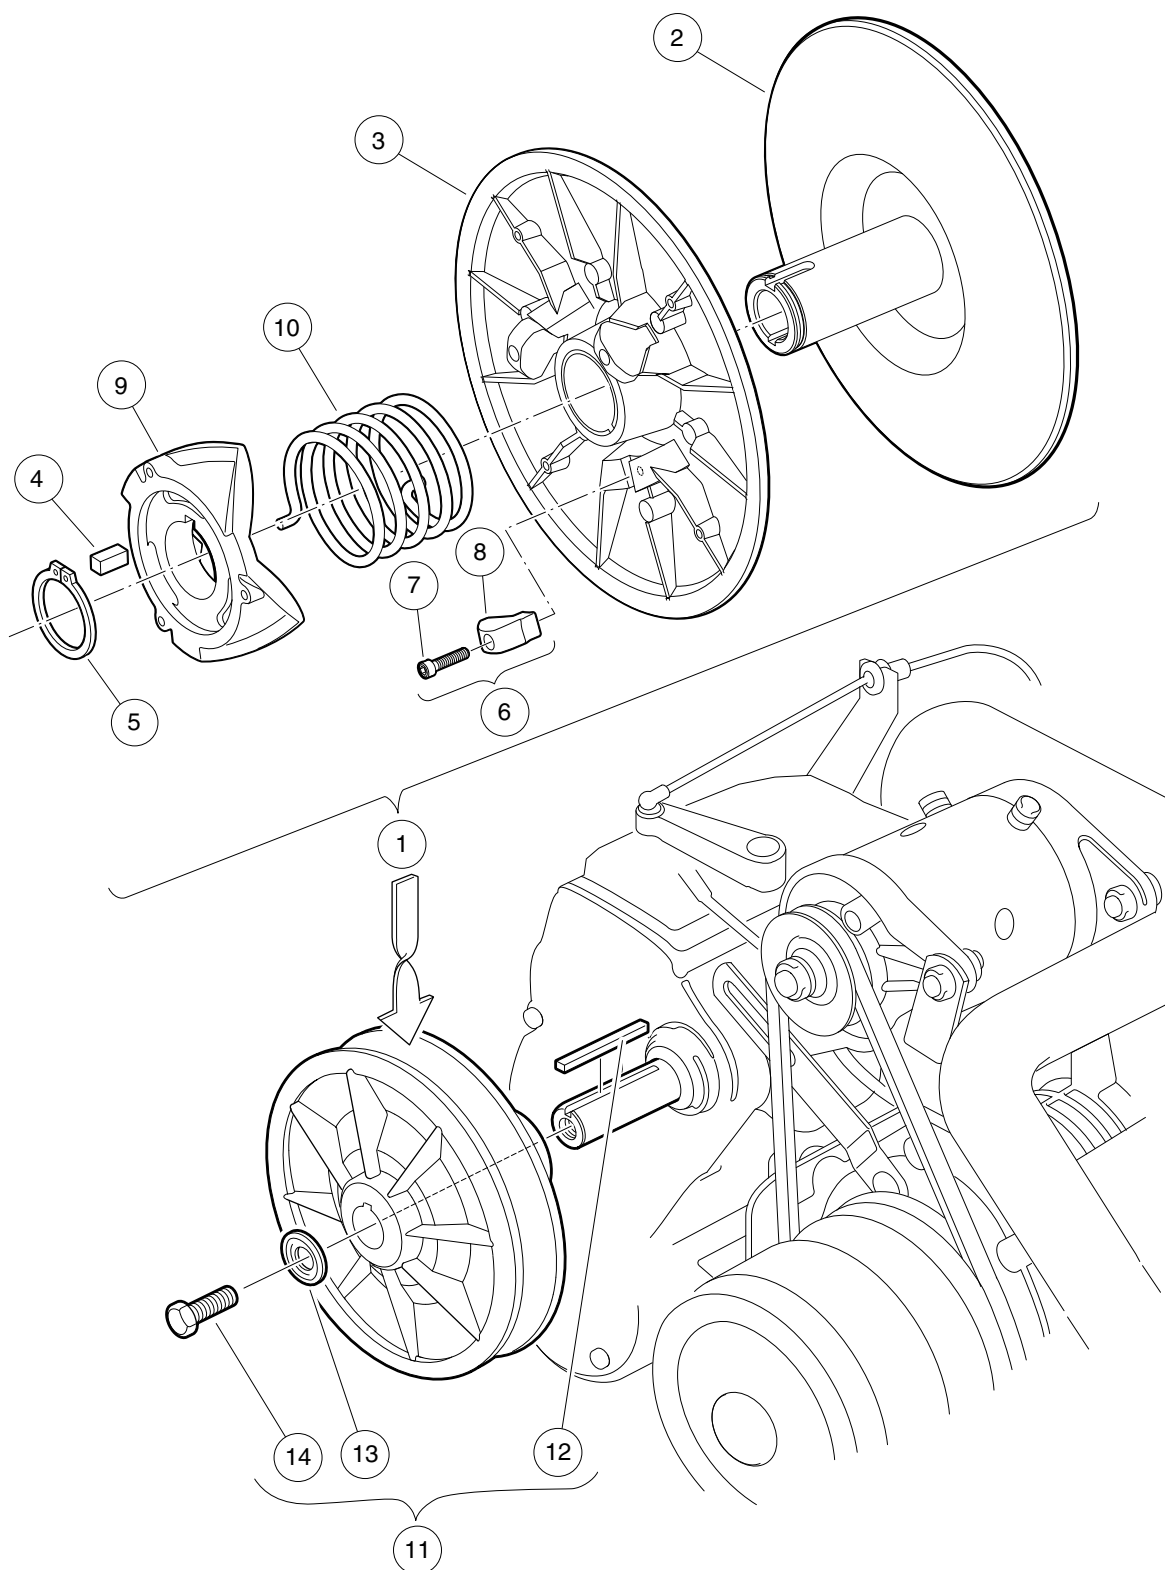

000219-001

DRIVEN CLUTCH

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101834001</u>	Assembly, Driven Clutch (includes items 2 through 10)	1
2	<u>1014070</u>	Fixed Face Assy, Driven Clutch	1
3	<u>1014072</u>	Movable-Face Assembly with Bushing	1
4	<u>1014078</u>	Key, Driven Clutch	1
5	<u>1014080</u>	Ring, Retaining	1
6	<u>1014454</u>	Kit, Driven Clutch Button (includes items 7 and 8)	1
7	<u>1012836</u>	Screw, #8-32 X 3/4, Socket-Head Cap	3
8	N/A	Button, Drive	3
9	<u>1017686</u>	Cam, Driven Clutch	1
10	<u>101836201</u>	Spring, Driven Clutch, Reversed	1
11	<u>AM10419</u>	Kit, Clutch Repair (includes items 12 through 14)	1
12	<u>101833401</u>	Key, 3/16 Sq X 1.50"	1
13	<u>102155801</u>	Washer, Driven Clutch	1
14	<u>102242101</u>	Screw, 5/16-18 X 3/4 Hex-Head with Patch	1


11

G

UNITIZED TRANSAXLE – CARBURETED GASOLINE VEHICLES

12

G

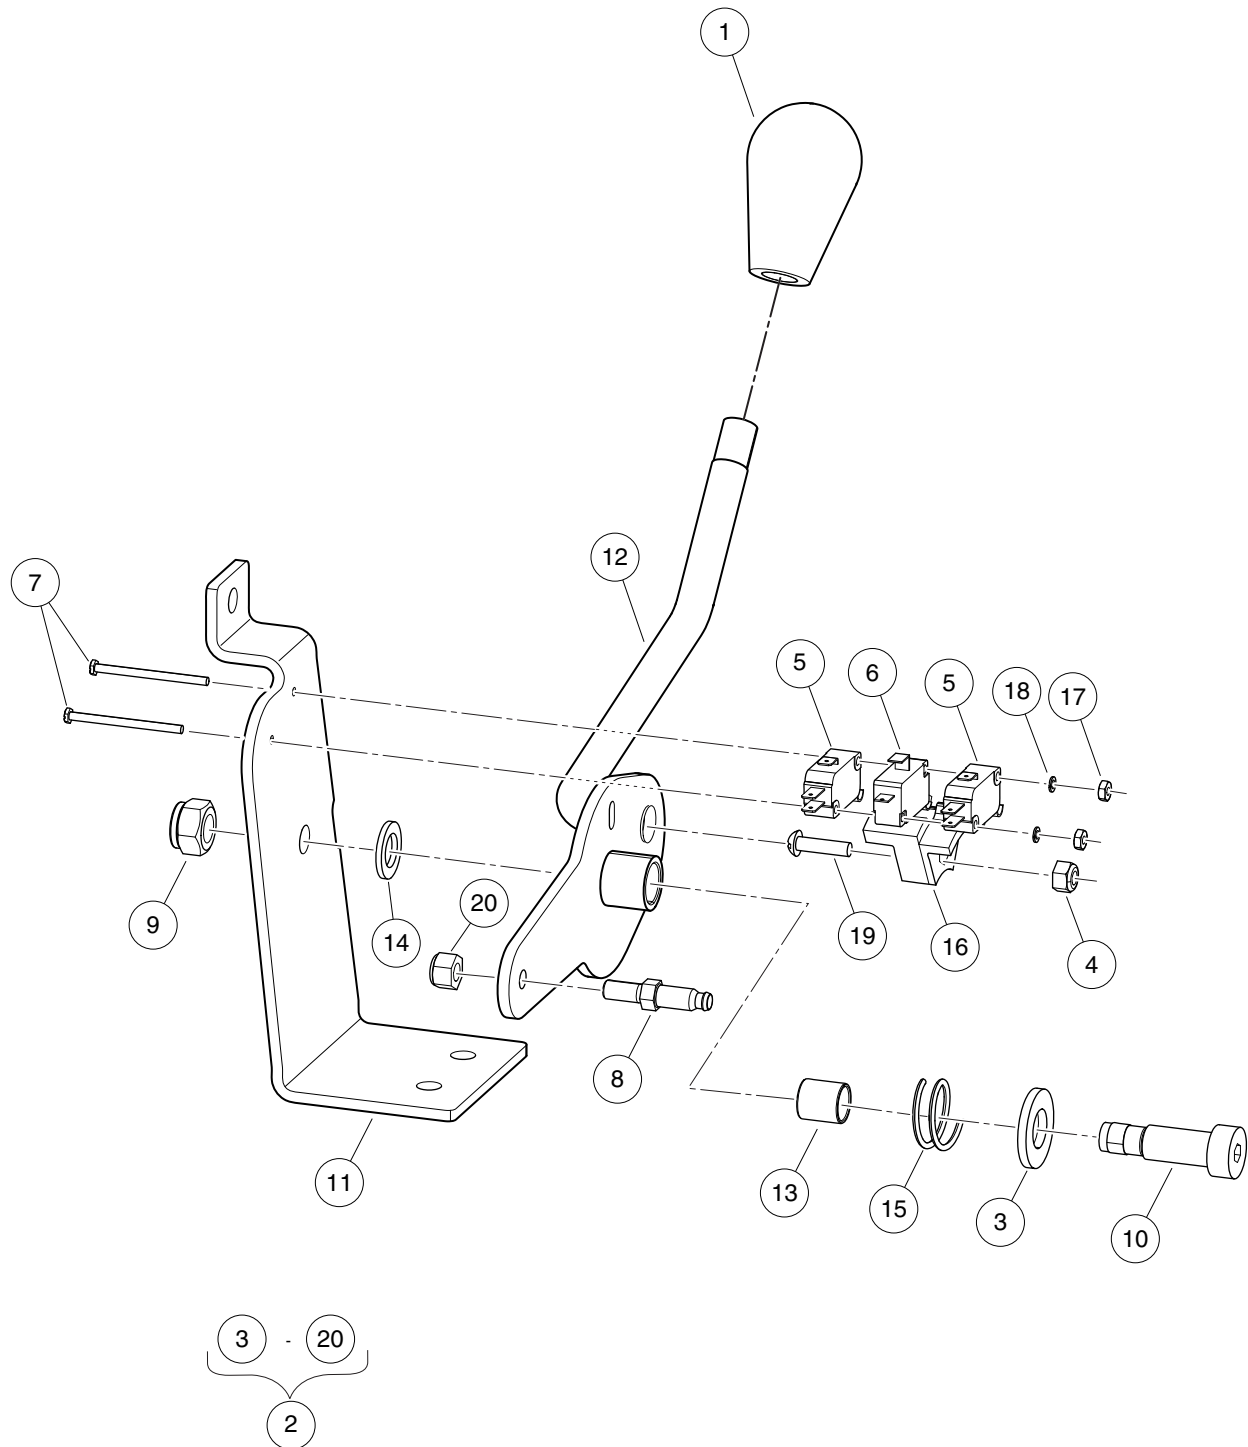


000563-001

FORWARD/REVERSE SHIFTER

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>102376001</u>	Knob, FNR, Shifter	1
2	<u>102969901</u>	Asm, Shifter, FNR (includes items 3 through 20)	1
3	<u>1010028</u>	Washer, 1/2 Type A Flat	1
4	<u>1013061</u>	Locknut, #10-32 Nylon Insert	1
5	<u>1014807</u>	Switch, Limit	2
6	<u>1014808</u>	Switch, Limit	1
7	<u>1015878</u>	Screw, #4-40 Hex Head Machine	2
8	<u>102526201</u>	Stud, Thread, 1/4-28	1
9	<u>102616701</u>	Locknut, M10x1.5 Nylon Insert	1
10	<u>102684602</u>	Shoulder Bolt, M12 X 25.0	1
11	<u>102969401</u>	Bracket, Shifter, FNR	1
12	<u>102969801</u>	Weldment, Shift Lever, FNR	1
13	<u>103173301</u>	Bushing, Greaseless, 12mm Id	1
14	<u>103177401</u>	Washer, Thrust, Shifter, FNR	1
15	<u>103192701</u>	Spring, Comp, .97 Od X.75 L	1
16	<u>103369501</u>	Cam, Limit Switch, Fnr Shifter	1
17	<u>8057</u>	Nut, #4-40 Hex Machine	2
18	<u>8058</u>	Lockwasher, #4 Split	2
19	<u>8104</u>	Screw, #10-32 X .75 Rd Hd Mach	1
20	<u>8717</u>	Locknut, Nylon Insert, 1/4-28	1

12


G

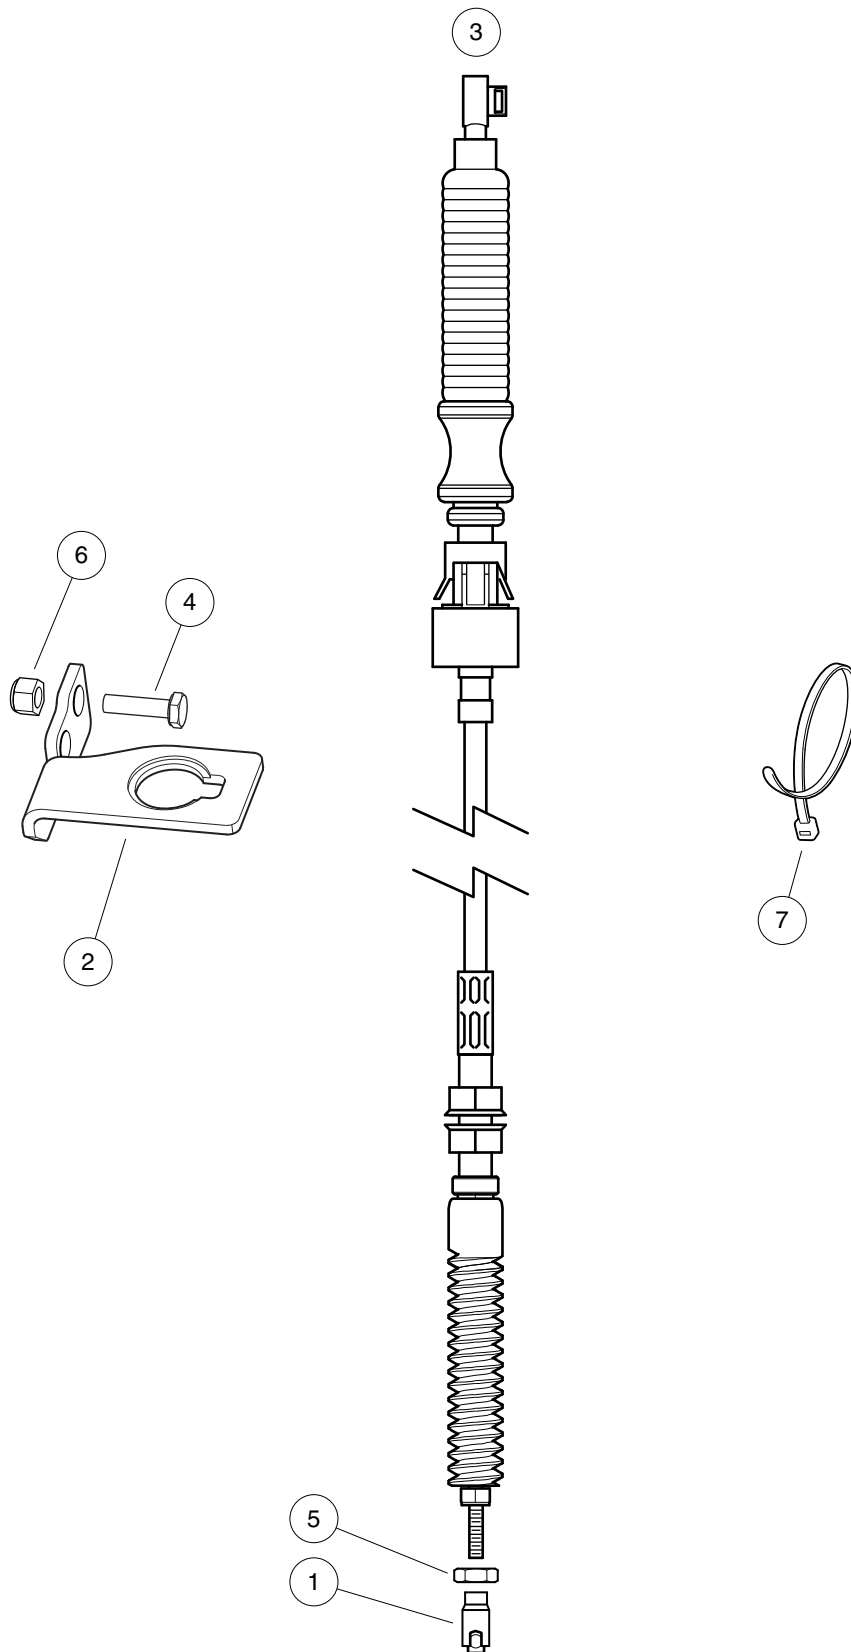

001071-001

SHIFTER CABLE – TURF/CA 6 AND VILLAGER 6

ITEM	PART NO.	DESCRIPTION	QTY	12
		1 2 3 4		G
1	<u>1012333</u>	Joint, #10-32 Ball	1	
2	<u>103295101</u>	Brkt, Spt, Cable End, Fnr	1	
3	<u>103295203</u>	Cable, Transmission, 2385mm	1	
4	304	Screw, 1/4-20 X 1.0 Hex-Head Cap	2	
5	<u>7893</u>	Nut, #10-32 Hex	1	
6	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	2	
7	<u>8639</u>	Tie Wrap, 11" Nylon	A/R	

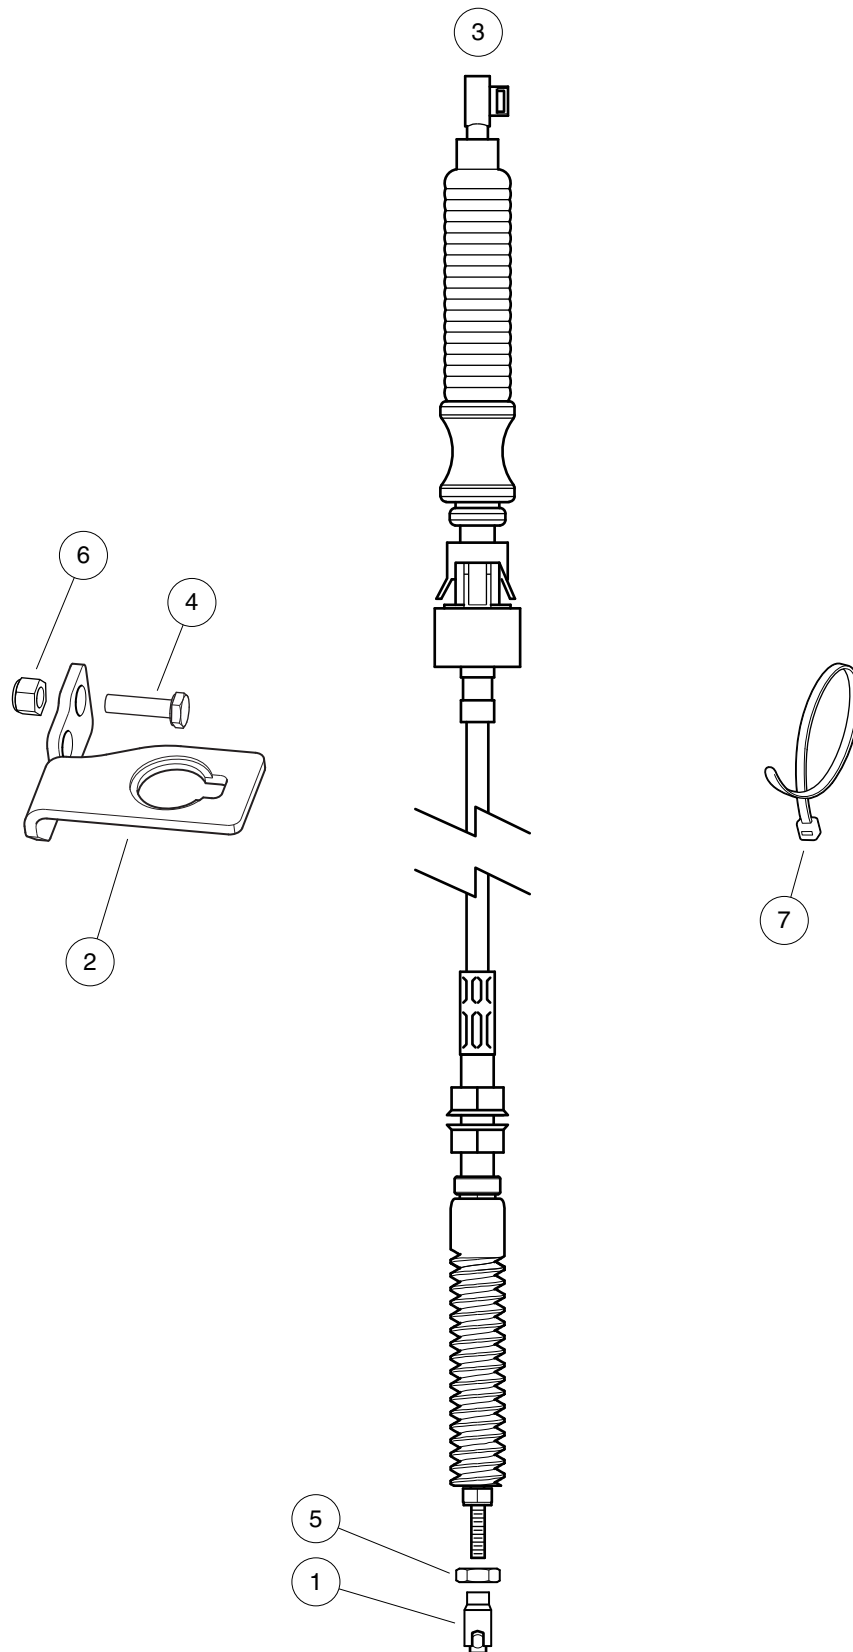


001071-001

SHIFTER CABLE – VILLAGER 8

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1012333</u>	Joint, #10-32 Ball	1
2	<u>103295101</u>	Brkt, Spt, Cable End, Fnr	1
3	<u>103295204</u>	Cable, Trans, Ball End, 3225mm	1
4	<u>304</u>	Screw, 1/4-20 X 1.0 Hex-Head Cap	2
5	<u>7893</u>	Nut, #10-32 Hex	1
6	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	2
7	<u>8639</u>	Tie Wrap, 11" Nylon	A/R

12
G

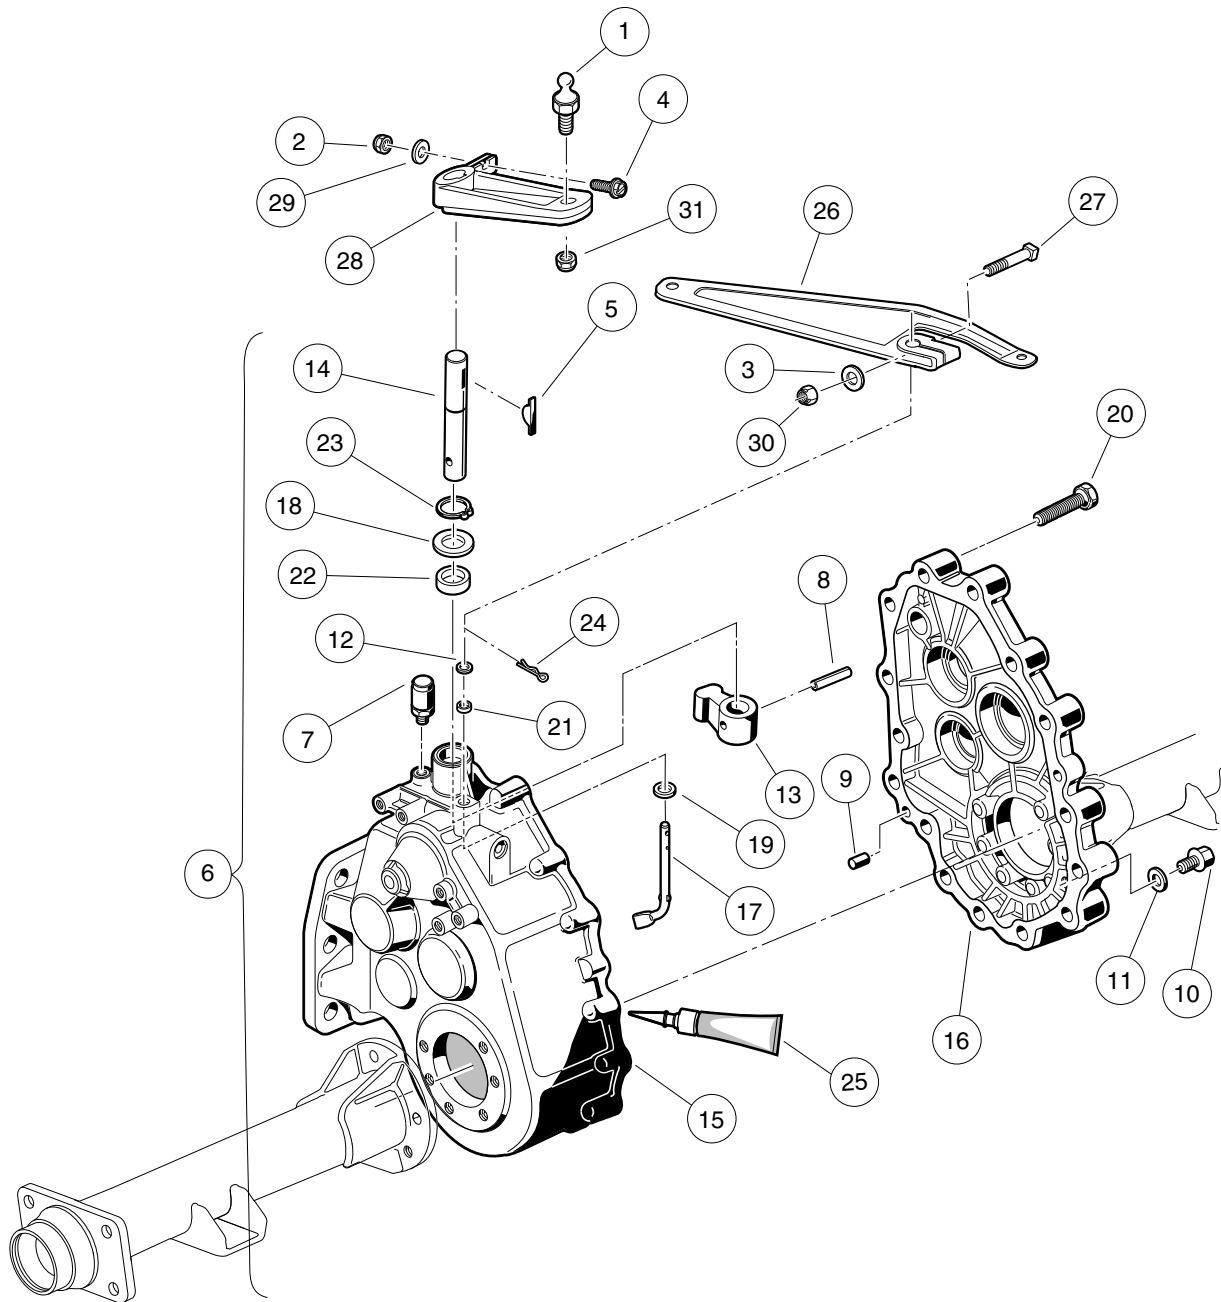


000220-005

KAWASAKI TRANSAXLE – GEAR CASES AND BRACKETS

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1010954</u>	Stud, Ball, 1/4-28 X 0.560	1
2	<u>1013061</u>	Locknut, #10-32 Nylon Insert	1
3	<u>1014007</u>	Washer, 1/4, Flat	1
4	<u>1017082</u>	Screw, #10-32 X 0.75, Hex-Head Machine	1
5	<u>1017231</u>	Key, Woodruff	1
6	<u>101833601</u>	Transaxle, 11.77 Ratio (includes items 7 through 25)	1
7	<u>1012711</u>	Breather	1
8	<u>1012752</u>	Roll Pin	1
9	<u>1012896</u>	Pin, Dowel	2
10	<u>1013760</u>	Fill Plug	2
11	<u>1016432</u>	Gasket, Drain Plug	1
12	<u>1016513</u>	Washer, M6 Flat	1
13	<u>101890101</u>	Lever, Drive Selector	1
14	<u>101890201</u>	Shaft, Drive Selector	1
15	<u>101890501</u>	Gear Case (driver side)	1
16	<u>101890601</u>	Gear Case (passenger side)	1
17	<u>101891301</u>	Arm Pivot	1
18	<u>101892901</u>	Washer	1
19	<u>101893801</u>	Washer	1
20	<u>101926901</u>	Screw, M8-1.25 X 40mm Hex-Head	15
21	<u>101927101</u>	Seal, Oil	1
22	<u>101927201</u>	Seal, Oil	1
23	<u>101927301</u>	Snap Ring	1
24	<u>101928601</u>	Pin, Cotter	1
25	<u>101928701</u>	Liquid Gasket (Transaxle case)	1
26	<u>101834801</u>	Arm, Governor	1
27	<u>101886101</u>	Screw, 1/4-20 X 1.00, Square-Head	1
28	<u>102515401</u>	Lever, Transmission Shift	1
29	<u>183</u>	Washer, #10, Type A, Flat	1
30	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	1
31	<u>8717</u>	Locknut, Nylon Insert, 1/4-28	1
Note: Kawasaki transaxle component listings span three pages. To identify your transaxle, locate the serial number decal on the axle tube.			

12

G

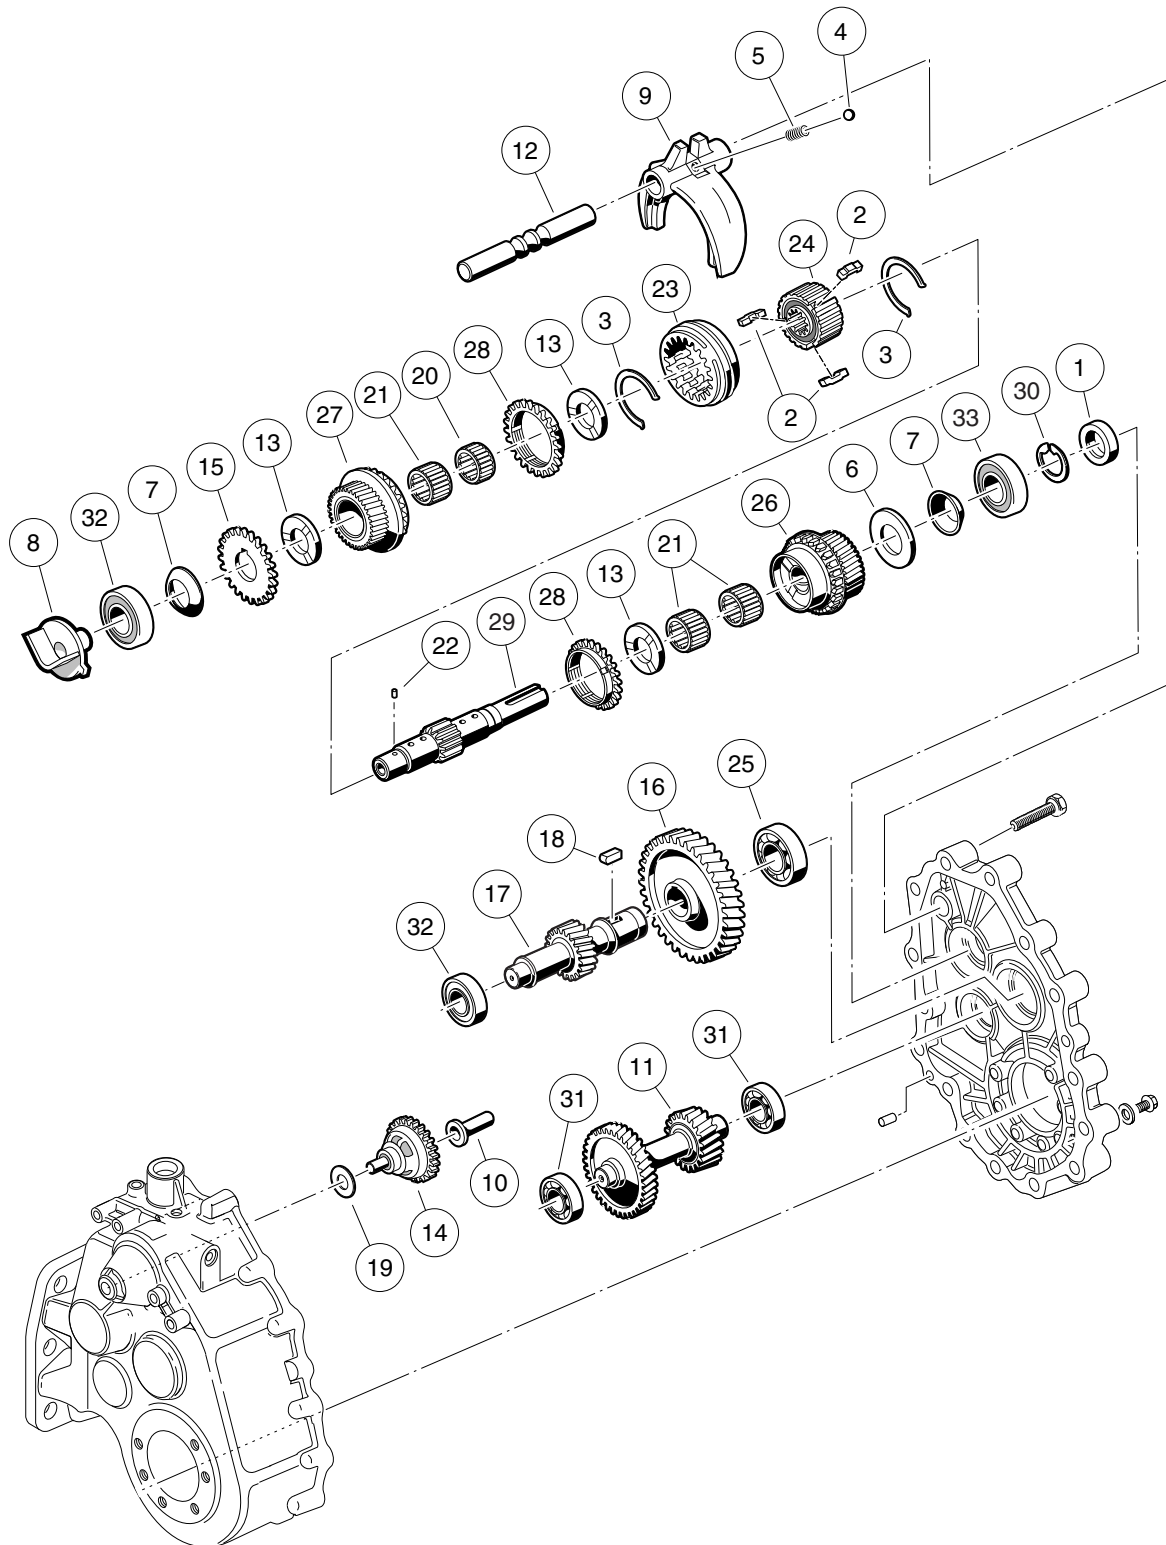

000221-001

KAWASAKI TRANSAXLE – F&R TRANSMISSION AND GEAR REDUCTION

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1012714</u>	Oil Seal	1
2	<u>1012740</u>	Synchro Insert	3
3	<u>1012741</u>	Synchro Spring	2
4	<u>1012747</u>	Shifter Ball	1
5	<u>1012748</u>	Shifter Spring	1
6	<u>1016337</u>	Washer, Thrust	1
7	<u>1016338</u>	Washer, Spring	2
8	<u>101889401</u>	Guide	1
9	<u>101890001</u>	Fork - Shift	1
10	<u>101891601</u>	Sleeve, Governor	1
11	<u>101891901</u>	Gear, Cluster	1
12	<u>101892001</u>	Rod, Shift	1
13	<u>101892201</u>	Plate, Thrust	3
14	<u>101892301</u>	Governor Assembly	1
15	<u>101892401</u>	Gear, Spur	1
16	<u>101892501</u>	Gear, Helical (61 Tooth)	1
17	<u>101892601</u>	Gear, Helical (17 Tooth)	1
18	<u>101893201</u>	Key Sunk	1
19	<u>101893901</u>	Washer	1
20	<u>101927501</u>	Needle Bearing	1
21	<u>101927601</u>	Needle Bearing	3
22	<u>101927701</u>	Pin, .116" Dia X 0.264 Dowel	1
23	<u>101927901</u>	Sleeve, Synchro	1
24	<u>101928001</u>	Hub, Synchro Clutch	1
25	<u>101928101</u>	Bearing, Ball	1
26	<u>101980801</u>	Gear Assembly, 16-Degree Synchro (25 Tooth)	1
27	<u>101980901</u>	Gear Assembly, 16-Degree Rear Synchro (28 Tooth)	1
28	<u>101981001</u>	Ring, 16-Degree Synchronizer	2
29	<u>102453001</u>	Shaft, Trans, with Circlip	1
30	<u>102453101</u>	Circlip	1
31	<u>7335</u>	Bearing	2
32	<u>AM10080</u>	Bearing, Ball, Sealed	2
33	<u>AM10081</u>	Bearing, Ball, Sealed	1
Note: To identify your transaxle, locate the serial number decal on the axle			

12


G

KAWASAKI TRANSAXLE – DIFFERENTIAL AND AXLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1013770</u>	Differential Idler Gear	2
2	<u>1013771</u>	Gear, Differential	2
3	<u>1013772</u>	Pin, Differential	1
4	<u>1013794</u>	Axle Shaft Oil Seal	2
5	N/A	Dowel Pin	1
6	<u>101890901</u>	Axle Tube (Passenger Side)	1
7	<u>101891001</u>	Axle Tube (Driver Side)	1
8	<u>101891401</u>	Axle Assembly, Passenger Side (includes items 9 through 13)	1
9	<u>1011291</u>	Outer Axle, Tube Bearing	1
10	<u>1013787</u>	Lug Stud	4
11	<u>1013792</u>	Circlip Type C	1
12	<u>1014207</u>	Bushing	1
13	<u>1016672</u>	Retaining Ring	1
14	<u>101891501</u>	Axle Assembly, Driver-Side (includes items 15 through 19)	1
15	<u>1011291</u>	Outer Axle, Tube Bearing	1
16	<u>1013787</u>	Lug Stud	4
17	<u>1013792</u>	Circlip Type C	1
18	<u>1014207</u>	Bushing	1
19	<u>1016672</u>	Retaining Ring	1
20	<u>101892701</u>	Gear, Helical	1
21	<u>101910501</u>	Kit, Differential Gear Case (includes items 22 through 25)	1
22	<u>1013768</u>	Differential Gear Case, Left-Hand	1
23	<u>1013769</u>	Differential Gear Case, Right-Hand	1
24	<u>1013773</u>	Plate, Thrust (Differential Gear)	1
25	<u>1013774</u>	Plate, Thrust (Idler Gear)	2
26	<u>101928301</u>	Screw, M8-1.25 X 35mm Hex Head	8
27	<u>102031901</u>	Bolt, M10 X 1.5 X 30mm	14
28	<u>7330</u>	Inner Axle Tube Bearing	2
Note: To identify your transaxle, locate the serial number decal on the axle			

12

G

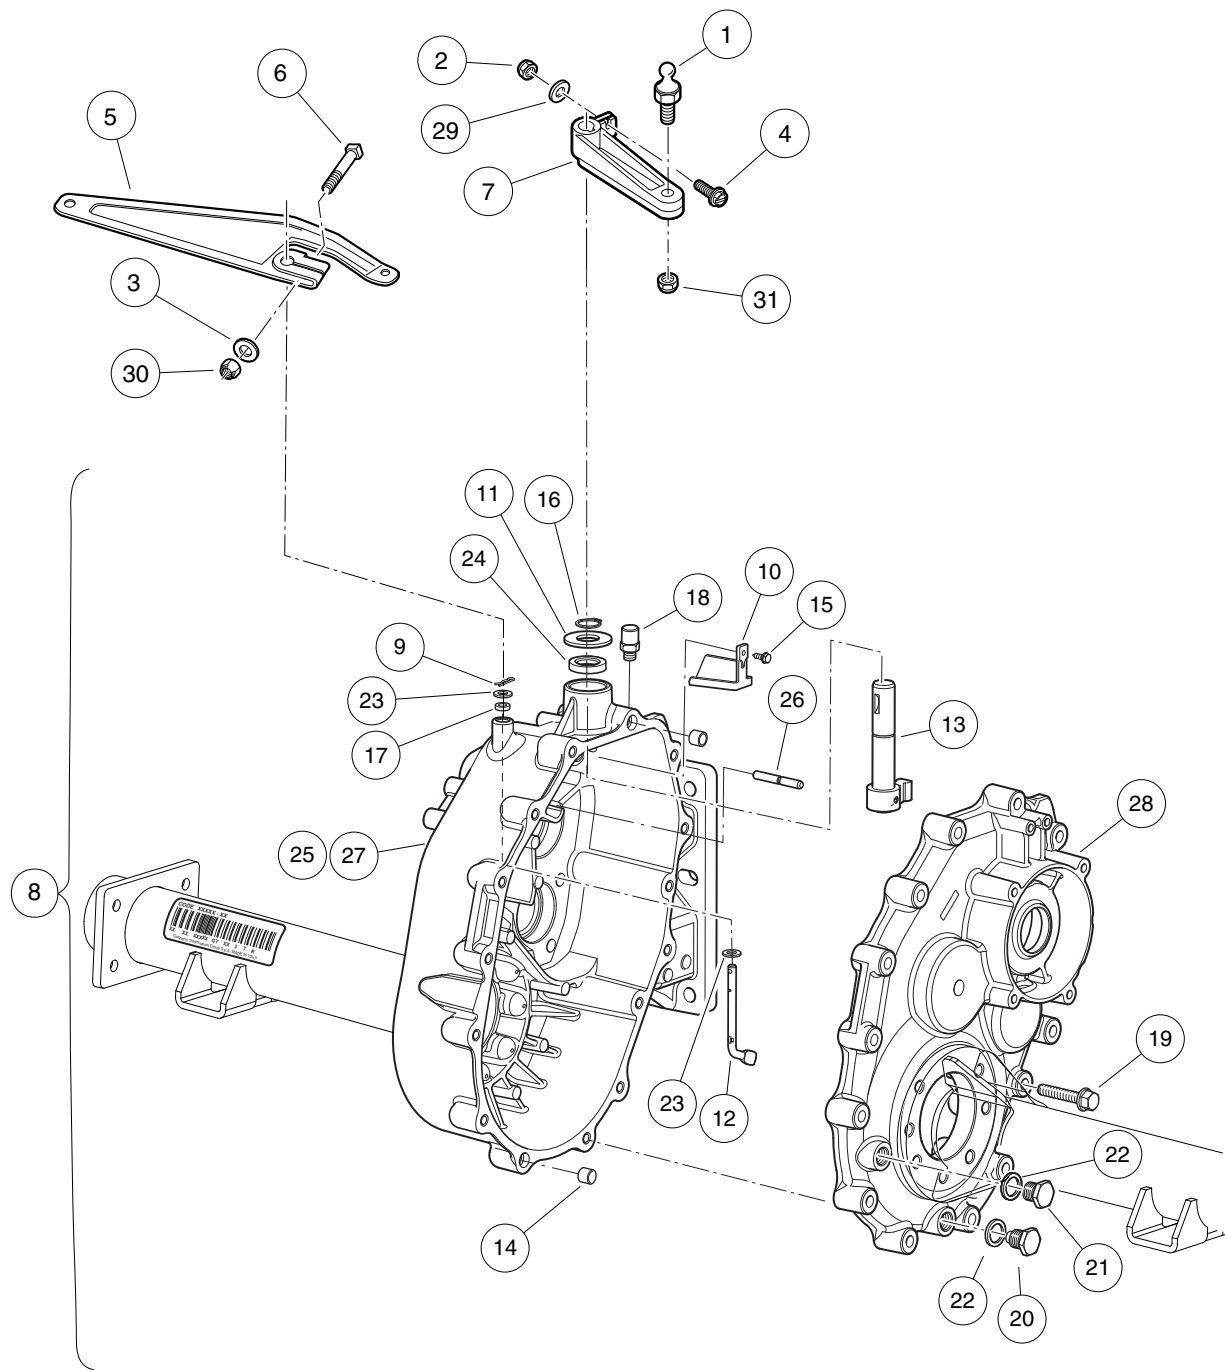


000680-010

GRAZIANO TRANSAXLE – GEAR CASES AND LEVERS

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1010954</u>	Stud, Ball, 1/4-28 X 0.560	1
2	<u>1013061</u>	Locknut, #10-32 Nylon Insert	1
3	<u>1014007</u>	Washer, 1/4, Flat	1
4	<u>1017082</u>	Screw, #10-32 X 0.75, Hex-Head Machine	1
5	<u>101834801</u>	Arm, Governor	1
6	<u>101886101</u>	Screw, 1/4-20 X 1.00, Square-Head	1
7	<u>102515401</u>	Lever, Transmission Shift	1
8	<u>103874201</u>	Transaxle, Gas, 11.77:1, Gtg (includes items 9 through 28)	1
9	<u>102897401</u>	Pin, Split	1
10	<u>102897601</u>	Conveyor, Oil	1
11	<u>102897801</u>	Washer, Thrust	1
12	<u>102897901</u>	Lever, Speed Governor	1
13	<u>102898201</u>	Unit, Drive Selector	1
14	<u>102899101</u>	Dowel	2
15	<u>102899201</u>	Screw	1
16	<u>102899401</u>	Ring, Snap	1
17	<u>102899701</u>	Grommet	1
18	<u>102899801</u>	Breather	1
19	<u>102900001</u>	Screw	15
20	<u>102900101</u>	Drain Plug, Magnetic	1
21	<u>102900201</u>	Fill Plug	1
22	<u>102900301</u>	Seal	2
23	<u>102900601</u>	Washer	2
24	<u>102900901</u>	Grommet	1
25	<u>103882101</u>	Case, Transaxle, W/gov Pin (includes items 26 and 27)	1
26	N/A	Pin, Speed Governor	1
27	N/A	Cover, Gear Box (Driver-Side)	1
28	<u>103882301</u>	Cover, Gear Box (Passenger-Side)	1
29	<u>183</u>	Washer, #10, Type A, Flat	1
30	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	1
31	<u>8717</u>	Locknut, Nylon Insert, 1/4-28	1
Note: Graziano transaxle component listings span three pages. To identify your transaxle, locate the serial number decal on the axle tube. <u>103874201</u> is used on vehicles with serial numbers 1235-307250 and greater and is backwards compatible. However, some service parts are not compatible with other transaxles.			

12

G

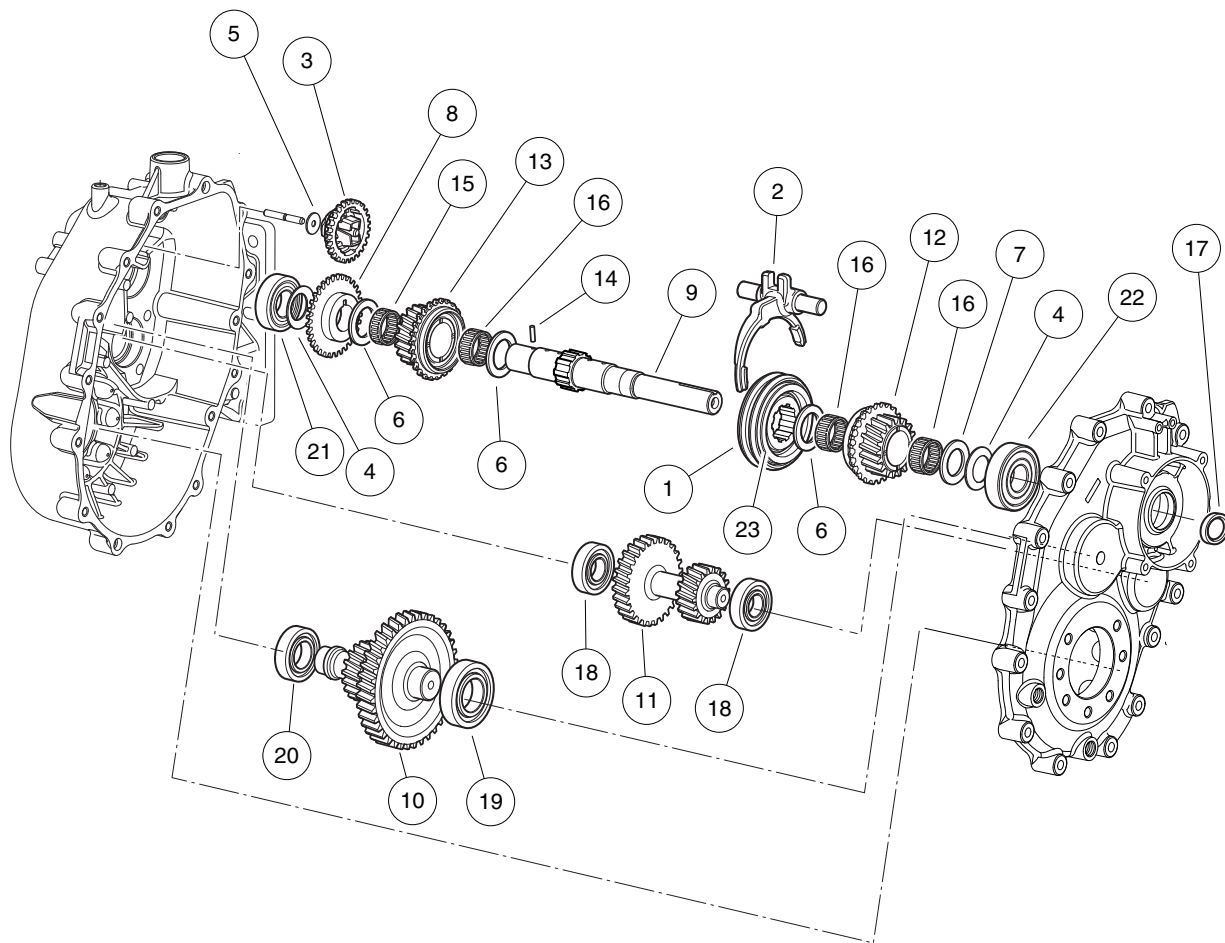


000680-008

GRAZIANO TRANSAXLE – F&R TRANSMISSION AND GEAR REDUCTION

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>102897201</u>	Synchronizer, Complete	1
2	<u>102897301</u>	Fork, Complete	1
3	<u>102897701</u>	Assembly, Speed Governor	1
4	<u>102898001</u>	Washer, Belleville	2
5	<u>102898101</u>	Bearing, Thrust	1
6	<u>102898301</u>	Bearing, Thrust	3
7	<u>102898401</u>	Washer, Thrust	1
8	<u>102898501</u>	Gear, Speed Governor	1
9	<u>102898601</u>	Shaft, Main	1
10	<u>102898701</u>	Shaft, Secondary	1
11	<u>102898801</u>	Shaft, Reverse Gear	1
12	<u>102898901</u>	Gear, Complete, 25t	1
13	<u>102899001</u>	Gear, Complete, 28t	1
14	<u>102899301</u>	Pin	1
15	<u>102899501</u>	Cage, Roller	1
16	<u>102899601</u>	Cage, Roller	3
17	<u>102899901</u>	Grommet	1
18	<u>102900401</u>	Bearing	2
19	<u>102900501</u>	Bearing, 62 Od X 30 Id X 16	1
20	<u>102900701</u>	Bearing	1
21	<u>102901001</u>	Bearing	1
22	<u>102901101</u>	Bearing	1
23	<u>103882001</u>	Washer, Wave, Trans Synchro	2
Note: To identify your transaxle, locate the serial number decal on the axle tube.			

12
G

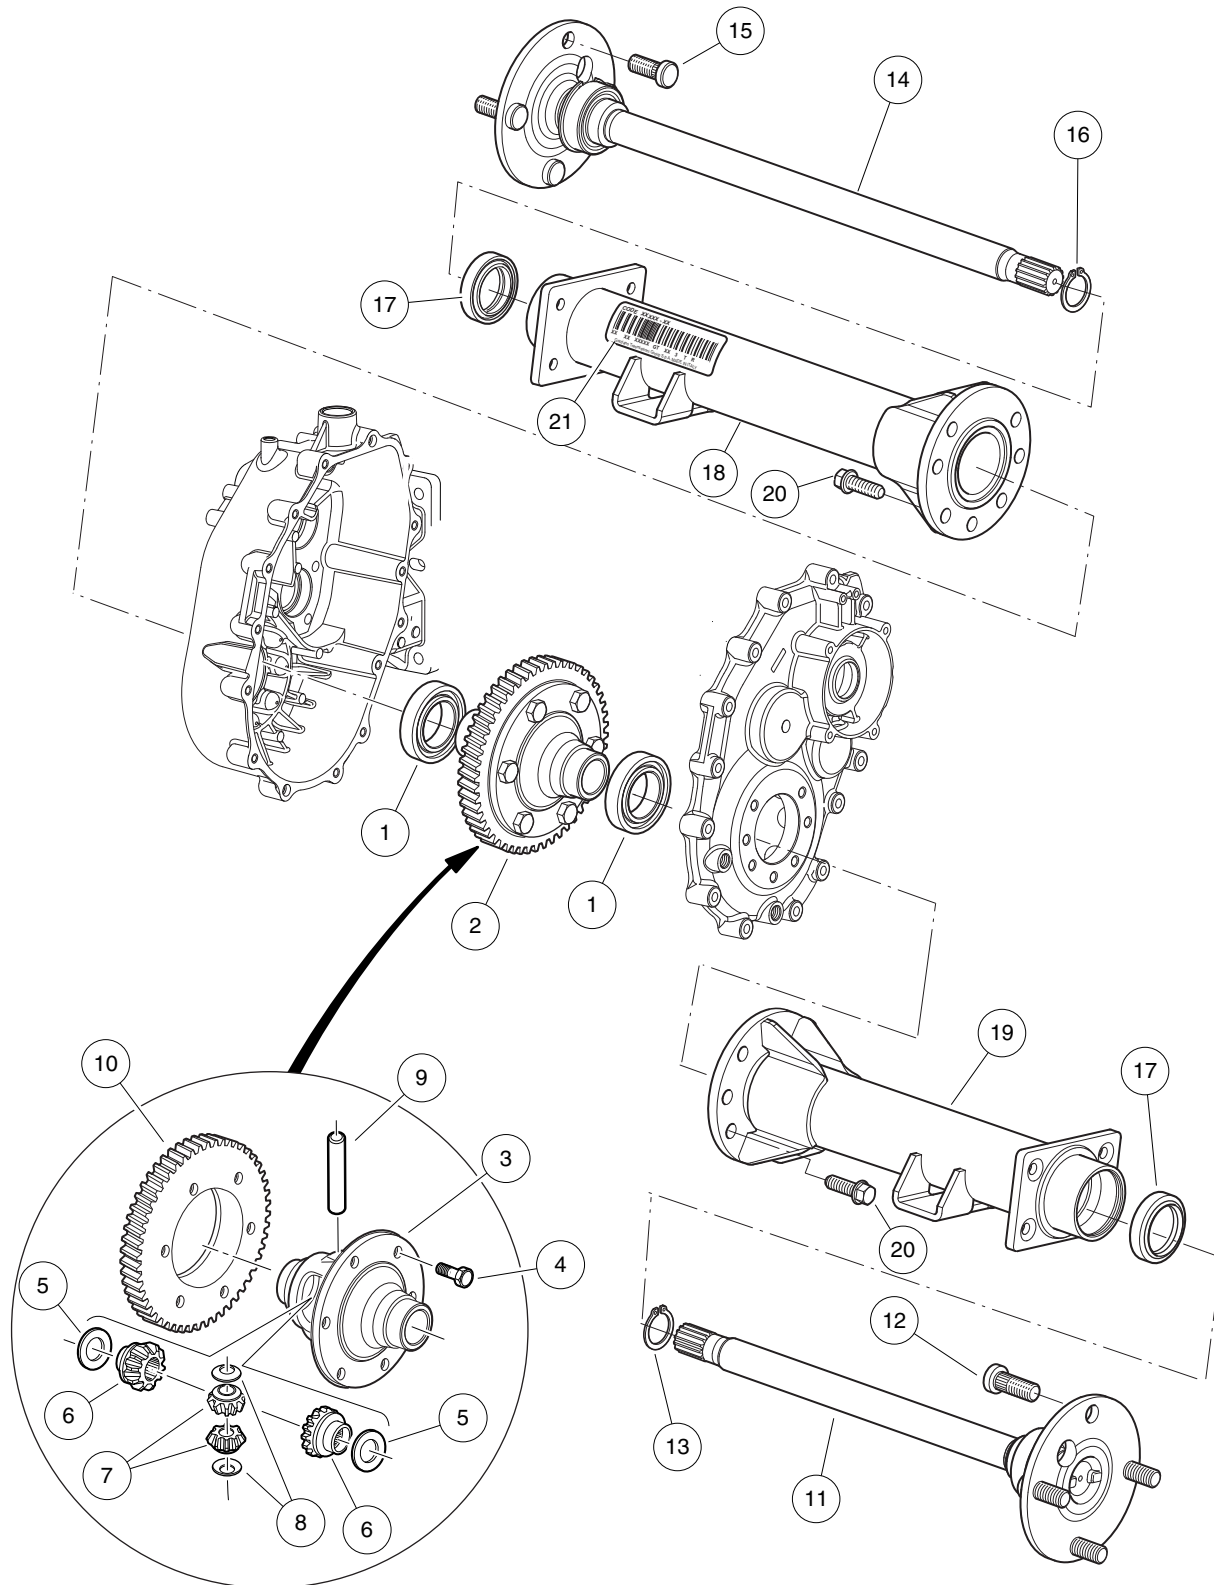


000681-002

GRAZIANO TRANSAXLE – DIFFERENTIAL AND AXLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>102900801</u>	Bearing, 68 Od X 40 Id X 15	2
2	<u>102902001</u>	Assembly, Differential (includes items 3 through 10)	1
3	<u>102901201</u>	Box, Differential	1
4	<u>102901301</u>	Screw, M10 X 25	6
5	<u>102901401</u>	Ring, Sleeve	2
6	<u>102901501</u>	Gear, Sun	2
7	<u>102901601</u>	Gear, Planetary	2
8	<u>102901701</u>	Ring, Sleeve	2
9	<u>102901801</u>	Pin	1
10	<u>102901901</u>	Gear	1
11	<u>102902101</u>	Shaft, Axle, Short, Complete (Passenger-Side) (includes items 12 and 13)	1
12	<u>102902301</u>	Bolt, Stud	4
13	<u>102902401</u>	Snap Ring	1
14	<u>102902201</u>	Shaft, Axle, Long, Complete (Driver-Side) (includes items 15 and 16)	1
15	<u>102902301</u>	Bolt, Stud	4
16	<u>102902401</u>	Snap Ring	1
17	<u>102902501</u>	Seal, Lip	2
18	<u>102902601</u>	Axle Tube, (Driver-Side)	1
19	<u>102902701</u>	Axle Tube, (Passenger-Side)	1
20	<u>102902801</u>	Screw, M10 X 30	14
21	N/A	Tag, Serial	1
Note: To identify your transaxle, locate the serial number decal on the axle tube.			

12

G

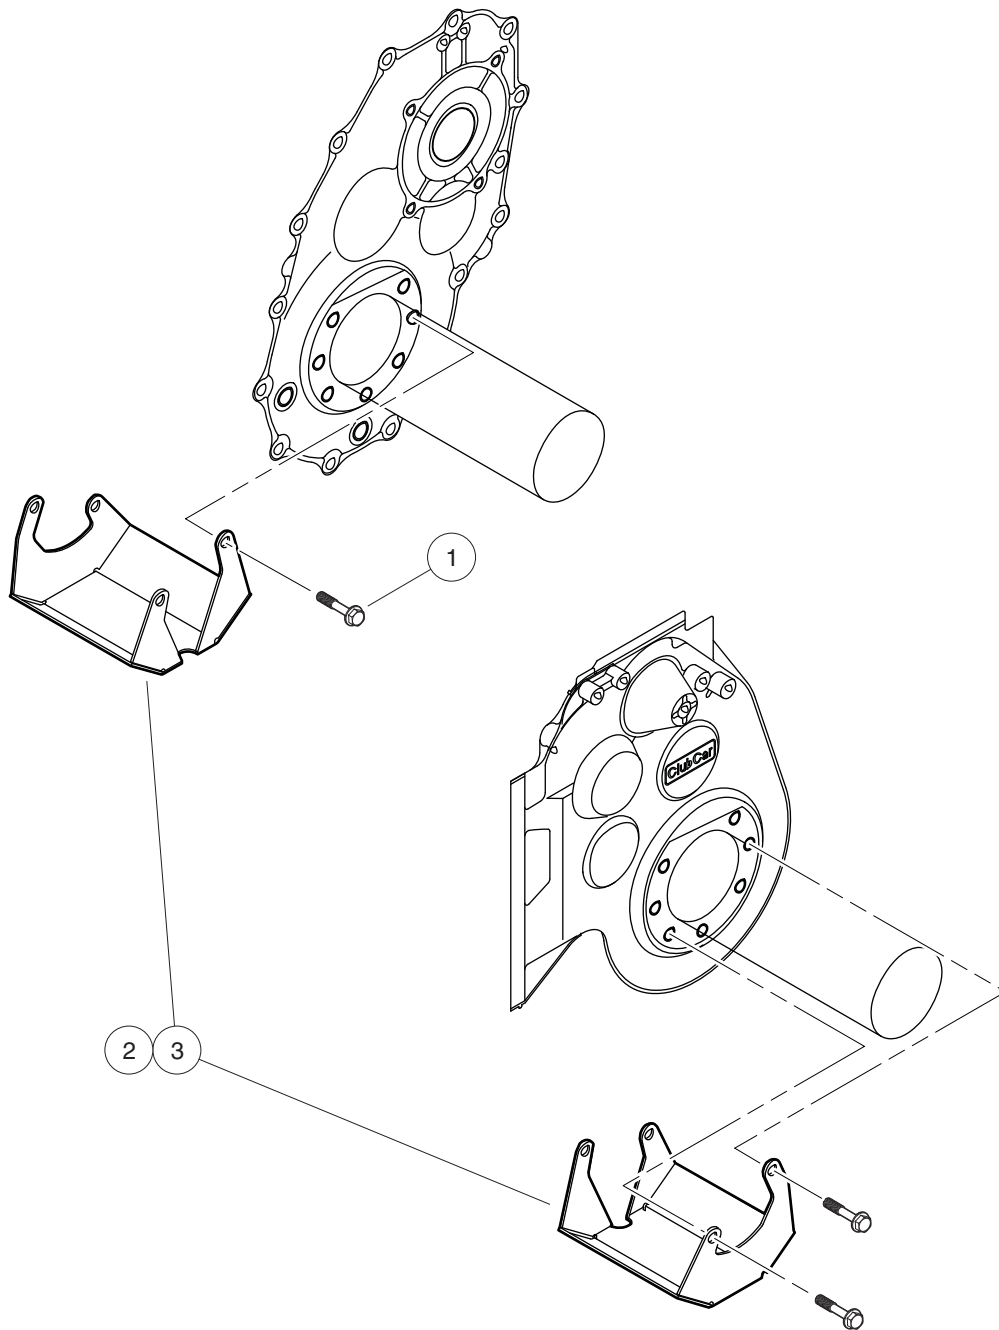

000366-001

DIFFERENTIAL GUARD – GASOLINE VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101926901</u>	Screw, M8-1.25 X 40mm Hex-Head	4
2	<u>101932902</u>	Diff Guard Unitized Kit (Includes Instructions) (includes item 3)	1
3	N/A	Guard, Unitized Differential	1

12
G


12

G

ELECTRICAL SYSTEM, ELECTRIC VEHICLES

13

E

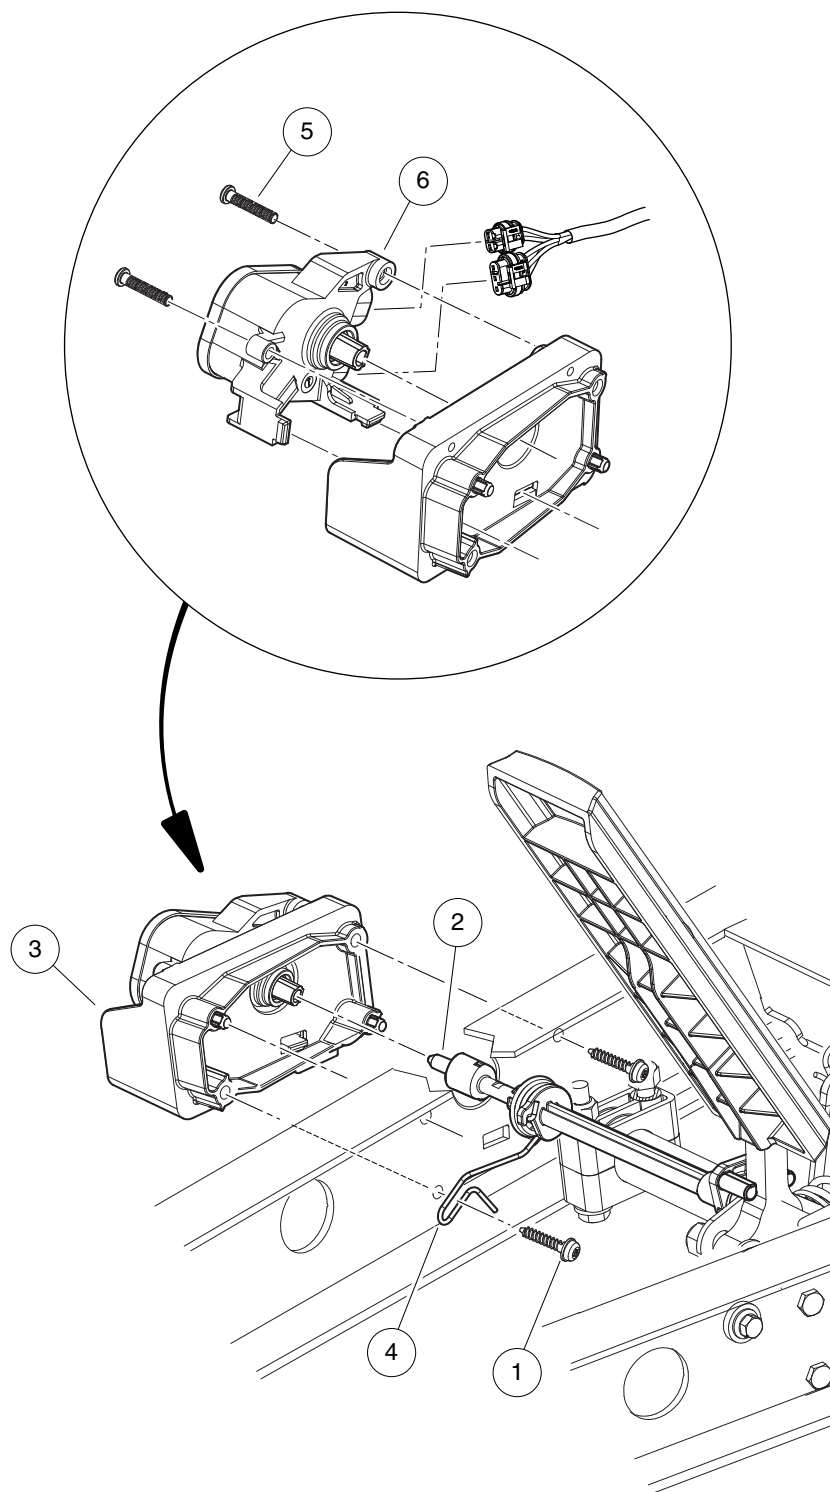


002522-001

MOTOR CONTROLLER OUTPUT REGULATOR (MCOR)

ITEM	PART NO.	DESCRIPTION	QTY	13
		1 2 3 4		
1	<u>102297230</u>	Screw, M6, Torx, Interlock Thread	2	
2	<u>103902101</u>	Bar, Drive, Cast	1	E
3	<u>103902301</u>	Housing, Mcor	1	
4	<u>103902401</u>	Spring, Torsion	1	
5	<u>103943401</u>	Screw, Pan, #10 X 1.00 Hi-lo	2	
6	<u>105116301</u>	MCOR4, Type 16 Switch	1	

13

E

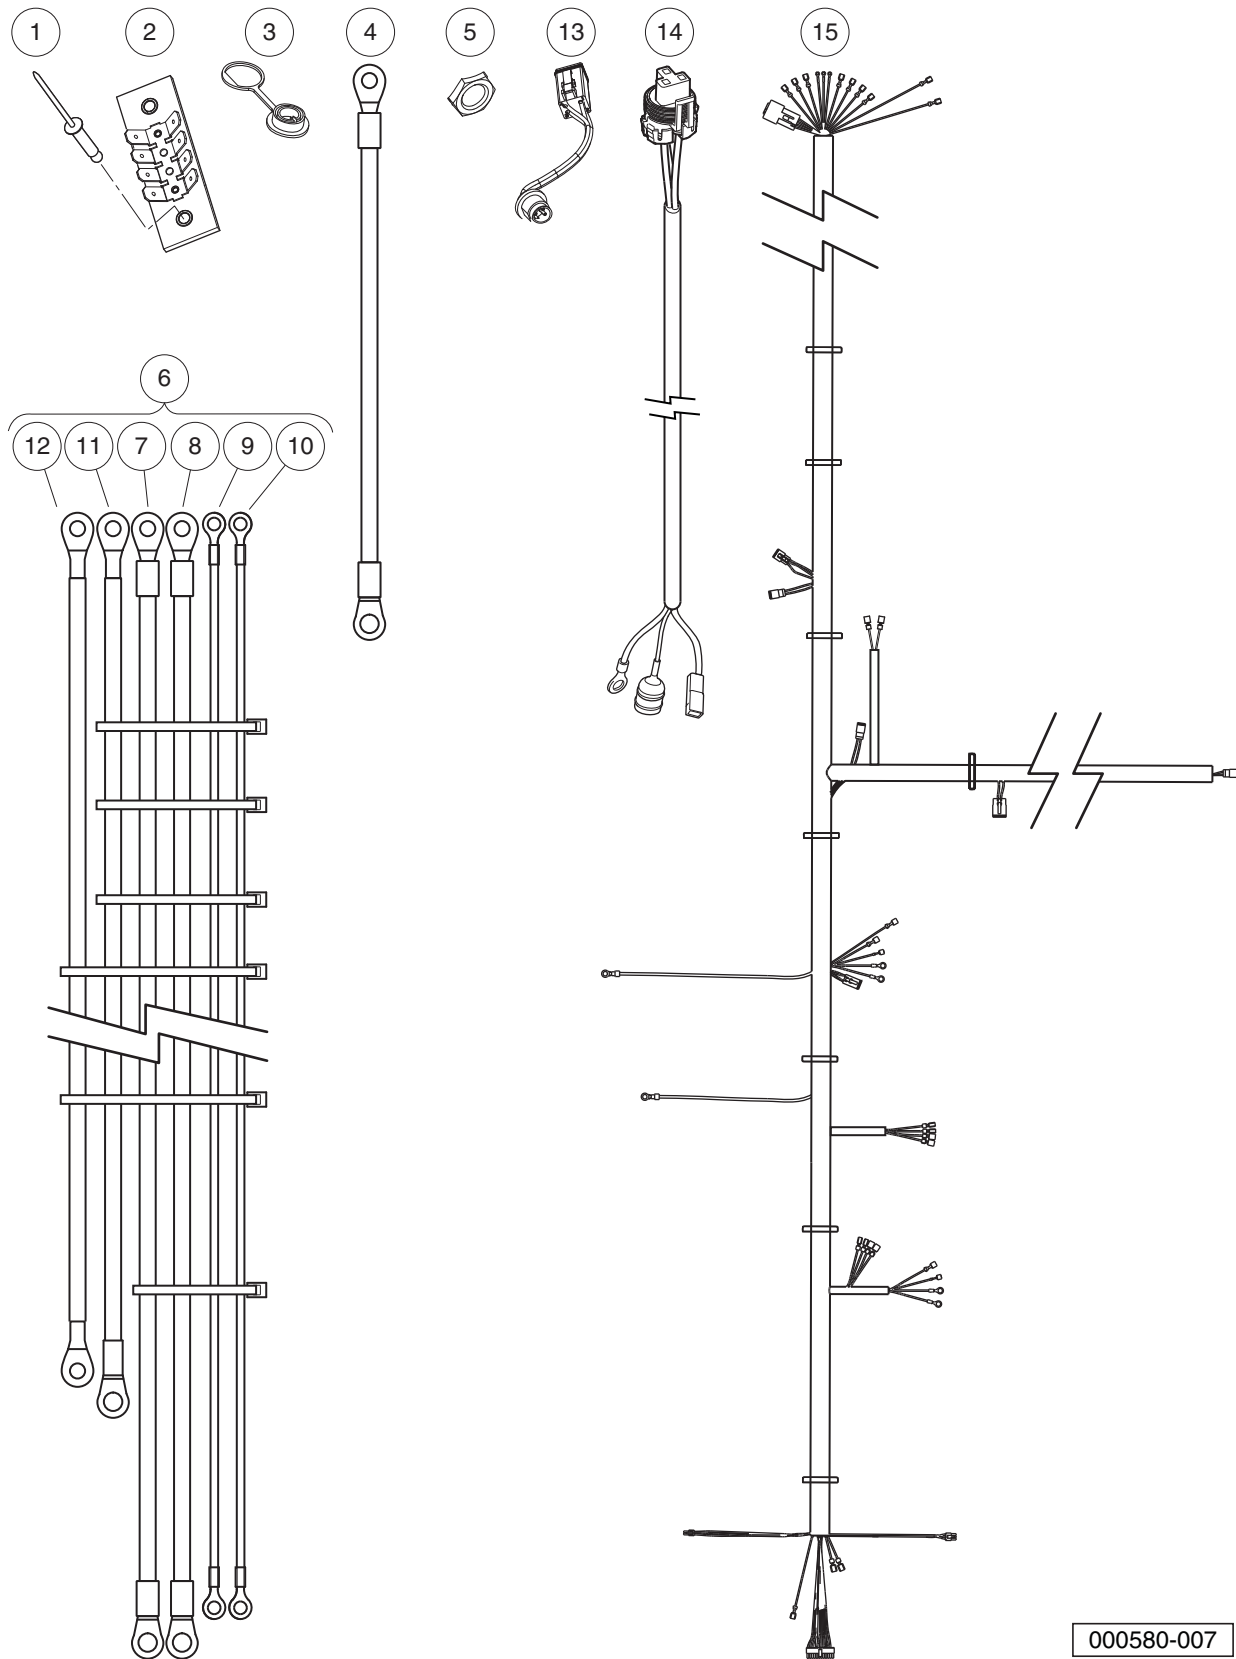

000580-007

WIRING – VILLAGER 6 IQ PLUS ELECTRIC


ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1013357</u>	Rivet, 5/32 Aluminum Pop	2
2	<u>1016356</u>	Terminal Block with Insulator	1
3	<u>102196901</u>	Dust Cap	1
4	<u>102440901</u>	Wire Asm, #4 Yellow, 13"	1
5	<u>102572401</u>	Nut, Diagnostic Port, Prec	1
6	<u>102845501</u>	Harness, Power, Stretch IQ Plus (includes items 7 through 12)	1
7	N/A	Asm, #4 Grn Wire, 89"	1
8	N/A	Asm, #4 Wht Wire, 88.5"	1
9	N/A	Asm, #10 Org Wire, 89.5"	1
10	N/A	Asm, #10 Blu Wire, 95.5"	1
11	N/A	Asm, #4 Red Wire, 67.5"	1
12	N/A	Asm, #4 Blk Wire, 57.5"	1
13	<u>103218601</u>	Harness, Diagnostic Port	1
14	<u>103772101</u>	Charg Harness Iqplus,shelf 480	1
15	<u>103940701</u>	Harness, Wire, CA6, Vill 6, IQ Plus, MCOR3/4	1
Note: Wire Harness (item 15) is for use with MCOR3 and MCOR4.			

13

E

13

E

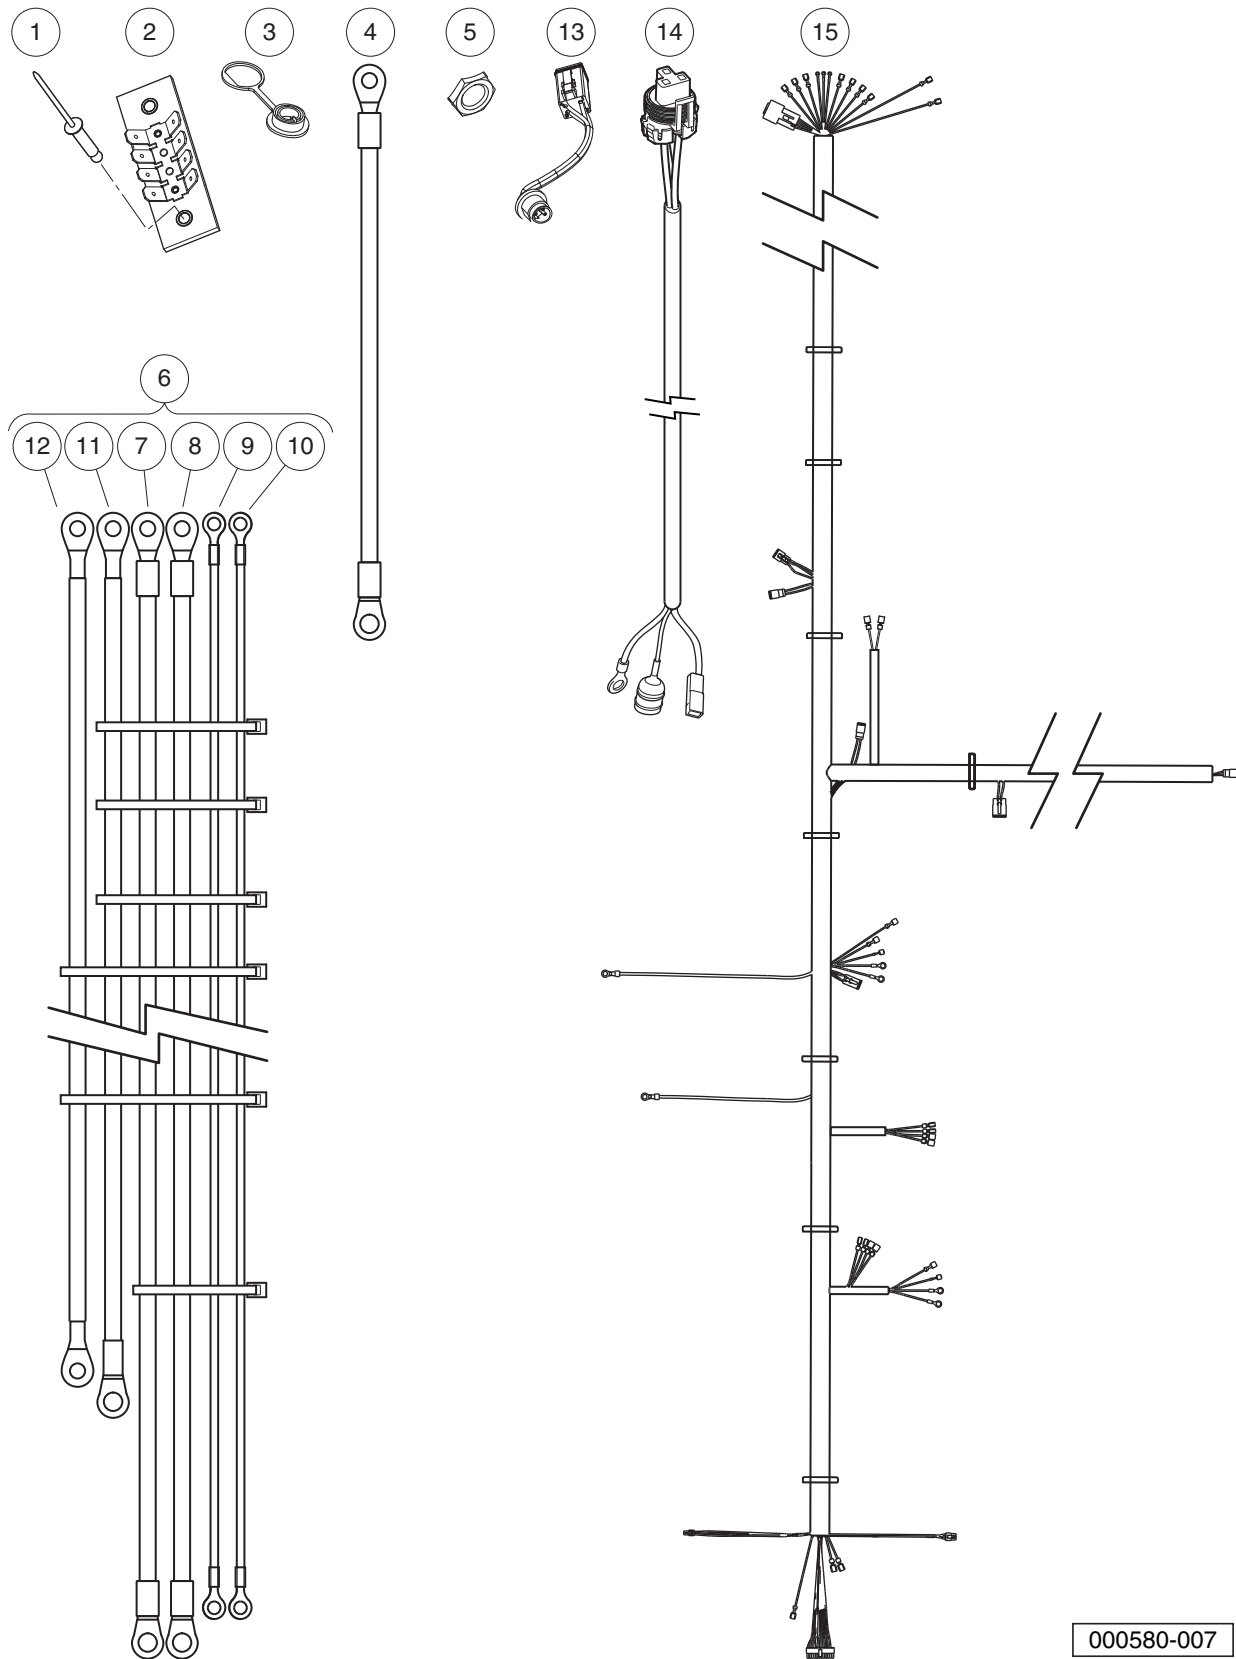

000580-007

WIRING – VILLAGER 8 IQ PLUS ELECTRIC


ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1013357</u>	Rivet, 5/32 Aluminum Pop	2
2	<u>1016356</u>	Terminal Block with Insulator	1
3	<u>102196901</u>	Dust Cap	1
4	<u>102440901</u>	Wire Asm, #4 Yellow, 13"	1
5	<u>102572401</u>	Nut, Diagnostic Port, Prec	1
6	<u>102845501</u>	Harness, Power, Stretch IQ Plus (includes items 7 through 12)	1
7	N/A	Asm, #4 Grn Wire, 89"	1
8	N/A	Asm, #4 Wht Wire, 88.5"	1
9	N/A	Asm, #10 Org Wire, 89.5"	1
10	N/A	Asm, #10 Blu Wire, 95.5"	1
11	N/A	Asm, #4 Red Wire, 67.5"	1
12	N/A	Asm, #4 Blk Wire, 57.5"	1
13	<u>103218601</u>	Harness, Diagnostic Port	1
14	<u>103772101</u>	Charg Harness Iqplus,shelf 480	1
15	<u>103940801</u>	Harness, Vill 8, Iq Plus, Mc3	1
Note: Wire Harness (item 15) is for use with MCOR3 and MCOR4.			

13

E

13

E

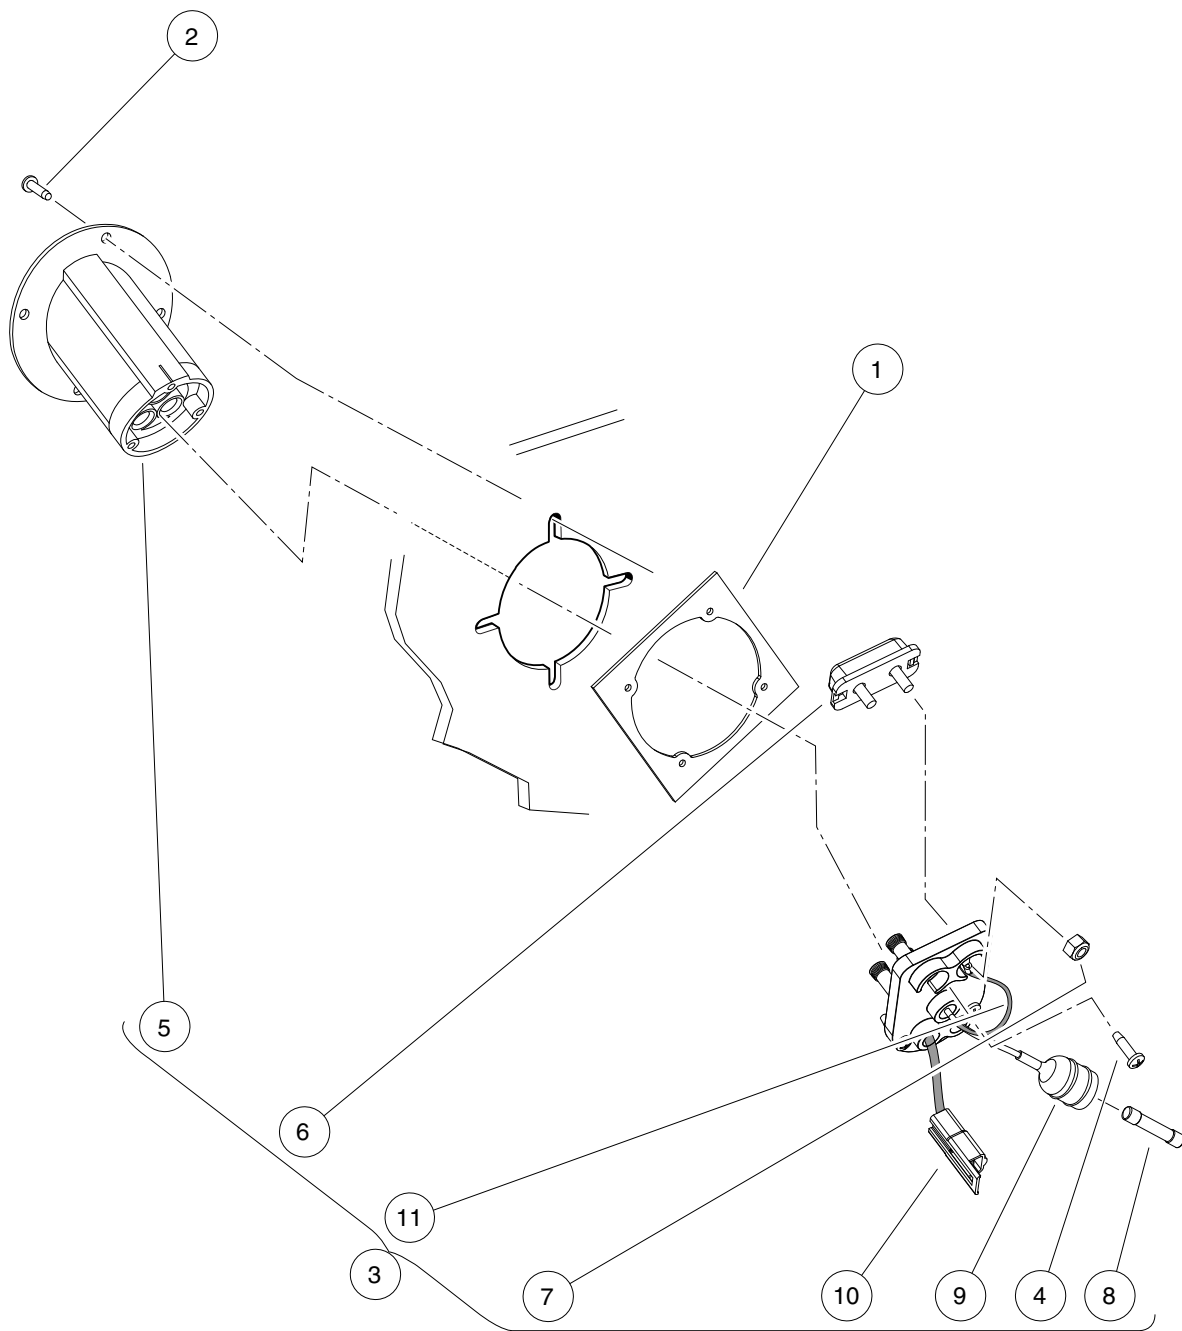


000369-002

BATTERY CHARGER RECEPTACLE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101801001</u>	Plate, Receptacle Backing	1
2	<u>101832001</u>	Screw, #7-19 X 0.625 Phillips Pan-Head Tap	4
3	<u>103771901</u>	Asm, Fuse & Receptacle, 480 (includes items 4 through 11)	1
4	<u>1017705</u>	Screw, #8 X 5/8 Phillips Pan-Head Type AB	3
5	<u>101796501</u>	Receptacle	1
6	<u>101796801</u>	Fuse Assembly (includes item 7)	1
7	<u>1013061</u>	Locknut, #10-32 Nylon Insert	2
8	<u>101894901</u>	Fuse, 3/8-Amp	1
9	N/A	Wire Assembly, Sense Lead, Gray	1
10	N/A	Wire Assembly, #10 Red	1
11	N/A	Wire Assembly, #10 Black	1

13

E

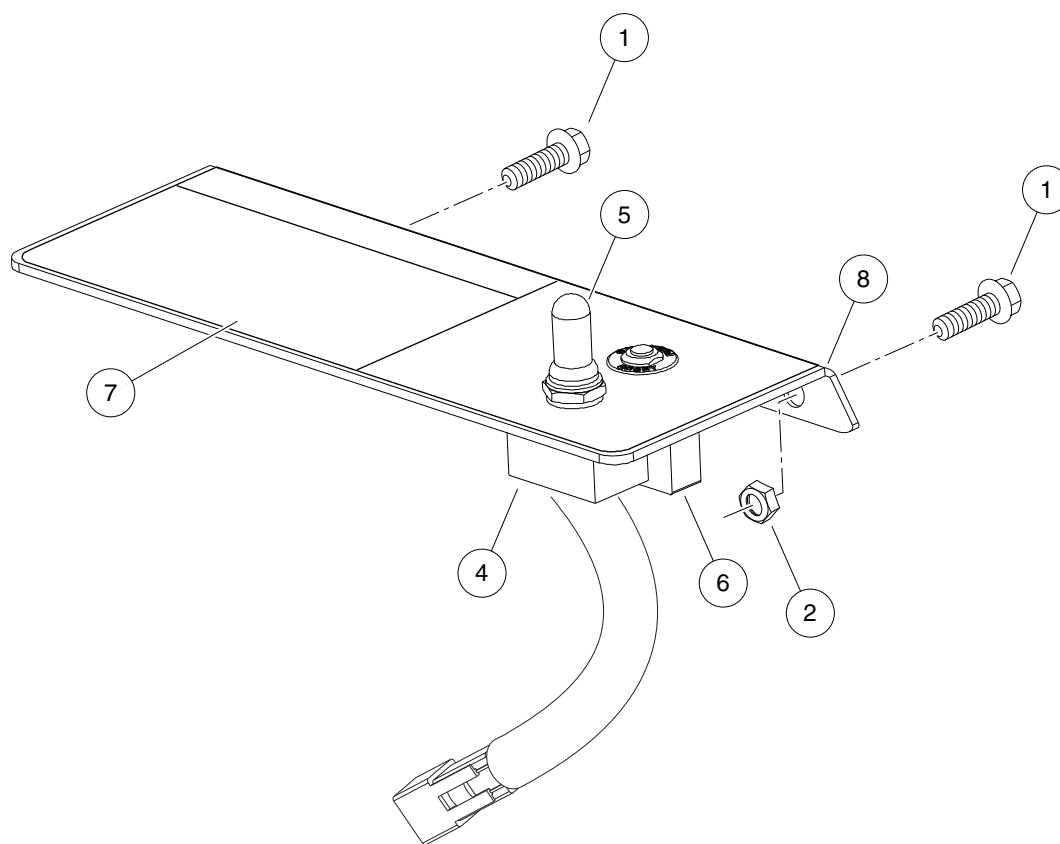

000425-001


TOW/RUN SWITCH – IQ PLUS VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1012126</u>	Screw, #10-32 X .625 Hx Washer	1
2	<u>1013061</u>	Locknut, #10-32 Nylon Insert	2
3	N/A	Tow/Run Switch Assembly (includes items 4 through 8)	1
4	<u>101908101</u>	Switch Assembly, Tow/Run	1
5	<u>101908401</u>	Boot, Switch	1
6	<u>102838101</u>	Circuit Breaker 250vac-50vdc	1
7	<u>102845101</u>	Decal, Tow Switch	1
8	<u>102915701</u>	Plate, Switch, Run Tow, Mode	1

13
E

13

E

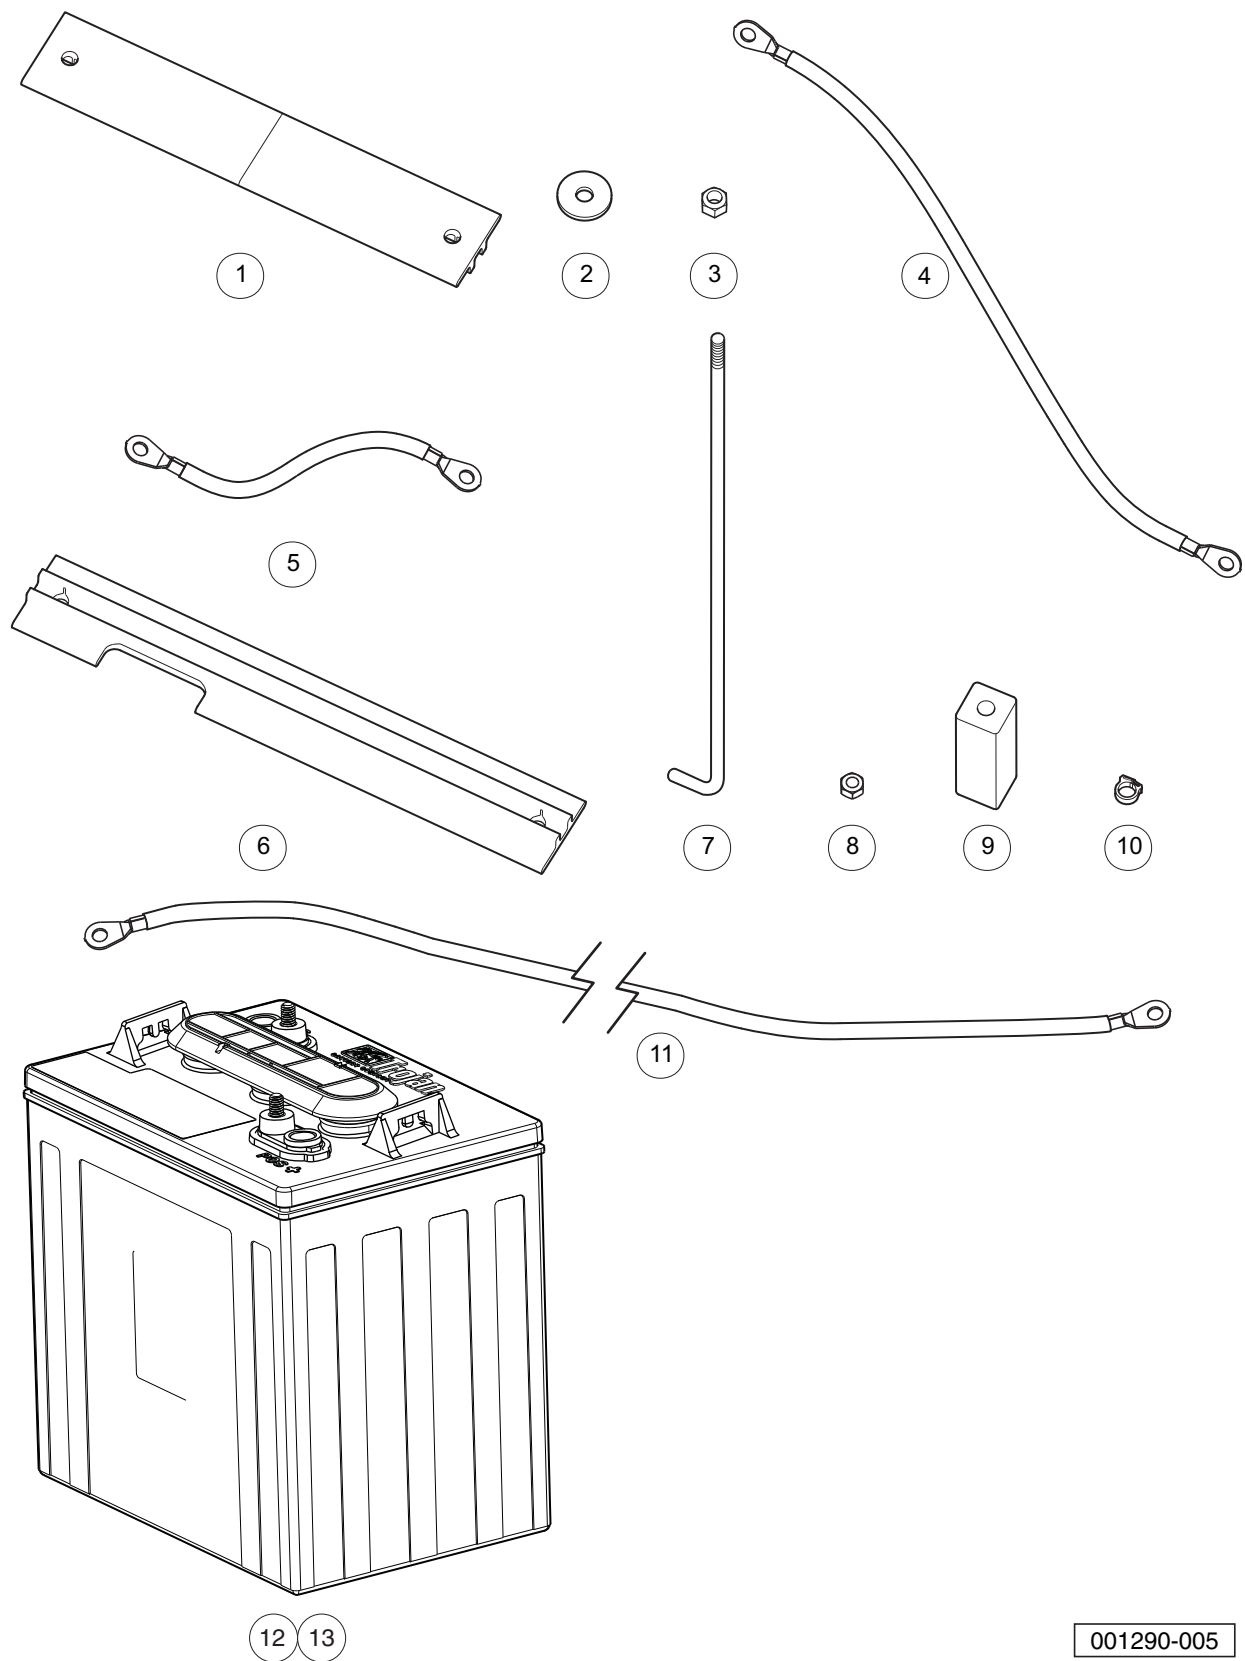

001290-005


BATTERIES, 6-VOLT, STANDARD DUTY, TROJAN

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101090801</u>	Hold-Down, Battery	2
2	<u>1011578</u>	Washer, 5/16 Type B Flat	12
3	<u>1015072</u>	Locknut, 5/16-18 Nylon Insert	12
4	<u>102002801</u>	Wire Assy, #4 Black	2
5	<u>102002901</u>	Wire Assy, #4 Black	3
6	<u>102766201</u>	Hold Down, Outside	4
7	<u>102845203</u>	Rod, Battery Hold Down 10.7"	12
8	<u>102873401</u>	5/16-18 Heavy Hex Nut	16
9	<u>102980801</u>	Extr, Plastic, 1 X 1 X 3	4
10	<u>102980901</u>	Clamp, Hose, Nylon, .25	1
11	<u>103198201</u>	Asm, #4 Blk Wire, 42"	1
12	<u>103969601</u>	Battery, 6-Volt, Trojan T105 (Wet) (includes item 13)	8
13	<u>101831401</u>	Battery Cap 6 Volt	1

13
E

13


E

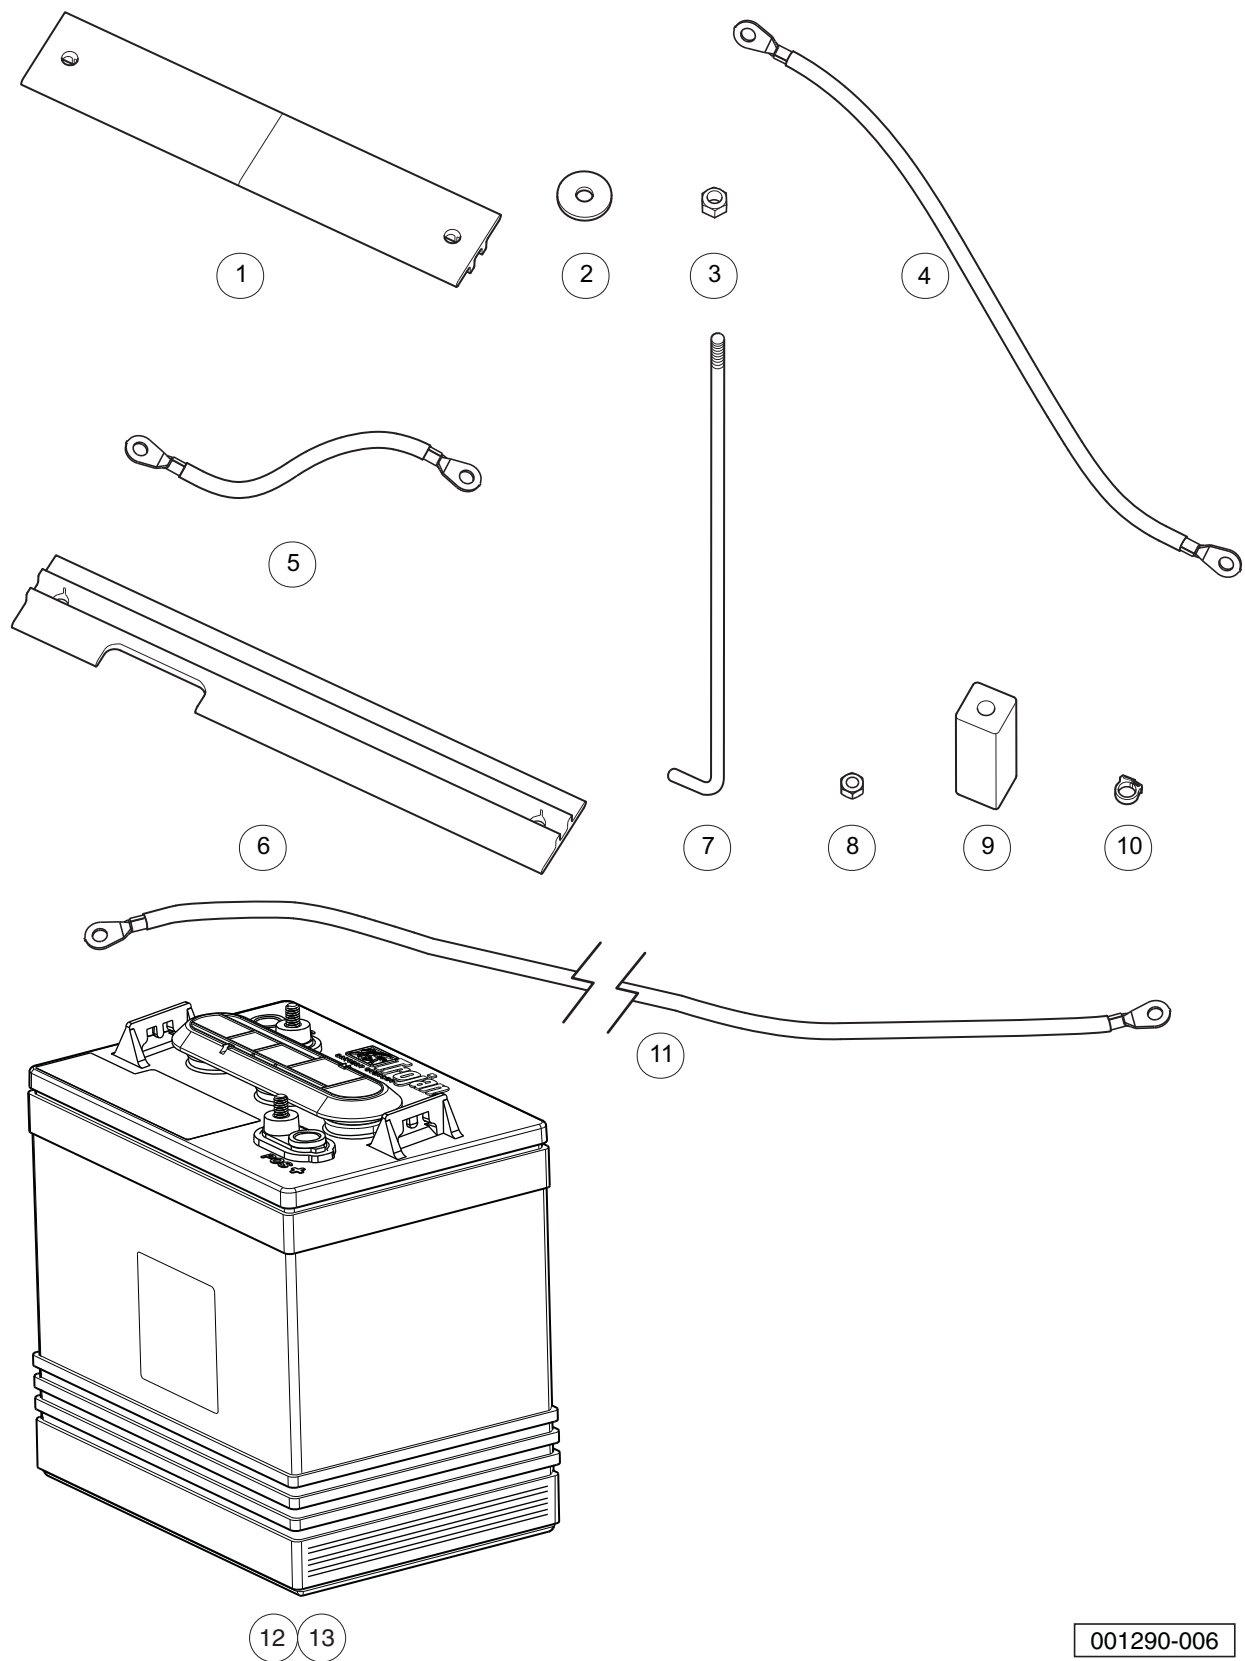

001290-006

BATTERIES, 6-VOLT, HEAVY DUTY, TROJAN


ITEM	PART NO.	DESCRIPTION	QTY	13
		1 2 3 4		
1	<u>101090801</u>	Hold-Down, Battery	2	
2	<u>1011578</u>	Washer, 5/16 Type B Flat	12	E
3	<u>1015072</u>	Locknut, 5/16-18 Nylon Insert	12	
4	<u>102002801</u>	Wire Assy, #4 Black	2	
5	<u>102002901</u>	Wire Assy, #4 Black	3	
6	<u>102766201</u>	Hold Down, Outside	4	
7	<u>102845204</u>	Rod, Battery Hold Down 12"	12	
8	<u>102873401</u>	5/16-18 Heavy Hex Nut	16	
9	<u>102980801</u>	Extr, Plastic, 1 X 1 X 3	4	
10	<u>102980901</u>	Clamp, Hose, Nylon, .25	4	
11	<u>103198201</u>	Asm, #4 Blk Wire, 42"	1	
12	<u>103969701</u>	Battery, 6-Volt, Trojan T145 (Wet) (includes item 13)	8	
13	<u>101831401</u>	Battery Cap 6 Volt	1	

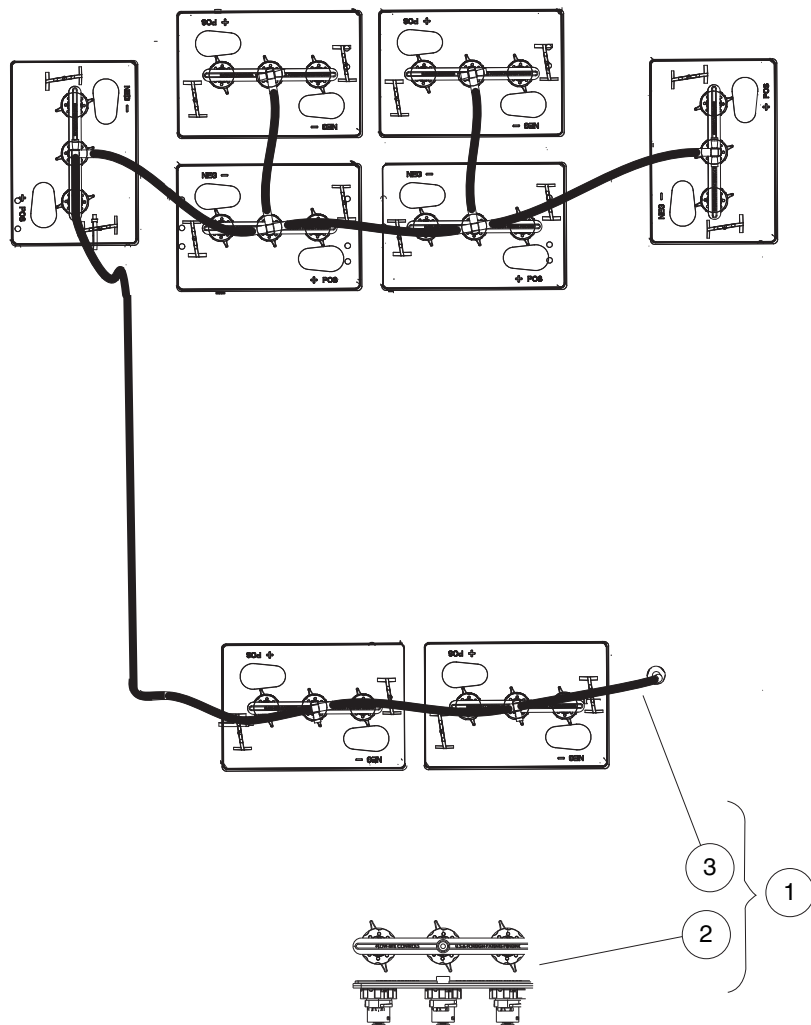

002525-001

SINGLE POINT WATERING SYSTEM (SPWS)

ITEM	PART NO.	DESCRIPTION	QTY	13
		1 2 3 4		
1	<u>103942902</u>	Kit, Spws, Villager 6, 8 (includes items 2 and 3)	1	
2	<u>103510501</u>	Manifold, Lpr, 3 Vlve, Spw	8	E
3	<u>103942101</u>	Spws, Villager 6, 8	1	

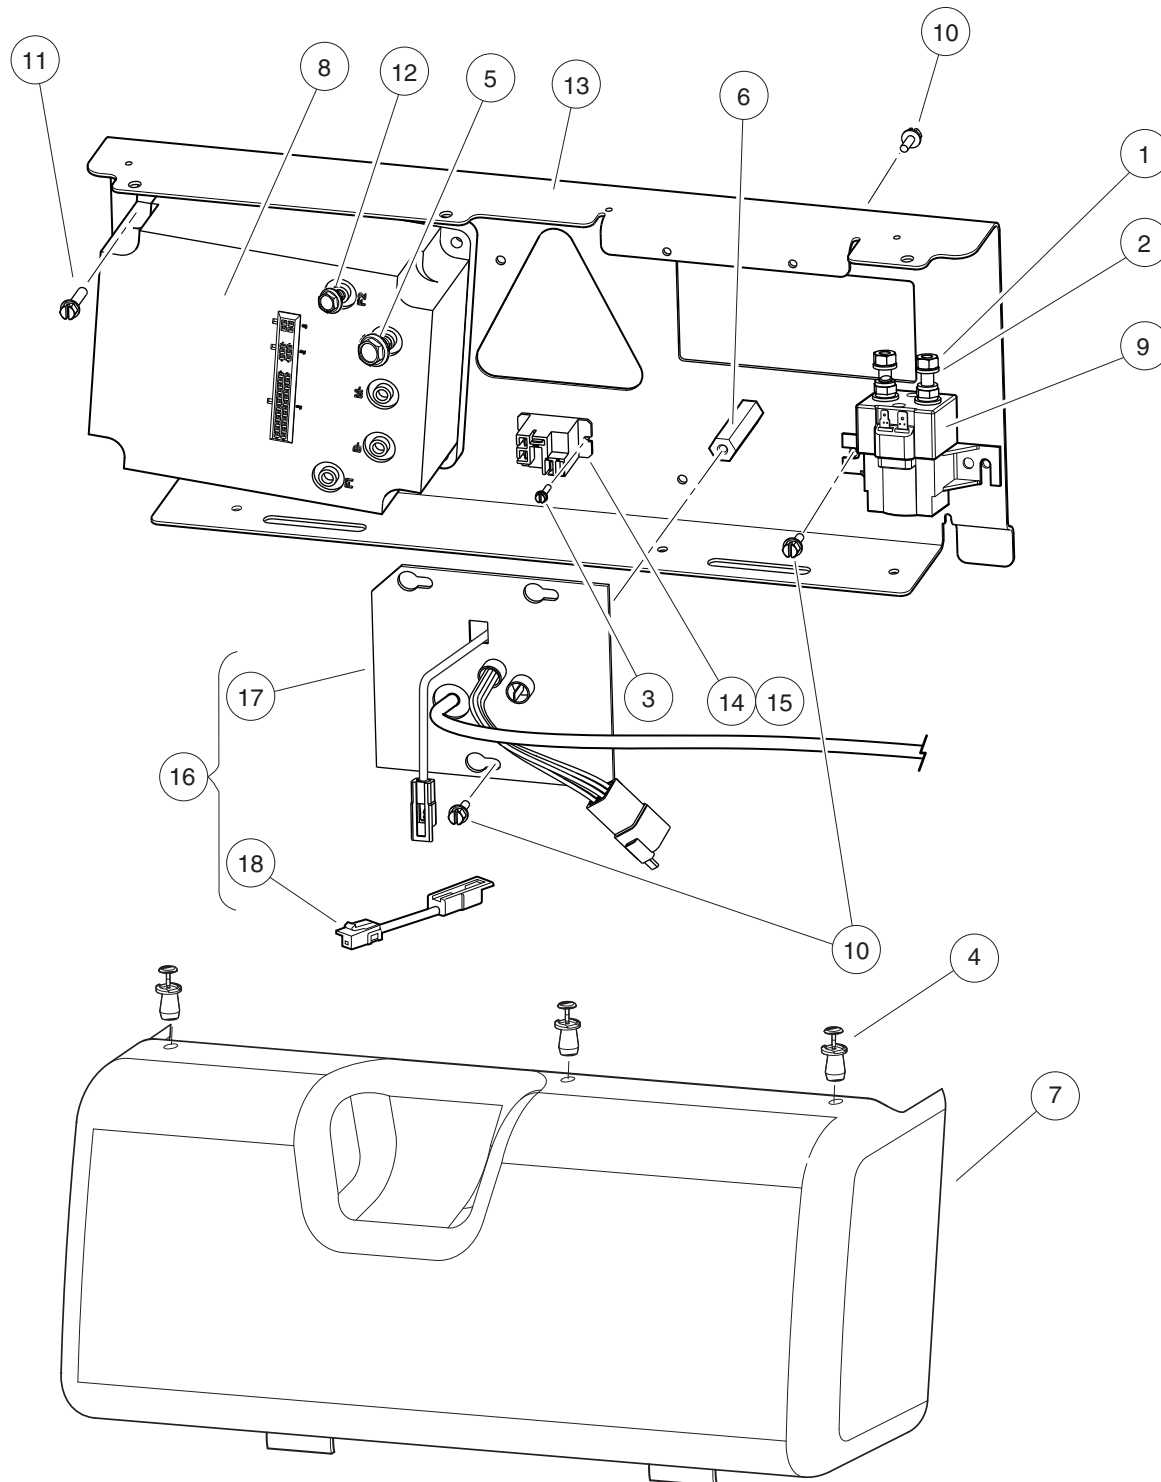



001246-003

COMPUTER, CONTROLLER, AND SOLENOID – FOR TROJAN BATTERIES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1012528</u>	Nut, M8-1.25 Hex	2
2	<u>1013734</u>	Lockwasher, 8mm Split	2
3	<u>1015720</u>	Screw, #6-32 X 1/2 Hex Washer-Head	2
4	<u>1016967</u>	Blind Rivet, Push Type	3
5	<u>102240501</u>	Bolt, Controller, Terminal	3
6	<u>102769701</u>	Spacer, 2", 1/4-20, Hex	1
7	<u>102772402</u>	Cover, Electrical Component, Carryall 6	1
8	<u>102774501</u>	Controller, 500 Amp	1
9	<u>102774701</u>	Solenoid, 48v	1
10	<u>102817101</u>	Screw, 1/4-20 X .50 Hex Wsh Hd	6
11	<u>102817201</u>	Screw, 1/4-20 X .88 Hex Wsh Hd	4
12	<u>102859501</u>	Screw, M6 X 1 X 20 Ser Hex Flg	2
13	<u>102912801</u>	Plate, Component, Front	1
14	<u>103414901</u>	Kit, Relay, 48v 30a W/instr (includes item 15)	1
15	<u>103397901</u>	Relay, Spst No, 48v 30a, Pmt	1
16	<u>103697109</u>	Kit, Obc, Iqplus, A1, 64" (includes items 17 and 18)	1
17	<u>103709201</u>	Obc, Iqplus, A1, 64", 480	1
18	<u>103822101</u>	Adapter, 480 Obc To 56 Harn	1

13

E

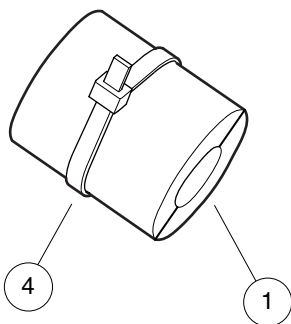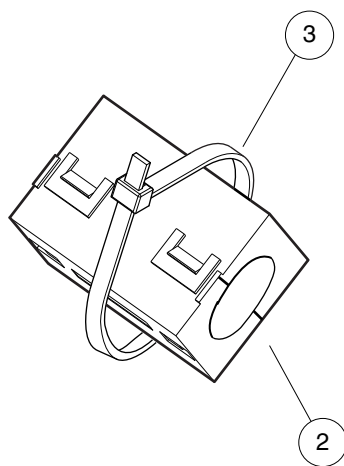

001055-001


13

E

MOTOR (MODEL DA5-4006) – IQ PLUS

14

E

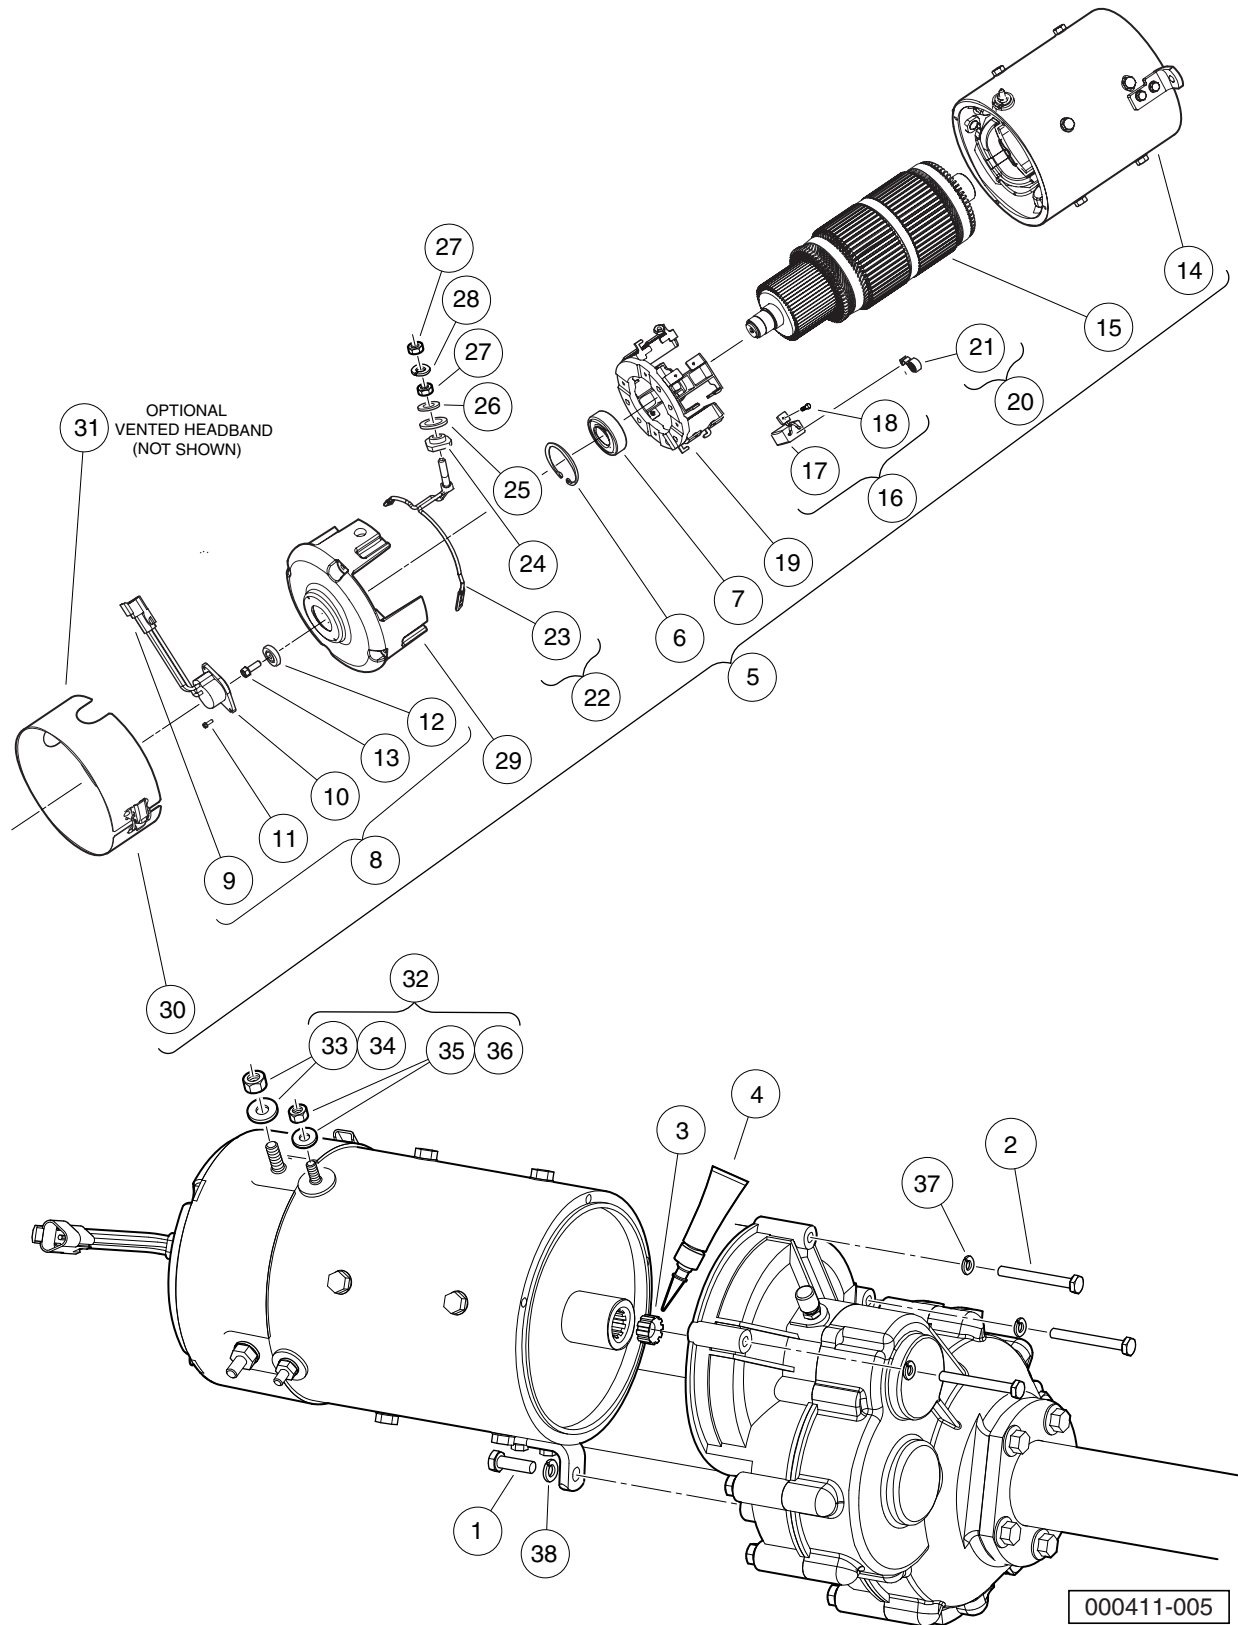

000411-005

MOTOR (MODEL DA5-4006) – IQ PLUS


ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1010934</u>	Screw, 5/16-18 X 1.00 Hex Cap	1
2	<u>1014201</u>	Screw, 1/4-20 X 2.25 Hex Cap	3
3	<u>102235201</u>	Bumper, Drive Unit	1
4	<u>102243403</u>	Lubricant, Moly-Teflon (Single-Use Tube)	1
5	<u>102775101</u>	IQ Plus Electric Motor, 48-VDC 3.7 hp (includes items 6 through 30)	1
6	N/A	Ring, 2.24" Internal Retaining	1
7	<u>102186401</u>	Bearing, Ball	1
8	<u>102704901</u>	Kit, Speed Sensor (includes items 9 through 13)	1
9	<u>101942301</u>	Kit, 3-Pin Wedge Lock	1
10	N/A	Sensor, Motor Speed, ADC	1
11	N/A	Screw, #8-32, Taptite Thread	2
12	N/A	Magnet, ADC Motor	1
13	N/A	Screw, 1/4-20 x 0.5	1
14	N/A	Asm, Frame And Field, 3.7 Hp	1
15	N/A	Armature (Includes external hardware not shown)	1
16	<u>102938601</u>	Kit, Brush, 3.7 Hp (includes items 17 and 18)	1
17	N/A	Brush, Motor	8
18	N/A	Screw, Taptite	8
19	<u>102938701</u>	Asm, Brush Box, 3.7 Hp	1
20	<u>102938801</u>	Kit, Brush Spring, 3.7 Hp (includes item 21)	1
21	N/A	Brush Spring	8
22	<u>102938901</u>	Kit, Brush Lead Asm, 3.7 Hp (includes items 23 through 28)	1
23	N/A	Terminal and Lead Assembly	2
24	N/A	Insulator, Terminal	2
25	N/A	Washer, Insulating	2
26	N/A	Washer, Flat, 5/16, Brass/Bronze	2
27	N/A	Nut, 5/16, Steel	4
28	N/A	Lockwasher, 5/16, Steel	2
29	<u>102939001</u>	Commutator End Head, 3.7 Hp	1
30	<u>102939101</u>	Sealed Headband, 3.7 Hp	1
31	<u>102939102</u>	Vented Headband, 3.7 HP (optional - not shown)	1
32	<u>102951701</u>	Pkg, Terminal Hardware, 3.7hp (includes items 33 through 36)	1
33	N/A	Nut, 5/16, Steel	2
34	N/A	Lockwasher, 5/16, Steel	2
35	N/A	Nut, 1/4-20, Steel	2
36	N/A	Lockwasher, 1/4-20, Steel	2
37	<u>451</u>	Lockwasher, 1/4 Split	3
38	<u>7174</u>	Lockwasher, 5/16 Split	1

14
E

TRANSAXLE – ELECTRIC VEHICLES

15

E

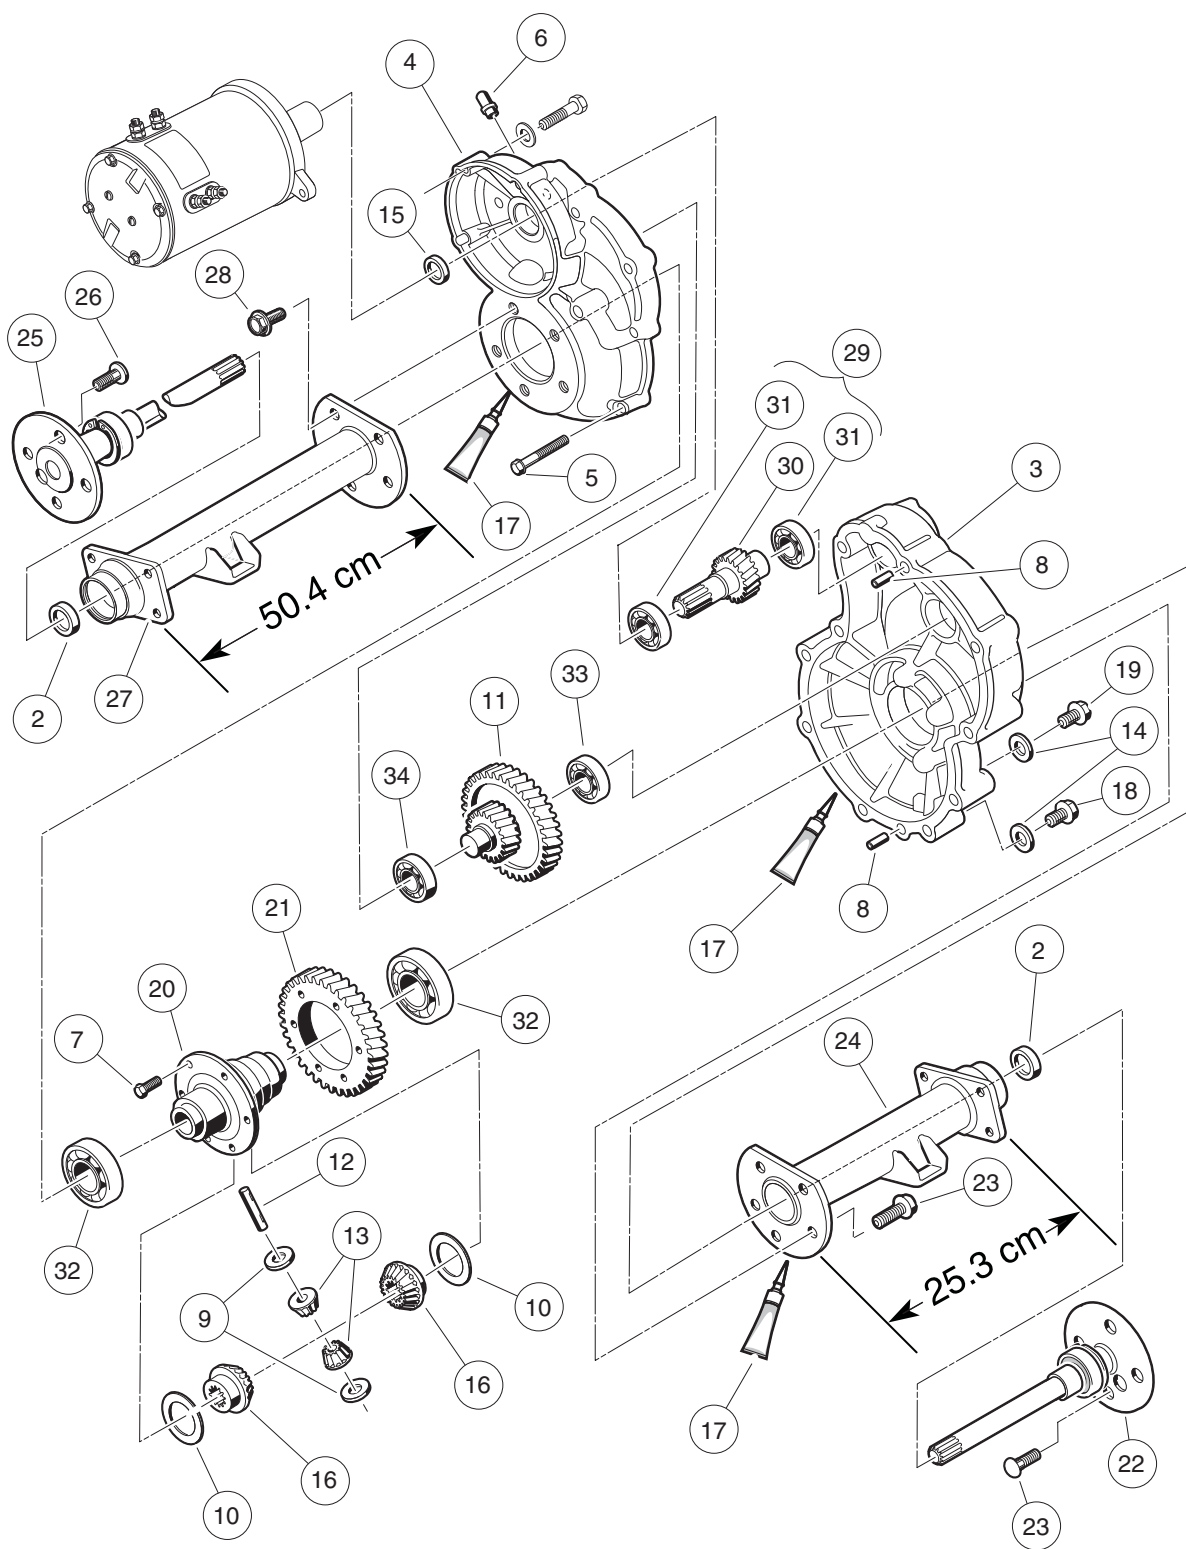


000223-005

TRANSAXLE – ELECTRIC VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>102771701</u>	Transaxle, Electric (includes items 2 through 34)	1
2	<u>1013794</u>	Axle Shaft Oil Seal	2
3	<u>101895401</u>	Gear Case, Driver-Side	1
4	<u>101895501</u>	Gear Case, Passenger-Side	1
5	<u>101897001</u>	Screw, M8-1.25 X 60mm Hex-Head	11
6	<u>101897201</u>	Breather	1
7	<u>101897401</u>	Screw, M10-1.25 X 25mm	6
8	<u>101897601</u>	Pin, 11mm OD X 8.5mm ID X 10mm	2
9	<u>101903601</u>	Washer, Thrust	2
10	<u>101903701</u>	Washer, Thrust	2
11	<u>101906901</u>	Intermediate Shaft Assembly	1
12	<u>101922101</u>	Pin, 15.99mm X 88.7mm Dowel	1
13	<u>101923001</u>	Gear, Differential Idler	2
14	<u>101923201</u>	Gasket	2
15	<u>101923501</u>	Seal, Lip	1
16	<u>101923901</u>	Gear, Differential	2
17	<u>101928701</u>	Liquid Gasket (Transaxle case)	1
18	<u>101972101</u>	Plug, M14-1.5 X 12mm Magnetic	1
19	<u>101972201</u>	Plug, M14-1.5 X 12mm Hex	1
20	<u>102356601</u>	Housing, Differential, 6 Bolt	6
21	<u>102356801</u>	Gear, Differential Output, 6-Bolt	6
22	<u>102886301</u>	Axle Assembly, Driver-Side (includes item 23)	1
23	<u>101922201</u>	Lug Stud	4
24	<u>102886401</u>	Tube, Axle, Driver-Side	1
25	<u>102886501</u>	Axle Assembly, Passenger-Side (includes item 26)	1
26	<u>101922201</u>	Lug Stud	4
27	<u>102886601</u>	Tube, Axle, Passenger-Side	1
28	<u>102902801</u>	Screw, M10 X 30	10
29	<u>103582801</u>	Asm, E Trans Shaft/bearing (includes items 30 and 31)	1
30	N/A	Shaft, Input	1
31	<u>7335</u>	Bearing	2
32	<u>7330</u>	Inner Axle Tube Bearing	2
33	<u>7335</u>	Bearing	1
34	<u>7336</u>	Bearing	1

15

E

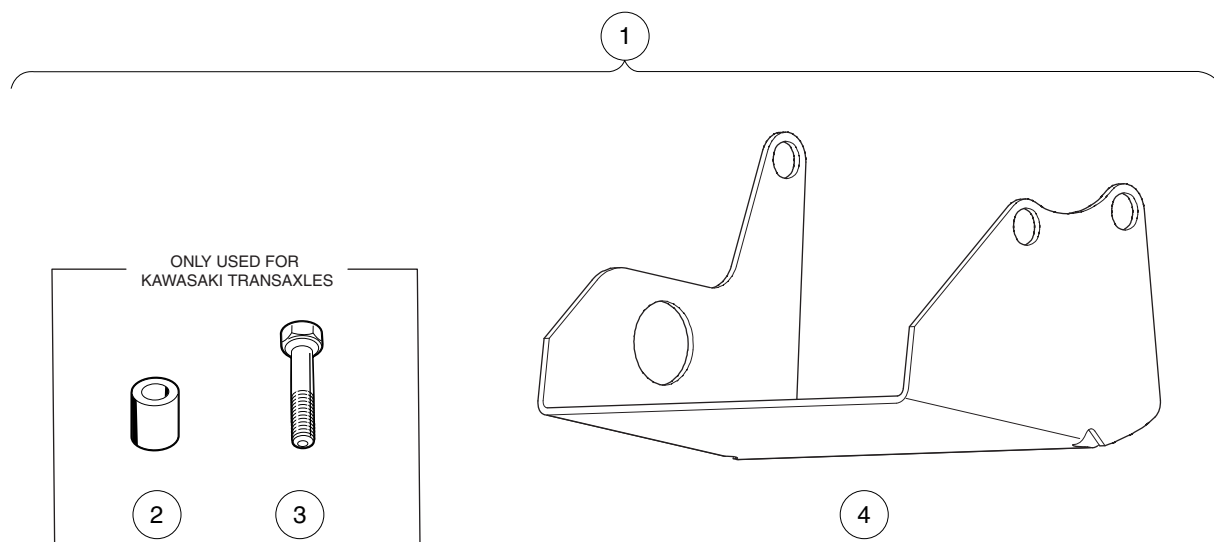

000365-002

DIFFERENTIAL GUARD – ELECTRIC VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY	15
		1 2 3 4		
1	<u>101611402</u>	Kit, Differential Guard, Elec Vehicles (includes items 2 through 4)	1	
2	<u>101914001</u>	Spacer, Steel	2	E
3	<u>101936101</u>	Screw, M10-1.50 X 60mm Hex Cap	2	
4	<u>101978601</u>	Guard, Differential, Electric Vehicle Transaxle	1	


15

E

BATTERY CHARGERS

16

E

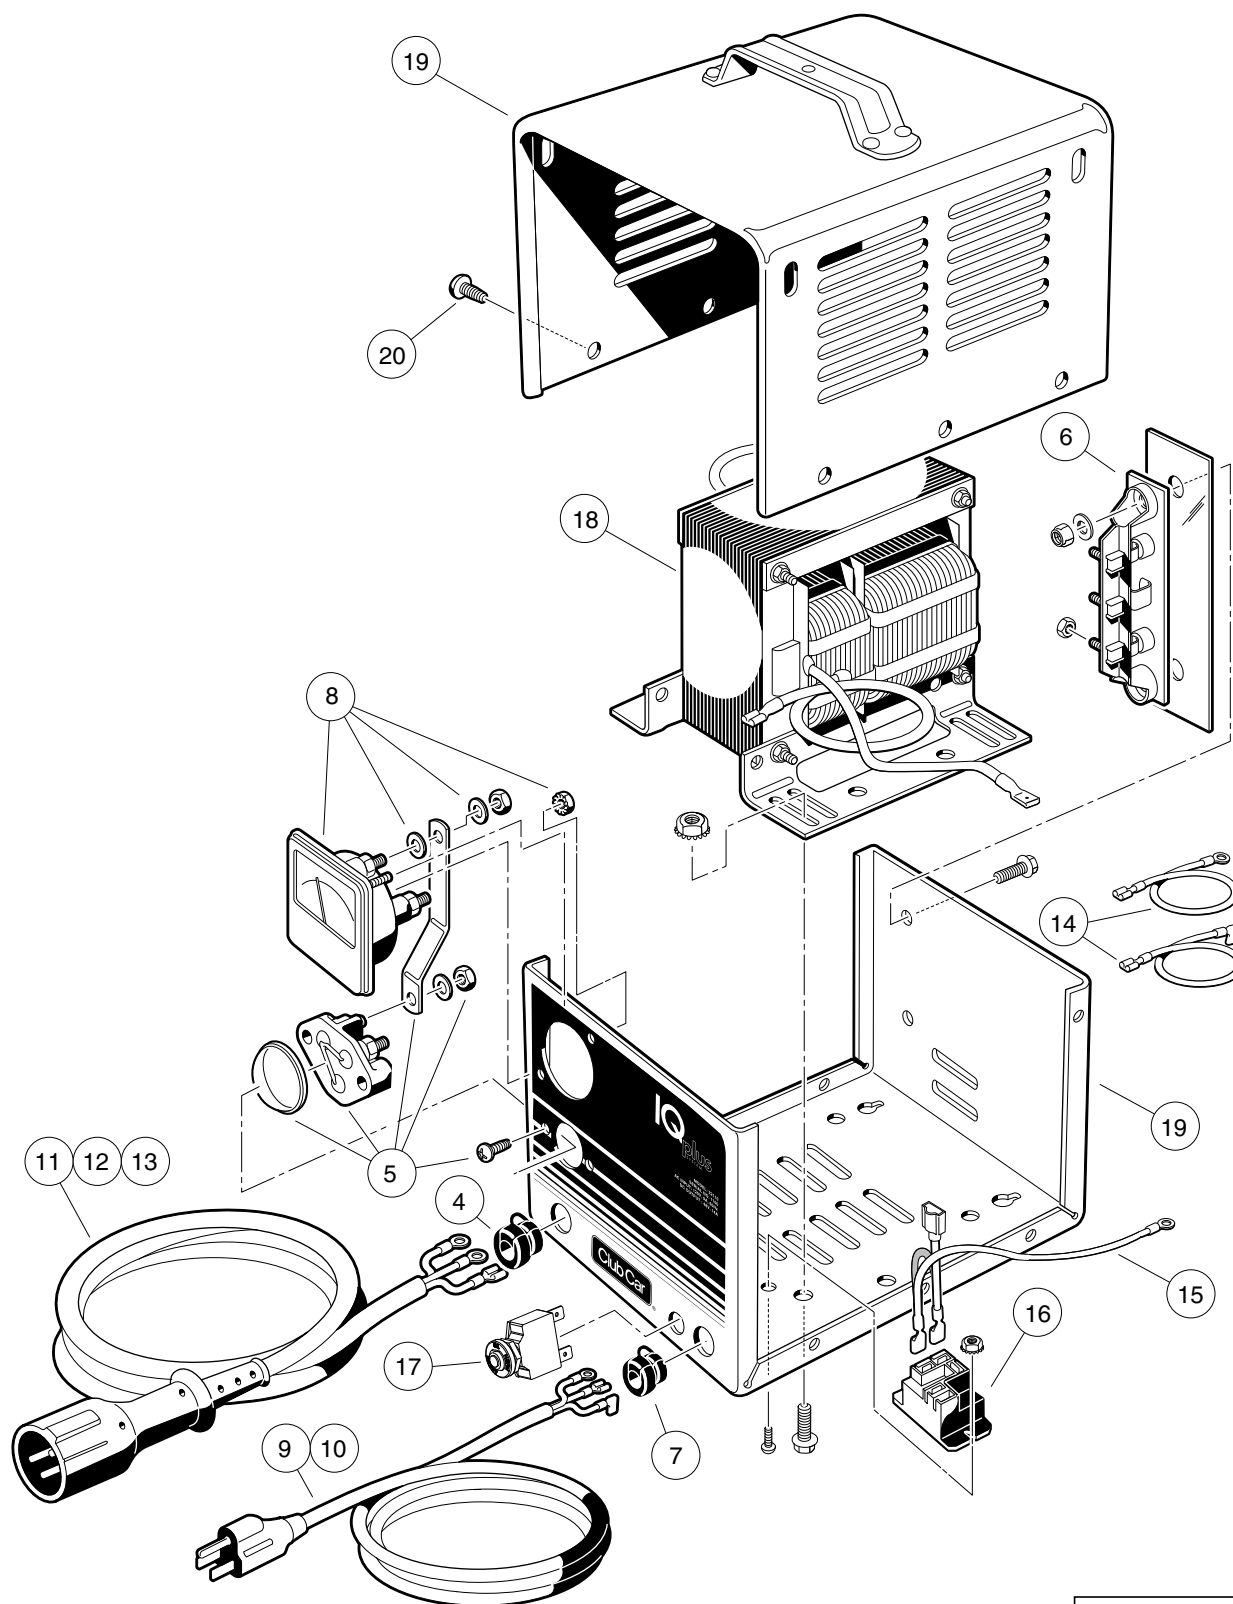


000414-001

IQ PLUS BATTERY CHARGER (MODELS 25730-11,-18,-19), DOMESTIC

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>102847801</u>	Charger, IQ Plus, Domestic (9-ft. DC Cord, 6-ft. AC Cord)	1
2	<u>102847802</u>	Charger, IQ Plus, Domestic (12-ft. DC Cord, 9-ft. AC Cord)	1
3	<u>102847803</u>	Charger, IQ Plus, Domestic (20-ft. DC Cord, 9-ft. AC Cord) (includes items 4 through 20)	1
4	<u>1012098</u>	Bushing, DC Cord	1
5	<u>1012101</u>	Fuse Assembly	1
6	<u>1015914</u>	Rectifier with Heatsink Assembly	1
7	<u>1015917</u>	Bushing, AC Cord	1
8	<u>101828501</u>	Ammeter	1
9	<u>101828801</u>	Cord, AC, 80-Inch (203 cm)	1
10	<u>101828802</u>	Cord, AC, 108-Inch (274 cm)	1
11	<u>101828901</u>	Cord, DC, 113-Inch (287 cm)	1
12	<u>101828902</u>	Cord, DC, 154-Inch (391 cm)	1
13	<u>101828903</u>	Cord, DC, 250-Inch (635 cm)	1
14	<u>101831101</u>	Wire Assembly Kit	1
15	<u>101914401</u>	Assembly, Voltage Suppressor	1
16	<u>102275401</u>	Relay, 48-VDC	1
17	<u>102838101</u>	Circuit Breaker 250vac-50vdc	1
18	N/A	Transformer, Battery Charger	1
19	N/A	Case, Battery Charger	1
20	7577	Screw, #10 X 0.50 Phillips Pan-Head	10

16

E

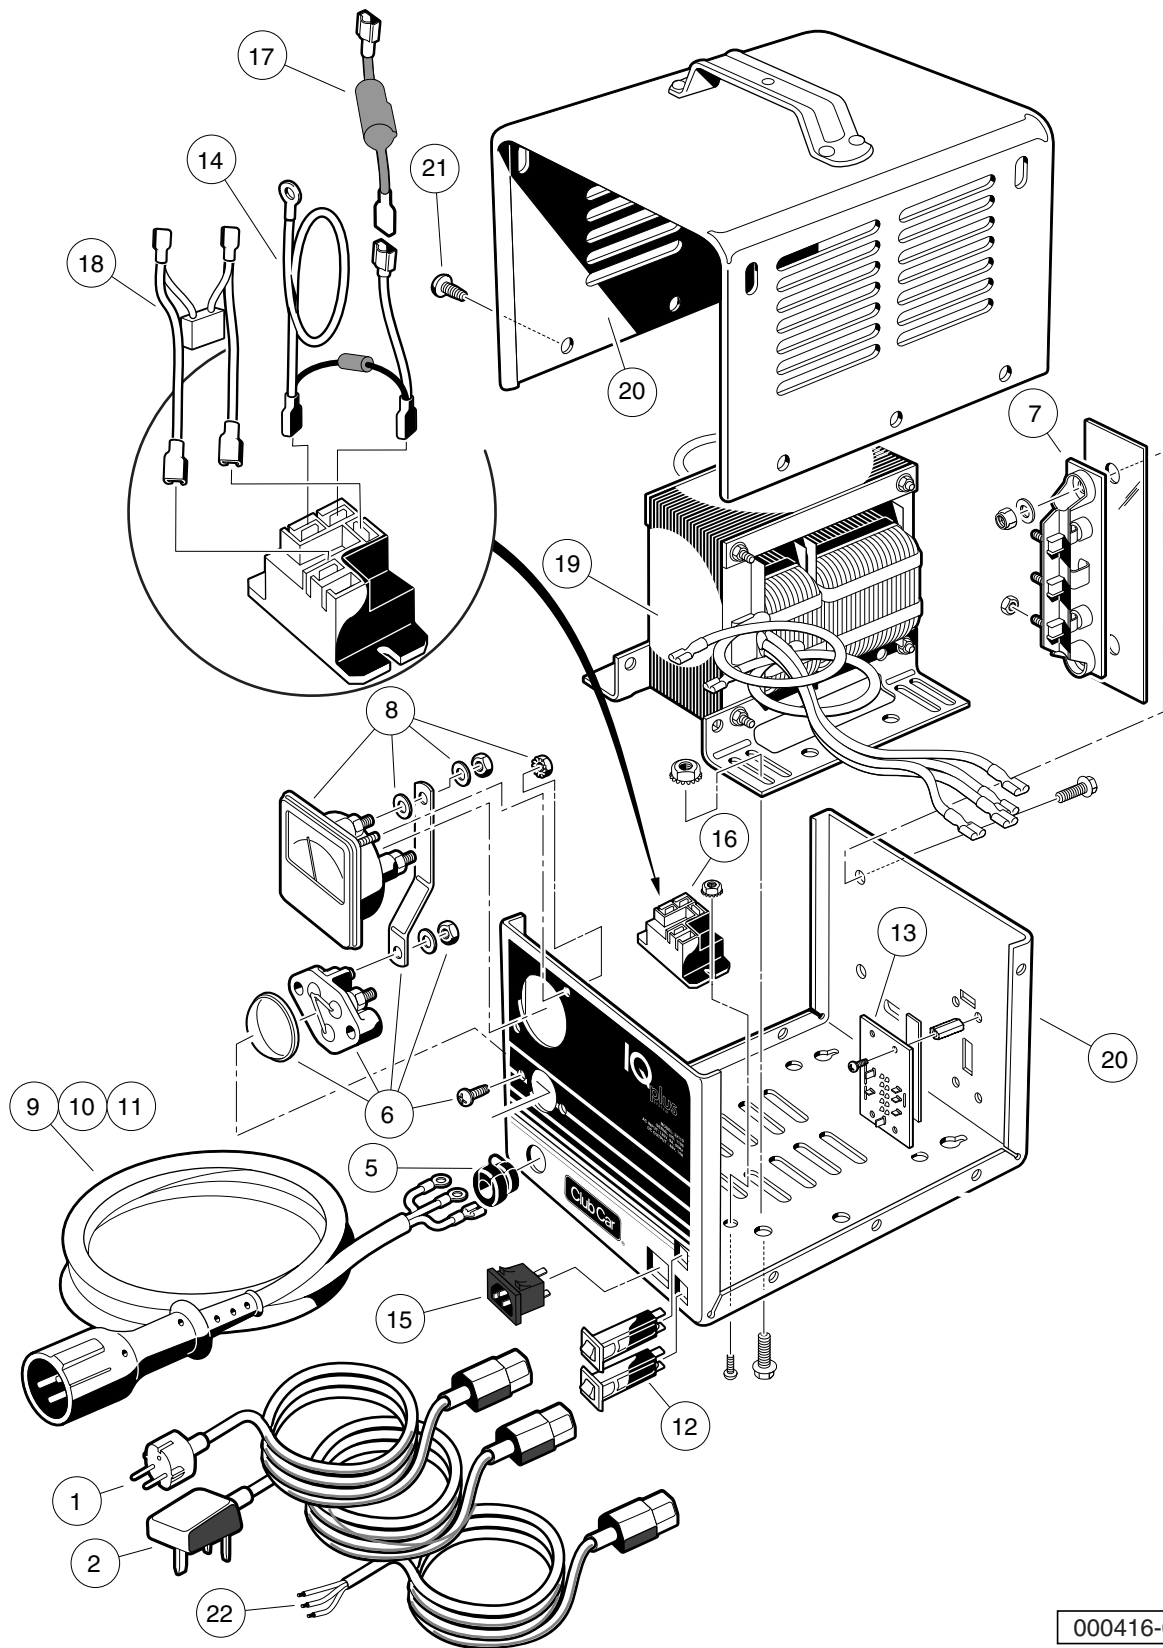

000416-002

IQ PLUS BATTERY CHARGER (MODELS 25880-11 AND -18), INTERNATIONAL


ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101958201</u>	Cord, UK, AC, Battery Charger	1
2	<u>101958301</u>	Cord, European AC, Battery Charger	1
3	<u>102892901</u>	Charger, IQ Plus, International (9-ft. DC Cord)	1
4	<u>102892902</u>	Charger, IQ Plus, International (12-ft. DC Cord) (includes items 5 through 21)	1
5	<u>1012098</u>	Bushing, DC Cord	1
6	<u>1012101</u>	Fuse Assembly	1
7	<u>1015914</u>	Rectifier with Heatsink Assembly	1
8	<u>101828501</u>	Ammeter	1
9	<u>101828901</u>	Cord, DC, 113-Inch (287 cm)	1
10	<u>101828902</u>	Cord, DC, 154-Inch (391 cm)	1
11	<u>101828903</u>	Cord, DC, 250-Inch (635 cm)	1
12	<u>101838401</u>	Circuit Breaker	2
13	<u>101838601</u>	Four-Position Switch	1
14	<u>101914401</u>	Assembly, Voltage Suppressor	1
15	<u>101973501</u>	Receptacle, AC Cord	1
16	<u>102275401</u>	Relay, 48-VDC	1
17	N/A	Limiter, Current	1
18	N/A	Wire Assembly, Battery Charger	1
19	N/A	Transformer, Battery Charger	1
20	N/A	Case, Battery Charger	1
21	7577	Screw, #10 X 0.50 Phillips Pan-Head	10
22	<u>102939501</u>	Cord, European AC, Battery Charger	1

16

E

16

E

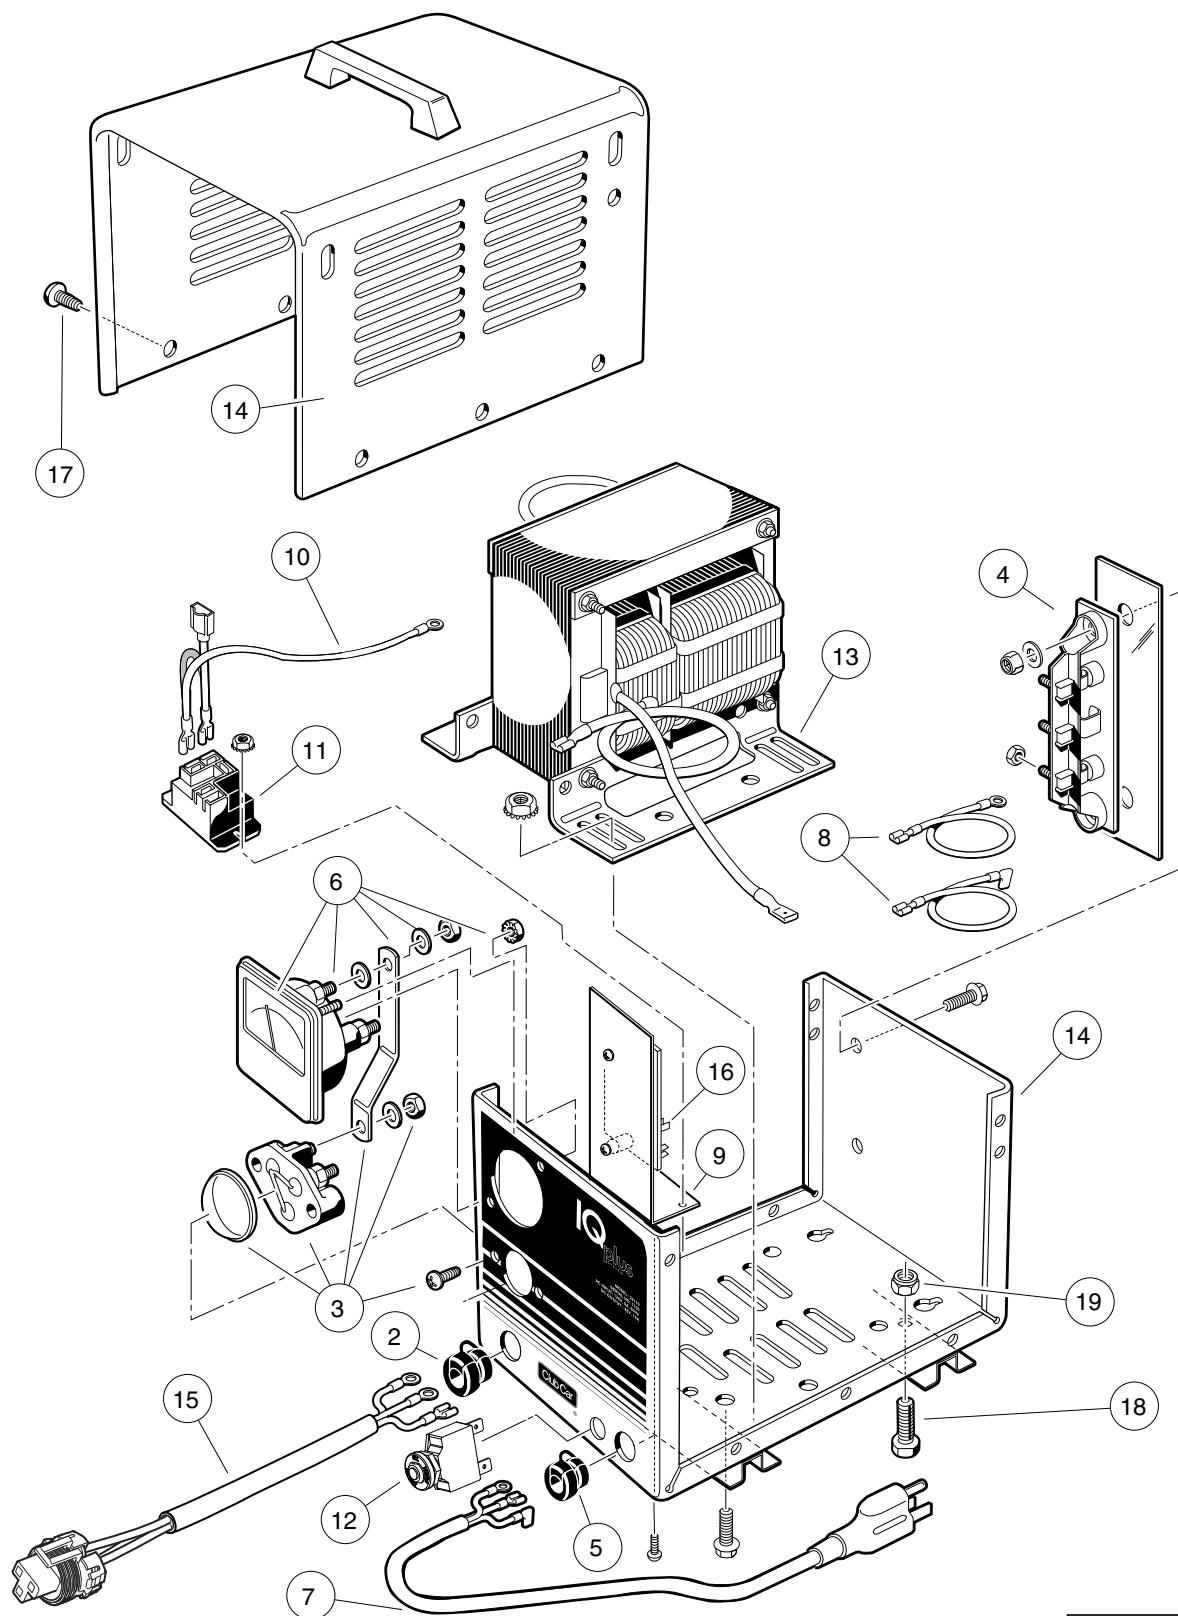


000415-002

ONBOARD IQ PLUS BATTERY CHARGER (MODEL 25260-50), DOMESTIC

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>103772401</u>	Charger, IQ Plus, Onboard, Domestic (includes items 2 through 19)	1
2	<u>1012098</u>	Bushing, DC Cord	1
3	<u>1012101</u>	Fuse Assembly	1
4	<u>1015914</u>	Rectifier with Heatsink Assembly	1
5	<u>1015917</u>	Bushing, AC Cord	1
6	<u>101828501</u>	Ammeter	1
7	<u>101829001</u>	Cord, AC, 22-Inch (56 cm)	1
8	<u>101831101</u>	Wire Assembly Kit	1
9	<u>101838701</u>	Mounting Bracket, Relay	1
10	<u>101914401</u>	Assembly, Voltage Suppressor	1
11	<u>102275401</u>	Relay, 48-VDC	1
12	<u>102838101</u>	Circuit Breaker, 20 Amp	1
13	N/A	Transformer, Battery Charger	1
14	N/A	Case, Battery Charger	1
15	<u>103832001</u>	Cord, DC, 20", Charger	1
16	<u>103869401</u>	Control Board, Potted	1
17	7577	Screw, #10 X 0.50 Phillips Pan-Head	12
18	<u>7847</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	4
19	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	4
Note: DC Cord (item 15) uses the Packard 480 Connector.			

16

E

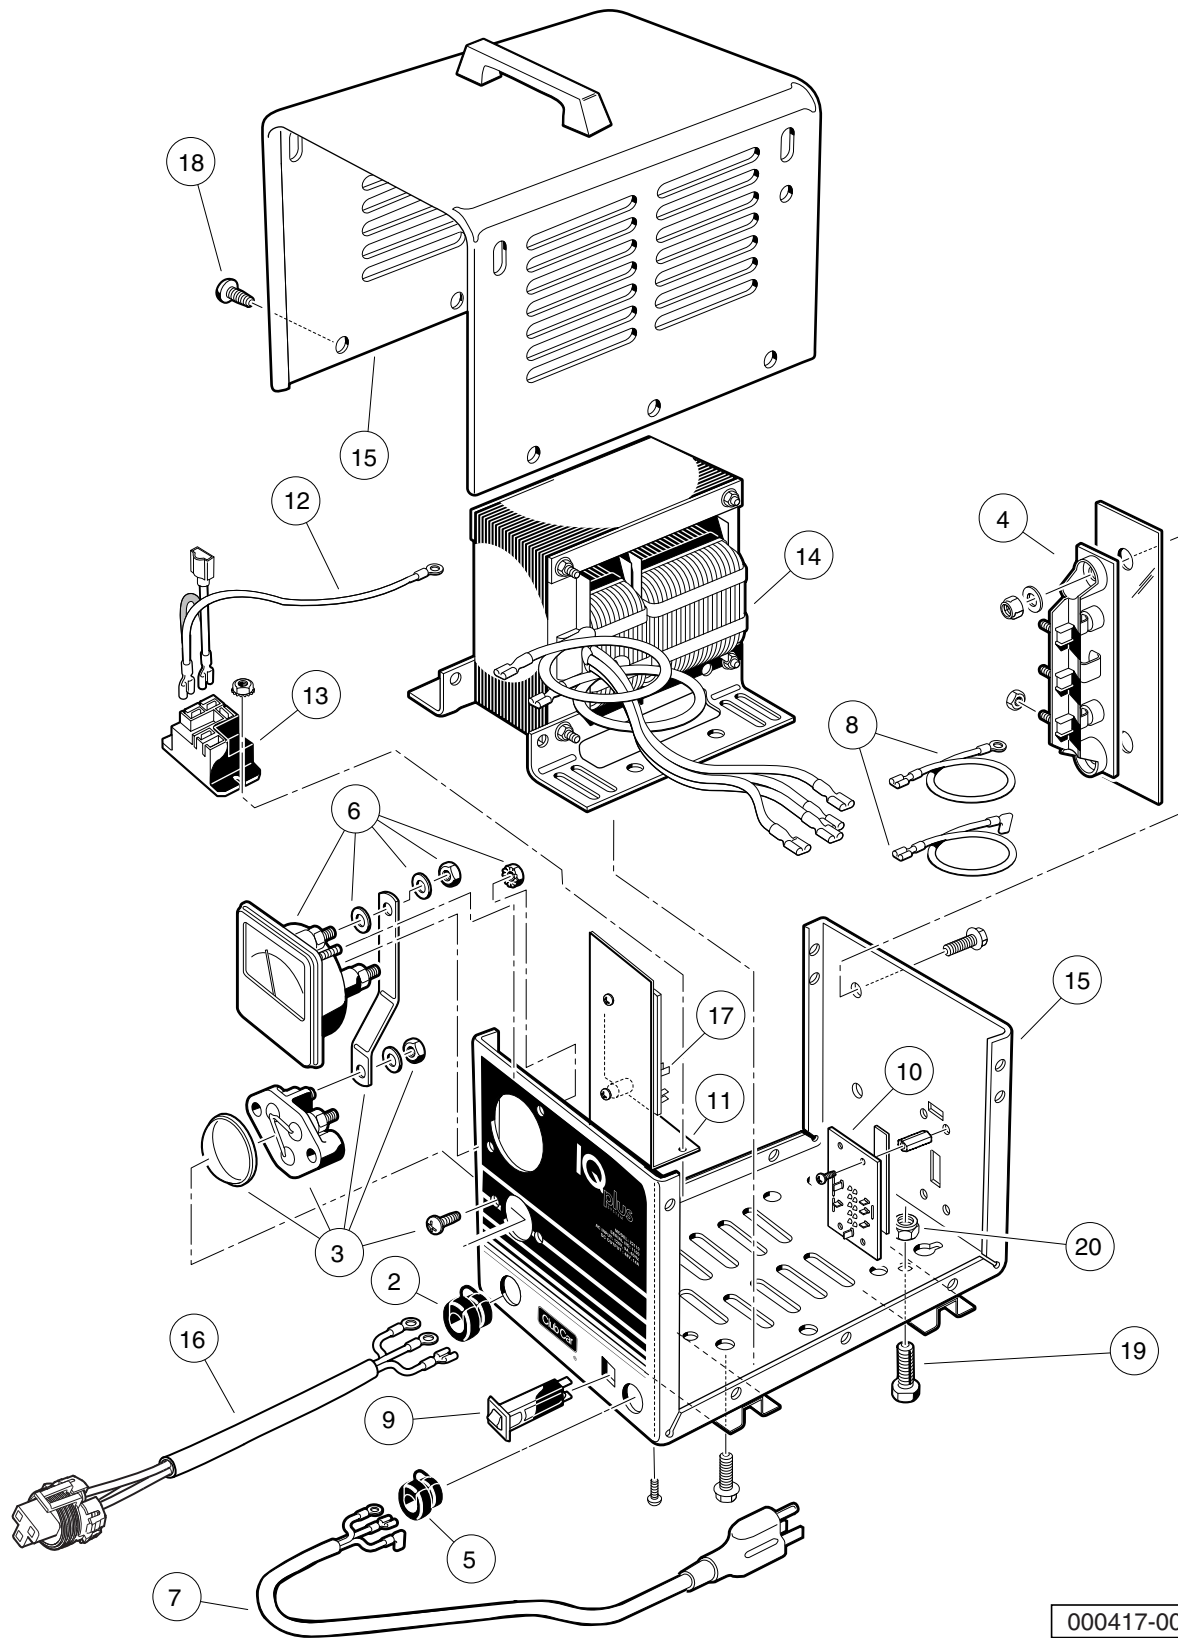

000417-002

ONBOARD IQ PLUS BATTERY CHARGER (MODEL 25660-50), INTERNATIONAL


ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>103771601</u>	Charger, IQ Plus, Onboard, International (includes items 2 through 20)	1
2	<u>1012098</u>	Bushing, DC Cord	1
3	<u>1012101</u>	Fuse Assembly	1
4	<u>1015914</u>	Rectifier with Heatsink Assembly	1
5	<u>1015917</u>	Bushing, AC Cord	1
6	<u>101828501</u>	Ammeter	1
7	<u>101829001</u>	Cord, AC, 22-Inch (56 cm)	1
8	<u>101831101</u>	Wire Assembly Kit	1
9	<u>101838401</u>	Circuit Breaker	1
10	<u>101838601</u>	Four-Position Switch	1
11	<u>101838701</u>	Mounting Bracket, Relay	1
12	<u>101914401</u>	Assembly, Voltage Suppressor	1
13	<u>102275401</u>	Relay, 48-VDC	1
14	N/A	Transformer, Battery Charger	1
15	N/A	Case, Battery Charger	1
16	<u>103832001</u>	Cord, DC, 20", Charger	1
17	<u>103869401</u>	Control Board, Potted	1
18	<u>7577</u>	Screw, #10 X 0.50 Phillips Pan-Head	12
19	<u>7847</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	4
20	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	4
Note: DC Cord (item 16) uses the Packard 480 Connector.			

16

E

16

E

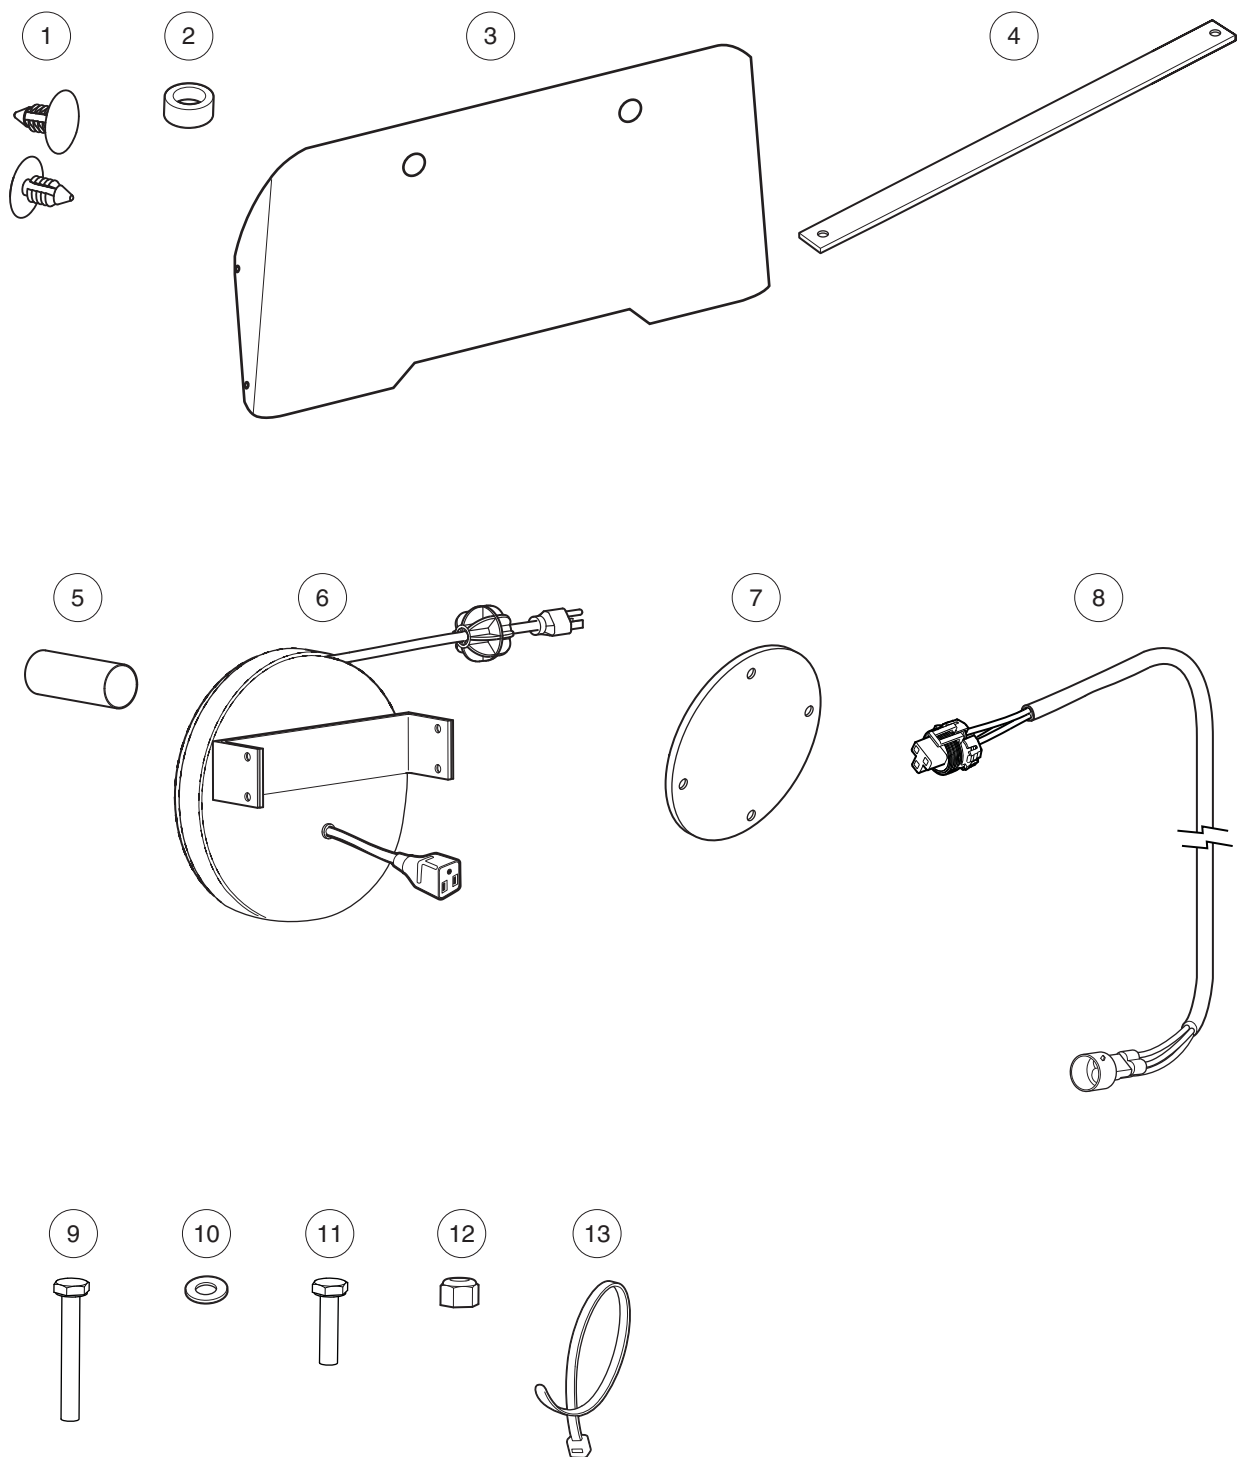

001289-002

ONBOARD IQ PLUS CHARGER AND CORD REEL MOUNTING

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1010434</u>	Barrel - Plastic	4
2	<u>1010927</u>	Hill Brake Spacer	4
3	<u>1011348</u>	Rear Panel 4 Passenger	1
4	<u>1011707</u>	Bracket, Mounting, Battery Charger	2
5	<u>1017189</u>	Heat Shrink Tube 1.5"x 4'	1
6	<u>101965401</u>	Reel Assy, Retractable Cord	1
7	<u>103218001</u>	Cover Plate, Receptacle	1
8	<u>103772201</u>	Harness, Ob Charg, Vill, 480	1
9	<u>1703</u>	Screw, 1/4-20 X 1.50 Hx Hd Cap	4
10	<u>332</u>	Washer, 1/4 Type A Narrow Flat	4
11	<u>7847</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	4
12	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	8
13	<u>8990</u>	Tie Wrap, 8" Nylon	4
Note: Charger Harness (item 8) uses the Packard 480 Connector.			

16

E

MAINTENANCE AND SERVICE TOOLS

17

G

E


D

17

G

E

D

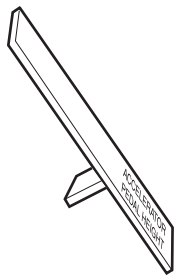


1



2



3

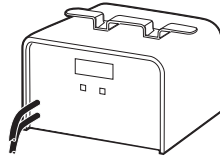


4




5



6

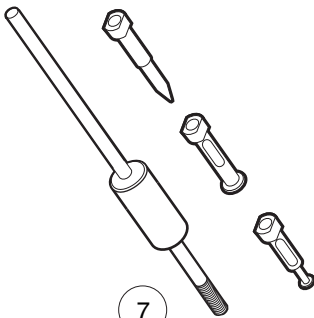


7

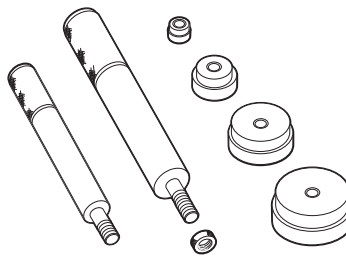

8




9

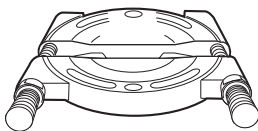


10




11

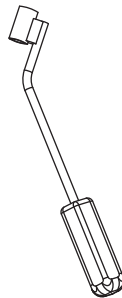

12

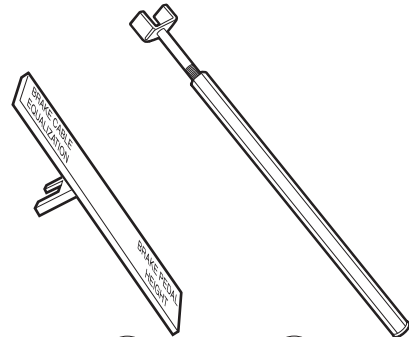


14 15 13

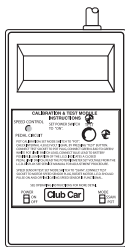


16



17



18

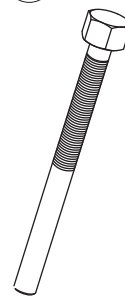

19

MAINTENANCE AND SERVICE TOOLS


ITEM	PART NO.	DESCRIPTION	QTY DIESEL	QTY GAS	QTY ELEC	17 G E D
		1 2 3 4 The following tool list includes all tools available from Club Car for maintenance and service procedures for gasoline, electric, and/or diesel vehicles, both past and present models. Be sure to carefully examine the tool list for applicability to your vehicle before ordering.				
1	<u>101871001</u>	Accelerator Pedal Adjustment Tool		1	1	
2	<u>101813202</u>	Adhesive, Guide Ring, 3-Gram Tube			1	
3	<u>101641202</u>	Arbor		1		
4	<u>101831901</u>	Battery Discharge Machine, 36/48 Volt			1	
5	<u>1014305</u>	Battery Terminal Protector Spray	1	1	1	
6	<u>1011767</u>	Battery Thermometer	1	1	1	
7	<u>1016417</u>	Bearing and Oil Seal Remover Assembly	1	1	1	
8	<u>1016416</u>	Bearing Driver Set	1	1	1	
9	<u>1012811</u>	Bearing Puller	1	1	1	
10	<u>1012812</u>	Bearing Puller Wedge Attachment	1	1	1	
11	<u>1013582</u>	Brake Adjustment Tool (used only on vehicles with manually adjusted mechanical brakes)		1	1	
12	<u>102555501</u>	Brake Cable Release Tool	1	1	1	
13	<u>102249901</u>	Brake Pedal Adjustment Tool Kit (used for the Carryall Electric Industrial Truck only) (includes items 14 and 15).....			1	
14	****	Brake Pedal Adjustment Tool			1	
15	****	Brake Pedal Tension Tool			1	
16	<u>101887101</u>	Calibration Test Module			1	
17	<u>101808401</u>	Cam Installation Tool		1		
18	<u>102562401</u>	Charger Bezel Tool			1	
19	<u>102686101</u>	Clutch Removal Tool (for 4x4 vehicles)	1	1		
		Please refer to the maintenance and service manual for proper tool application. **** Special order item available upon request				

17











G

E

D

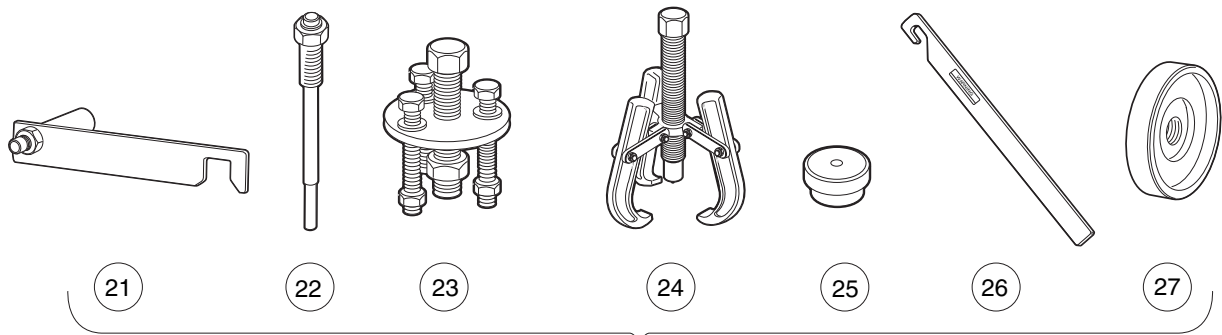

20

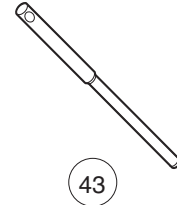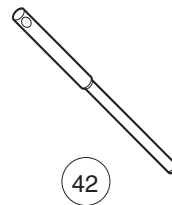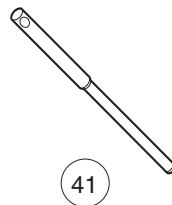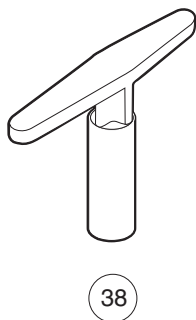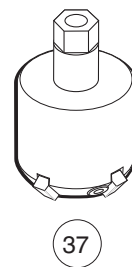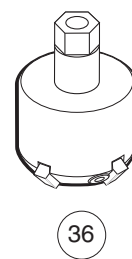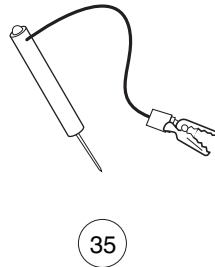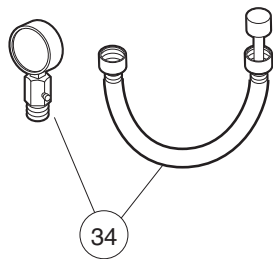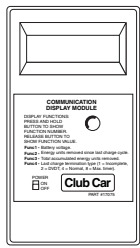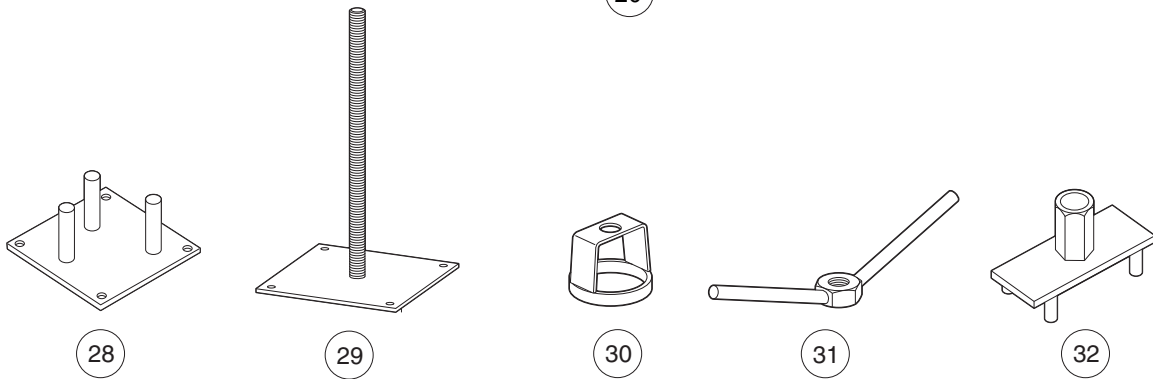

MAINTENANCE AND SERVICE TOOLS, CONTINUED


ITEM	PART NO.	DESCRIPTION	QTY DIESEL	QTY GAS	QTY ELEC	17 G E D
		1 2 3 4				
20	<u>1014510</u>	Clutch Tool Kit (includes items 21 - 27)		1		
21	<u>1014498</u>	Clutch Alignment Tool (for pre-unitized transaxle vehicles built prior to 1997 model year)		1		
22	<u>1014496</u>	Drive Clutch Puller (for Kawasaki engines only)		1		
23	<u>1014497</u>	Drive Clutch Hub Puller (for Kawasaki engines only)		1		
24	<u>1014508</u>	Driven Clutch Cam Puller (for Kawasaki engines only)		1		
25	<u>1014507</u>	Driven Clutch Puller Plug (for Kawasaki engines only)		1		
26	<u>1015524</u>	Drive Clutch Holder Tool Assembly (for Kawasaki engines only)		1		
27	<u>101809101</u>	Press Weldment (for Kawasaki engines only)		1		
28	<u>102601501</u>	Drive ClutchFixed Sheave Tool (for 4x4 vehicles)	1	1		
29	<u>102603501</u>	Driven Clutch Spring Compression Base (for use with items 30 and 31) (for 4x4 vehicles)	1	1		
30	<u>102605201</u>	Driven Clutch Spring Compression Collar (for use with items 29 and 31) (for 4x4 vehicles)	1	1		
31	<u>102606101</u>	Driven Clutch Spring Compression Nut (for use with items 29 and 30) (for 4x4 vehicles)	1	1		
32	<u>102607501</u>	Drive Clutch Spider Removal Tool (for 4x4 vehicles)	1	1		
33	101831801	Communication Display Module			1	
34	101641002	Compression Gauge and Adapter		1		
35	1011273	Continuity Tester		1	1	
36	<u>102773801</u>	Cutter, Valve Seat, #122		1		
37	<u>102773901</u>	Cutter, Valve Seat #115		1		
38	<u>102774101</u>	Wrench, T, #505.....		1		
39	<u>102774101</u>	Adapter, T-Wrench		1		
40	102675401	Cutter, Valve Seat, 60 Degree (requires item 51) (for Honda GX620 Gasoline Engines)		1		
41	<u>102774201</u>	Pilot, 6.6 MM		1		
42	<u>102774301</u>	Pilot, 6.62 MM.....		1		
43	<u>102774401</u>	Pilot, 6.65 MM.....		1		
		Please refer to the maintenance and service manual for proper tool application.				

17


G

E


D




44

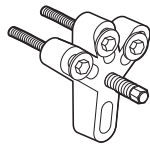

45

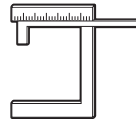


46

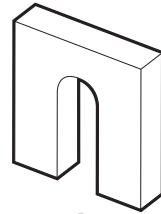


47



48





49




50



51

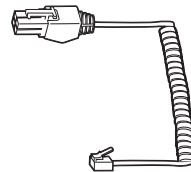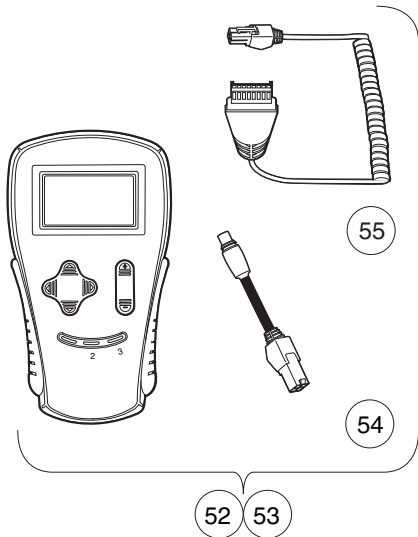

56

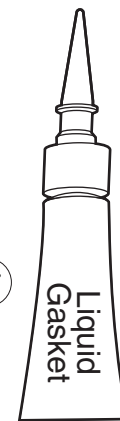

57



58



59 60




61

MAINTENANCE AND SERVICE TOOLS, CONTINUED


ITEM	PART NO.	DESCRIPTION	QTY DIESEL	QTY GAS	QTY ELEC	17 G E D
		1 2 3 4				
44	<u>1012151</u>	Dry Moly Lubricant	1	1	1	
45	<u>1016627</u>	Flywheel Puller Kit (for Kawasaki Engines)		1		
46	<u>102669901</u>	Gauge, Carburetor Float Level (for Honda GX620 Gasoline Engines)		1		
47	<u>1016418</u>	Gear Yoke	1	1	1	
48	<u>101933101</u>	Governor Shaft Installation Tool (for Kawasaki Engine Vehicles)		1		
49	<u>102169401</u>	Hydraulic Brake Adjuster (for Turf/CA 272/472, Pioneer/XRT 1200, Bobcat 2100, HUV 4213)			1	
50	<u>1011478</u>	Hydrometer	1	1	1	
51	<u>1013593</u>	Internal Retaining Ring Pliers	1	1	1	
52	<u>102248803</u>	IQ Display Module (IQDM) Kit (IQ System and IQ Plus vehicles)			1	
		(includes items 54 and 55)				
53	<u>102248804</u>	IQ Display Module (IQDM-P) Kit (IQ System and IQ Plus vehicles)			1	
		(includes items 54 and 55)				
54	<u>102251501</u>	Adaptor, Cable			1	
55	<u>102241502</u>	IQDM Series 2 Cable			1	
56	<u>102241501</u>	IQDM Series 1 Cable (replacement)			1	
57	<u>101928701</u>	Liquid Gasket (transaxle case)	1	1	1	
58	<u>102243402</u>	Moly-Teflon Lubricant (4-oz. (113-gram) tube)			1	
59	<u>101997201</u>	Paint, Touch-Up – Beige*		1	1	
59	<u>101997207</u>	Paint, Touch-Up – Black*		1	1	
59	<u>101997212</u>	Paint, Touch-Up – Burgundy*		1	1	
59	<u>101997211</u>	Paint, Touch-Up – Classic Blue (Navy)*		1	1	
59	<u>101997205</u>	Paint, Touch-Up – Dark Gray*	1	1	1	
59	<u>101997209</u>	Paint, Touch-Up – Dark Green*	1	1	1	
59	<u>101997204</u>	Paint, Touch-Up – Gray*	1	1	1	
59	<u>101997203</u>	Paint, Touch-Up – Red*	1	1	1	
59	<u>101997206</u>	Paint, Touch-Up – Royal Blue (Pacific Blue)*		1	1	
59	<u>101997202</u>	Paint, Touch-Up – White*	1	1	1	
60	<u>102562301</u>	Paint, Precedent Underbody – Gray		1	1	
61	<u>102587201</u>	Paint Pen, Touch-Up, Precedent Underbody – Black		1	1	
Please refer to the maintenance and service manual for proper tool application. * Item 59 is not for use on Surlyn[®] body material, which is used on Precedent vehicles.						



62

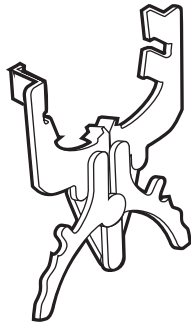

63

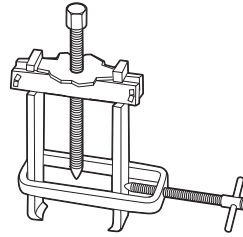


64



65



66



67



68




69



70




71

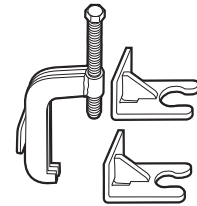

72



73

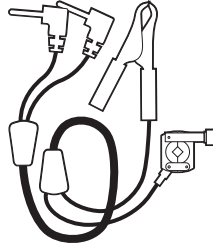


74




75



76

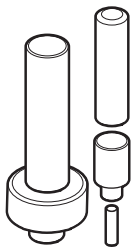

77



83



84



85




86

MAINTENANCE AND SERVICE TOOLS, CONTINUED


ITEM	PART NO.	DESCRIPTION	QTY DIESEL	QTY GAS	QTY ELEC	17
		1 2 3 4				G
62	<u>1016414</u>	Piston Ring Compressor Kit (FE290, FE350 and FE400 engines)		1		E
63	<u>1016415</u>	Piston Ring Pliers (for Kawasaki Engines)		1		D
64	<u>102668801</u>	Puller, Special Use (for Kubota D722 Diesel Engines)	1			
65	<u>1012549</u>	Retaining Ring Pliers, 45° External	1	1	1	
66	<u>1012560</u>	Retaining Ring Pliers, 90° Internal	1	1	1	
67	<u>101823101</u>	Safety First Card (50 per pack)	1	1	1	
68	<u>1012809</u>	Seal Puller	1	1	1	
69	<u>102330901</u>	Spanner Wrench (for coil over shock front suspension vehicles only)	1	1		
70	<u>1014264</u>	Steering Column Bearing Press Tool		1	1	
71	<u>1014259</u>	Steering Column Retaining Ring Tool		1	1	
72	<u>102061201</u>	Steering Wheel Puller Tool	1	1	1	
73	<u>AM10753</u>	Tachometer (includes gasoline engine pick up lead only)	1	1		
74	<u>AM10771</u>	Tachometer Diesel Probe (for use with item 73)	1			
75	<u>1014162</u>	Transaxle Axle Seal Tool		1		
76	<u>1014161</u>	Transaxle Pinion Seal Tool		1		
77	<u>1014115</u>	Transmission Tool Kit		1		
78	<u>101611003</u>	Tune-Up Kit, All OHV (for FE290, FE350, FE400 only) (includes air filter, spark plug, oil filter, fuel filters) (not shown)		1		
79	<u>AM11804</u>	Tune-Up Kit, Gx620 (for Honda Engines) (includes air filter, spark plug, oil filter, fuel filters) (not shown)		1		
80	<u>AM11805</u>	Tune-Up Kit, D722 (for Kubota Engines) (includes air filter, oil filter, fuel filters, water separator filter) (not shown)	1			
81	<u>AM1220301</u>	Tune-Up Kit, Precedent (for FE290/350 Engines) (includes air filter, spark plug, oil filter, fuel filters) (not shown)		1		
82	<u>AM1232401</u>	Tune-Up Kit, FH680D (for Kawasaki V-Twin Engines) (includes oil filter, fuel filter, air filter, and spark plugs) (not shown).....		1		
83	<u>1016413</u>	Valve Clearance Adjuster Screw Holder (for FE290 engines only)		1		
84	<u>102674601</u>	Valve Guide Driver (for Honda GX620 Gasoline Engines)		1		
85	<u>101641201</u>	Valve Guide Reamer (FE290, FE350, and FE400 only)		1		
86	<u>102674401</u>	Valve Guide Reamer, 6.6 mm (for Honda GX620 Gasoline Engines)		1		




87

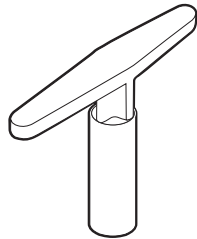


88

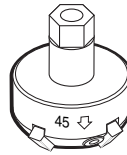


89

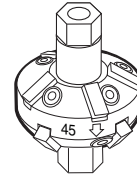


90

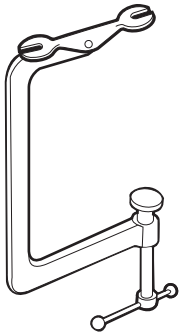


91

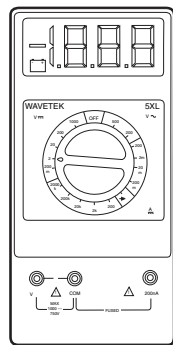


92

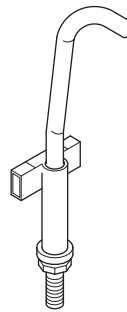


93



94

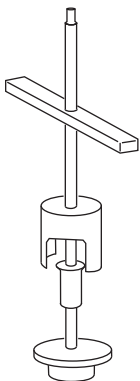

95



96

MAINTENANCE AND SERVICE TOOLS, CONTINUED

ITEM	PART NO.	DESCRIPTION	QTY DIESEL	QTY GAS	QTY ELEC	17
		1 2 3 4				G
87	<u>1016552</u>	Valve Seat Cutter Guide		1		E
88	<u>1016551</u>	Valve Seat Cutter T-Wrench		1		D
89	<u>1016553</u>	Valve Seat Cutter, 45° (32 mm diameter) (for FE290 engines only)		1		
90	<u>1016554</u>	Valve Seat Cutter, 45°/30° (35 mm diameter)		1		
91	<u>101641101</u>	Valve Spring Compressor		1		
92	<u>1011480</u>	Volt Ohm Meter	1	1	1	
93	<u>102570401</u>	Tool, Tensioning, Starter Generator (For Precedent vehicles)		1		
94	<u>103601401</u>	Puller, Drive Clutch, XRT 950*		1		
95	<u>103601701</u>	Tool, Disassembly, Driven Clutch, XRT 950		1		
96	<u>103600501</u>	Screw, Driven Clutch Disassembly, M6, XRT 950		1		
*Note: The XRT 950 Drive Clutch Puller requires the use of Screw, Driven Clutch Disassembly, CCI Part Number <u>103600501</u>.						

INDEX

Part Number and Page

AM10753	17-9	7410	1-55	1010543	1-23, 1-41, 1-53
AM10771	17-9	7473	1-3, 1-5, 1-43, 1-53, 1-55, 1-57, 1-59, 1-61, 1-63, 1-65, 1-67, 4-5, 4-7, 4-9, 5-3, 5-5, 5-7, 5-15, 5-17, 5-19, 6-25, 7-13, 7-15, 9-5	1010546	1-3
AM10080	12-11	7479	1-69, 1-71	1010577	1-43, 8-17
AM10081	12-11	7577	16-3, 16-5, 16-7, 16-9	1010805	5-3
AM10419	11-7	7591	4-5, 4-7, 4-9, 4-37	1010829	5-15, 5-17, 5-19
AM1220301	8-3	7716	5-3	1010850	5-13, 5-21
AM1232301	8-3, 8-7	7818	7-13	1010877	5-3
AM1243501	4-29	7820	4-31	1010878	5-3
AM1243701	4-29	7840	6-13	101090801	13-13, 13-15
AM1243801	4-29	7847	1-17, 1-45, 10-3, 16-7, 16-9, 16-11	1010909	4-5, 4-27
SVP119201	4-29	7893	4-5, 4-11, 4-13, 4-27, 7-13, 12-5, 12-7	1010921	5-3
SVP143902	1-5	7910	6-13	1010927	5-3, 16-11
SVP493201	4-29	7973	1-9, 1-11, 9-15, 9-17	1010932	5-3
183	1-57, 1-59, 1-61, 1-63, 4-5, 4-7, 4-9, 4-11, 4-13, 4-27, 4-29, 7-13, 9-5, 9-15, 9-17, 11-5, 12-9, 12-15	8028	1-53	1010933	5-3
304	4-31, 12-5, 12-7	8056	4-35	1010934	7-15, 14-3
324	1-57, 1-59, 1-61, 1-63, 1-65, 1-67, 1-69, 1-71	8057	4-35, 7-13, 12-3	1010954	7-13, 12-9, 12-15
332	1-27, 1-33, 1-35, 1-37, 1-39, 1-43, 1-45, 1-53, 1-55, 1-65, 1-67, 1-69, 1-71, 4-31, 7-11, 9-19, 10-3, 16-11	8058	4-35, 7-13, 12-3	1010984	2-3
334	5-5, 5-7, 6-3, 6-5, 8-17, 11-5	8067	6-13	1010993	1-35, 1-39, 1-45
343	1-57, 1-59, 1-61, 1-63	8104	1-57, 1-59, 1-61, 1-63, 4-11, 4-13, 12-3	1011014	1-3
357	6-17, 6-19, 6-25	8233	1-27, 1-33, 1-35, 1-37, 1-39, 1-43, 1-45, 1-55, 1-57, 1-59, 1-61, 1-63, 1-65, 1-67, 1-69, 1-71, 4-31, 4-33, 5-5, 5-7, 6-25, 7-11, 9-3, 9-5, 9-13, 12-5, 12-7, 12-9, 12-15, 16-7, 16-9, 16-11	1011017	1-3, 4-19
451	1-43, 5-13, 5-21, 10-3, 14-3	8248	1-19, 7-11, 9-3, 9-5	1011084	5-9, 5-11
705	8-17	8251	1-27, 1-33, 1-35, 1-37, 1-39, 1-45, 1-51, 1-53	1011114	5-13, 5-21
706	6-17, 6-19	8294	4-31	1011137	5-13
808	6-25, 11-5	8304	1-53	1011154	5-13, 5-21
1016	4-5, 4-11, 4-13, 4-27, 7-13, 9-5	8450	7-13, 11-5	1011210	1-53
1017	4-3, 7-13	8639	4-29, 9-15, 9-17, 12-5, 12-7, 13-21	1011219	1-53
1028	5-3	8717	5-5, 5-7, 7-13, 12-3, 12-9, 12-15	1011220	1-53
1032	5-3	8745	6-17	1011221	1-53
1218	1-5, 1-55, 1-57, 1-59, 1-61, 1-63, 1-65, 1-67, 1-69, 1-71	8754	5-5, 5-7, 6-3, 6-5, 6-15, 6-17, 6-19, 6-21, 6-23, 7-9	1011222	1-53
1241	1-3, 1-5, 1-43, 1-53, 1-55, 1-61, 1-63, 4-5, 4-7, 4-9, 5-3, 5-5, 5-7, 5-17, 5-19, 7-9, 7-13, 7-15, 9-5, 10-3	8755	6-17, 6-19, 6-21	1011229	4-5, 4-7, 4-9, 4-35
1242	5-15, 5-17, 5-19, 7-9, 7-13	8797	9-5	1011273	17-5
1620	4-3	8861	6-15, 6-25	1011280	4-5, 4-7, 4-9
1624	5-5, 5-7, 6-3, 7-9	8915	1-57, 1-59, 1-65, 1-67	1011291	12-13
1631	9-15, 9-17	8935	1-5	1011298	5-13, 5-21
1703	16-11	8963	1-53, 1-61, 1-63	1011303	5-13, 5-21
2402	6-15, 6-17, 6-19	8990	4-11, 4-13, 4-23, 4-25, 4-33, 6-3, 7-13, 13-21, 16-11	1011314	5-13, 5-21
4029	4-31	1010005	6-13	1011348	16-11
7048	6-13	1010028	12-3	1011382	4-15, 4-17
7173	1-19, 4-5, 4-7, 4-9, 6-25, 7-15, 9-5	1010124	6-17, 6-19	1011393	6-13
7174	6-7, 7-9, 9-13, 10-3, 14-3	1010138	6-15	1011394	1-3
7251	1-3, 1-19	1010145	6-21, 6-23	1011402	5-3
7270	6-17	1010150	6-17, 6-19	1011415	6-21, 6-23
7274	6-13	1010200	6-19	1011418	5-3
7308	6-13	1010237	1-57, 1-59, 1-61, 1-63, 1-65, 1-67, 1-69, 1-71	1011439	4-5, 4-7, 4-9
7310	2-3	1010434	1-3, 1-7, 1-33, 1-35, 1-37, 1-39, 1-45, 1-55, 16-11	101146302	5-13, 5-21
7311	6-25	1010435	1-3, 1-55	1011464	5-13, 5-21
7330	12-13, 15-3	1010436	1-53	1011465	5-13, 5-21
7335	12-11, 15-3			1011466	5-13, 5-21
7336	15-3			1011467	5-13, 5-21
				1011478	17-7
				1011480	17-11
				1011494	5-13, 5-21
				1011497	4-37
				1011557	4-5, 4-7, 4-9, 4-37
				1011558	4-37
				1011578	1-5, 1-53, 6-5, 13-13, 13-15

INDEX

1011582	4-37	1012604	6-5	1013771	12-13
1011590	4-11	1012605	6-5	1013772	12-13
1011652	1-23, 1-41	1012640	2-5	1013773	12-13
1011694	5-5, 5-7	1012641	2-5	1013774	12-13
1011697	1-57, 1-59, 1-65, 1-67, 6-5, 8-17, 9-13	1012642	2-5	1013787	12-13
1011707	16-11	1012649	9-3, 9-5, 9-7	1013792	12-13
1011734	5-9, 5-11	1012657	1-41	1013794	12-13, 15-3
1011767	17-3	1012711	12-9	1013824	1-19
1011779	5-15, 5-17, 5-19	1012714	12-11	1013825	1-19
1011825	4-31	1012740	12-11	1013846	1-19
1011843	4-37	1012741	12-11	1013869	5-3
1011852	1-57, 1-59, 1-61, 1-63, 1-65, 1-67, 1-69, 1-71	1012747	12-11	1013870	5-3
1011862	1-57, 1-59, 1-61, 1-63, 1-65, 1-67, 1-69, 1-71	1012748	12-11	1013876	5-3
1011865	1-57, 1-59, 1-61, 1-63, 1-65, 1-67, 1-69, 1-71	1012752	12-9	1013924	5-13, 5-21, 8-17
101187702	5-3	1012809	17-9	1014007	1-53, 5-5, 5-7, 9-13, 12-9, 12-15
1011878	1-19	1012811	17-3	1014049	11-5
1011883	1-57, 1-59, 1-61, 1-63, 1-65, 1-67, 1-69, 1-71	1012812	17-3	1014050	11-5
1011887	6-13	1012830	7-9, 9-13, 10-3	1014052	11-5
1011892	6-13	1012836	11-7	1014055	11-5
1011897	1-29	1012896	12-9	1014056	11-5
1011931	5-5, 5-7	1013032	1-51	1014057	11-5
1011937	1-57, 1-59, 1-61, 1-63, 1-65, 1-67, 1-69, 1-71	1013035	6-3	1014058	11-5
1011964	1-57, 1-59, 1-61, 1-63, 1-65, 1-67, 1-69, 1-71	1013042	6-3, 6-15	1014059	11-5
1011988	1-55, 9-3, 9-5	1013044	6-3	1014062	11-5
1012098	16-3, 16-5, 16-7, 16-9	1013052	6-3	1014063	11-5
1012101	16-3, 16-5, 16-7, 16-9	1013061	1-57, 1-59, 1-61, 1-63, 12-3, 12-9, 12-15, 13-9, 13-11	1014065	7-13, 11-5
1012126	13-11	101313402	9-3, 9-5, 9-7	1014070	11-7
1012151	17-7	1013135	6-13	1014072	11-7
1012159	1-57, 1-59, 1-61, 1-63	1013207	6-21	1014078	11-7
1012180	6-21	1013216	1-51	1014080	11-7
1012181	6-23	1013218	1-51	1014115	17-9
1012182	6-23	1013312	1-23	1014116	9-3, 9-5
1012285	1-27, 1-43, 4-33, 9-7, 9-13	1013343	1-9, 1-11	1014119	7-3, 7-5, 7-13
1012295	7-13	1013344	1-9, 1-11	1014125	6-5
1012303	6-17, 6-19, 6-21, 6-23	1013357	1-49, 4-5, 4-7, 4-9, 13-5, 13-7	1014126	6-5
1012304	6-21	1013461	9-5	1014145	7-13
1012333	12-5, 12-7	1013462	9-5	1014153	5-13, 5-21
1012382	7-3, 7-5	1013494	4-15, 4-17	1014161	17-9
1012396	4-15, 7-3, 7-5	1013509	1-65, 1-67, 1-69, 1-71	1014162	17-9
1012412	1-33, 1-35, 1-37, 1-39, 1-45	1013531	5-17, 5-19	1014198	3-15
1012431	4-35, 7-13	1013547	4-33	1014201	1-65, 1-67, 1-69, 1-71, 14-3
1012438	4-7, 4-9, 4-29, 9-15, 9-17	1013579	4-33	1014207	12-13
1012505	4-15, 4-17	1013582	17-3	1014213	6-5
1012528	10-3, 13-19	1013589	7-13	1014214	6-5
1012549	17-9	1013593	17-7	1014217	6-5
1012560	17-9	1013609	7-13	1014259	17-9
1012565	6-11	1013677	3-5	1014264	17-9
1012566	6-11	1013687	9-3, 9-5	1014276	6-17, 6-19
1012571	8-17	1013700	9-13	1014287	11-5
1012581	1-33, 1-35, 1-37, 1-39, 1-51	1013734	10-3, 13-19	1014288	6-5, 7-15, 11-5
1012597	1-41	1013746	9-3, 9-5, 9-7, 9-11	1014305	17-3
		1013760	12-9	1014306	1-27, 1-45, 4-33
		1013768	12-13	1014375	7-15
		1013769	12-13	1014392	1-45
		1013770	12-13	1014435	1-29
				101444101	1-29

INDEX

1014453	11-5	101564805	1-53	101641201	17-9
1014454	11-7	101564807	1-53	101641202	17-3
1014471	1-57, 1-59, 1-61, 1-63, 1-65, 1-67, 1-69, 1-71	101564808	1-53	1016413	17-9
1014496	17-5	1015649	8-5	1016414	17-9
1014497	17-5	1015720	4-35, 13-19	1016415	17-9
1014498	17-5	1015737	7-3, 7-5, 7-13	1016416	17-3
1014507	17-5	1015741	4-5, 4-7, 4-9, 7-13	1016417	17-3
1014508	17-5	1015752	7-13, 9-19	1016418	17-7
1014510	17-5	1015760	6-25	1016423	4-5, 4-7, 4-9, 7-13
1014530	4-31	1015768	4-29	101642575	9-9
1014540	4-33	1015770	4-29	101642578	9-9
1014555	6-21, 6-23	1015814	10-3	101642580	9-9
1014807	7-13, 12-3	101584502	9-13	101642582	9-9
1014808	12-3	101587703	9-3, 9-5	101642585	9-9
1014902	6-23	1015878	7-13, 12-3	1016429	8-9
1014928	9-3, 9-5	1015902	1-27, 1-43	1016432	8-9, 12-9
1014948	7-13	1015914	16-3, 16-5, 16-7, 16-9	1016436	8-11
1015010	4-29	1015917	16-3, 16-7, 16-9	1016437	9-9
101503202	1-9	1015921	9-5	1016438	9-11
1015072	13-13, 13-15	1015932	7-9	1016440	8-11, 9-11
1015075	1-3	1015969	8-5	1016441	9-11
1015091	1-53, 1-57, 1-59, 1-61, 1-63, 1-65, 1-67, 1-69, 1-71	1016003	9-3	1016444	9-11
1015137	9-7, 9-11	1016004	9-5	1016449	8-11
1015139	9-3, 9-5, 9-15, 9-17	1016011	11-5	1016450	8-11
1015156	4-29	1016074	7-9	1016451	8-11
1015167	4-29	101611003	17-9	1016452	8-11
1015170	4-29	101611402	15-5	1016453	8-13
1015187	4-29	1016154	6-11	1016454	8-13
101524002	7-9	1016183	6-5	1016455	8-7
1015332	7-3, 7-5, 8-5	1016201	11-5	1016456	8-5
1015345	7-13	1016214	6-11	1016457	8-9
1015372	7-13	1016230	4-29	1016458	8-11
1015373	7-13	1016267	4-29	1016470	8-15
1015392	1-57, 1-59, 1-61, 1-63	1016269	6-5	1016472	8-13
1015405	1-3, 1-57, 1-59, 1-65, 1-67, 7-13	1016287	4-29	1016473	8-9
1015426	9-19	1016289	11-5	1016474	8-11
1015453	6-25	1016319	5-15	1016479	8-11
1015457	6-25	1016320	5-15	101648102	9-11
101547601	3-7, 3-13	1016337	12-11	101648203	8-9
1015524	17-5	1016338	12-11	1016483	8-11
1015525	1-51	1016346	6-15	1016486	9-9
1015526	4-29	1016349	6-15	1016489	8-11
1015528	4-15, 4-17	1016350	6-15	101649002	9-11
1015583	6-17, 6-19	1016351	6-15	1016494	8-13
101558302	6-21, 6-23	1016353	6-15	1016496	8-13
1015597	6-13	1016356	4-5, 4-7, 4-9, 13-5, 13-7	1016499	9-9
1015608	1-5	1016363	4-7, 4-9	1016501	9-9
1015613	6-25	1016365	4-23, 4-25	1016502	8-9
1015614	6-25	1016366	4-7, 4-9	1016506	8-13
101562711	1-53	1016384	6-17, 6-19	1016507	8-5
101562712	1-53	1016385	6-15	1016510	8-13
101562714	1-53	1016386	6-17, 6-19	1016513	12-9
101562715	1-53	1016387	6-17, 6-19	1016517	8-11
101564804	1-53	1016389	6-17, 6-19	1016519	8-11
		101641002	17-5	1016521	8-13
		101641101	17-11	1016531	8-5

INDEX

1016535	8-13	1016801	11-5	1017185	1-57, 1-59, 1-61, 1-63
1016537	8-9	1016811	1-17	1017188	11-3
1016538	8-13	1016813	6-25	1017189	16-11
1016539	8-5	1016814	6-25	1017203	9-3, 9-5
1016541	8-15	1016835	1-55	1017211	5-15
1016542	8-11	1016842	1-55	1017226	6-7
1016544	8-7, 8-11, 8-13	1016849	4-15, 4-17, 4-35	1017231	12-9
1016545	8-11	1016851	4-15, 4-17, 4-35	1017239	7-13
1016546	9-13	1016857	4-35	1017243	7-13
1016547	8-5, 8-15, 9-11	1016859	4-35	1017259	1-27
1016549	8-11	1016868	1-3	1017266	6-15
1016551	17-11	1016879	4-3	1017273	6-9, 6-11
1016552	17-11	1016880	4-3	101728201	1-23
1016553	17-11	1016883	7-9	101728202	1-41
1016554	17-11	1016901	11-5	101728203	1-23
1016557	5-13, 5-21	1016904	8-11, 10-3	101728204	1-41
1016560	8-11	1016916	1-53	101728210	1-23
1016561	8-7	101692501	1-3	101728211	1-41
1016562	8-7, 8-15	101692502	1-3	101728213	1-23
1016563	8-11	101692504	1-3	101728214	1-41
1016564	8-13	101692506	1-3	101728701	1-45
1016566	8-11	101692509	1-3	101728702	1-45
1016569	8-11	101692510	1-3	101728704	1-45
1016570	8-9	101692511	1-3	101728706	1-45
1016571	8-15	101692512	1-3	101728708	1-45
1016572	9-11	101692513	1-3	101728709	1-45
1016573	5-13, 5-21	101692514	1-3	101728710	1-45
1016576	8-9	101692515	1-3	101728711	1-45
1016578	8-7	1016929	4-29	101728712	1-45
1016581	8-9	101693901	1-3	1017289	1-13
1016582	9-11	101693902	1-3	1017310	1-27, 1-43
1016583	8-11	101693904	1-3	1017313	6-5
1016584	8-13	101693906	1-3	1017314	6-5
1016585	9-9	101693909	1-3	1017315	6-5
1016587	8-7	101693910	1-3	1017317	6-5
1016588	8-7	101693911	1-3	101734802	1-3
1016627	17-7	101693912	1-3	1017378	5-5, 5-7
1016630	4-15	101693913	1-3	1017380	5-5, 5-7
1016668	1-55	101693914	1-3	101738301	11-5
1016672	12-13	1016952	1-17	101738302	11-5
101674702	5-9	1016967	1-3, 13-19	1017384	1-41
101674704	5-11	1016997	7-13	1017424	5-5, 5-7
1016751	1-25	1017006	7-3, 7-5, 7-13	1017434	8-11
101675511	1-25	1017029	5-3	1017442	8-9
101675512	1-25	1017035	4-37	1017443	8-11
101675514	1-25	101705701	3-3, 3-9	1017445	8-11
101675515	1-25	1017062	4-3	1017448	8-7
101677701	1-25	1017064	4-3	101744901	8-15
101677702	1-25	1017065	4-3	101744902	8-15
101677703	1-25	101707402	4-11	1017450	8-15
101677705	1-25	101707405	4-13	101745101	8-15
1016781	1-57, 1-59, 1-61, 1-63	1017075	4-11, 4-13	101745102	8-15
1016793	1-57, 1-59, 1-61, 1-63	1017080	1-3	1017453	8-15
1016794	1-57, 1-59, 1-61, 1-63	1017082	12-9, 12-15	1017454	8-11
101679901	1-59, 1-63	101708301	1-17	1017455	8-7
101679902	1-57, 1-61	1017141	1-45	1017456	8-9

INDEX

101745701	8-15	101788211	1-37	101831801	17-5
101745702	8-15	101788212	1-37	101831901	17-3
1017458	8-9	101791101	5-21	101832001	13-9
1017460	8-9	101791901	1-37, 1-39	101832202	9-13
1017461	9-9	1017936	1-45	101832302	9-13
1017463	8-7	101796201	5-5, 5-7	101832601	8-17
1017466	9-11	101796501	13-9	101832701	8-17
1017471	8-15	101796801	13-9	101833101	8-17
1017472	8-13	101799201	1-43	101833401	11-7
1017473	8-11	101800201	1-65, 1-67, 1-69, 1-71	101833601	12-9
1017474	8-5	101801001	13-9	101833904	11-5
1017475	8-5	101804301	4-15, 9-15, 9-17, 9-19	101834001	11-7
1017476	8-5	101805501	1-69, 1-71	101834502	4-15, 4-17, 4-21
1017486	8-5	101805502	1-69, 1-71	101834601	8-17
1017487	8-13	101805601	1-65, 1-67	101834801	9-13, 12-9, 12-15
1017490	8-7	101805801	1-65, 1-67	101835001	1-69, 1-71
1017501	8-15	101806001	1-21	101835101	1-69, 1-71
1017502	8-15	101806002	1-21	101835401	1-69, 1-71
1017503	8-15	101806005	1-21	101835501	1-65, 1-69
1017504	8-13	101806901	1-47	101835502	1-67, 1-71
1017507	8-9	101808401	17-3	101835601	4-23, 4-25
1017508	8-13	101809101	17-5	101836201	11-7
1017510	8-15	101811301	9-15, 9-17	101837001	1-49
1017512	8-15	101811901	9-19	101837101	9-19
1017513	8-13	101812301	9-19	101837301	7-3, 7-5, 7-7
1017514	8-13	101813001	9-19	101837801	1-61, 1-63
101751801	8-13	101813202	17-3	101837802	1-61, 1-63
101751802	8-13	101815301	1-57, 1-59	101838001	1-61
101751803	8-13	101815401	1-57, 1-59, 1-61, 1-63, 1-65, 1-67	101838002	1-63
1017686	11-7	101815402	1-57, 1-59, 1-61, 1-63, 1-65, 1-67	101838401	16-5, 16-9
1017689	10-3	101816701	1-57	101838601	16-5, 16-9
1017699	4-37	101816702	1-59	101838701	16-7, 16-9
1017705	13-9	101817401	5-5, 5-7	101839801	4-21
1017721	4-5, 4-27	101818801	5-7	101839802	4-21
1017724	4-11, 4-13	101821501	9-19	101839803	4-21
101773301	8-15	101821601	4-29	101839804	4-21
101773302	8-15	101823101	17-9	101839805	4-21
101773303	8-15	101824401	9-3, 9-5	101839806	4-21
101773304	8-15	101825101	3-5, 3-11	101839807	4-21
101773305	8-15	101825102	3-7, 3-13	101839808	4-21
101773306	8-15	101825103	4-19	101839809	4-21
101773307	8-15	101825701	9-15, 9-17	101839810	4-21
101773308	8-15	101826201	4-17	101839811	4-21
101773309	8-15	101826401	4-15	101839812	4-21
101773310	8-15	101827101	8-17	101840901	1-55
101773311	8-15	101828501	16-3, 16-5, 16-7, 16-9	101841101	1-55
1017748	1-45	101828801	16-3	101841201	1-55
1017774	1-43	101828802	16-3	101841202	1-55
1017853	4-5, 4-7, 4-9	101828901	16-3, 16-5	101841301	1-55
101788201	1-37	101828902	16-3, 16-5	101850301	6-9, 6-11
101788202	1-37	101828903	16-3, 16-5	101851101	4-15, 4-17, 4-21
101788204	1-37	101829001	16-7, 16-9	101856002	4-17
101788206	1-37	101830601	4-15, 4-17	101856102	7-13
101788208	1-37	101830701	4-15, 4-17, 4-21	101861901	5-5, 5-7
101788209	1-37	101831101	16-3, 16-7, 16-9	101862001	5-5
101788210	1-37	101831401	13-13, 13-15	101865301	5-15

INDEX

101870401	1-3	101903701	15-3	101958201	16-5
101871001	17-3	101906901	15-3	101958301	16-5
101874601	5-15	101908101	13-11	101960501	3-7, 3-13, 7-7
101878201	5-3	101908401	7-11, 13-11	101963401	8-17
101879401	6-3	101910401	1-43	101965401	16-11
101879501	6-3	101910501	12-13	101971301	9-19
101879601	6-3	101914001	15-5	101972001	17-7
101879701	6-3	101914401	4-5, 4-7, 4-9, 16-3, 16-5, 16-7, 16-9	101972002	17-7
101879801	6-3	101915201	3-7, 3-13	101972003	17-7
101879901	6-3	101916101	8-5	101972004	17-7
101880001	6-3	101916301	8-7	101972005	17-7
101880101	6-3	101916701	7-9	101972006	17-7
101880201	6-3	101917601	9-19	101972007	17-7
101880301	6-3	101918501	5-3, 5-5, 5-7	101972009	17-7
101880701	5-13, 5-21	101919801	5-5, 5-7	101972011	17-7
101880901	1-23, 1-41	101921501	9-19	101972012	17-7
101881501	4-33	101922101	15-3	101972101	15-3
101881601	4-33	101922201	15-3	101972201	15-3
101881701	1-23, 1-41, 9-19	101922501	7-11	101972801	9-19
101884801	8-17	101923001	15-3	101973101	9-9
101886101	9-13, 12-9, 12-15	101923201	15-3	101973301	9-9
101887101	17-3	101923501	15-3	101973401	9-11
101887601	8-5	101923901	15-3	101973501	16-5
101889401	12-11	101925701	9-19	101974701	4-21
101890001	12-11	101926501	6-21	101974702	4-21
101890101	12-9	101926802	9-15	101974703	4-21
101890201	12-9	101926803	9-17	101974704	4-21
101890501	12-9	101926901	12-9, 12-21	101974705	4-21
101890601	12-9	101927101	12-9	101974706	4-21
101890901	12-13	101927201	12-9	101974707	4-21
101891001	12-13	101927301	12-9	101974708	4-21
101891301	12-9	101927501	12-11	101974709	4-21
101891401	12-13	101927601	12-11	101974710	4-21
101891501	12-13	101927701	12-11	101974711	4-21
101891601	12-11	101927901	12-11	101974712	4-21
101891901	12-11	101928001	12-11	101978601	15-5
101892001	12-11	101928101	12-11	101980801	12-11
101892201	12-11	101928301	12-13	101980901	12-11
101892301	12-11	101928601	12-9	101981001	12-11
101892401	12-11	101928701	12-9, 15-3, 17-7	101984801	6-5
101892501	12-11	101929401	6-21	101987701	9-3, 9-5
101892601	12-11	101932201	4-5, 4-7, 4-9	101987901	4-3
101892701	12-13	101932902	12-21	101988001	4-3
101892901	12-9	101933101	17-7	101988002	4-3
101893201	12-11	101933701	9-15, 9-17	101988101	4-3
101893801	12-9	101936101	15-5	101988201	4-3
101893901	12-11	101942301	14-3	101990801	5-17, 5-19
101894901	13-9	101946201	1-27	101997802	4-33
101895401	15-3	101953103	5-17	101997803	4-33
101895501	15-3	101953104	5-19	101997902	4-33
101897001	15-3	101953106	5-15	101997903	4-33
101897201	15-3	101954301	1-23, 1-41, 1-43	102002801	13-13, 13-15
101897401	15-3	101955001	6-15	102002901	13-13, 13-15
101897601	15-3	101955101	4-31	102003201	8-3, 9-3, 9-5
101898001	7-15	101955301	9-3, 9-5	102005701	1-31
101903601	15-3	101957101	4-5, 4-7, 4-9	102022601	6-15

INDEX

102022602	6-3, 6-15	102453101	12-11	102838101	13-11, 16-3, 16-7
102026001	5-5, 5-7	102508701	4-17	102838401	8-7
102031901	12-13	102515401	12-9, 12-15	102838701	7-7
102061201	17-9	102517501	4-13	102838801	7-7
102065901	8-17	102517601	4-31	102838901	7-7
102066201	6-23	102518301	3-5, 3-11	102839001	7-7
102076701	1-57, 1-59, 1-61, 1-63, 1-65, 1-67, 1-69, 1-71	102522001	9-5	102839301	7-7
102155801	11-7	102526201	12-3	102841101	7-7
102158701	3-15	102529201	4-11, 4-13	102844601	7-7
102158901	5-5, 5-7	102529203	4-31	102844701	7-7
102162601	5-17, 5-19	102540301	8-17	102845101	3-5, 3-11, 13-11
102163001	1-31	102546401	4-13	102845203	13-13
102163101	1-31	102555501	17-3	102845204	13-15
102166901	5-17, 5-19	102558201	8-3	102845501	13-5, 13-7
102169401	17-7	102559901	2-5	102847801	16-3
102186401	14-3	102562401	17-3	102847802	16-3
102196901	4-17, 13-5, 13-7	102564002	6-17, 6-19	102847803	16-3
102198701	4-5	102569302	2-3	102859501	13-19
102199001	4-5	102570401	17-11	102865101	9-3, 9-5
102199201	4-5	102572401	4-17, 13-5, 13-7	102869401	4-5, 4-7, 4-9, 4-15, 4-17
102199301	4-5	102585901	10-3	102871801	6-21, 6-23
102199401	4-5	102601501	17-5	102873401	13-13, 13-15
102235201	14-3	102603501	17-5	102886301	15-3
102240501	13-19	102605201	17-5	102886401	15-3
102241501	17-7	102606101	17-5	102886501	15-3
102241502	17-7	102607501	17-5	102886601	15-3
102242101	11-7	102616701	12-3	102890201	4-23, 4-25
102242401	1-57, 1-59, 1-61, 1-63, 1-65, 1-67, 1-69, 1-71	102668801	17-9	102891101	6-23
102243402	17-7	102669901	17-7	102892901	16-5
102243403	14-3	102674001	17-5	102892902	16-5
102248803	17-7	102674101	17-5	102897201	12-17
102249901	17-3	102674201	17-5	102897301	12-17
102251501	17-7	102674401	17-9	102897401	12-15
102275401	16-3, 16-5, 16-7, 16-9	102674601	17-9	102897601	12-15
102278001	6-5	102675001	17-5	102897701	12-17
102289201	6-3, 6-15	102675101	17-5	102897801	12-15
102292801	5-15, 5-17, 5-19	102675201	17-5	102897901	12-15
102297230	13-3	102675301	17-5	102898001	12-17
102304801	8-11	102675401	17-5	102898101	12-17
102310701	1-37, 1-39, 1-45	102684501	6-17, 6-19	102898201	12-15
102323101	5-3, 5-15, 5-17, 5-19	102684602	12-3	102898301	12-17
102323201	5-3, 5-15, 5-17, 5-19	102686101	17-3	102898401	12-17
102330901	17-9	102704901	14-3	102898501	12-17
102336001	9-13	102711001	7-7	102898601	12-17
102336101	9-13	102753401	8-11	102898701	12-17
102354901	4-23, 4-25	102766201	13-13, 13-15	102898801	12-17
102355301	7-15	102766301	6-17, 6-19	102898901	12-17
102356601	15-3	102769701	13-19	102899001	12-17
102356801	15-3	102771701	15-3	102899101	12-15
102376001	12-3	102772402	13-19	102899201	12-15
102406701	9-3, 9-5	102774501	13-19	102899301	12-17
102430901	8-15	102774701	13-19	102899401	12-15
102440901	13-5, 13-7	102775101	14-3	102899501	12-17
102453001	12-11	102803401	7-13	102899601	12-17
		102817101	13-19	102899701	12-15
		102817201	13-19	102899801	12-15

INDEX

102899901	12-17	102962602	4-19	103347801	7-7
102900001	12-15	102967601	3-5, 3-11	103347901	7-7
102900101	12-15	102969401	12-3	103348201	4-15
102900201	12-15	102969801	12-3	103348202	4-17
102900301	12-15	102969901	12-3	103348501	4-15, 7-3, 7-5
102900401	12-17	102977001	4-15	103348601	4-15
102900501	12-17	102977002	4-17	103350901	6-21
102900601	12-15	102980801	13-13, 13-15	103351001	6-15
102900701	12-17	102980901	13-13, 13-15	103351101	6-23
102900801	12-19	103010101	9-3, 9-5	103354401	4-17
102900901	12-15	103173301	12-3	103354701	6-15
102901001	12-17	103174401	1-7	103369501	12-3
102901101	12-17	103177401	12-3	103372101	9-3, 9-5
102901201	12-19	103180101	4-15, 4-17	103372302	9-3, 9-5
102901301	12-19	103192701	12-3	103372401	9-7
102901401	12-19	103198201	13-13, 13-15	103372801	9-7
102901501	12-19	103198301	4-17	103386202	8-5
102901601	12-19	103198401	7-11	103397901	4-7, 4-9, 13-19
102901701	12-19	103199001	4-15	103414901	4-7, 4-9, 13-19
102901801	12-19	103199101	4-15	103418601	9-7
102901901	12-19	103205401	3-3, 3-9	103449501	13-21
102902001	12-19	103205501	3-7, 3-13, 7-11	103449601	13-21
102902101	12-19	103210201	3-7, 3-13	103459104	2-3
102902201	12-19	103210301	3-5, 3-11	103464801	3-17
102902301	12-19	103218001	16-11	103477901	6-13
102902401	12-19	103218601	4-17, 13-5, 13-7	103496801	7-15
102902501	12-19	103234303	3-15	103502701	6-17
102902601	12-19	103254401	4-9	103502801	6-19
102902701	12-19	103255701	4-7, 4-9	103507101	9-11
102902801	12-19, 15-3	103257101	4-7	103507201	9-11
102912801	13-19	103274001	1-35, 1-39	103507301	9-11
102915601	4-37	103274002	1-35, 1-39	103510501	13-17
102915701	13-11	103274004	1-35, 1-39	103582801	15-3
102917101	6-23	103274006	1-35, 1-39	103601501	6-3
102918701	4-23	103274008	1-35, 1-39	103601601	6-7
102918702	4-25	103274009	1-35, 1-39	103615601	8-11
102938601	14-3	103274010	1-35, 1-39	103615801	8-15
102938701	14-3	103274011	1-35, 1-39	103615901	8-13
102938801	14-3	103274012	1-35, 1-39	103616301	8-11
102938901	14-3	103274101	1-33, 1-37	103616401	8-13
102939001	14-3	103274102	1-33, 1-37	103616501	8-7
102939101	14-3	103274104	1-33, 1-37	103616601	8-7
102939102	14-3	103274106	1-33, 1-37	103616701	8-7
102939501	16-5	103274108	1-33, 1-37	103617101	9-9
102945501	1-39	103274109	1-33, 1-37	103618001	4-13
102945502	1-39	103274110	1-33, 1-37	103618101	4-31
102945504	1-39	103274111	1-33, 1-37	103628801	6-17
102945506	1-39	103274112	1-33, 1-37	103628901	6-19
102945508	1-39	103295101	12-5, 12-7	103651901	9-5
102945509	1-39	103295203	12-5	103651902	9-3
102945510	1-39	103295204	12-7	103653401	6-3
102945511	1-39	103345701	11-5	103653501	6-3, 6-15
102945512	1-39	103347101	7-7	103657301	6-21, 6-23
102950301	4-19	103347301	7-7	103658601	2-3
102951701	14-3	103347601	7-7	103677101	1-31
102962303	4-19	103347701	7-7	103678502	7-7

INDEX

103686501 7-3
 103686601 7-5
 103694501 2-5
 103697109 13-19
 103700301 4-23
 103709201 13-19
 103717302 6-13
 103717402 6-13
 103722901 2-3
 103723003 2-3
 103724502 6-9, 6-11
 103724601 6-11
 103724602 6-9
 103724901 6-11
 103754901 1-31
 103771601 16-9
 103771901 13-9
 103772101 13-5, 13-7
 103772201 16-11
 103772401 16-7
 103776901 9-5
 103776902 9-3
 103781101 9-3, 9-5
 103783001 3-5, 3-11
 103783003 3-7, 3-13
 103787401 1-57, 1-59, 1-61, 1-63, 1-65, 1-67, 1-69, 1-71
 103789601 1-57, 1-59, 1-61, 1-63, 1-65, 1-67, 1-69, 1-71
 103802401 4-25
 103822101 13-19
 103832001 16-7, 16-9
 103851201 9-7
 103865101 5-5, 5-7
 103869401 16-7, 16-9
 103874201 12-15
 103882001 12-17
 103882101 12-15
 103882301 12-15
 103887901 8-3, 8-9
 103888101 1-31
 103888301 1-31
 103895401 1-5
 103902101 13-3
 103902301 13-3
 103902401 13-3
 103905201 9-3, 9-5
 103939201 1-11
 103940701 13-5
 103940801 13-7
 103942101 13-17
 103942902 13-17
 103943401 13-3
 103951002 2-3
 103951003 2-3
 103951004 2-3

103952201 1-15
 103953301 7-7
 103954301 1-57, 1-59, 1-61, 1-63
 103969601 13-13
 103969701 13-15
 105116301 13-3
 96704416 8-17

A

AC cord 16-3, 16-5, 16-7, 16-9
 AC cord receptacle 16-5
 accelerator bracket and bearing assembly 5-5, 5-7
 accelerator cable 9-13
 accelerator pedal adjustment tool 17-3
 accelerator pivot rod 5-5, 5-7
 accelerator return spring 5-5, 5-7
 accelerator rod 5-9, 5-11
 access door 1-51
 adapter
 cable (IQDM) 17-7
 adhesive, guide ring 17-3
 adjuster
 hydraulic brake 17-7
 air box 9-19
 air box top 9-19
 air filter 8-3, 9-19
 air intake hose 9-19
 ammeter 16-3, 16-5, 16-7, 16-9
 anchor body 5-13, 5-21
 anchor body kit 5-13, 5-21
 anchor, piston 5-13, 5-21
 anti-sway bar 6-25
 A-plate strap 6-15
 A-plate, delta 6-15
 arbor 17-3
 arm
 governor 9-13, 12-9, 12-15
 pivot 12-9
 rocker 8-11
 armature 14-3
 armrest 1-27, 1-43, 1-55
 assembly
 accelerator bracket and bearing 5-5, 5-7
 accelerator pivot rod 5-5, 5-7
 air box 9-19
 air box top 9-19
 axle 12-13
 bearing, steering shaft 6-5
 bell crank and shaft 7-13
 connecting rod 8-15
 cylinder head 8-11
 delta A-plate 6-15
 delta shock and gear support 6-15
 drive clutch 11-5
 drive hub 11-5

driven clutch 11-7
 driven clutch fixed-face 11-7
 float 9-9
 fuel cap 9-3, 9-5
 fuel pump 9-3, 9-5
 governor 12-11, 12-17
 headlight 4-3
 headlight harness 4-3
 idle screw 9-9
 inner ball joint 6-3
 kingpin 6-17, 6-19
 moveable-face 11-5, 11-7
 pilot air screw 9-9
 plug cap 8-7
 ratchet 5-3, 5-5, 5-7
 secondary clutch weight 11-5
 steering shaft 6-5
 turn signal lens 4-3
 axle 12-9, 12-13, 12-15, 12-19, 15-3
 axle guard 12-21, 15-5
 axle shaft oil seal 12-13, 12-19, 15-3
 axle tube 12-13, 12-19, 15-3

B

backing plate, brake 5-13, 5-21
 bag rest mat 1-45
 ball bearing 7-7, 8-13
 ball joint 5-3, 5-9, 5-11, 12-5, 12-7
 ball stud 7-13, 12-9, 12-15
 ball, shifter 12-11
 ball, steel pressure relief 8-9
 bar, stabilizer 6-25
 barb, vent 9-3, 9-5
 barrel, plastic 1-3, 1-7, 1-33, 1-35, 1-37, 1-39, 1-45, 1-55, 16-11
 battery
 12-volt, side-post 7-15
 battery cap, 6-volt 13-13, 13-15
 battery charger 16-3, 16-5
 battery charger case 16-3, 16-5, 16-7, 16-9
 battery charger receptacle 13-9
 battery charger retractable cord assembly 16-11
 battery charger transformer 16-3, 16-5, 16-7, 16-9
 battery charger wire assembly 16-5
 battery charger, onboard 16-7, 16-9
 battery clamp 7-15
 battery condition indicator 4-17
 battery discharge machine 17-3
 battery HD, 6-volt, Trojan T145 13-15
 battery hold-down 13-13, 13-15
 battery hold-down rod 13-13, 13-15
 battery insulator 1-49
 battery light 4-17
 battery terminal protector spray 17-3

INDEX

- battery thermometer 17-3
 - battery, 6-volt, Trojan T105 13-13
 - bead, ferrite 13-21
 - bearing 15-3
 - ball 7-7, 8-13
 - ball (motor) 14-3
 - ball (steering pinion) 6-3
 - cage roller 12-17
 - front wheel hub 6-13
 - hub 6-13
 - idler 11-5
 - inner axle tube 12-13, 15-3
 - lower pinion (steering) 6-3
 - needle 12-11
 - outer axle tube 12-13
 - pivot support 5-5, 5-7
 - steering shaft 6-5
 - thrust 6-17, 6-19
 - bearing and oil seal remover 17-3
 - bearing driver set 17-3
 - bearing puller 17-3
 - bearing puller wedge 17-3
 - bearing seat 6-5
 - bell crank and shaft 7-13
 - bellows 6-3
 - belt, drive 11-3
 - belt, starter/generator 7-9
 - belt, V 7-9
 - beverage holder 1-17
 - bezel, choke cable 9-15, 9-17
 - bezel, headlight 4-3
 - bezel, taillight 4-37
 - block, brake-mounting 5-3
 - block, fuse 4-5, 4-7, 4-9, 7-13
 - block, terminal 4-5, 4-7, 4-9, 13-5, 13-7
 - body kick plate 1-33, 1-35, 1-37, 1-39, 1-45
 - body, anchor 5-13, 5-21
 - body, center 1-37, 1-39
 - body, front 1-3
 - body, rear 1-45
 - bolt, U- 6-23
 - boot, steering column 6-5
 - boot, switch 7-11, 13-11
 - bottom, air box 9-19
 - box
 - air 9-19
 - differential 12-19
 - electrical component 7-13
 - steering gear 6-3
 - brace 1-69, 1-71
 - bracket 6-21
 - accelerator cable 9-13
 - adjustable starter/generator 7-9
 - battery charger 16-11
 - brake cable guide 6-15
 - brake light switch 4-5, 4-7, 4-9
 - FNR shifter 12-3
 - governor cable 9-13
 - headlight mounting 4-3
 - horn 4-31
 - hour meter 4-33
 - muffler mounting 10-3
 - oil filter mount 8-9
 - oil level switch 8-13
 - relay mounting 7-13, 16-7, 16-9
 - retaining 9-15, 9-17
 - shock mounting, drv 6-23
 - shock mounting, pas 6-23
 - snubber 8-17
 - stabilizer bar mounting 6-25
 - starter/generator mounting 7-9
 - steering column 6-5
 - steering column mounting 6-5
 - throttle spring return 9-11
 - Tow/Run switch 7-11
 - bracket, carburetor intake manifold 9-11
 - brake actuator kit 5-13, 5-21
 - brake adjustment tool 17-3
 - brake backing plate 5-13, 5-21
 - brake cable 5-15, 5-17, 5-19
 - brake cable equalizer 5-15, 5-17, 5-19
 - brake cable hanger 6-21
 - brake cable release tool 17-3
 - brake cluster 5-13, 5-21
 - brake drum 5-13, 5-21
 - brake lever arm 5-13, 5-21
 - brake light switch bracket 4-5, 4-7, 4-9
 - brake mounting block 5-3
 - brake pedal 5-3
 - brake pedal adjustment tool 17-3
 - brake pedal pad 5-3
 - brake pedal tension tool 17-3
 - brake relay kit, 12-volt 4-5
 - brake return spring 5-17, 5-19
 - brake shoe 5-13, 5-21
 - brake spring 5-13, 5-21
 - breaker, circuit 16-5, 16-9
 - breather 12-9, 12-15, 15-3
 - brush box assembly 14-3
 - brush cover kit, starter/generator 7-7
 - brush guard kit 1-5
 - brush inspection port cover 7-7
 - brush kit, motor 14-3
 - brush rigging 14-3
 - brush spring 7-7, 14-3
 - brush spring set 7-7
 - brush spring, starter/generator 7-7
 - brush terminal, starter/generator 7-7
 - brush, motor 14-3
 - bulb, headlight 4-3
 - bulb, strobe light 4-29
 - bulb, tail light 4-37
 - bumper 1-29
 - drive unit (motor) 14-3
 - front 1-3
 - front, heavy duty 1-3
 - front, kit 1-3
 - rubber 1-53, 5-3
 - seal, long 1-23
 - side trim 1-55
 - spring return 5-5, 5-7
 - bumper guard vinyl trim 1-37, 1-39
 - bumper, heavy-duty 1-3
 - bumper, seat 1-41
 - bushing 7-13, 11-5, 12-3
 - bronze 6-13
 - nylon 5-3
 - return line 9-3, 9-5
 - spindle 6-13
 - stabilizer bar 6-25
 - steel 6-17, 6-19, 6-21, 6-23
 - urethane 6-15, 6-17, 6-19, 6-21, 6-23
 - bushing support 6-25
 - button, drive 11-7
 - buzzer, reverse 4-15, 4-17, 4-35
- ## C
- cable
 - accelerator 9-13
 - brake 5-15, 5-17, 5-19
 - choke 9-15, 9-17
 - FNR shifter 12-5, 12-7
 - governor 9-13
 - IQDM 17-7
 - calibration test module 17-3
 - cam
 - driven clutch 11-7
 - electrical component box 7-13
 - cam installation tool 17-3
 - cam, FNR shifter 12-3
 - camshaft 8-13
 - camshaft shim 8-13
 - canister, carbon, fuel tank 9-7
 - canopy 1-57, 1-59, 1-61, 1-63
 - canopy brace 1-57, 1-59, 1-61, 1-63, 1-65, 1-67, 1-69, 1-71
 - canopy hardware 1-65, 1-67, 1-69, 1-71
 - canopy top, beige 1-67, 1-71
 - canopy top, white 1-65, 1-69
 - canopy trim plate 1-57, 1-59, 1-61, 1-63, 1-65, 1-67, 1-69, 1-71
 - cap
 - battery, 6-volt 13-13, 13-15
 - dust 4-17, 13-5, 13-7
 - fuel, gas, ratchet 9-3, 9-5
 - key switch 4-15, 4-17, 4-21
 - plug 8-7
 - seat back 1-25

INDEX

cap, hub, 7 prong 2-5
carbon canister 9-7
carburetor adapter 9-11
carburetor air vent tube 9-3, 9-5
carburetor float level tool 17-7
carburetor gasket 9-11
carburetor insulator 9-11
carburetor mounting gasket 9-11
carburetor, FE350 S27 9-9
card, safety first 17-9
case
 battery charger 16-3, 16-5, 16-7, 16-9
 differential gear 12-13
 gear 12-9, 15-3
 rocker 8-11
CE mark ferrite bead, Fair-rite 13-21
CE mark ferrite bead, TDK 13-21
center body 1-37, 1-39
charger
 wire assembly kit 16-3, 16-7, 16-9
charger bezel tool 17-3
charger receptacle 13-9
charger, battery 16-3, 16-5
charger, battery, onboard 16-7, 16-9
choke cable 9-15, 9-17
choke cable bezel 9-15, 9-17
choke valve 9-19
circuit breaker 13-11, 16-3, 16-5, 16-7, 16-9
clamp
 battery 7-15
 cable retaining 9-13
 hose 9-3, 9-5, 9-7, 9-11, 9-19
 hose, green 9-3, 9-5, 9-7
 muffler hose 10-3
clevis, upper delta 6-17, 6-19
clip
 meter 4-15
clip, score card 6-11
cluster idler gear 12-11
cluster, brake 5-13, 5-21
clutch alignment tool 17-5
clutch removal tool 17-3
clutch repair kit 11-7
clutch tool kit 17-5
clutch weight 11-5
clutch, driven 11-7
collet 8-11
column, steering 6-5
communication display module 17-5
component box, electrical 7-13
component mounting plate 13-19
component mounting plate cover 13-19
compression gauge 17-5
compression mount 6-25
compressor, piston ring 17-9
compressor, valve spring 17-11

conduit 4-29
connecting bar 1-55
connecting rod 8-15
continuity tester 17-5
control board, potted 16-7, 16-9
controller, speed 13-19
converter, DC/DC 4-23
cord connector 8-13
cord, AC 16-3, 16-5, 16-7, 16-9
cord, DC 16-3, 16-5, 16-7, 16-9
cord, retractable, assembly 16-11
counterbalance guide shaft 8-15
counterbalance weight 8-15
cover
 brush inspection port 7-7
 crankcase 8-13
 dust 5-13, 5-21, 6-13
 electrical box 7-13
 fuse block 4-7, 4-9
 oil pump 8-9
 rocker switch hole 4-15, 4-17
 screw head 4-15, 4-17
 steering column 6-5
 wheel 2-5
cover, steering column 4-11, 4-13
cowl 1-3
crankcase 8-15
crankcase cover 8-13
crankcase vent tube 9-11
crankshaft 8-15
crankshaft rod 8-15
crankshaft shim 8-15
cross brace 1-69, 1-71
C-type stop ring 6-3
cup holder 1-17
cup, spring 5-5, 5-7
current limiter 16-5
cushion, shock absorber 6-21, 6-23
cutter, valve seat 17-5, 17-11
cylinder head 8-11

D

dash component 1-9, 1-11
dash panel 4-15, 4-17
dc converter, 15A 4-23
dc converter, CE 4-25
DC cord 16-3, 16-5, 16-7, 16-9
DC/DC converter 4-23
decal
 4-gauge wire warning 3-5, 3-11
 battery danger 3-5
 driver/passenger 3-7, 3-13
 electrical cover safety 3-5, 3-11
 FNR 3-5, 3-7, 3-11, 3-13
 four-passenger warning 3-3, 3-9
 frame ground 3-7, 3-13
key switch 3-7, 3-13
on/off 3-5, 3-11
operating instructions 3-5, 3-7, 3-11, 3-13
passcode 4-19
rollover warning 3-3, 3-9
rotating parts 3-7, 3-13, 7-7
run/service switch 3-7, 3-13, 7-11
Tow/Run switch 3-5, 3-11, 13-11
Villager 3-15
delta A-plate 6-15
delta A-plate sub-assembly 6-15
delta shock and gear support 6-15
diagnostic port 4-17, 13-5, 13-7
diesel tachometer probe 17-9
differential drive unit 12-9, 12-15, 15-3
differential gear 12-13, 15-3
differential gear case 12-13, 12-19
differential guard 12-21, 15-5
differential housing 15-3
differential idler gear 12-13
differential pin 12-13
diode 7-13
dipstick 8-5
door, access 1-51
drain plug 8-9, 12-15
drain plug gasket 8-9, 12-9, 12-15
drain plug, rubber 7-7
drink holder 1-17
drive belt 11-3
drive button 11-7
drive clutch assembly 11-5
drive clutch button 11-5
drive clutch fixed sheave tool 17-5
drive clutch fixed-face 11-5
drive clutch holder tool 17-5
drive clutch hub puller 17-5
drive clutch pulley 17-5
drive clutch pulley 11-5
drive clutch spider removal tool 17-5
drive clutch spring 11-5
drive clutch weight 11-5
drive hub 11-5
drive selector shaft 12-9, 12-15
drive unit bumper 14-3
drive unit guard 12-21, 15-5
driven clutch 11-7
driven clutch button 11-7
driven clutch cam 11-7
driven clutch cam puller 17-5
driven clutch fixed-face assembly 11-7
driven clutch puller plug 17-5
driven clutch spring compression base tool 17-5
driven clutch spring compression collar tool 17-5
driven clutch spring compression nut tool

INDEX

17-5
 driver, drive clutch 11-5
 drum, brake 5-13, 5-21
 dry moly lubricant 17-7
 duct, intake 9-15, 9-17
 dust cap 4-17, 13-5, 13-7
 dust cover 5-13, 5-21, 6-13

E

eccentric adjustment screw 6-17
 E-clip 5-15, 5-17, 5-19
 electrical box cover 7-13
 electrical component box 7-13
 end cap, motor 14-3
 end, tie rod 6-15
 engine
 air filter 8-3
 engine mounting plate 8-17
 engine shroud 8-5
 engine tune-up kit 8-3
 engine, FE350 S27 8-5
 equalizer pivot 5-15
 equalizer rod 5-15, 5-17, 5-19
 equalizer, brake cable 5-15, 5-17, 5-19
 exhaust system 10-3
 exhaust valve 8-11
 extrusion, fender 1-3
 extrusion, plastic 1-29

F

face, moveable 11-5, 11-7
 fan housing 8-5
 fan shroud 8-5
 fan, flywheel 8-7
 fender extrusion 1-3
 fender, inner 1-45
 ferrite bead (CE), Fair-rite 13-21
 ferrite bead (CE), TDK 13-21
 field coil housing 7-7
 fill plug 12-9, 12-15
 fill plug gasket 12-15
 filter
 air 8-3, 9-19
 fuel 8-3, 9-3, 9-5
 oil 8-3, 8-9
 oil pump 8-9
 fitting, thread-forming grease 6-13
 fixed-face, drive clutch 11-5
 fixed-face, driven clutch 11-7
 flasher, turn signal, 12-volt 4-13
 float 9-9
 floor mat 1-9, 1-13, 1-15
 floormat 1-11
 flywheel 8-7
 flywheel fan 8-7

flywheel fan plate 8-7
 flywheel puller 17-7
 FNR closeout brush 4-15
 FNR shift lever 12-9, 12-15
 FNR shifter 12-3
 FNR shifter bracket 12-3
 FNR shifter cable 12-5, 12-7
 FNR shifter cam 12-3
 foam, seat 1-53
 foot rest 1-55
 foot rest mat 1-55
 fork, shift 12-11, 12-17
 frame and field, motor 14-3
 frame and field, starter/generator 7-7
 front body 1-3
 front body support 1-45
 front bumper 1-3
 front bumper kit 1-3
 front spring retainer plate 6-17, 6-19
 fuel filter 8-3, 9-3, 9-5
 fuel gauge sending unit 9-5
 fuel line 9-3, 9-5, 9-7, 9-11
 fuel meter 4-15
 fuel pump 9-3, 9-5
 fuel tank 9-3, 9-5
 fuel tank strap 9-3, 9-5
 fuse 13-9, 16-3, 16-5, 16-7, 16-9
 10-amp 7-13
 20-amp 4-5, 4-7, 4-9, 7-13
 3/8-amp 13-9
 fuse block 4-5, 4-7, 4-9, 7-13
 fuse block cover 4-7, 4-9

G

gasket
 carburetor 9-11
 carburetor mounting 9-9, 9-11
 crankcase cover 8-11, 8-13
 drain plug 8-9, 12-9
 drain plug, fill plug 12-15
 exhaust 8-11, 10-3
 head 8-11
 insulator 8-11, 9-11
 liquid 12-9, 15-3, 17-7
 plug 15-3
 rocker case 8-11
 seat 1-41
 sending unit 9-5
 taillight 4-37
 gasket kit, FE350 8-11
 gauge, battery condition 4-17
 gauge, compression 17-5
 gauge, fuel-hour 4-15
 gear
 25 tooth 12-17
 28 tooth 12-17

cluster idler 12-11
 differential 12-13, 12-19, 15-3
 differential idler 12-13, 15-3
 differential output 15-3
 helical 8-15, 12-11, 12-13
 planetary 12-19
 speed governor 12-17
 spur 8-15, 12-11
 sun 12-19
 synchro 12-11
 gear yoke 17-7
 gearcase 12-9, 15-3
 governor 12-11, 12-17
 governor arm 9-13, 12-9, 12-15
 governor cable 9-13
 governor cable bracket 9-13
 governor shaft installation tool 17-7
 grip, pencil 6-11
 grommet 1-21, 9-3, 9-5, 9-15, 9-17
 ignition 8-7
 guard, differential 12-21, 15-5
 guard, splash 1-7
 guide
 intake valve 8-11
 valve seat cutter 17-11
 guide ring adhesive 17-3

H

handrail 1-55
 hanger, brake cable 6-21
 hardware, canopy 1-69, 1-71
 harness
 wire 4-31
 harness, headlight 4-7, 4-9
 harness, lighting 4-7
 harness, wire 4-23, 4-25, 4-31, 7-3, 13-5, 13-7
 harness, wire, lighting 4-9
 head gasket 8-11
 head, cylinder 8-11
 headband, sealed, motor 14-3
 headband, vented, motor 14-3
 headlight 4-3
 headlight assembly 4-3
 headlight bulb 4-3
 headlight harness 4-3
 headlight retainer 4-3
 headlight wire harness 4-7, 4-9
 heat shrink tube 16-11
 heatsink and rectifier 16-3, 16-5, 16-7, 16-9
 heavy-duty bumper 1-3
 helical gear 8-15, 12-11, 12-13
 hill brake rod 5-3
 hill brake weld assembly 5-3
 hinge assembly 1-53
 hinge pin 1-53
 hinge plate 1-23, 1-33, 1-35, 1-37, 1-39, 1-41,

INDEX

1-45

hinge, long 1-53
hold-down rod, battery 13-13, 13-15
hold-down, battery 13-13, 13-15
holder, cup 1-17
hole plug 4-17
horn 4-31
horn bracket 4-31
hose
 fuel 9-3, 9-5
 vent 9-7
hose clamp, green 9-3, 9-5, 9-7
hose, air intake 9-19
hour meter 4-15, 4-33
hour meter, 36-48 volt 4-33
housing
 3-pin 14-3
 differential 15-3
 fan 8-5
 field coil 7-7
hub 6-13
hub bearing 6-13
hub cap 2-5
hub cap, 7 prong 2-5
hub, synchronizer clutch 12-11
hydraulic brake adjuster 17-7
hydrometer 17-7

I

idle screw assembly 9-9
idler bearing 11-5
idler gear, differential 15-3
ignition coil 8-7
indicator, battery condition 4-17
inner frame snubber 8-17
input shaft 15-3
insert, synchronizer 12-11
instrument panel 4-15, 4-17
insulating washer 14-3
insulator gasket 8-11, 9-11
insulator, battery 1-49
insulator, carburetor 9-11
insulator, motor terminal 14-3
intake duct 9-15, 9-17
intake valve 8-11
intermediate shaft 15-3
internal retaining ring pliers 17-7
IQ display module (IQDM) 17-7

J

jet, main 9-9
jet, pilot 9-9
joint
 ball 5-3, 5-9, 5-11, 12-5, 12-7

K

key
 crankshaft 8-7, 8-15
 driven clutch 11-7
 On/Off 4-15, 4-17
 square 11-7
 woodruff 12-9
key switch 4-15
key switch cap 4-15, 4-17, 4-21
key switch, On/Off 4-17
key switch, uncommon 4-21
kick plate, body 1-33, 1-35, 1-37, 1-39, 1-45
kingpin 6-17, 6-19
kit
 3-pin housing 14-3
 accelerator pivot rod 5-5, 5-7
 anchor body 5-13, 5-21
 brake actuator 5-13, 5-21
 brake cable 5-15
 brake pedal 5-3
 brake pedal adjustment tool 17-3
 brake relay 4-5
 brake shoe 5-13, 5-21
 brake shoe retainer 5-13, 5-21
 brush guard 1-5
 clutch repair 11-7
 DC/DC converter 4-23
 differential gear case 12-13
 drive clutch button 11-5
 drive clutch weight 11-5
 driven clutch button 11-7
 equalizer, brake 5-15
 fixed-face drive 11-5
 front bumper 1-3
 fuel tank 9-5
 gasket, FE350 8-11
 heavy-duty front bumper 1-3
 hour meter 4-33
 hub cap 2-5
 IQ display module (IQDM) 17-7
 mirror 1-19
 motor brush 14-3
 motor brush lead assembly 14-3
 motor brush spring 14-3
 motor speed sensor 14-3
 park brake latch 5-3
 park brake pedal 5-3
 relay, 48V 4-7, 4-9, 13-19
 reverse buzzer 4-35
 shock absorber cushion 6-21, 6-23
 shoe retainer 5-13, 5-21
 smartkey 4-19
 steering column mounting bracket 6-5
 strobe light 4-29
 taillight hardware 4-37

tune up 8-3
tune-up 17-9
turn signal 4-11
wheel cover 2-5
windshield, hinged 1-31
windshield, one-piece 1-29
wire assembly, charger 16-3, 16-7, 16-9
knob, forward/reverse 12-3

L

lamp, strobe light 4-29
lamp, turn signal and socket 4-11, 4-13
latch, air box 9-19
latch, park brake 5-3
leaf spring 6-21, 6-23
lens, headlight 4-3
lens, strobe light 4-29
lens, taillight 4-37
lever
 choke 9-19
 drive selector 12-9
 speed governor 12-15
 transmission shift 12-9, 12-15
light
 battery 4-17
 oil 4-15
light, strobe 4-29
lighting wire harness 4-7
limit switch 4-5, 4-7, 4-9, 7-13, 12-3
limiter
 current 16-5
 voltage 4-5, 4-27
line, fuel 9-7, 9-11
link, stabilizer bar 6-25
liquid gasket 12-9, 15-3, 17-7
low oil warning light 4-15
lubricant, dry moly 17-7
lubricant, moly-teflon 14-3, 17-7
lug nut 2-3
lug stud 12-13, 12-19, 15-3

M

magnet, speed sensor 14-3
main jet 9-9
mat, floor 1-9, 1-13, 1-15
mat, foot rest 1-55
MCOR 13-3
meter clip 4-15
meter, hour 4-33
meter, volt ohm 17-11
mirror 1-19
mirror, rear view 1-19
module
 calibration test 17-3
 communication display 17-5

INDEX

moly-teflon lubricant 17-7
motor
 48-volt IQ Plus 14-3
motor brush 14-3
motor brush kit 14-3
motor brush lead assembly kit 14-3
motor brush spring 14-3
motor bumper 14-3
motor controller 13-19
motor end cap 14-3
motor frame and field 14-3
motor headband, sealed 14-3
motor headband, vented 14-3
motor magnet, speed sensor 14-3
motor speed sensor 14-3
motor speed sensor kit 14-3
motor terminal and lead assembly 14-3
motor terminal insulator 14-3
mount, compression 6-25
mounting block, brake 5-3
moveable-face 11-5, 11-7
muffler hose clamp 10-3

N

nameplate kit, amber 3-15
needle bearing 12-11
nozzle, main 9-9
nut, lug 2-3

O

oil conveyor 12-15
oil filler tube 8-5
oil filter 8-3, 8-9
oil filter mount bracket 8-9
oil filter screen 8-13
oil filter screen plate 8-13
oil level sensor 8-13
oil level switch bracket 8-13
oil pump and rotor 8-9
oil pump cover 8-9
oil pump filter 8-9
oil pump plate 8-9
oil seal 8-11, 8-13, 8-15, 12-9, 12-11
oil warning light, low 4-15
onboard battery charger 16-7, 16-9
O-ring 8-5, 8-11, 8-13, 8-15

P

pad
 brake pedal 5-3
 park brake 5-3
paint, touch-up 17-7
panel, instrument 4-15, 4-17
panel, rear 16-11
park brake latch 5-3

park brake pedal 5-3
park brake rod sleeve 5-3
park brake spacer 5-3, 16-11
park brake torsion spring 5-3
pawl 5-3
pedal, brake 5-3
pedal, park brake 5-3
pencil grip 6-11
pilot air screw assembly 9-9
pilot jet 9-9
pin
 bow tie locking 5-15, 5-17, 5-19
 clevis 5-15, 5-17, 5-19
 differential 12-13
 piston 8-15
pinion, steering 6-3
piston 8-15
piston anchor 5-13, 5-21
piston pin 8-15
piston ring 8-15
piston ring compressor 17-9
piston ring pliers 17-9
piston ring set 8-15
pivot arm 12-9
pivot support bearing 5-5, 5-7
plate
 body kick 1-35, 1-39, 1-45
 component mounting 13-19
 engine mounting 8-17
 flywheel fan 8-7
 front spring retainer 6-17, 6-19
 hinge 1-23, 1-33, 1-35, 1-37, 1-39, 1-41, 1-45
 oil filter screen 8-13
 oil pump 8-9
 receptacle backing 13-9
 spring mounting 6-17, 6-19
 thrust 12-11, 12-13
plate, canopy trim 1-57, 1-59, 1-61, 1-63, 1-65, 1-67, 1-69, 1-71
plate, Tow/Run switch 13-11
pliers
 internal retaining ring 17-7
 piston ring 17-9
 retaining ring 17-9
plug
 drain 8-9, 12-15
 driven clutch puller 17-5
 fill 12-9, 12-15
 hole 4-17
 rubber drain 7-7
 spark 8-3, 8-7
plug cap 8-7
plug, carburetor intake manifold 9-11
port, diagnostic 4-17, 13-5, 13-7
press weldment 17-5

protector spray, battery terminal 17-3
puller
 bearing 17-3
 clutch 17-3
 drive clutch 17-5
 drive clutch hub 17-5
 driven clutch cam 17-5
 flywheel 17-7
 seal 17-9
 special use tool 17-9
pulley
 drive clutch 11-5
 starter-generator 7-7
 v-belt 7-7
pump
 fuel 9-3, 9-5
push rod 8-11

R

race, front hub bearing 6-13
rack guide pressure spring 6-3
rack, steering 6-3
ratchet, park brake 5-3, 5-5, 5-7
reamer, valve guide 17-9
rear panel 16-11
rear spring shackle 6-21
rear view mirror 1-19
receptacle backing plate 13-9
receptacle, AC cord 16-5
receptacle, battery charger 13-9
rectifier with heatsink 16-3, 16-5, 16-7, 16-9
reel assembly, retractable 16-11
regulator, voltage 7-13
relay 4-7, 4-9, 7-13, 13-19
relay mounting bracket 7-13, 16-7, 16-9
relay, 12-volt 4-5
relay, 48V 4-7, 4-9, 13-19
relay, 48-volt 16-3, 16-5, 16-7, 16-9
relay, brake, kit, 12-volt 4-5
remover, bearing and oil seal 17-3
retainer
 accelerator pedal spring 5-5, 5-7
 brake shoe 5-13, 5-21
 headlight 4-3
 shock absorber cushion 6-21, 6-23
 spring (drive clutch) 11-5
 valve spring 8-11
retaining bracket 9-15, 9-17
retaining ring 6-5
retaining ring pliers 17-9
return spring bumper 5-5, 5-7
reverse buzzer 4-15, 4-17, 4-35
rim (wheel) 2-3
ring
 C-type stop 6-3
 piston 8-15

INDEX

retaining 6-5, 7-13, 11-5, 11-7
 snap 6-3, 8-11, 8-15
 spiral backup 11-5
 synchronizer 12-11
 rivet, blind push 1-3, 13-19
 rock guard 12-21, 15-5
 rocker arm 8-11
 rocker case 8-11
 rocker case gasket 8-11
 rocker shaft 8-11
 rocker switch 4-17
 rocker switch (lights) 4-5, 4-7, 4-9, 4-15, 4-17
 rod
 accelerator 5-9, 5-11
 accelerator pivot 5-5, 5-7
 battery hold-down 13-13, 13-15
 connecting 8-15
 crankshaft 8-15
 equalizer 5-15, 5-17, 5-19
 hill brake 5-3
 push 8-11
 shift 12-11
 rubber bumper 1-53

S

safety first card 17-9
 score card clip 6-11
 score card plate 6-11
 screen, oil filter 8-13
 screw, eccentric adjustment 6-17
 screw, valve clearance adjuster 17-9
 seal
 intake 9-19
 lip 15-3
 oil 8-11, 8-13, 8-15, 12-9, 12-11, 12-13, 12-19, 15-3
 steering pinion dust 6-3
 seal puller 17-9
 sealant 12-9, 15-3
 seat
 spring 8-11
 valve 8-9
 seat back 1-25
 seat back assembly 1-25
 seat back cap 1-25
 seat back, white 1-25
 seat bottom assembly 1-23, 1-41, 1-53
 seat bumper 1-41
 seat cover, vinyl 1-53
 seat foam 1-53
 seat gasket 1-41
 seat support, four-passenger 1-53
 seat, bearing 6-5
 sending unit, fuel gauge 9-5
 sensor, motor speed 14-3
 sensor, oil level 8-13

shackle weldment 6-23
 shackle, rear spring 6-21
 shaft
 counterbalance guide 8-15
 drive selector 12-9, 12-15
 input 15-3
 intermediate 15-3
 rocker 8-11
 steering column 6-5
 transmission 12-11, 12-17
 shaft, reverse gear 12-17
 shaft, secondary
 transmission 12-17
 shift fork 12-11, 12-17
 shift lever 12-9, 12-15
 shift rod 12-11
 shifter, FNR 12-3
 shim, camshaft 8-13
 shim, crankshaft 8-15
 shock absorber 6-15, 6-21, 6-23
 shock absorber cushion 6-21, 6-23
 shock absorber cushion retainer 6-21, 6-23
 shock mounting bracket, drv 6-23
 shock mounting bracket, pas 6-23
 shoe retainer kit 5-13, 5-21
 shoe, brake 5-13, 5-21
 shroud 8-5
 shroud, engine 8-5
 shroud, fan 8-5
 signal, turn 4-11
 sleeve
 delta A-plate 6-15
 governor 12-11
 park brake rod 5-3
 synchronizer 12-11
 smartkey 4-19
 snap ring 6-3, 8-11, 8-15
 snubber bracket 8-17
 snubber, inner frame 8-17
 solenoid 13-19
 solenoid, 12-volt 7-13
 spacer 1-5
 accelerator pivot rod 5-5, 5-7
 park brake 5-3, 16-11
 spanner wrench 17-9
 spark plug 8-3, 8-7
 speed controller 13-19
 speed sensor 14-3
 speed sensor magnet 14-3
 speed sensor, motor 14-3
 spindle assembly 6-13
 spiral backup ring 11-5
 splash guard 1-7
 spray, battery terminal protector 17-3
 spring
 accelerator return 5-5, 5-7

brake 5-13, 5-21
 brake return 5-17, 5-19
 brush 7-7, 14-3
 compression 6-11
 drive button 11-5
 drive clutch 11-5
 driven clutch 11-7
 extension return 9-19
 leaf 6-21, 6-23
 park brake torsion 5-3
 rack guide pressure 6-3
 shifter 12-11
 steering shaft compression 6-5
 synchronizer 12-11
 throttle return 9-11
 valve 8-11
 spring cup 5-5, 5-7
 spring mounting plate 6-17, 6-19
 spring, motor brush 14-3
 spur gear 8-15, 12-11
 SPWS manifold 13-17
 stabilizer bar 6-25
 stabilizer bar link 6-25
 stabilizer bar mounting bracket 6-25
 starter/generator (bi-rotational) 7-7
 starter/generator belt 7-9
 starter/generator brush cover kit 7-7
 starter/generator brush spring 7-7
 starter/generator brush terminal 7-7
 starter/generator frame and field 7-7
 starter/generator pulley 7-7
 steel bushing 6-17, 6-19, 6-21, 6-23
 steel pressure relief ball 8-9
 steering column 6-5
 steering column bearing press tool 17-9
 steering column cover 4-11, 4-13
 steering column retaining ring tool 17-9
 steering gear box 6-3
 steering pinion 6-3
 steering pinion dust seal 6-3
 steering rack 6-3
 steering shaft assembly 6-5
 steering shaft compression spring 6-5
 steering wheel 6-9, 6-11
 steering wheel puller tool 17-9
 stem, valve 2-3
 stiffener, flywheel side 8-17
 stiffener, PTO side 8-17
 strap, A-plate 6-15
 strap, fuel tank 9-3, 9-5
 strobe light 4-29
 strobe light lens 4-29
 stud 8-17
 lug 12-13, 12-19, 15-3
 stud, ball 7-13, 12-9, 12-15
 support yoke (steering) 6-3

INDEX

support, bushing 6-25
support, front body 1-45
suppressor, voltage 4-5, 4-7, 4-9, 16-3, 16-5, 16-7, 16-9
switch plate cover 4-29
switch
 four-position 16-5, 16-9
 key 4-15, 4-17
 key, uncommon 4-21
 light rocker 4-5, 4-7, 4-9, 4-15, 4-17
 limit 4-5, 4-7, 4-9, 7-13, 12-3
 rocker 4-17
 Tow/Run 13-11
 turn signal 4-11, 4-13
switch assembly 4-29
switch plate, Tow/Run 13-11
switch rubber boot 7-11, 13-11
switch, toggle 7-11
synchro gear 12-11
synchronizer clutch hub 12-11
synchronizer insert 12-11
synchronizer sleeve 12-11
synchronizer spring 12-11
synchronizer, complete 12-17

T

12-volt solenoid 7-13
tachometer 17-9
tachometer probe, diesel 17-9
tail light bulb 4-37
taillight 4-37
taillight assembly 4-37
taillight base 4-37
taillight bezel 4-37
taillight gasket 4-37
taillight hardware kit 4-37
taillight lens 4-37
tank, fuel 9-3, 9-5
tape, vinyl foam 1-57, 1-59, 1-61, 1-63, 1-65, 1-67, 1-69, 1-71
tappet 8-13
terminal block 4-5, 4-7, 4-9, 13-5, 13-7
tester, continuity 17-5
thermometer, battery 17-3
thread-forming grease fitting 6-13
throttle return spring 9-11
throttle spring return bracket 9-11
thrust bearing 6-17, 6-19
thrust plate 12-11, 12-13
tie rod 6-15
tie rod end 6-15
tie wrap 4-11, 4-13, 4-23, 4-25, 4-29, 4-33, 6-3, 7-13, 9-15, 9-17, 12-5, 12-7, 13-21, 16-11
tire 2-3
toggle switch 7-11
tool

accelerator pedal adjustment 17-3
belt tensioning, starter/generator 17-11
brake adjustment 17-3
brake cable release 17-3
brake pedal adjustment 17-3
brake pedal tension 17-3
cam installation 17-3
carburetor float level 17-7
charger bezel 17-3
clutch alignment 17-5
cT-wrench 17-5
drive clutch fixed sheave 17-5
drive clutch holder 17-5
drive clutch spider removal 17-5
driven clutch spring compression base 17-5
driven clutch spring compression collar 17-5
driven clutch spring compression nut 17-5
governor shaft installation 17-7
puller, special use 17-9
steering column bearing press 17-9
steering column retaining ring 17-9
steering wheel puller 17-9
transaxle axle seal 17-9
transaxle pinion seal 17-9
transmission 17-9
valve guide driver 17-9
valve seat cutter 17-5
tool kit, clutch 17-5
touch-up paint 17-7
Tow/Run switch 13-11
Tow/Run switch bracket 7-11
Tow/Run switch plate 13-11
transaxle (Electric Vehicle) 15-3
transaxle axle seal tool 17-9
transaxle guard 12-21, 15-5
transaxle pinion seal tool 17-9
transaxle, Gaziano (Gasoline Vehicle) 12-15
transaxle, Kawasaki (Gasoline Vehicle) 12-9
transformer, battery charger 16-3, 16-5, 16-7, 16-9
transmission secondary shaft 12-17
transmission shaft 12-11, 12-17
transmission tool 17-9
trim
 cowl 1-3
tube
 axle 12-13, 12-19, 15-3
 carburetor air vent 9-3, 9-5
 crankcase vent 9-11
 oil filler 8-5
tune-up kit 8-3, 17-9
turn signal 4-11
turn signal conversion kit 4-11
turn signal lens 4-3

turn signal socket and lamp 4-11, 4-13
turn signal switch 4-13
T-wrench tool 17-5

U

U-bolt 6-21, 6-23
upper delta clevis 6-17, 6-19
urethane bushing 6-15, 6-17, 6-19, 6-21, 6-23

V

valve
 choke 9-19
 exhaust 8-11
 reed 8-11
valve clearance adjuster screw 17-9
valve guide driver tool 17-9
valve guide reamer 17-9
valve guide, intake 8-11
valve seat 8-9
valve seat cutter 17-5, 17-11
valve seat cutter guide 17-11
valve seat cutter tool 17-5
valve seat t-wrench 17-11
valve spring 8-11
valve spring compressor 17-11
valve spring retainer 8-11
valve stem 2-3
valve stem extension 2-5
v-belt 7-9
vent
 fuel tank 9-3, 9-5
vent barb 9-3, 9-5
vent, barb 9-7
volt ohm meter 17-11
voltage limiter 4-5, 4-27
voltage regulator 7-13
voltage suppressor 4-5, 4-7, 4-9, 16-3, 16-5, 16-7, 16-9

W

warning light, low oil 4-15
washer, insulating 14-3
wedge, bearing puller 17-3
weight
 clutch 11-5
 counterbalance 8-15
 secondary clutch 11-5
weldment
 press 17-5
wheel 2-3
 steering 6-9, 6-11
wheel cover 2-5
windshield
 one-piece 1-29
windshield channel 1-31

INDEX

windshield frame pad 1-57, 1-59, 1-61, 1-63,
1-65, 1-67, 1-69, 1-71
windshield, hinged 1-31
wire assembly, battery charger 16-5
wire harness 4-23, 4-25, 4-31, 7-3, 13-5, 13-7
wire harness, headlight 4-7, 4-9
wire harness, lighting 4-7, 4-9
wire lead, ignition 8-7
woodruff key 12-9
wrap, tie 4-11, 4-13, 4-23, 4-25, 4-29, 4-33, 6-3,
7-13, 9-15, 9-17, 12-5, 12-7, 13-21, 16-11
wrench, spanner 17-9

Y

yoke, gear 17-7
yoke, support (steering) 6-3



Club Car, Inc.
P.O. Box 204658
Augusta, GA 30917-4658
USA



Web	www.clubcar.com
Phone	1.706.863.3000 1.800.ClubCar
Int'l	+1 706.863.3000
Fax	1.706.863.5808